


Remote Control Mirror

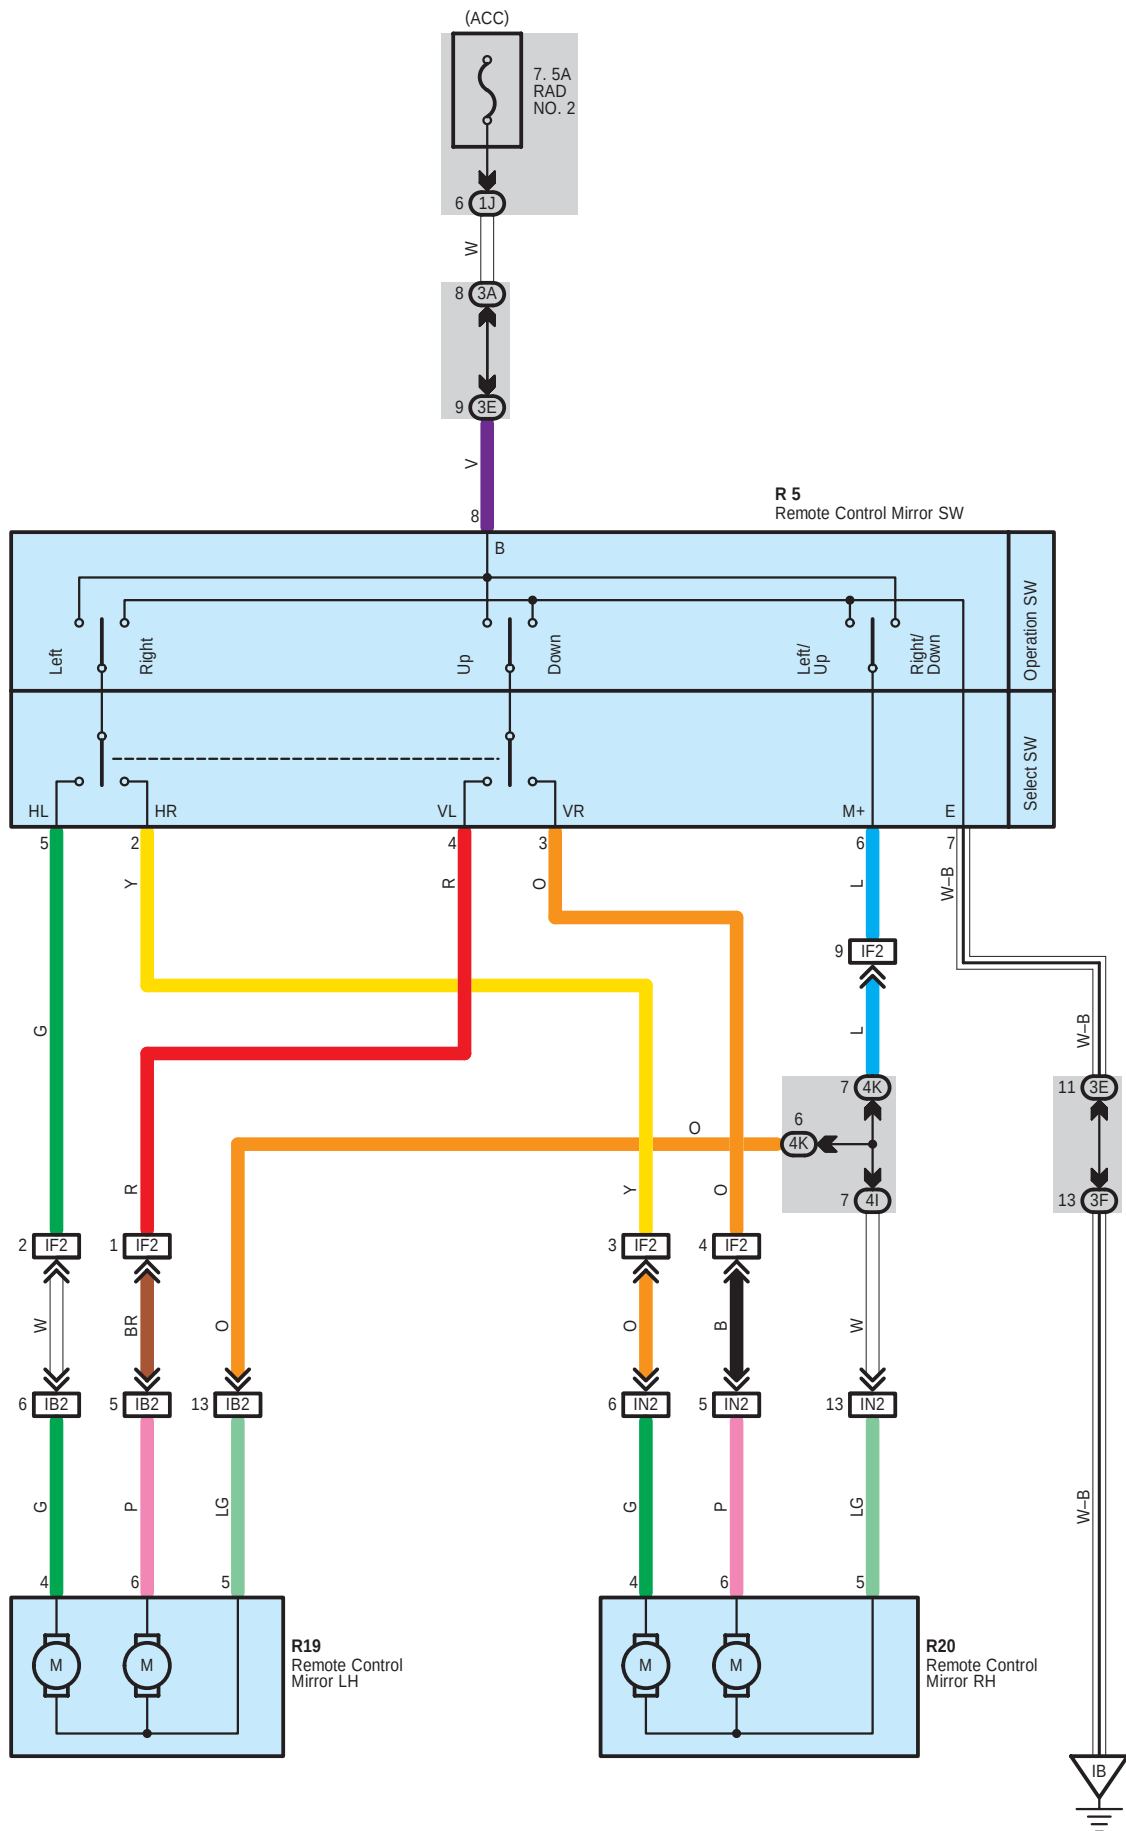

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
R5	43	R19	45	R20	45

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1J	28	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
3A	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3E		
3F		
4I	32	Cowl Wire and Passenger Side J/B (Right Side of Grove Box)
4K		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB2	50	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IF2	50	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IN2	51	Front Door RH Wire and Cowl Wire (Right Kick Panel)

 : Ground Points

Code	See Page	Ground Points Location
IB	50	Right Instrument Panel Brace