



Power Outlet

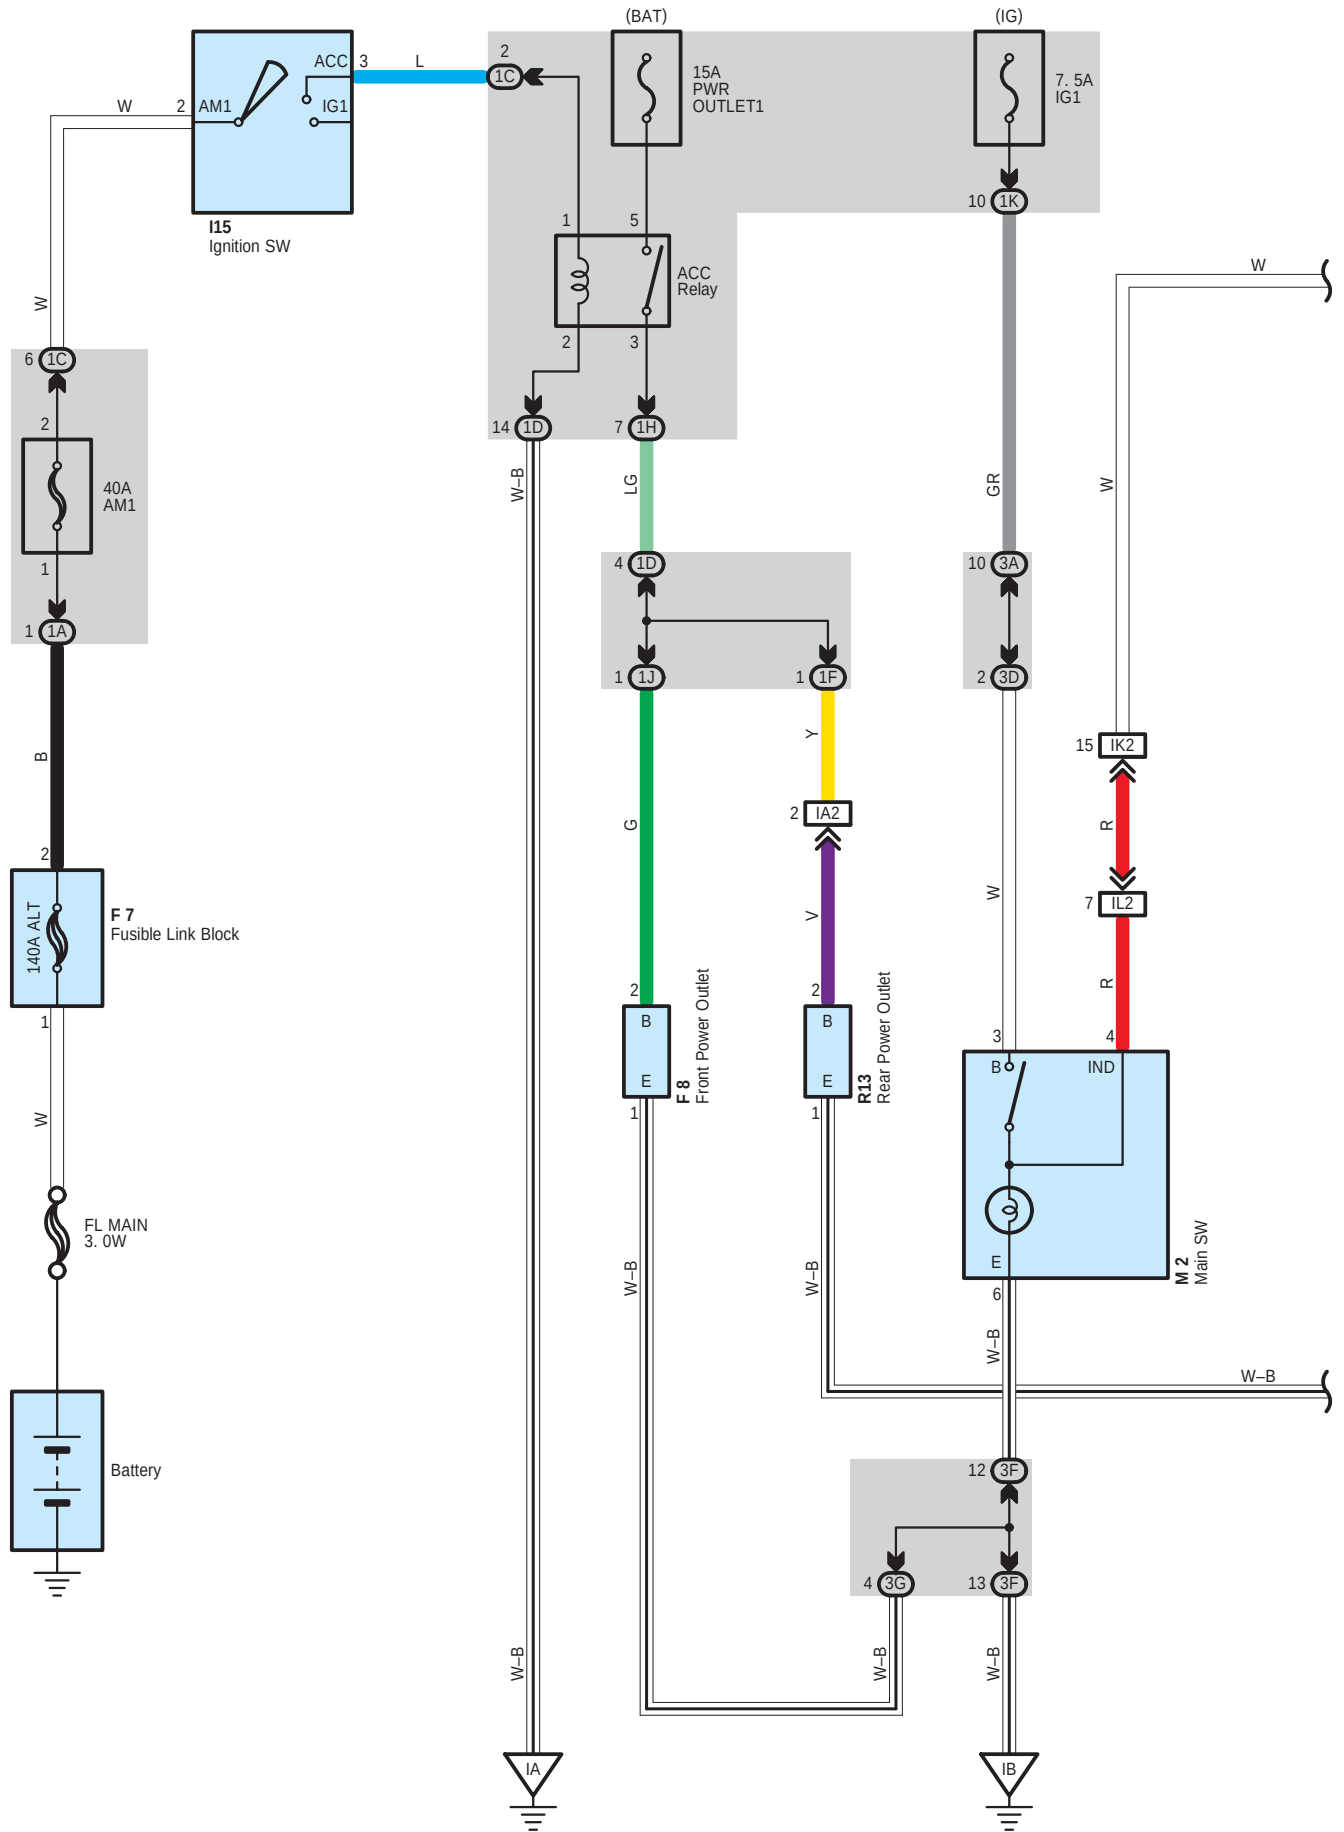

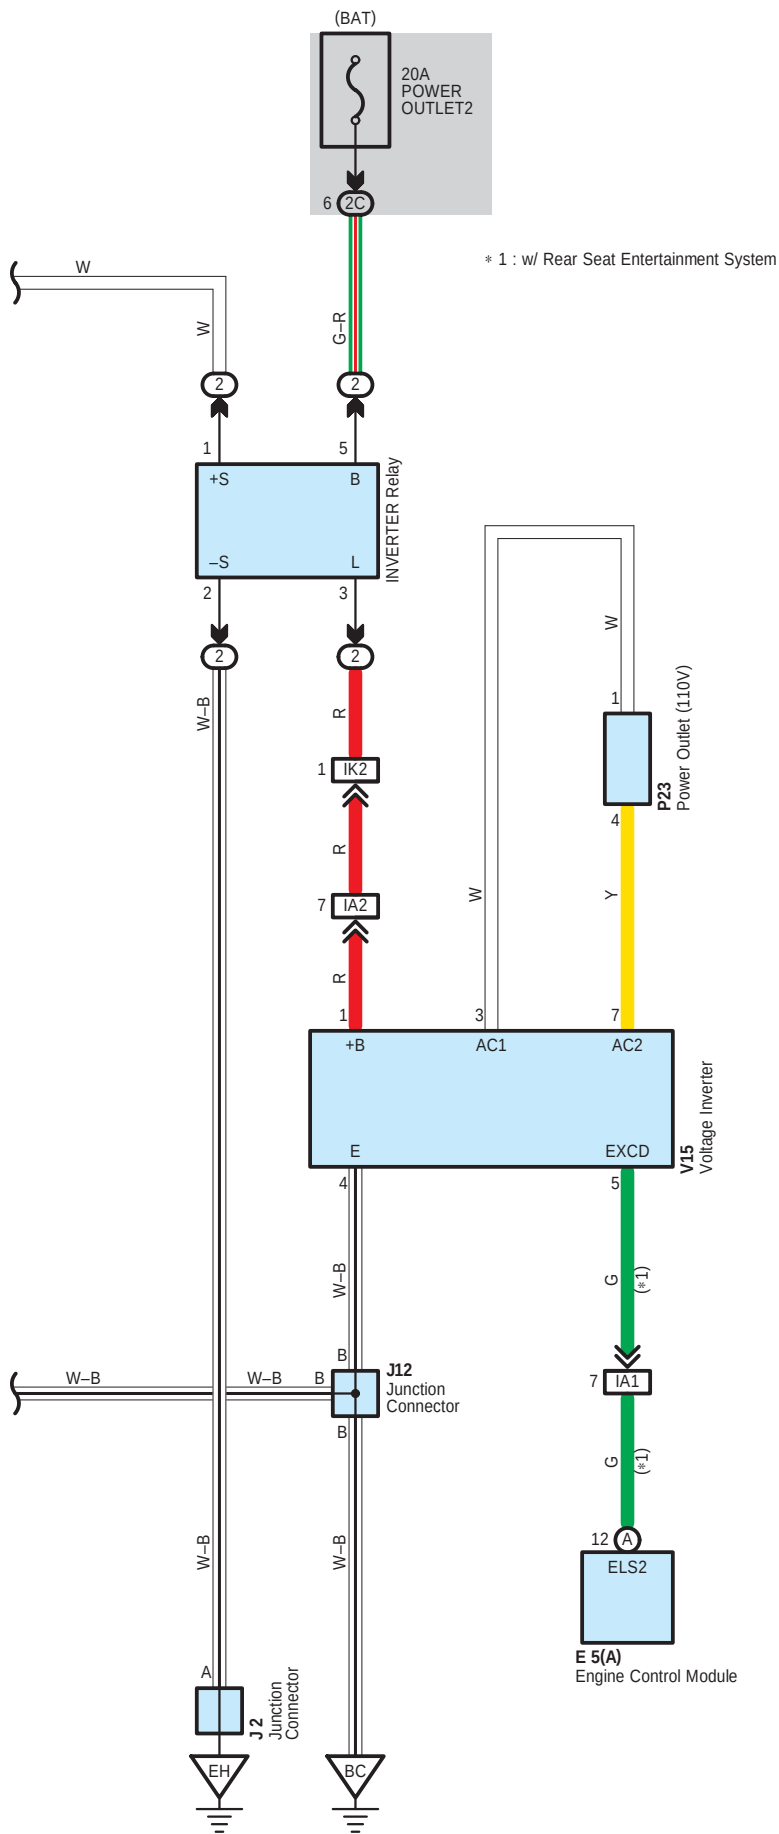

Power Outlet

: Parts Location

Code		See Page	Code	See Page	Code	See Page
E5	A	42	I15	43	M2	43
F7		38 (3MZ-FE)	J2	39 (3MZ-FE)	P23	44
		40 (2AZ-FE)		41 (2AZ-FE)	R13	45
F8		43	J12	44	V15	45

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	29	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1D		
1F		
1H		
1J	28	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1K		
2C	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3D		
3F		
3G	31	

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	50	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IA2		
IK2	51	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IL2	51	Instrument Panel Wire and Cowl Wire (Upper Side of Passenger Side J/B)

: Ground Points

Code	See Page	Ground Points Location
EH	48 (3MZ-FE)	Under the Left Headlight
	49 (2AZ-FE)	
IA	50	Left Cowl Side Panel
IB	50	Right Instrument Panel Brace
BC	52	Left Side of Rear Cross Member

