


Mirror Heater and Front Deicer

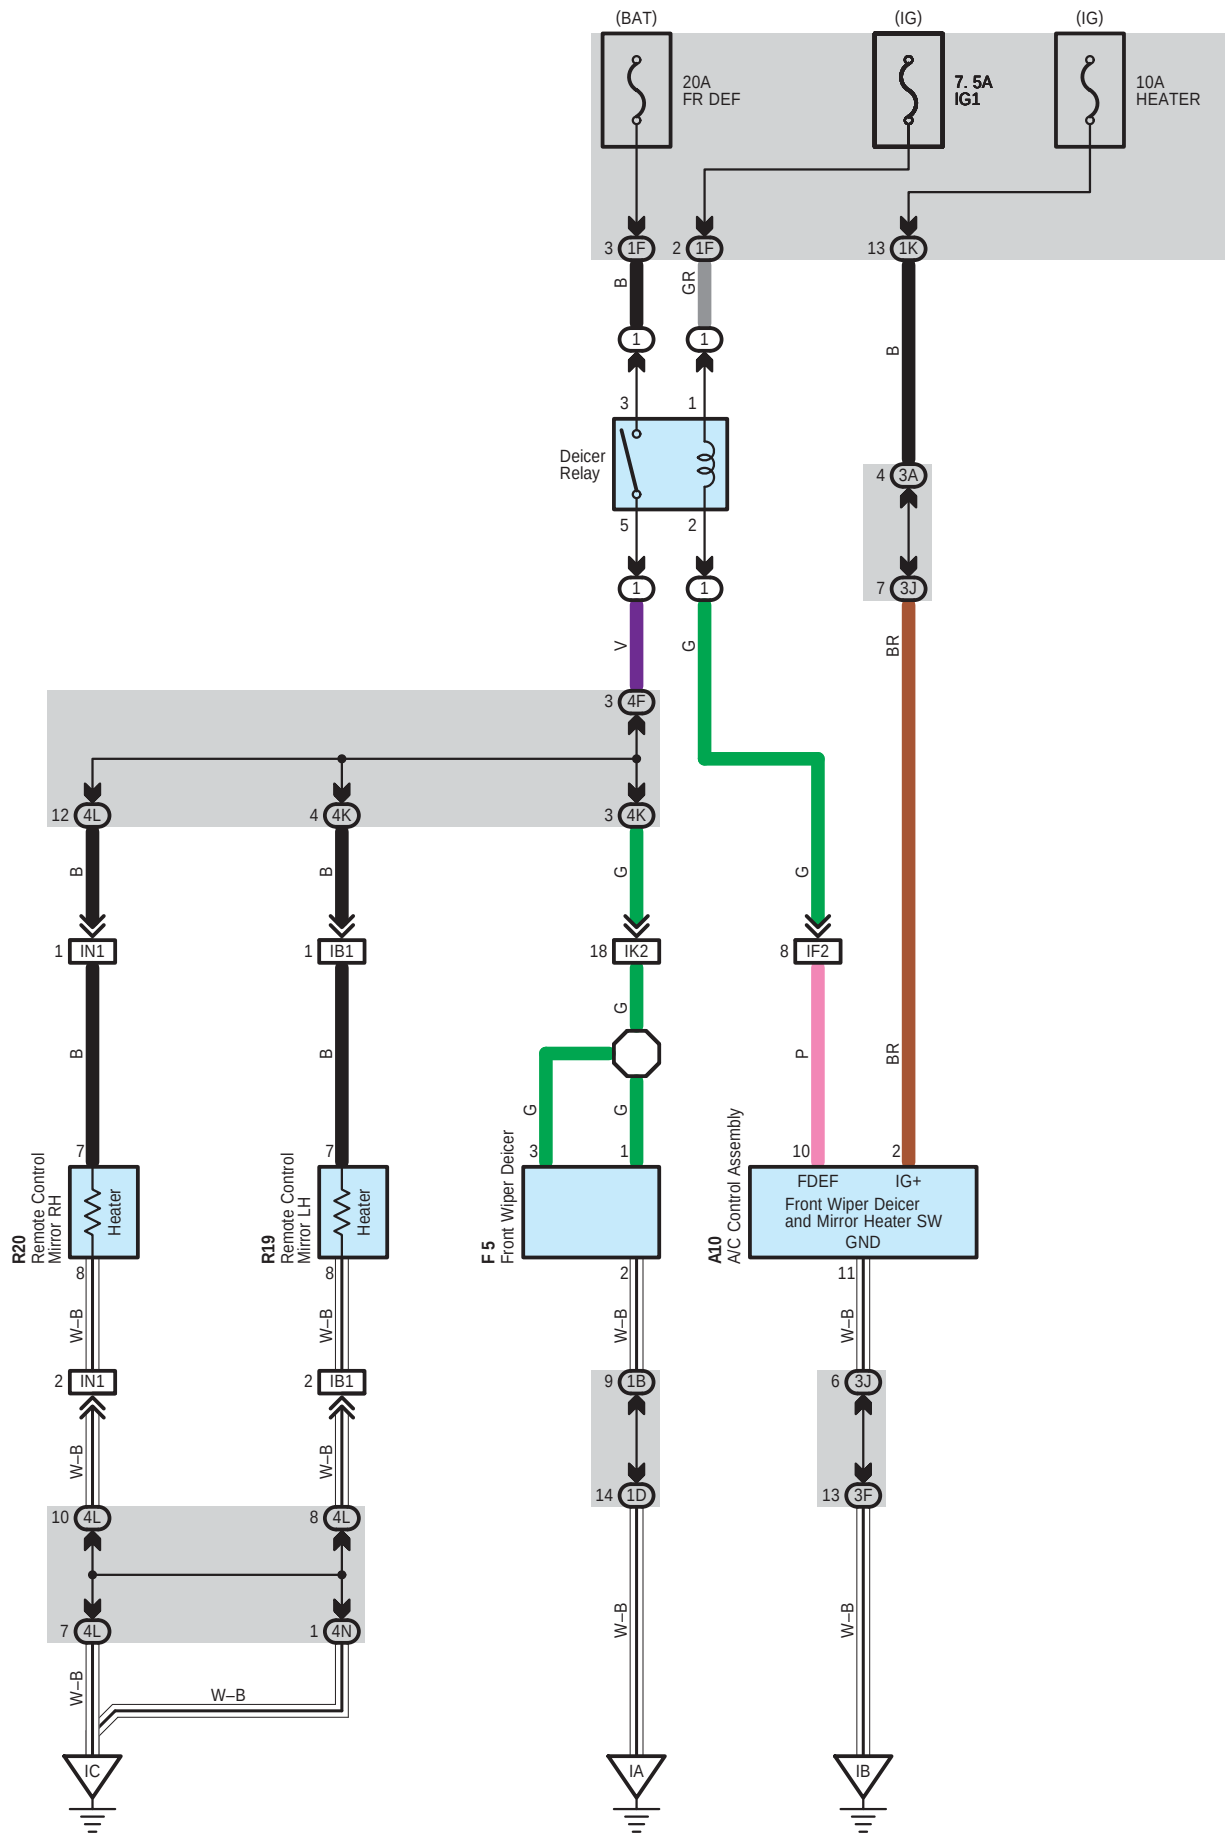

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
A10	42	F5	40 (2AZ-FE)	R20	45
F5	38 (3MZ-FE)	R19	45		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	R/B No.1 (Lower Finish Panel)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	29	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1D	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1F		
1K	28	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
3A	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3F		
3J	31	Cowl Wire and Passenger Side J/B (Right Side of Grove Box)
4F	33	
4K	32	
4L		
4N		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	50	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IF2	50	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IK2	51	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IN1	51	Front Door RH Wire and Cowl Wire (Right Kick Panel)

 : Ground Points

Code	See Page	Ground Points Location
IA	50	Left Cowl Side Panel
IB	50	Right Instrument Panel Brace
IC	50	Right Cowl Side Panel