





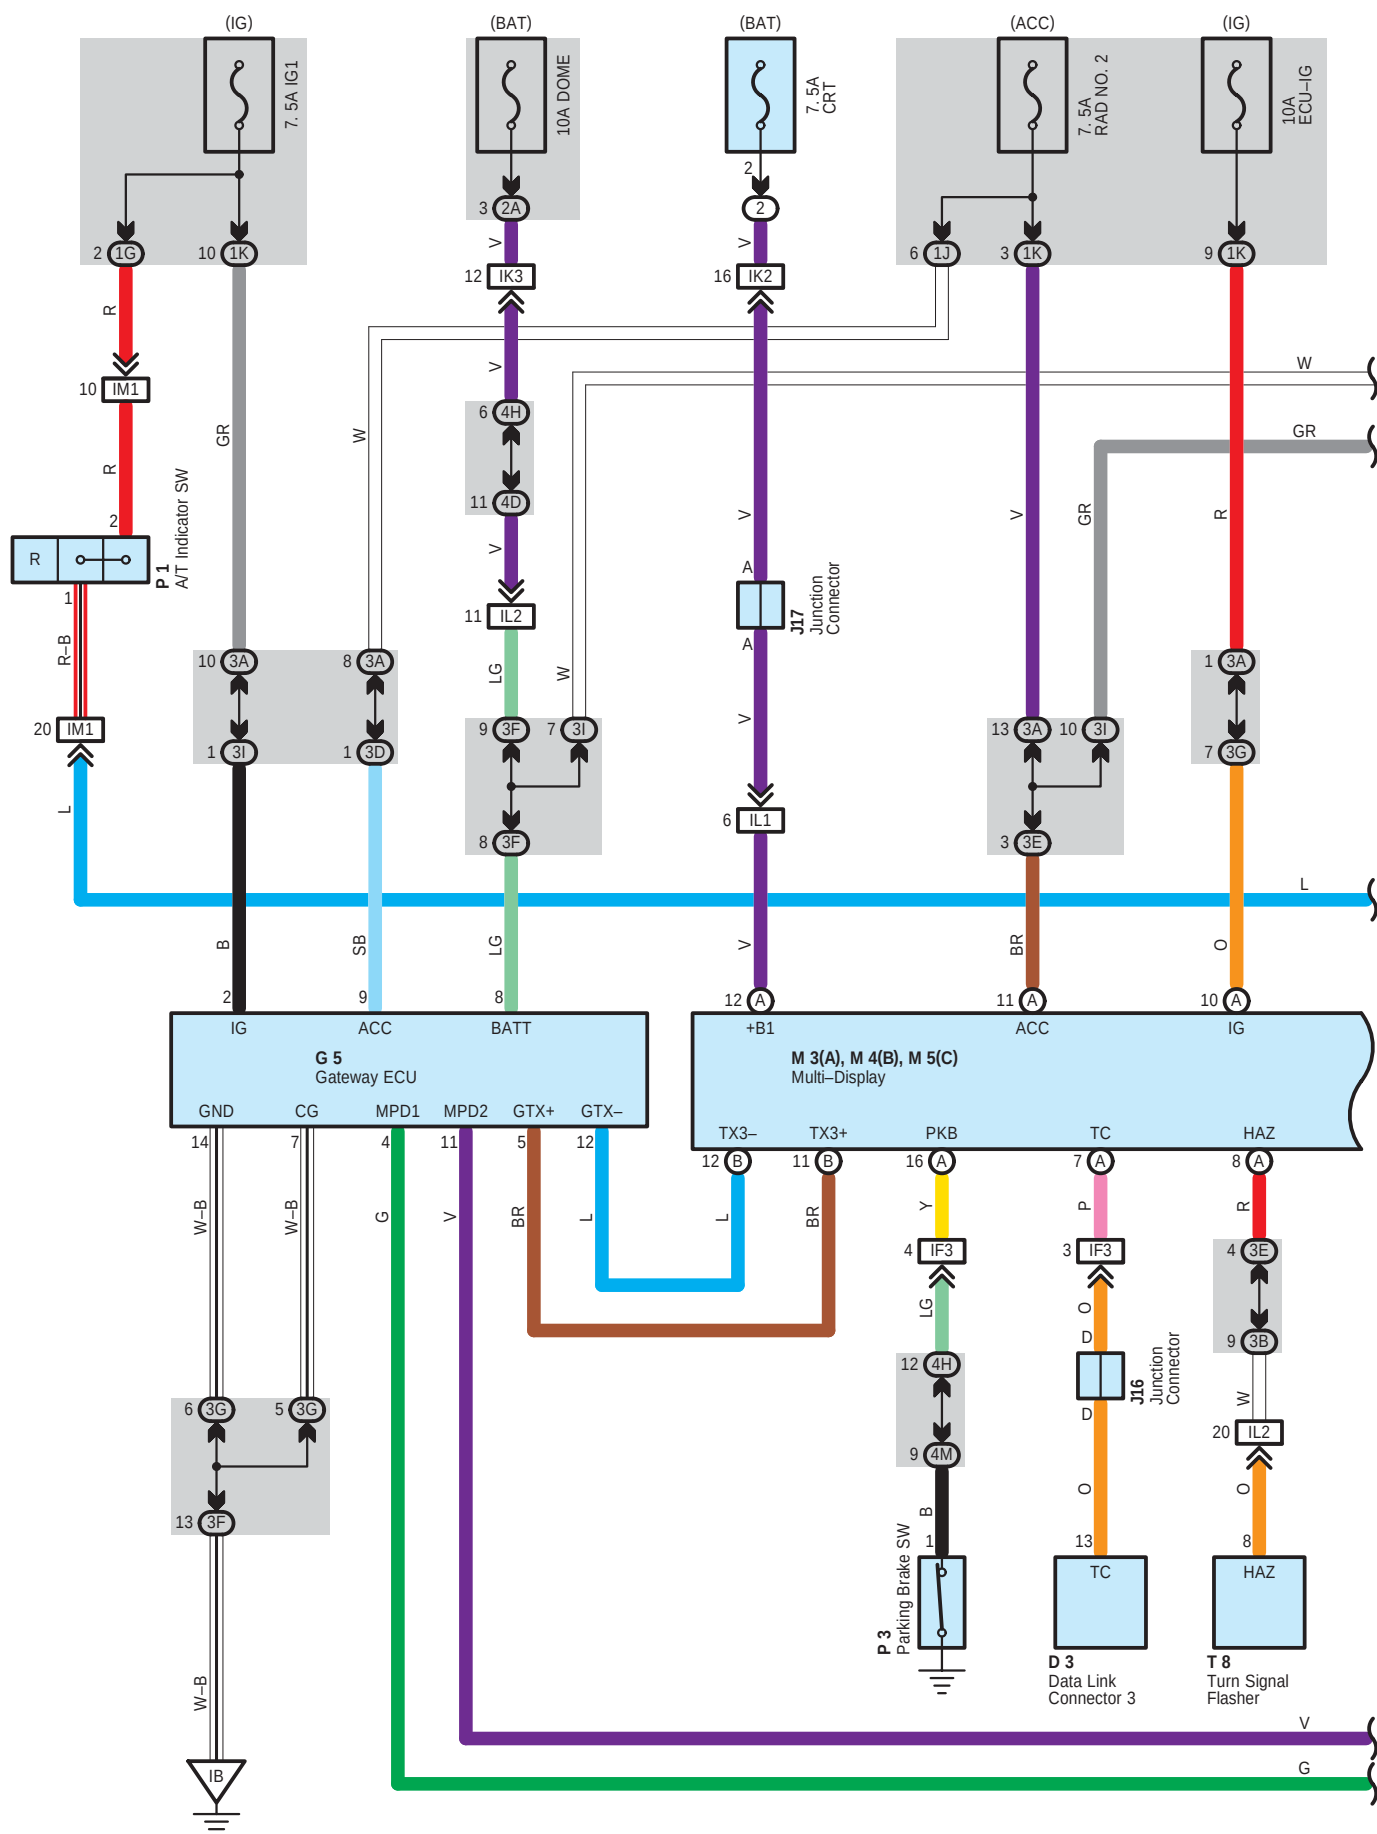

- * 1 : w/ Rear Seat Entertainment System
- * 2 : w/o Rear Seat Entertainment System
- * 3 : Shielded

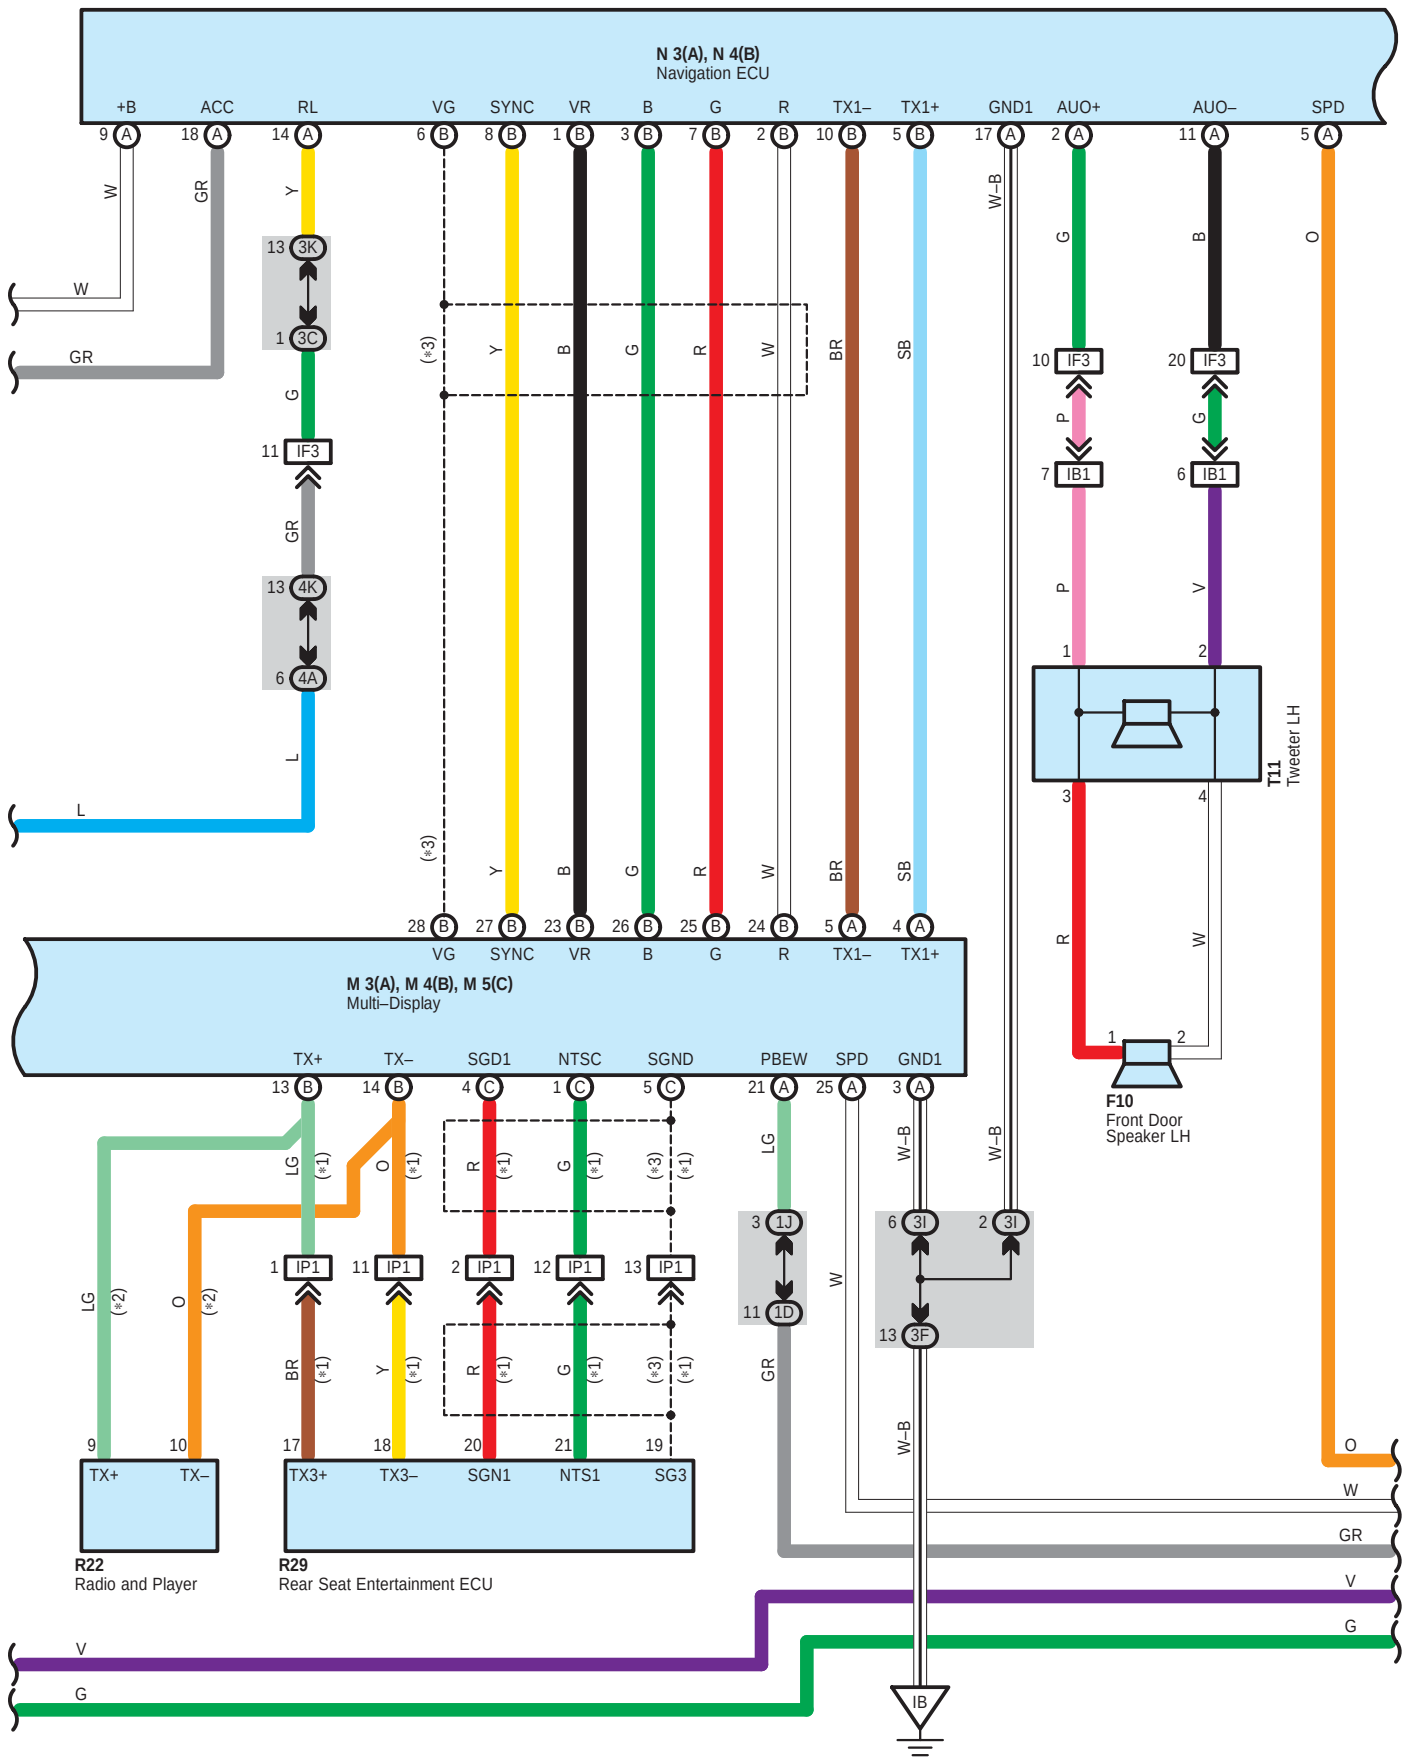

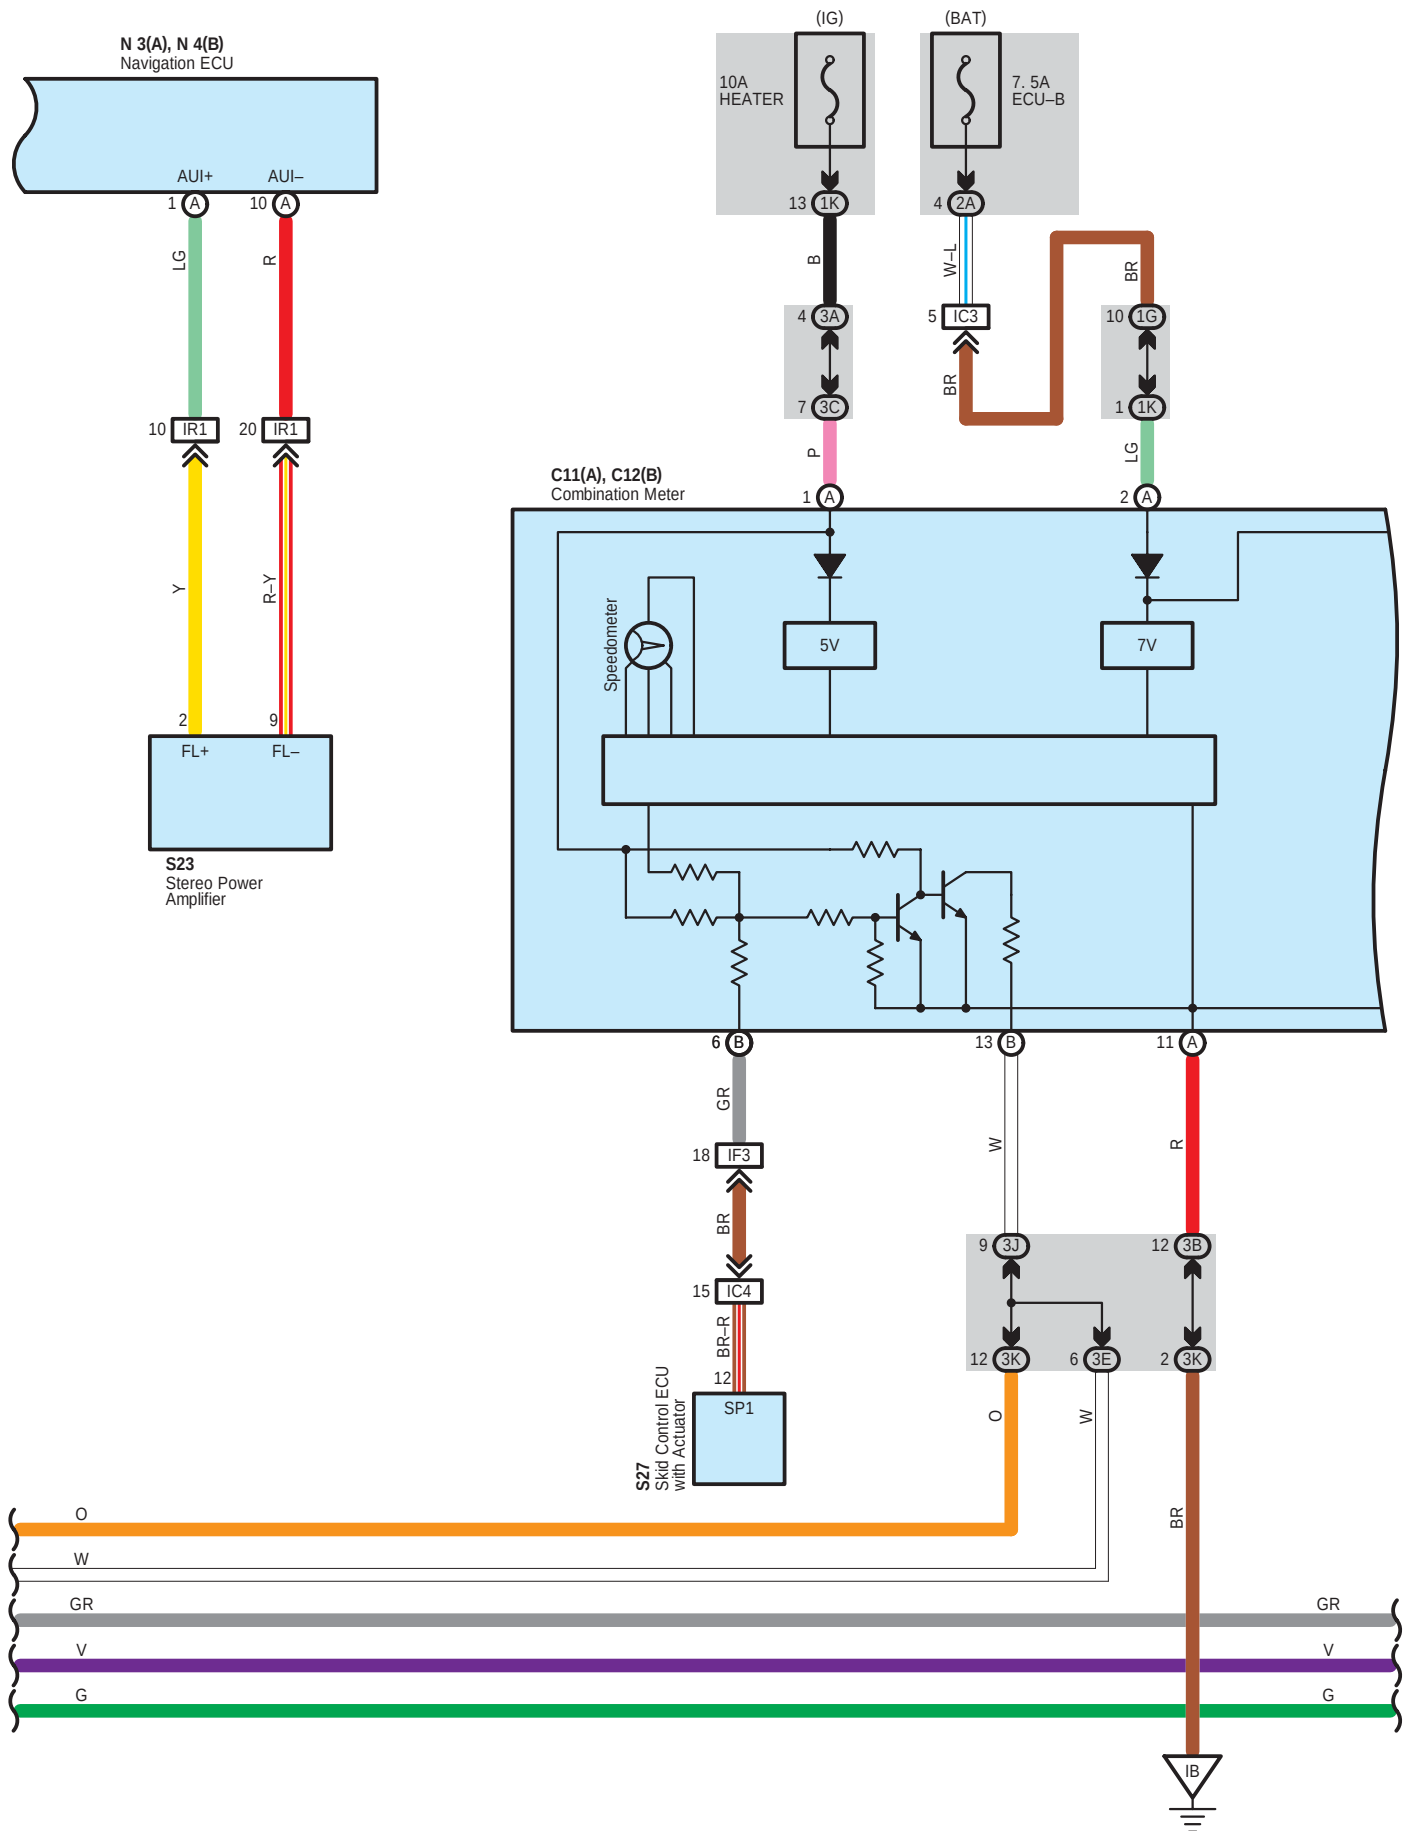

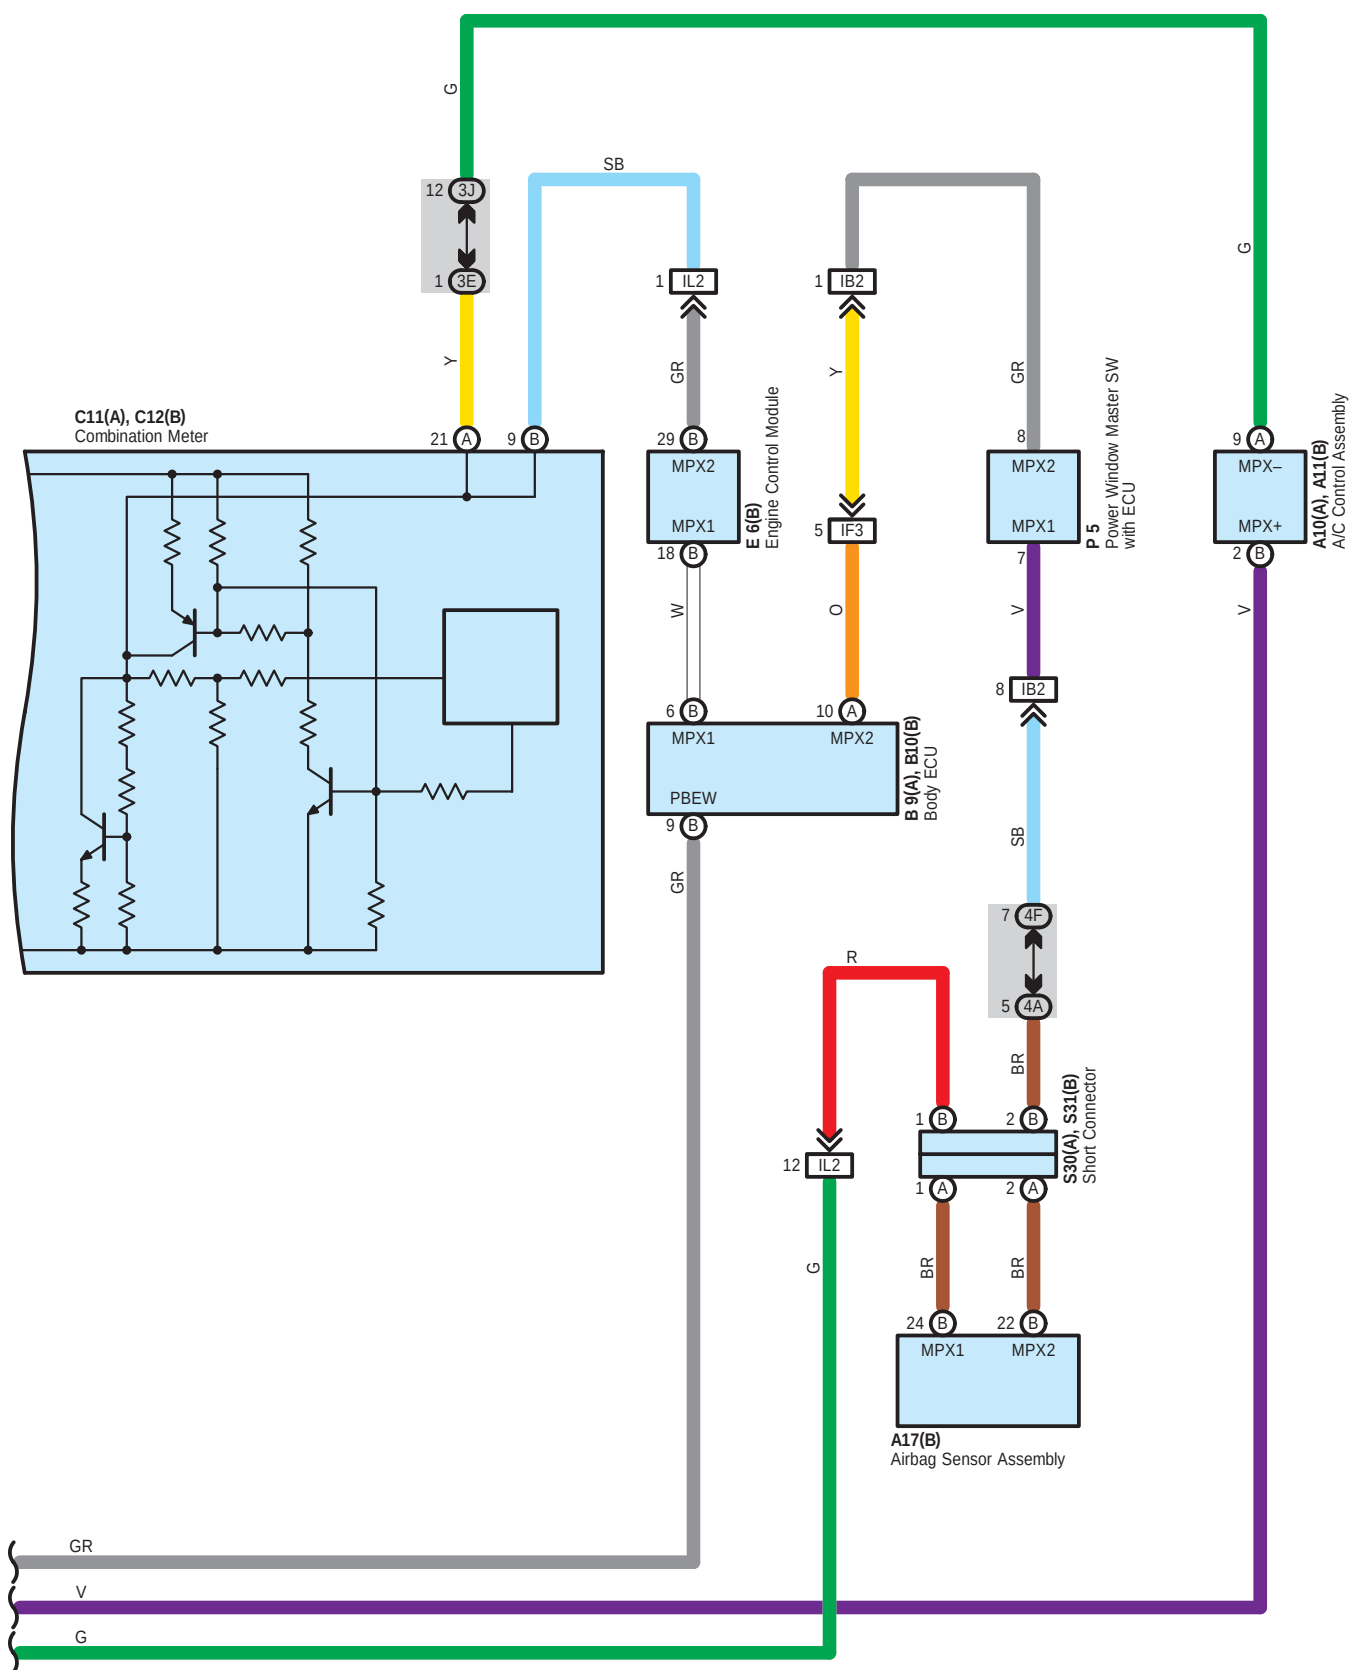

Navigation System

: Parts Location

Code		See Page	Code		See Page	Code		See Page
A10	A	42	J16		43	R22		43
A11	B	42	J17		43	R29		45
A17	B	42	M3	A	43	S23		45
B9	A	42	M4	B	43	S27		39 (3MZ-FE)
B10	B	42	M5	C	43			41 (2AZ-FE)
C11	A	42	N3	A	43	S30	A	43
C12	B	42	N4	B	43	S31	B	43
D3		42	P1		39 (3MZ-FE)	T8		43
E6	B	42			41 (2AZ-FE)	T11		45
F10		44	P3		43			
G5		43	P5		44			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1G		
1J	28	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1K		
2A	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3B		
3C		
3D		
3E		
3F		
3G	31	
3I		
3J		
3K		
4A	33	Cowl Wire and Passenger Side J/B (Right Side of Grove Box)
4D		
4F		
4H		
4K	32	
4M		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	50	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IB2		
IC3	50	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IC4		
IF3	50	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IK2	51	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IK3		
IL1	51	Instrument Panel Wire and Cowl Wire (Upper Side of Passenger Side J/B)
IL2		
IM1	51	Engine Wire and Cowl Wire (Right Kick Panel)
IP1	51	Instrument Panel Wire and Floor Wire (Left Side of Passenger Side J/B)
IR1	51	Instrument Panel Wire and Floor Wire (Under the Shift Lever)

 : Ground Points

Code	See Page	Ground Points Location
IB	50	Right Instrument Panel Brace