





Combination Meter

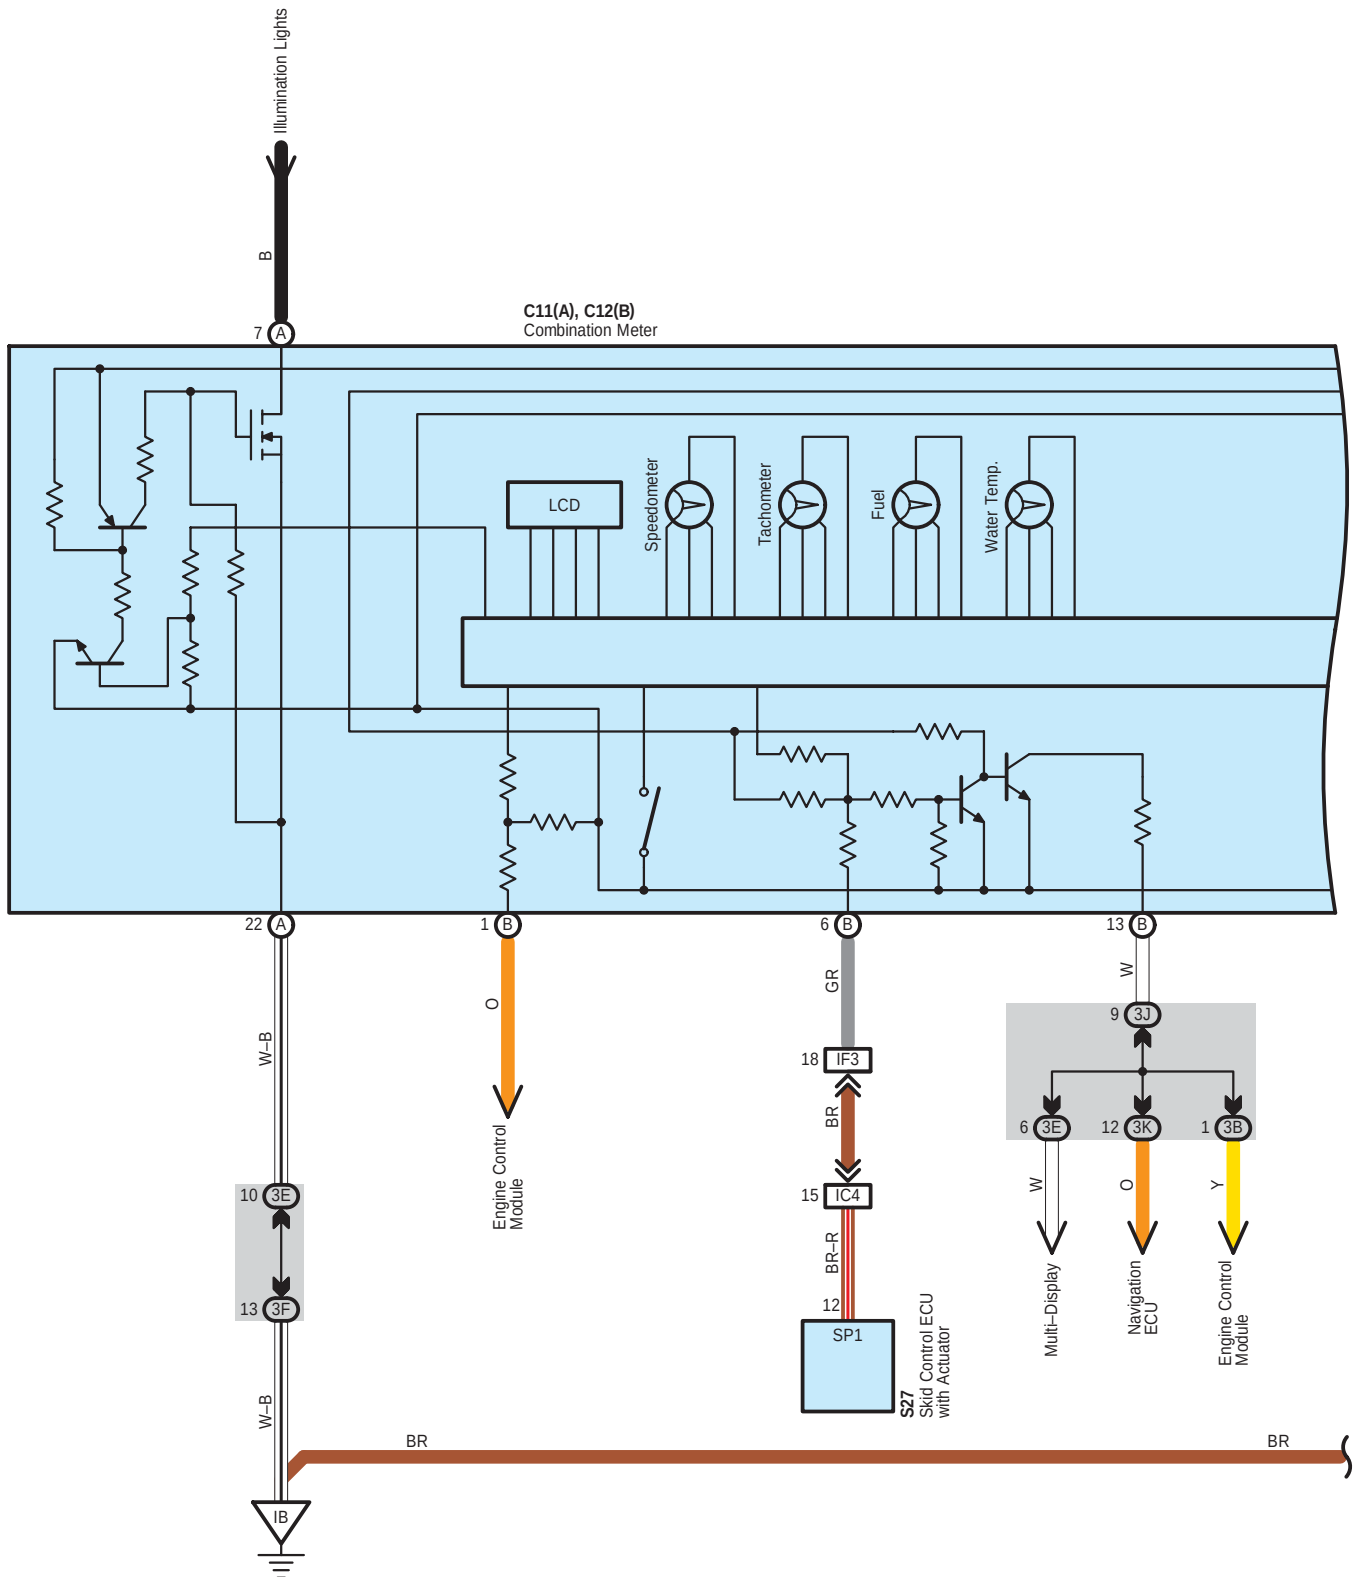

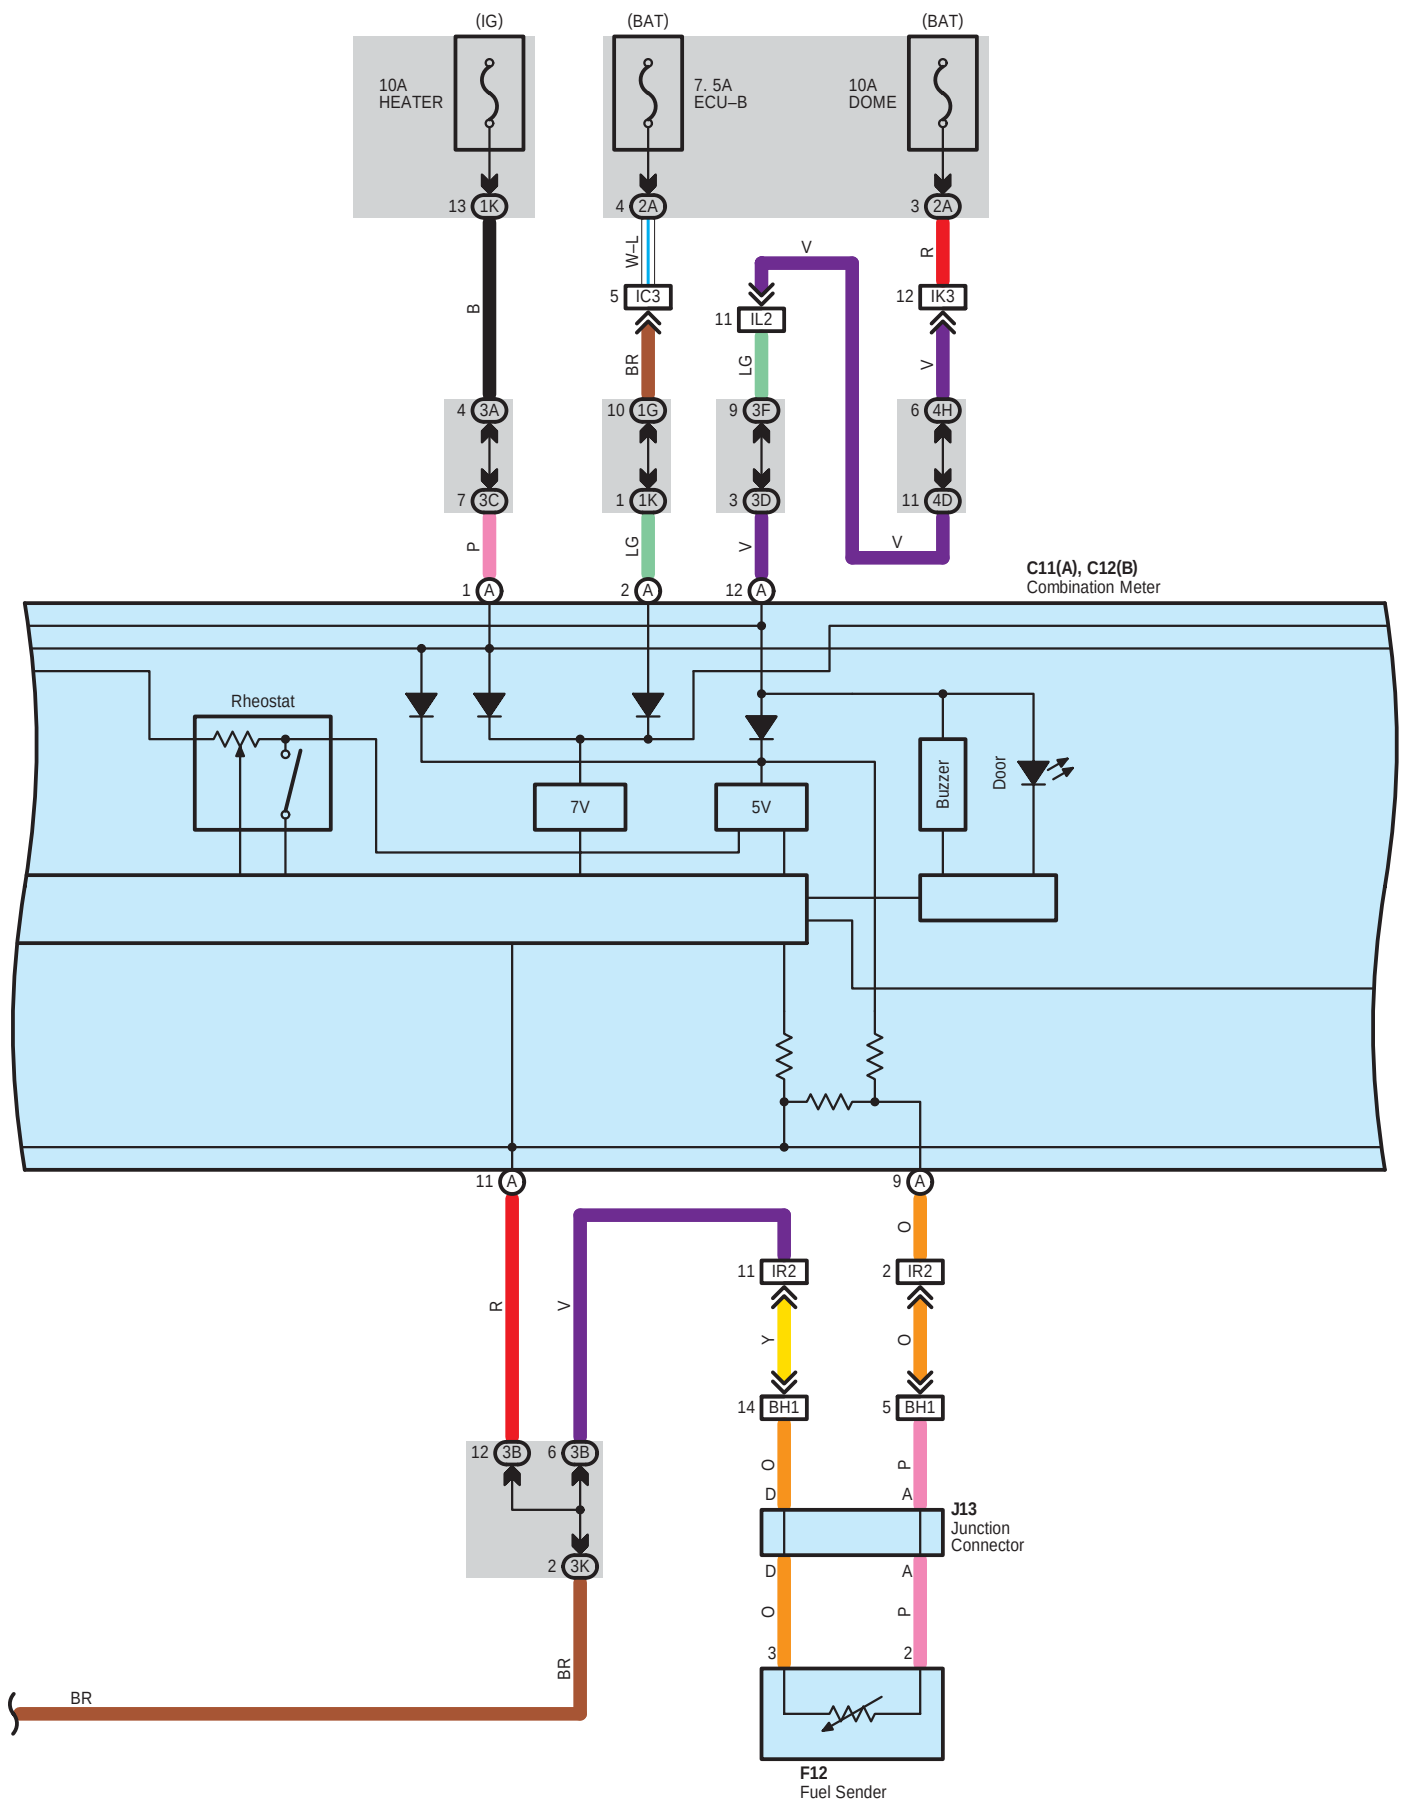



Combination Meter

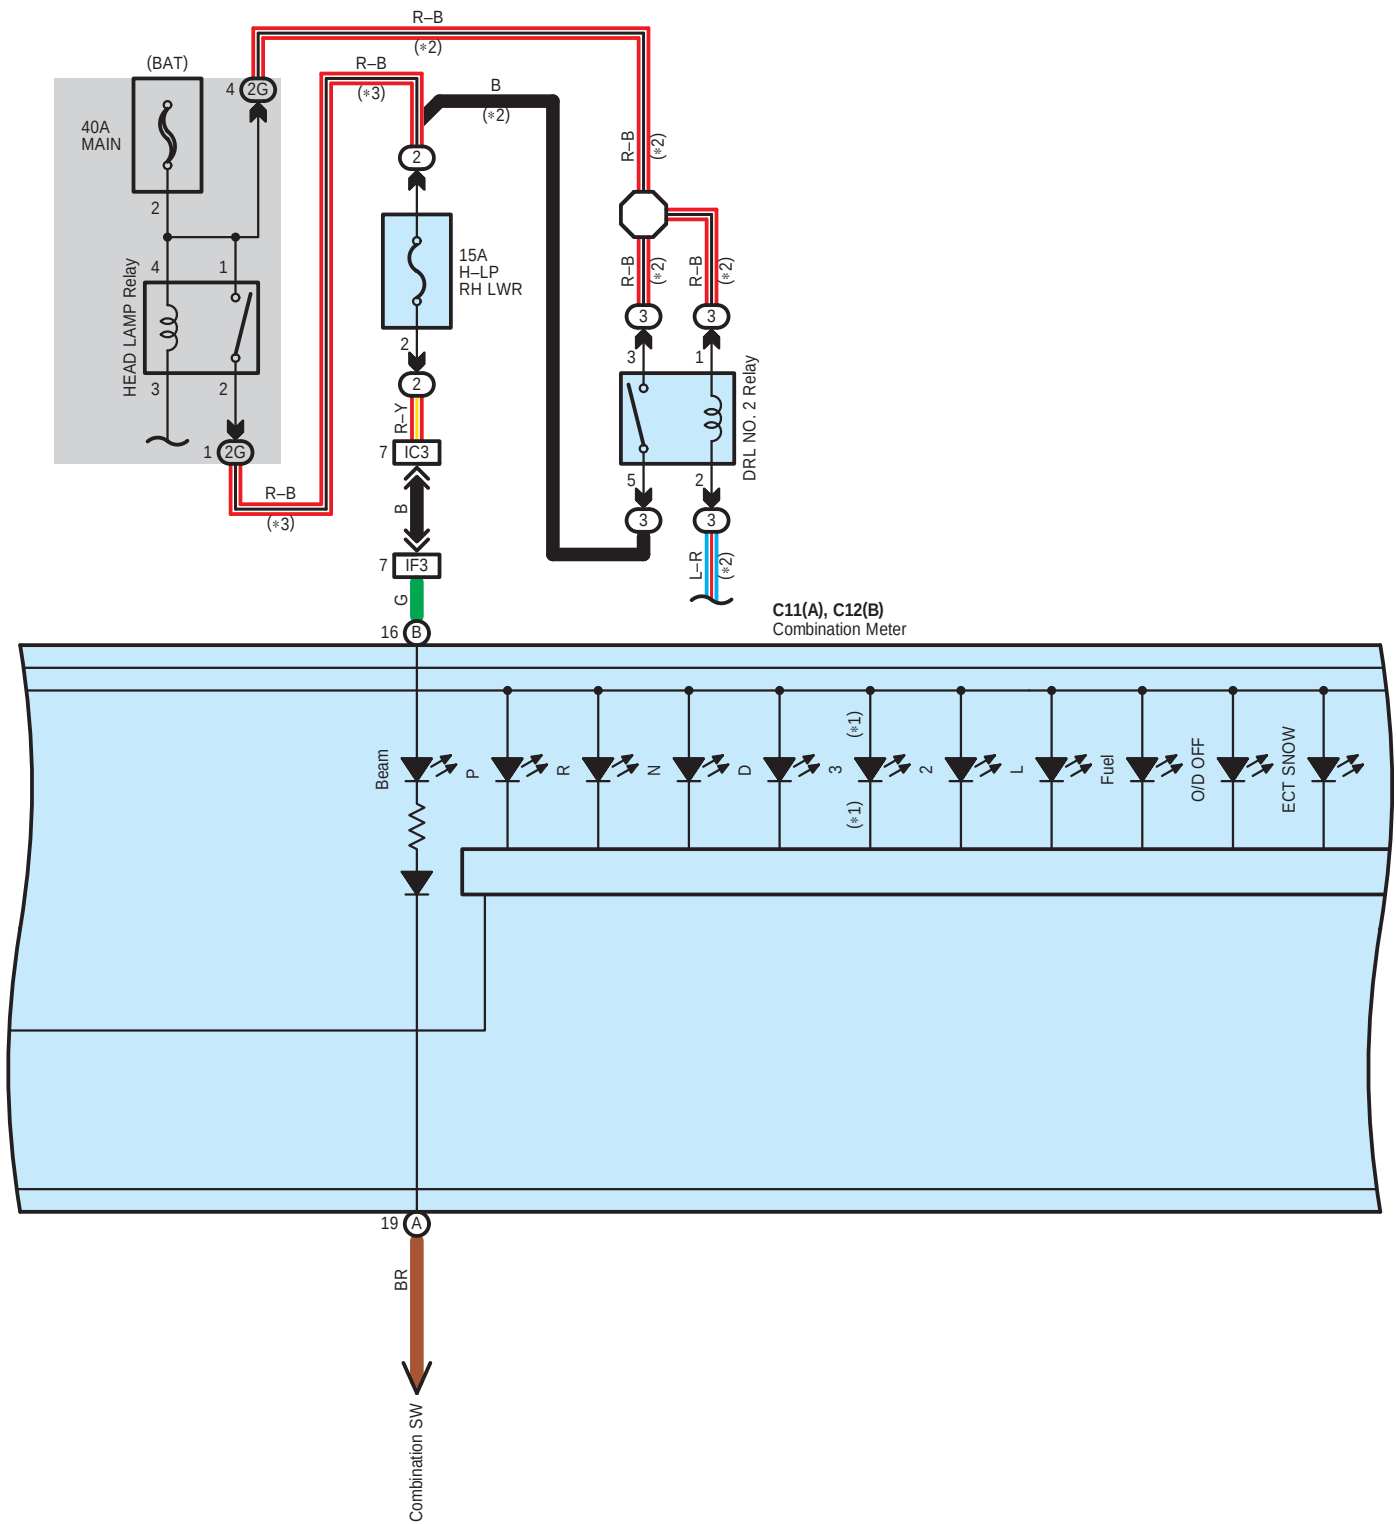

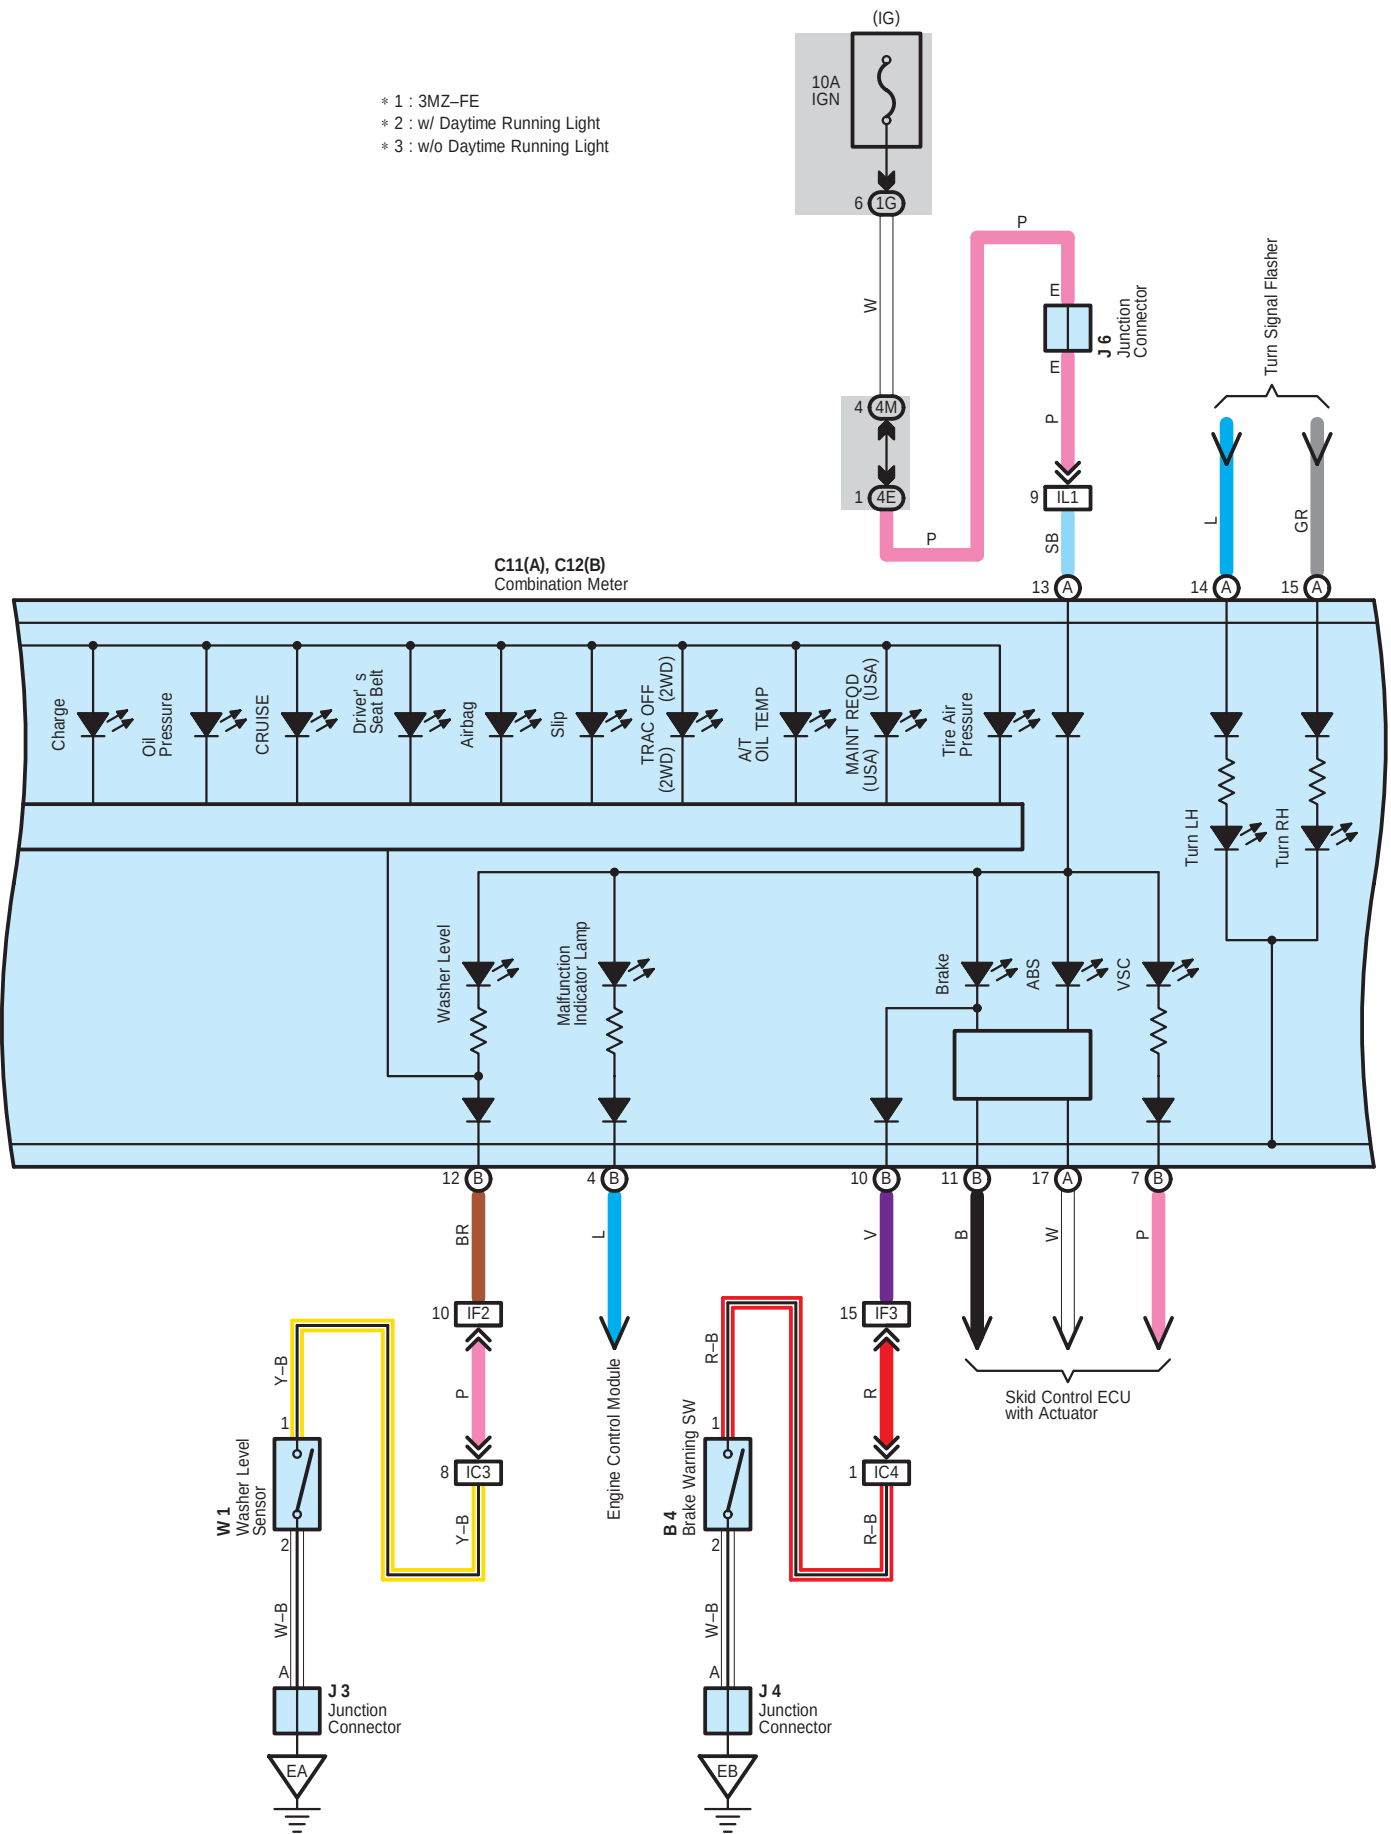

Combination Meter

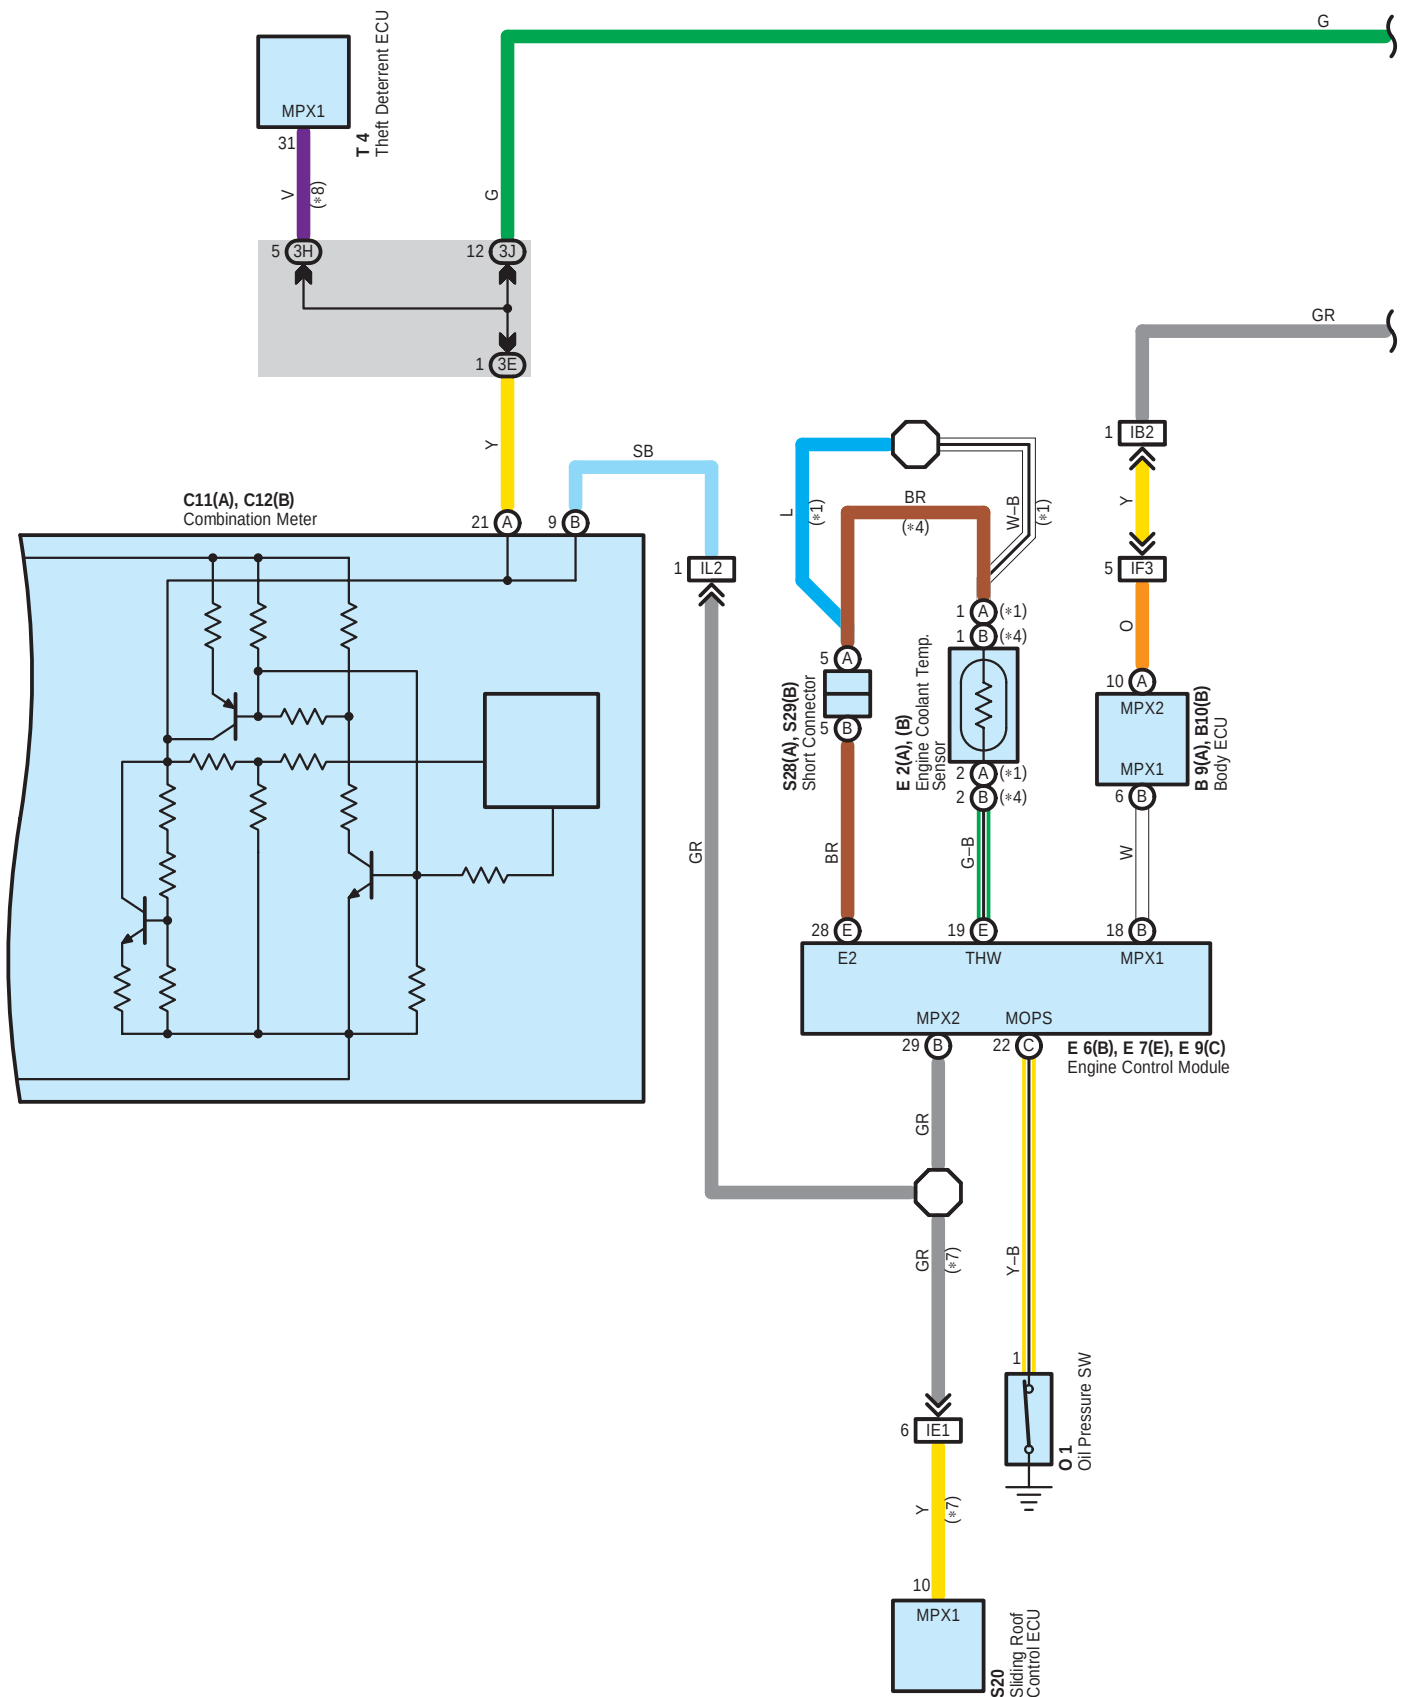

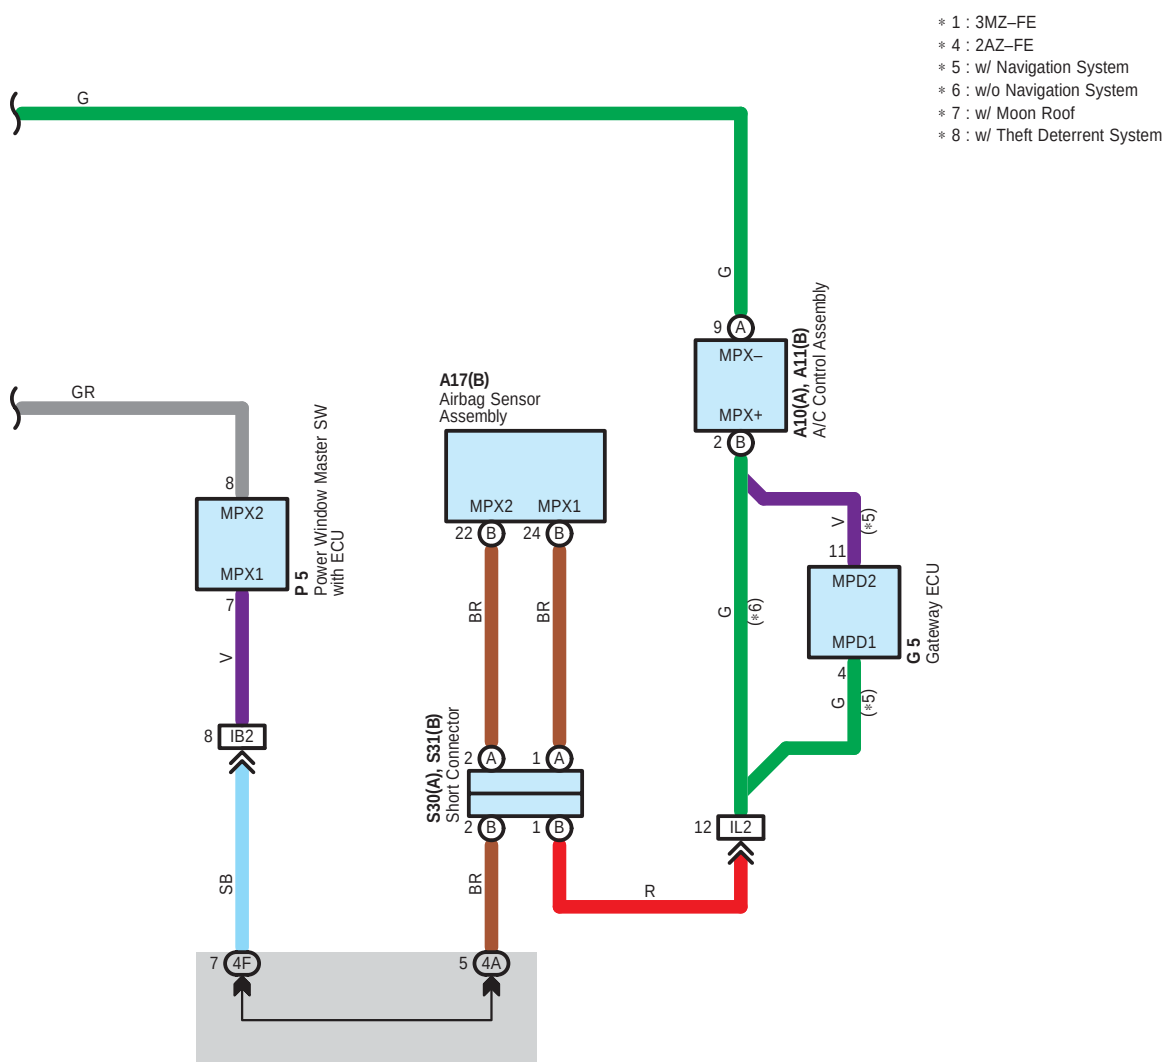

Combination Meter

: Parts Location

Code		See Page	Code		See Page	Code		See Page
A10	A	42	E7	E	42	P5	44	
A11	B	42	E9	C	42	S20	45	
A17	B	42	F12		44	S27	39 (3MZ-FE)	
B4		38 (3MZ-FE)	G5		43		41 (2AZ-FE)	
		40 (2AZ-FE)	J3		39 (3MZ-FE)	S28	A	43
B9	A	42			41 (2AZ-FE)	S29	B	43
B10	B	42	J4		39 (3MZ-FE)	S30	A	43
C11	A	42			41 (2AZ-FE)	S31	B	43
C12	B	42	J6		43	T4		43
E2	A	38 (3MZ-FE)	J13		44	W1	39 (3MZ-FE)	
	B	40 (2AZ-FE)	O1		39 (3MZ-FE)		41 (2AZ-FE)	
E6	B	42			41 (2AZ-FE)			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)
3	23	Engine Room R/B No.3 (Engine Compartment Rear Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1K	28	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
2A	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2G		
3A	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3B		
3C		
3D		
3E		
3F		
3H	31	
3J		
3K		
4A	33	Cowl Wire and Passenger Side J/B (Right Side of Grove Box)
4D		
4E		
4F		
4H		
4M	32	

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB2	50	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IC3	50	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IC4		
IE1	50	Roof Wire and Cowl Wire (Near the Bottom of Left Front Pillar)
IF2	50	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IF3		
IK3	51	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IL1	51	Instrument Panel Wire and Cowl Wire (Upper Side of Passenger Side J/B)
IL2		
IR2	51	Instrument Panel Wire and Floor Wire (Under the Shift Lever)
BH1	52	Floor No.2 Wire and Floor Wire (Near the Rear Side Marker Light RH)

 : Ground Points

Code	See Page	Ground Points Location
EA	48 (3MZ-FE)	Right Front Fender Apron
	49 (2AZ-FE)	
EB	48 (3MZ-FE)	
	49 (2AZ-FE)	
IB	50	Right Instrument Panel Brace