




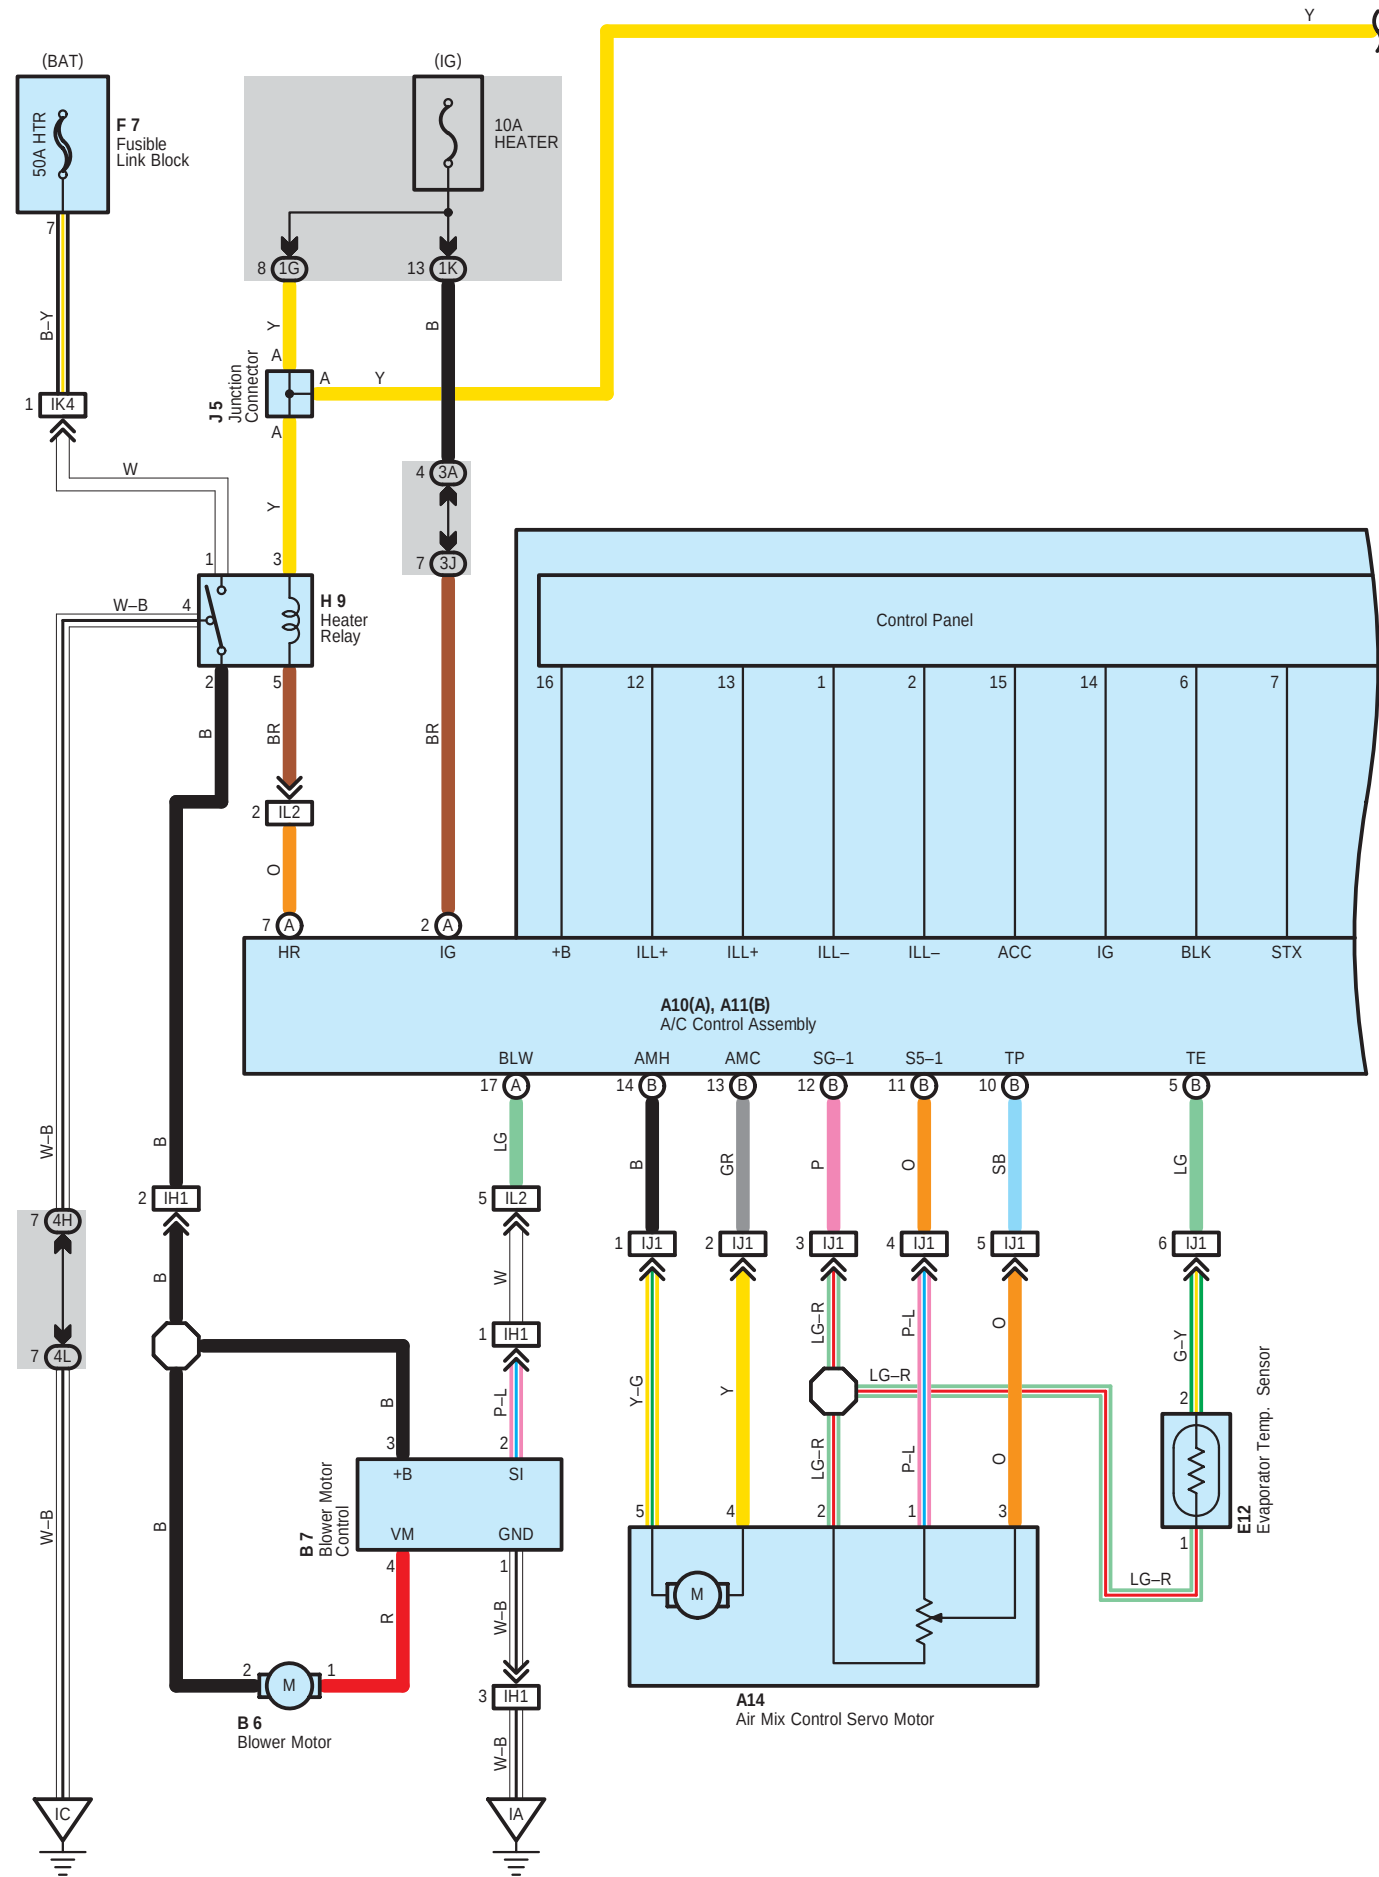

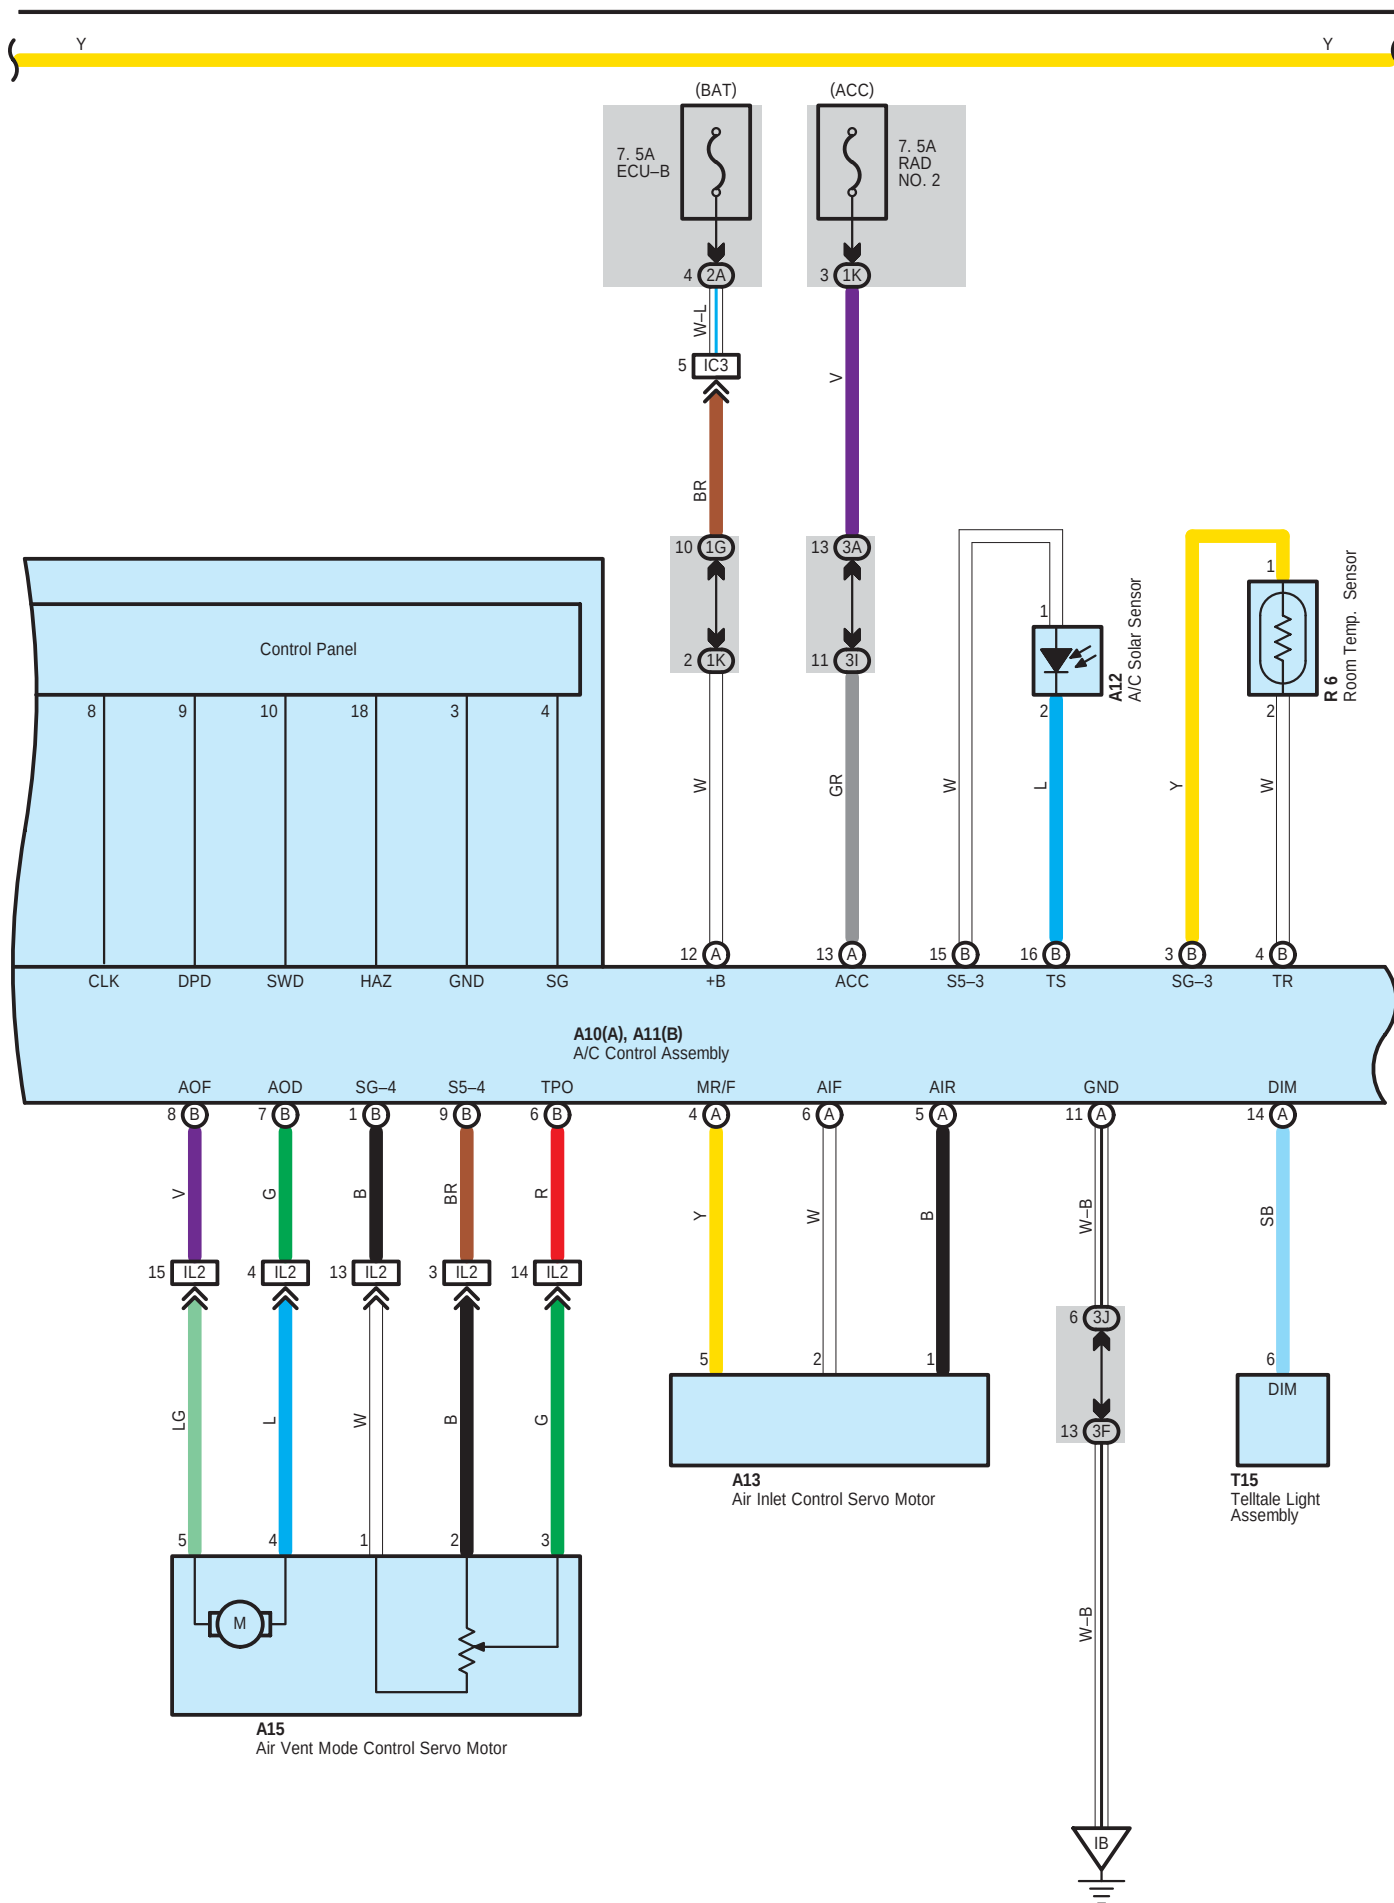

Automatic Air Conditioning

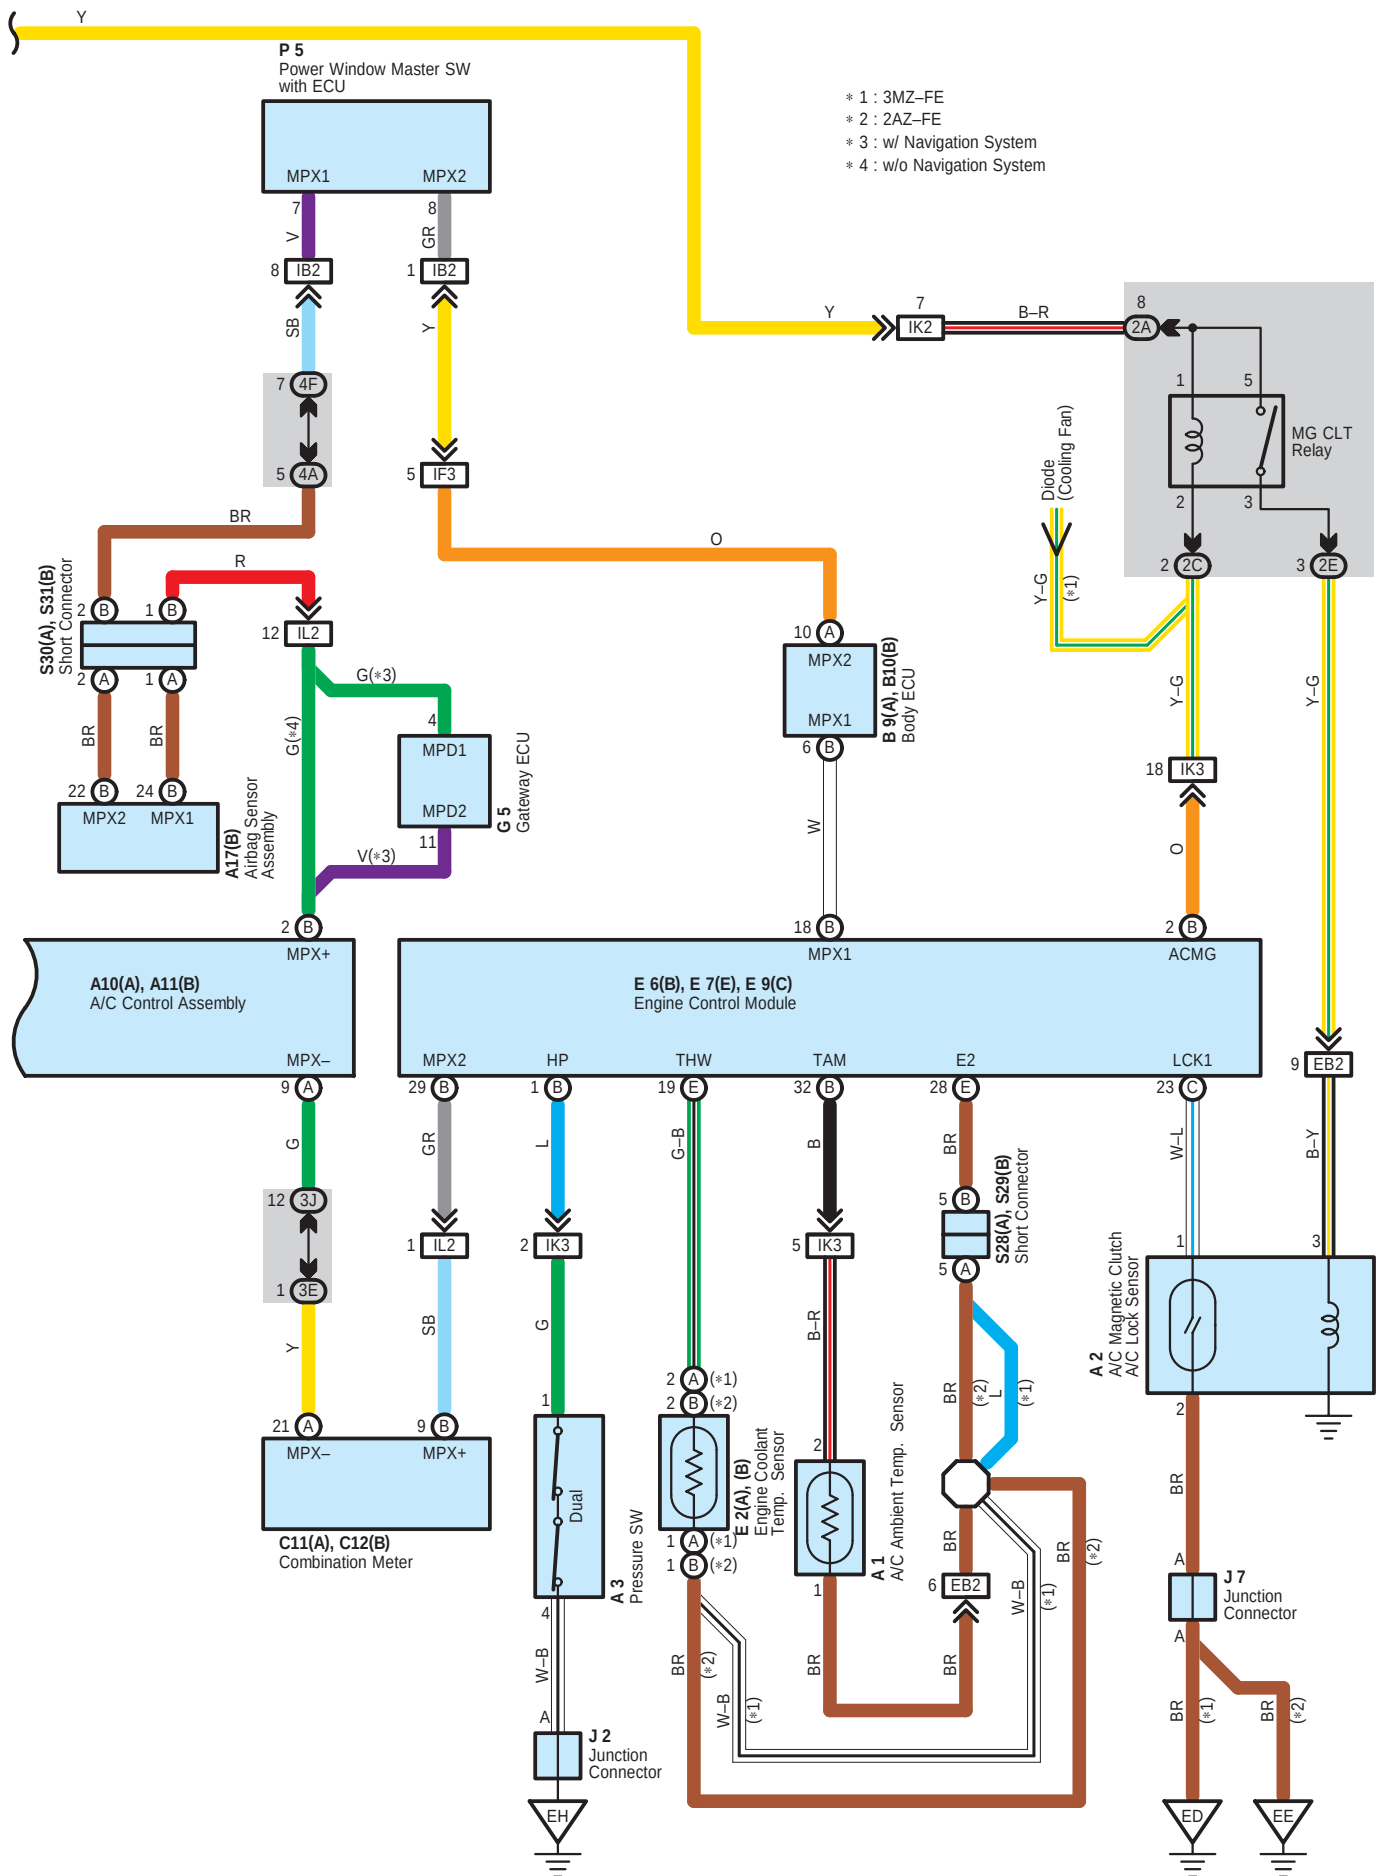

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
A1		38 (3MZ–FE)	B7		42	F7		40 (2AZ–FE)
		40 (2AZ–FE)	B9	A	42	G5		43
A2		38 (3MZ–FE)	B10	B	42	H9		43
		40 (2AZ–FE)	C11	A	42	J2		39 (3MZ–FE)
A3		38 (3MZ–FE)	C12	B	42			41 (2AZ–FE)
		40 (2AZ–FE)	E2	A	38 (3MZ–FE)	J5	43	
A10	A	42			40 (2AZ–FE)	J7	43	
A11	B	42		38 (3MZ–FE)	P5	44		
A12		42		B	40 (2AZ–FE)	R6		43
A13		42	E6	B	42	S28	A	43
A14		42	E7	E	42	S29	B	43
A15		42	E9	C	42	S30	A	43
A17	B	42	E12		42	S31	B	43
B6		42	F7		38 (3MZ–FE)	T15		43

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1K	28	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
2A	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2C		
2E		
3A	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3E		
3F		
3I	31	
3J		
4A	33	Cowl Wire and Passenger Side J/B (Right Side of Grove Box)
4F		
4H		
4L	32	

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB2	48 (3MZ-FE)	Engine Wire and Engine Room Main Wire (Front Side of Engine Room R/B)
	49 (2AZ-FE)	
IB2	50	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IC3	50	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IF3	50	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IH1	51	Cowl Wire and A/C Sub No.2 Wire (Upper Portion of Right Instrument Panel Brace)
IJ1	51	Instrument Panel Wire and A/C Sub No.3 Wire (Upper Portion of Right Instrument Panel Brace)
IK2	51	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IK3		
IK4		
IL2	51	Instrument Panel Wire and Cowl Wire (Upper Side of Passenger Side J/B)

Automatic Air Conditioning



: Ground Points

Code	See Page	Ground Points Location
ED	48 (3MZ-FE)	Rear Side of Cylinder Head
EE	49 (2AZ-FE)	Intake Side of Cylinder Block
EH	48 (3MZ-FE)	Under the Left Headlight
	49 (2AZ-FE)	
IA	50	Left Cowl Side Panel
IB	50	Right Instrument Panel Brace
IC	50	Right Cowl Side Panel

