


Rear Heater

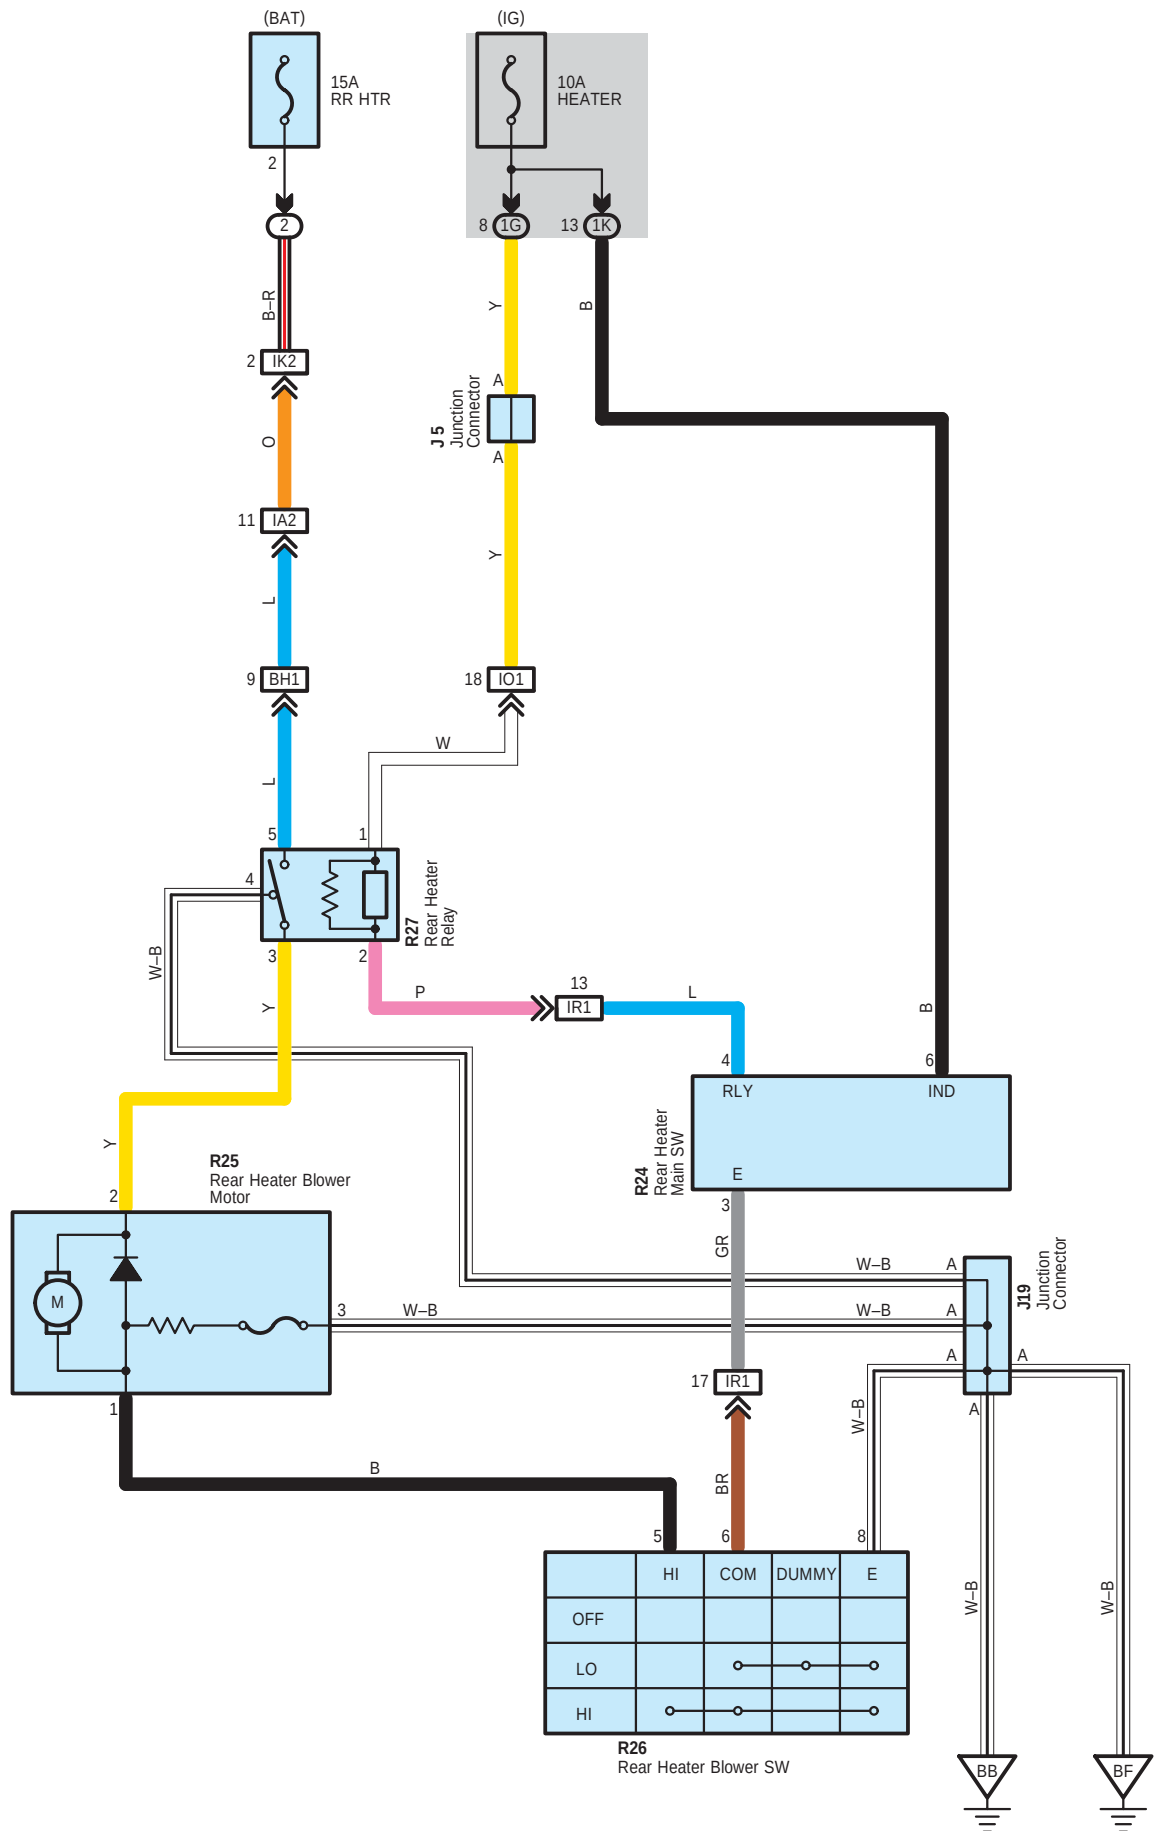

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
J5	43	R24	43	R26	45
J19	44	R25	45	R27	45

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1K	28	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	50	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IK2	51	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IO1	51	Cowl Wire and Floor Wire (Right Kick Panel)
IR1	51	Instrument Panel Wire and Floor Wire (Under the Shift Lever)
BH1	52	Floor No.2 Wire and Floor Wire (Near the Rear Side Marker Light RH)

 : Ground Points

Code	See Page	Ground Points Location
BB	52	Right Center Pillar
BF	52	Near the Rear Side Marker Light RH