



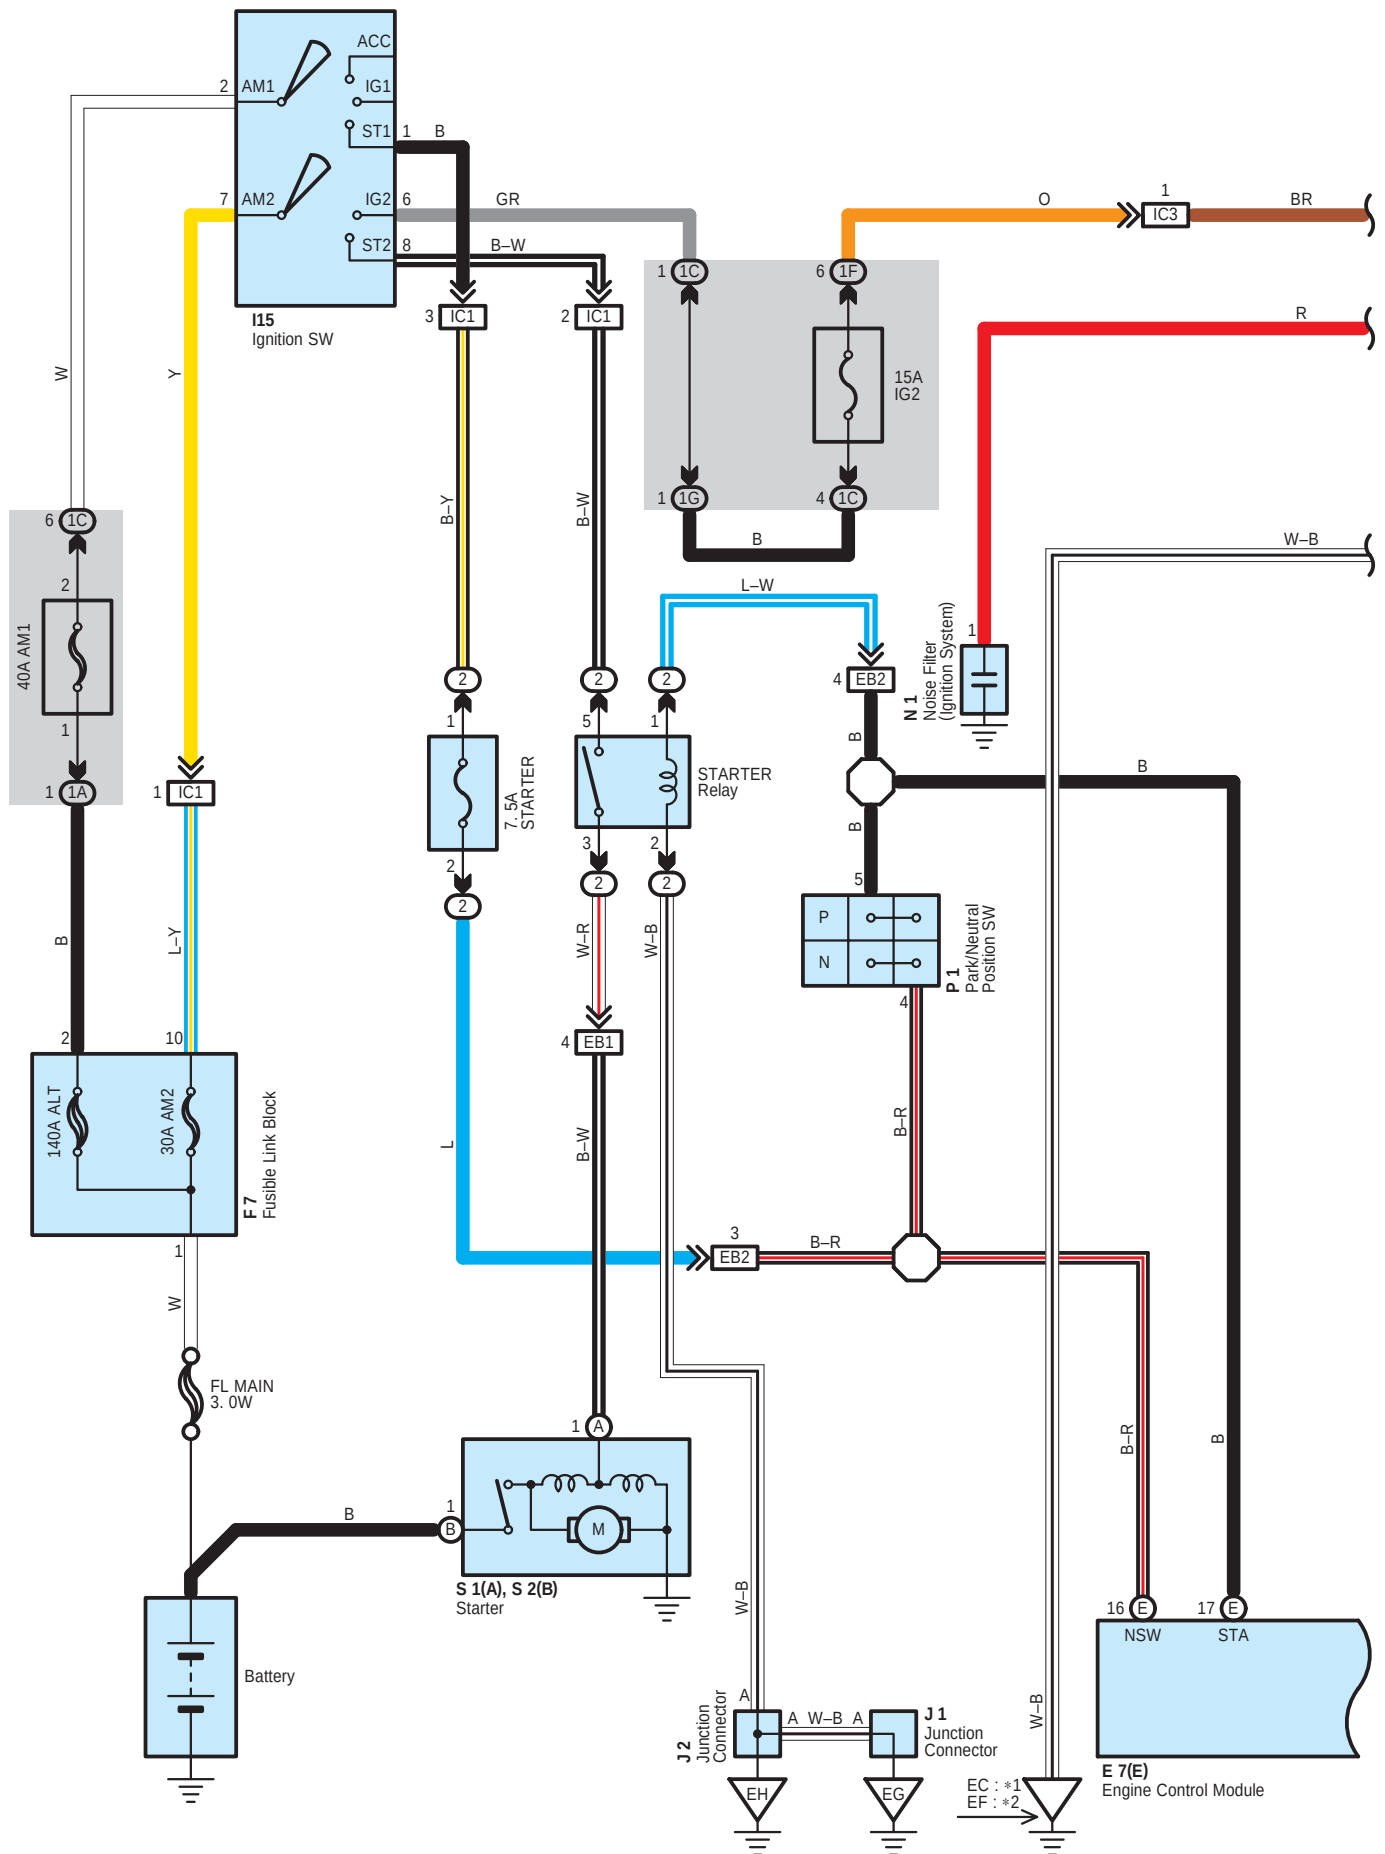

* 1 : 3MZ-FE
* 2 : 2AZ-FE

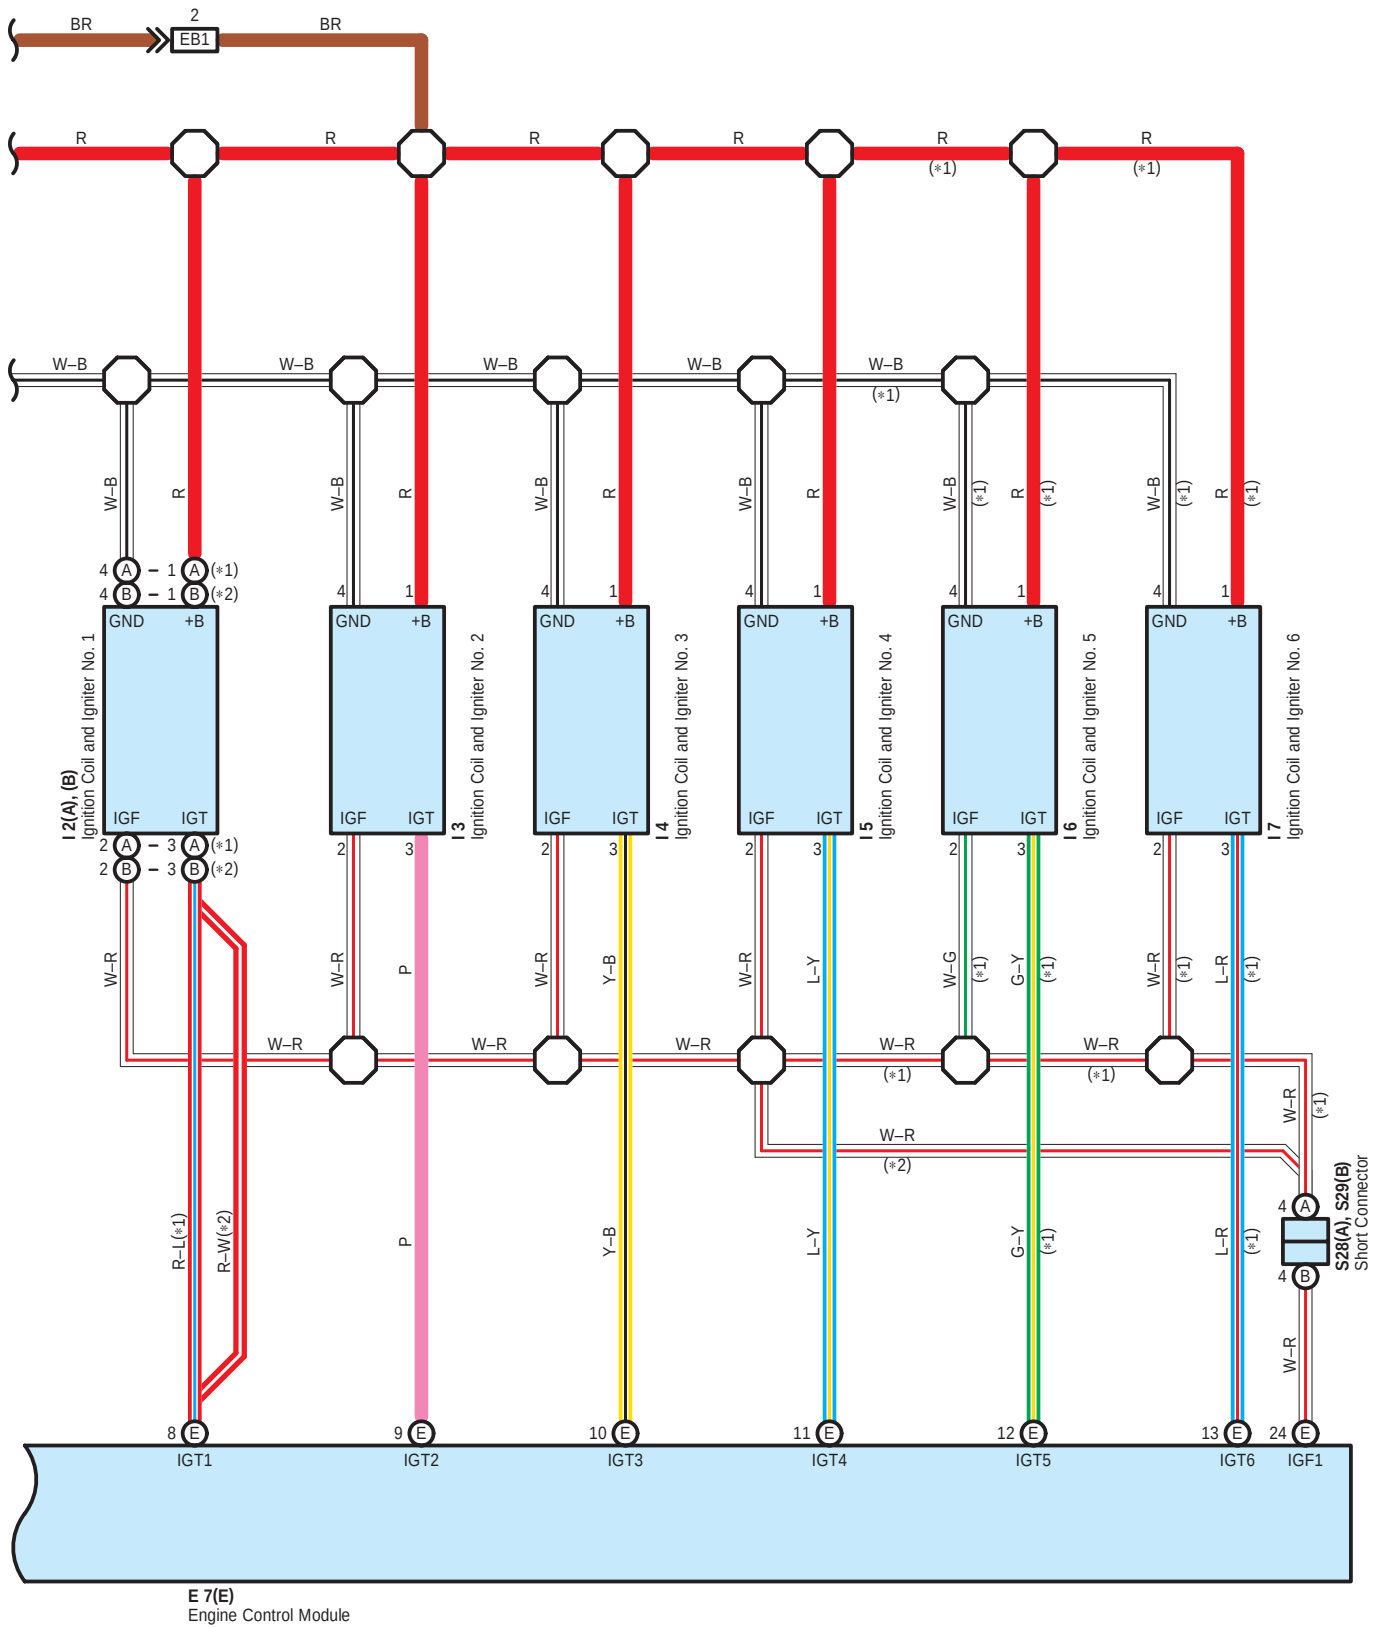

Starting and Ignition

: Parts Location

Code		See Page	Code	See Page	Code		See Page
E7	E	42	I4	41 (2AZ-FE)	N1	39 (3MZ-FE)	
F7		38 (3MZ-FE)	I5	39 (3MZ-FE)		41 (2AZ-FE)	
		40 (2AZ-FE)		41 (2AZ-FE)	P1	39 (3MZ-FE)	
I2	A	39 (3MZ-FE)	I6	39 (3MZ-FE)		41 (2AZ-FE)	
		41 (2AZ-FE)	I7	39 (3MZ-FE)	S1	A	39 (3MZ-FE)
	B	39 (3MZ-FE)	I15	43			41 (2AZ-FE)
		41 (2AZ-FE)	J1	39 (3MZ-FE)	S2	B	39 (3MZ-FE)
I3		39 (3MZ-FE)		41 (2AZ-FE)			41 (2AZ-FE)
		41 (2AZ-FE)	J2	39 (3MZ-FE)	S28	A	43
I4		39 (3MZ-FE)		41 (2AZ-FE)	S29	B	43

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	29	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1F		
1G		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	48 (3MZ-FE)	Engine Wire and Engine Room Main Wire (Front Side of Engine Room R/B)
	49 (2AZ-FE)	
EB2	48 (3MZ-FE)	
	49 (2AZ-FE)	
IC1	50	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IC3		

: Ground Points

Code	See Page	Ground Points Location
EC	48 (3MZ-FE)	Left Side of Cylinder Head
EF	49 (2AZ-FE)	Left Side of Cylinder Block
EG	48 (3MZ-FE)	Under the Left Headlight
	49 (2AZ-FE)	
EH	48 (3MZ-FE)	
	49 (2AZ-FE)	

