



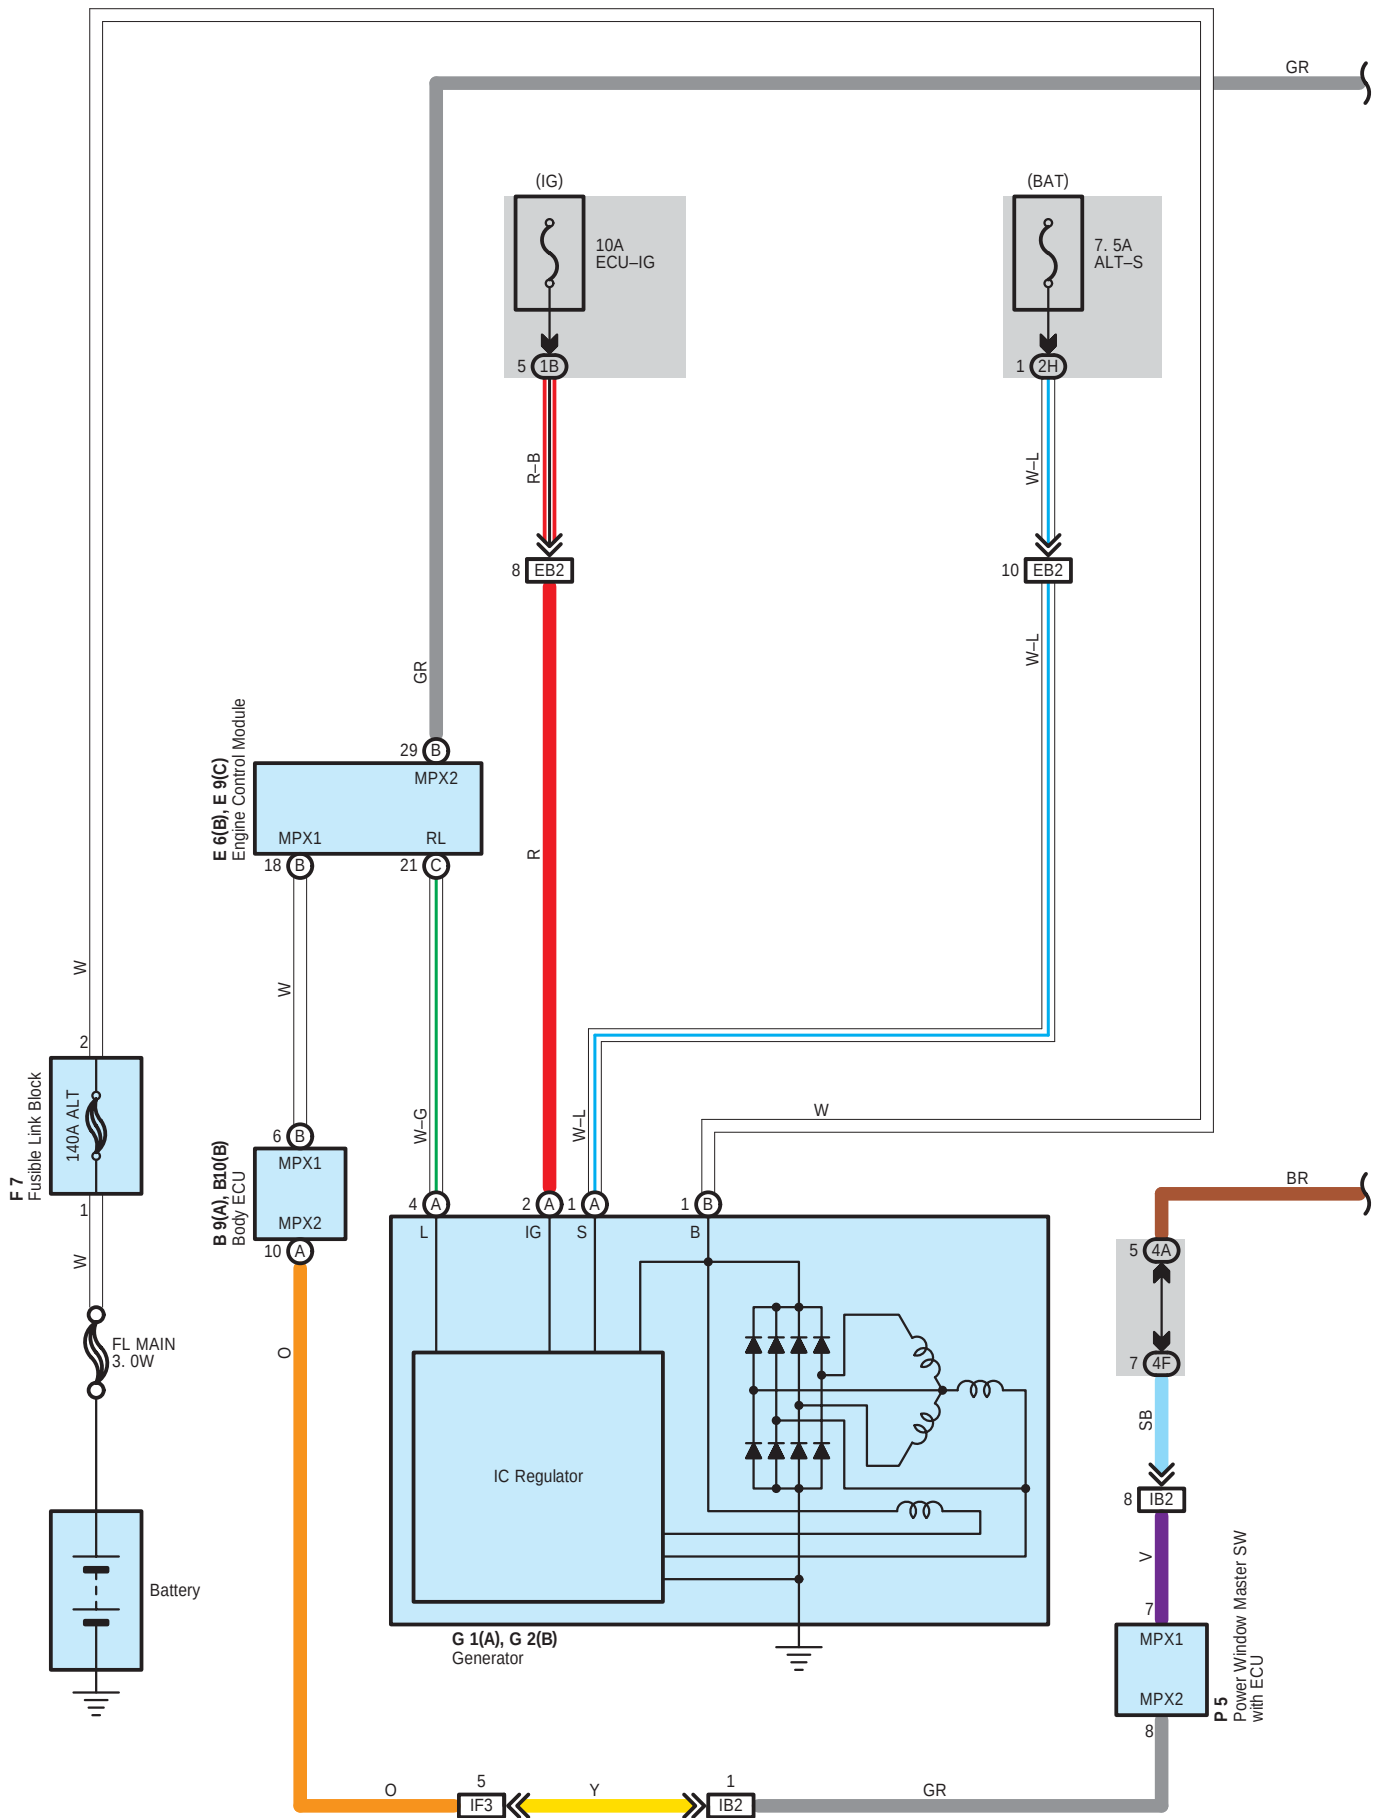

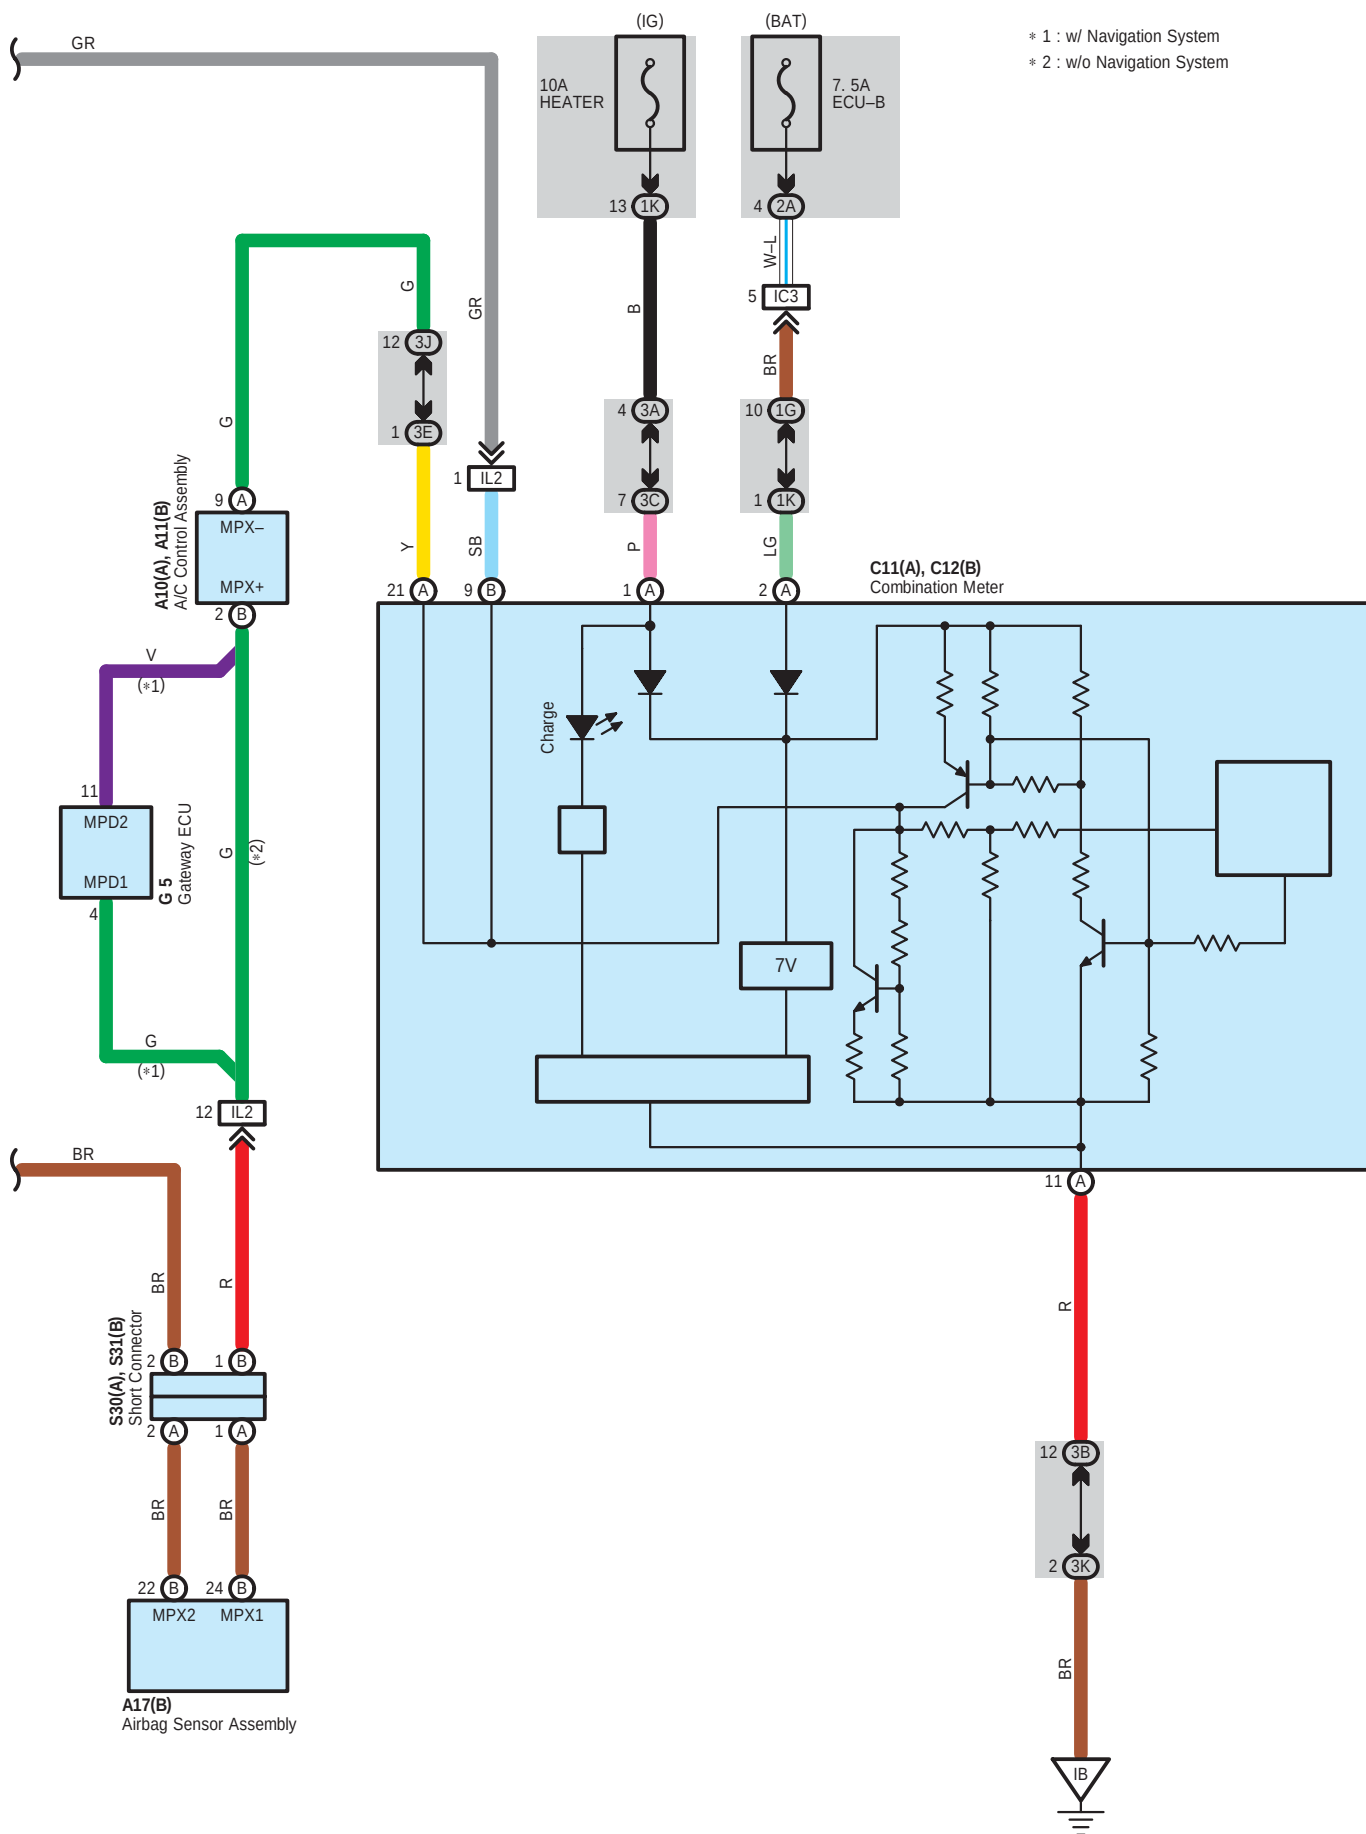

Charging

: Parts Location

Code		See Page	Code		See Page	Code		See Page
A10	A	42	E6	B	42	G2	B	40 (2AZ-FE)
A11	B	42	E9	C	42	G5		43
A17	B	42	F7		38 (3MZ-FE)	P5		44
B9	A	42			40 (2AZ-FE)	S30	A	43
B10	B	42	G1	A	38 (3MZ-FE)	S31	B	43
C11	A	42			40 (2AZ-FE)			
C12	B	42	G2	B	38 (3MZ-FE)			

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	29	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1G	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1K	28	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
2A	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2H		
3A	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3B		
3C		
3E		
3J	31	
3K		
4A	33	Cowl Wire and Passenger Side J/B (Right Side of Grove Box)
4F		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB2	48 (3MZ-FE)	Engine Wire and Engine Room Main Wire (Front Side of Engine Room R/B)
	49 (2AZ-FE)	
IB2	50	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IC3	50	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IF3	50	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IL2	51	Instrument Panel Wire and Cowl Wire (Upper Side of Passenger Side J/B)

: Ground Points

Code	See Page	Ground Points Location
IB	50	Right Instrument Panel Brace

