


Engine Immobiliser System

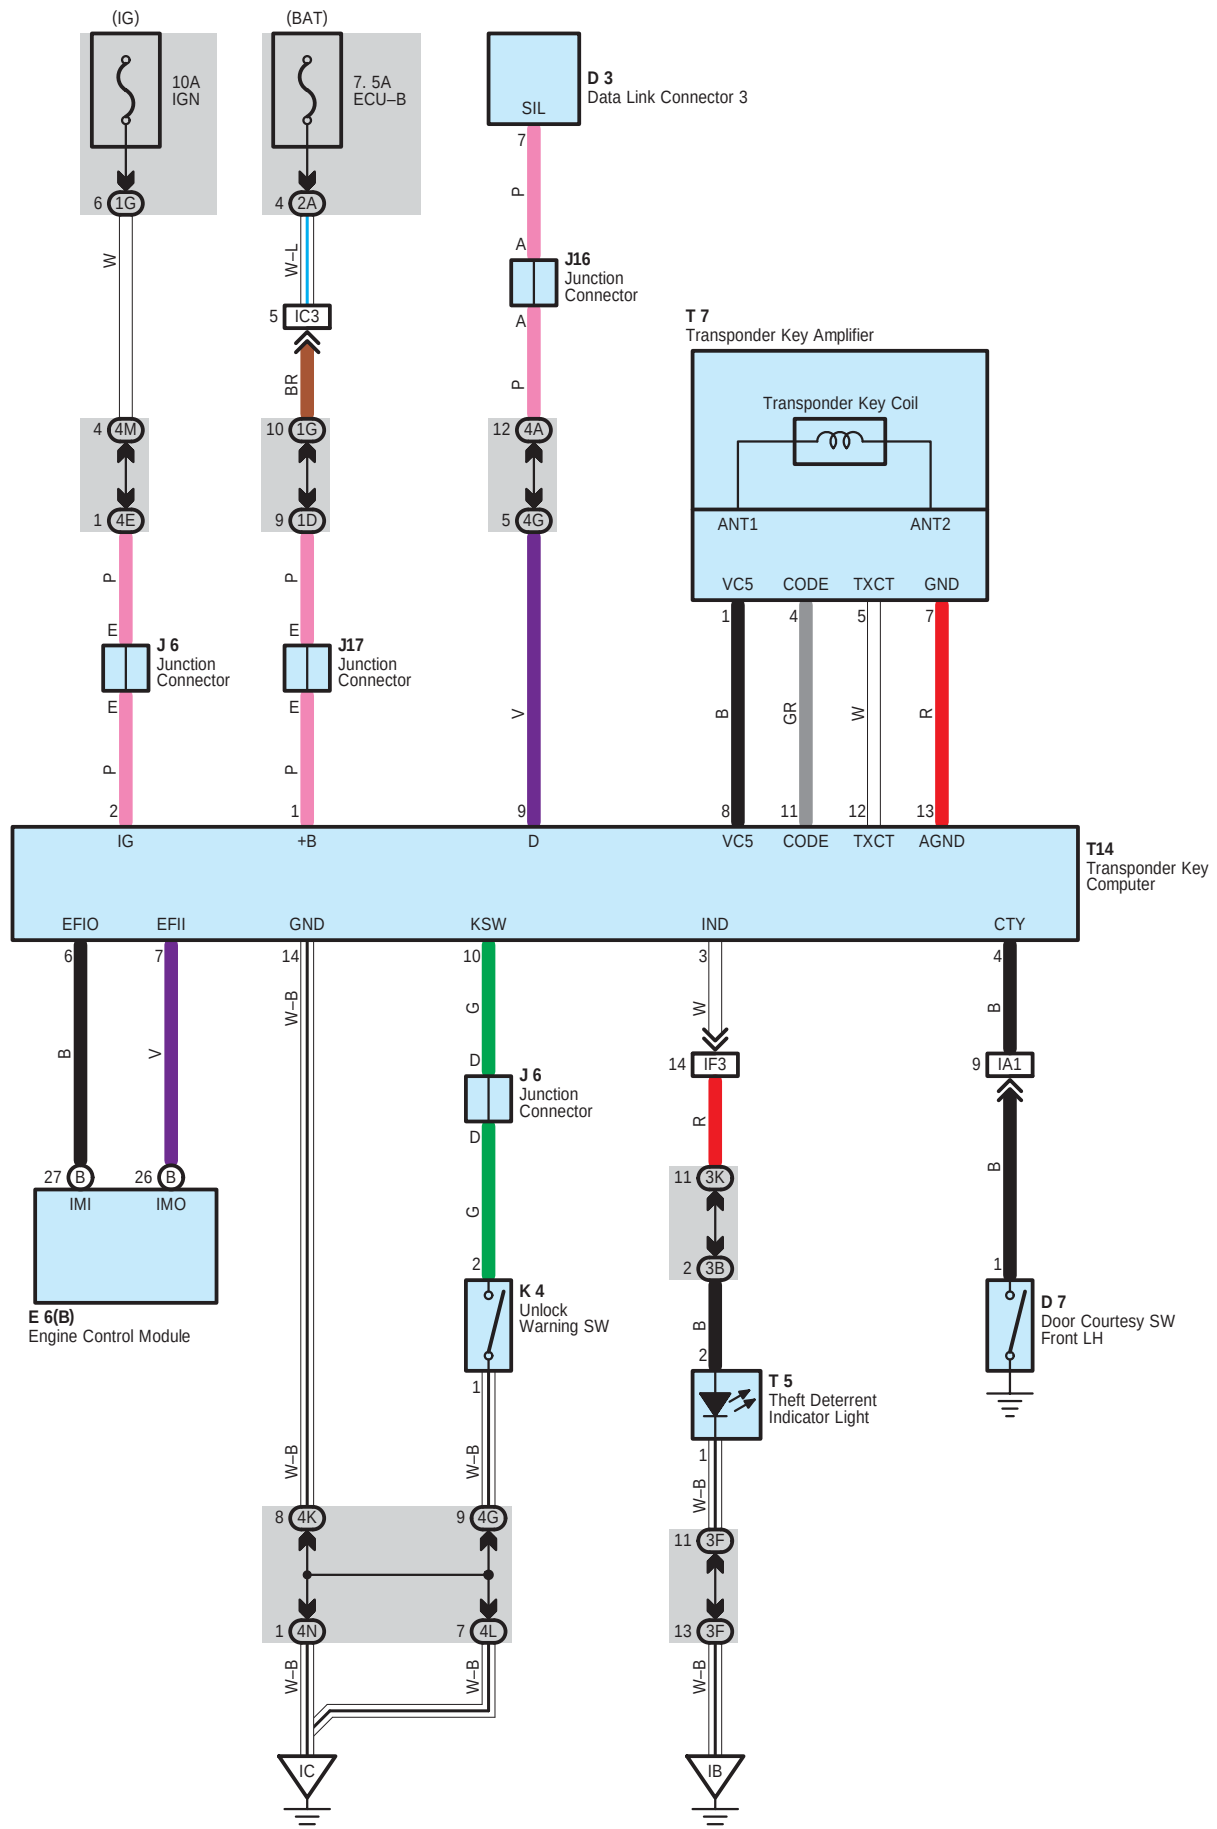

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
D3	42	J16	43	T7	43
D7	44	J17	43	T14	43
E6	B	K4	43		
J6	43	T5	43		

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1G		
2A	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3B	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3F		
3K	31	
4A	33	
4E		
4G		
4K	32	Cowl Wire and Passenger Side J/B (Right Side of Grove Box)
4L		
4M		
4N		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	50	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IC3	50	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IF3	50	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)

 : Ground Points

Code	See Page	Ground Points Location
IB	50	Right Instrument Panel Brace
IC	50	Right Cowl Side Panel