




F RELAY LOCATIONS

[Engine Compartment]

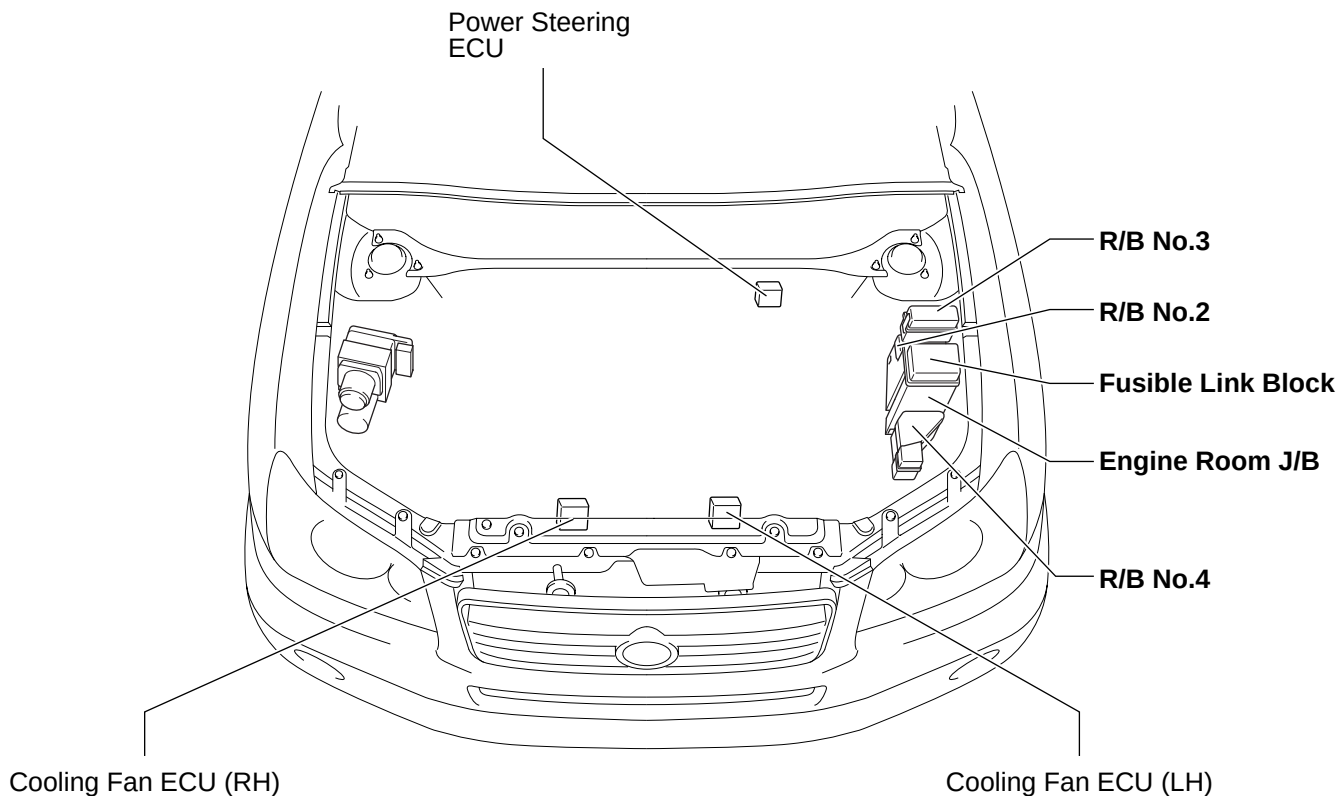


[Instrument Panel]

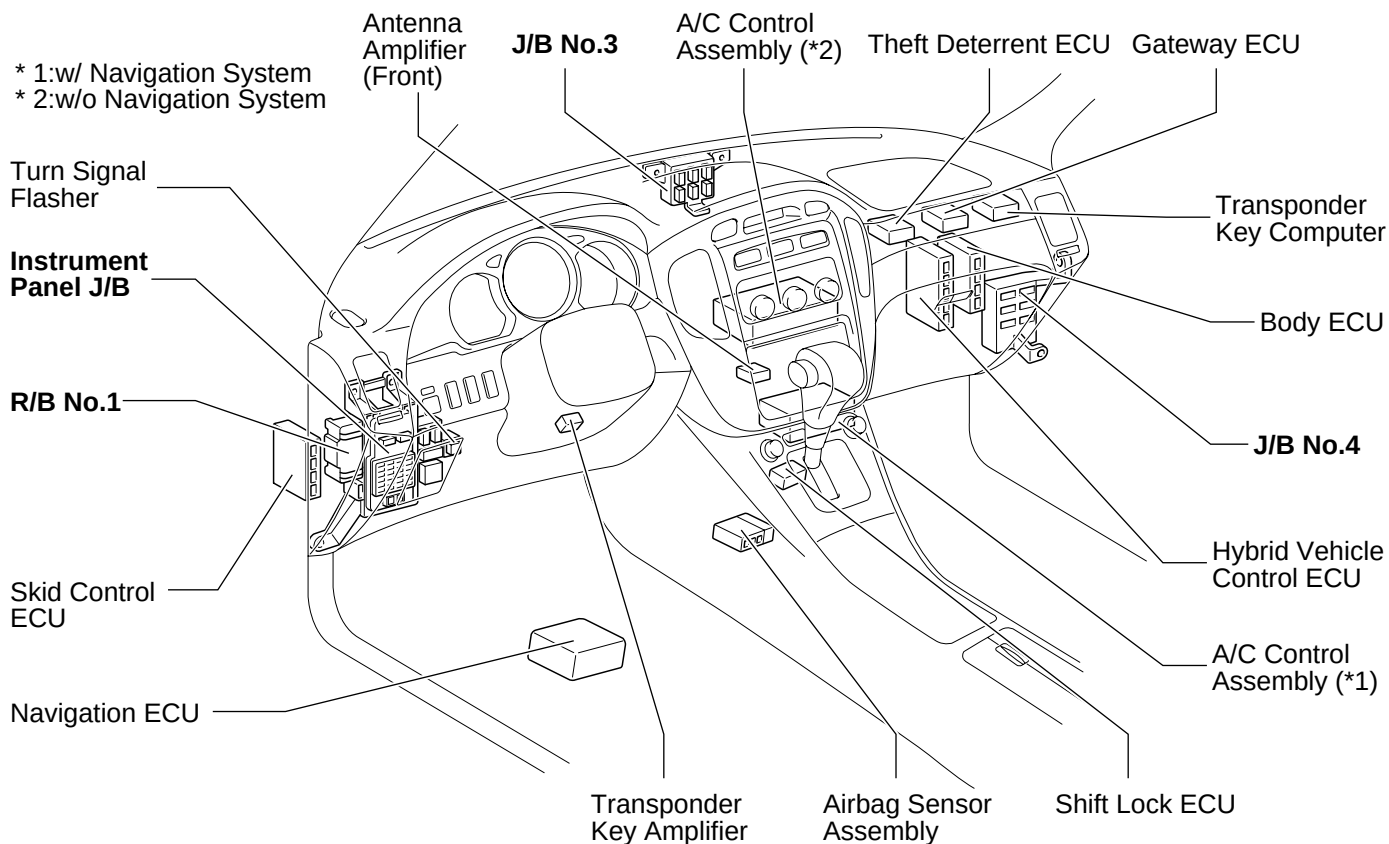

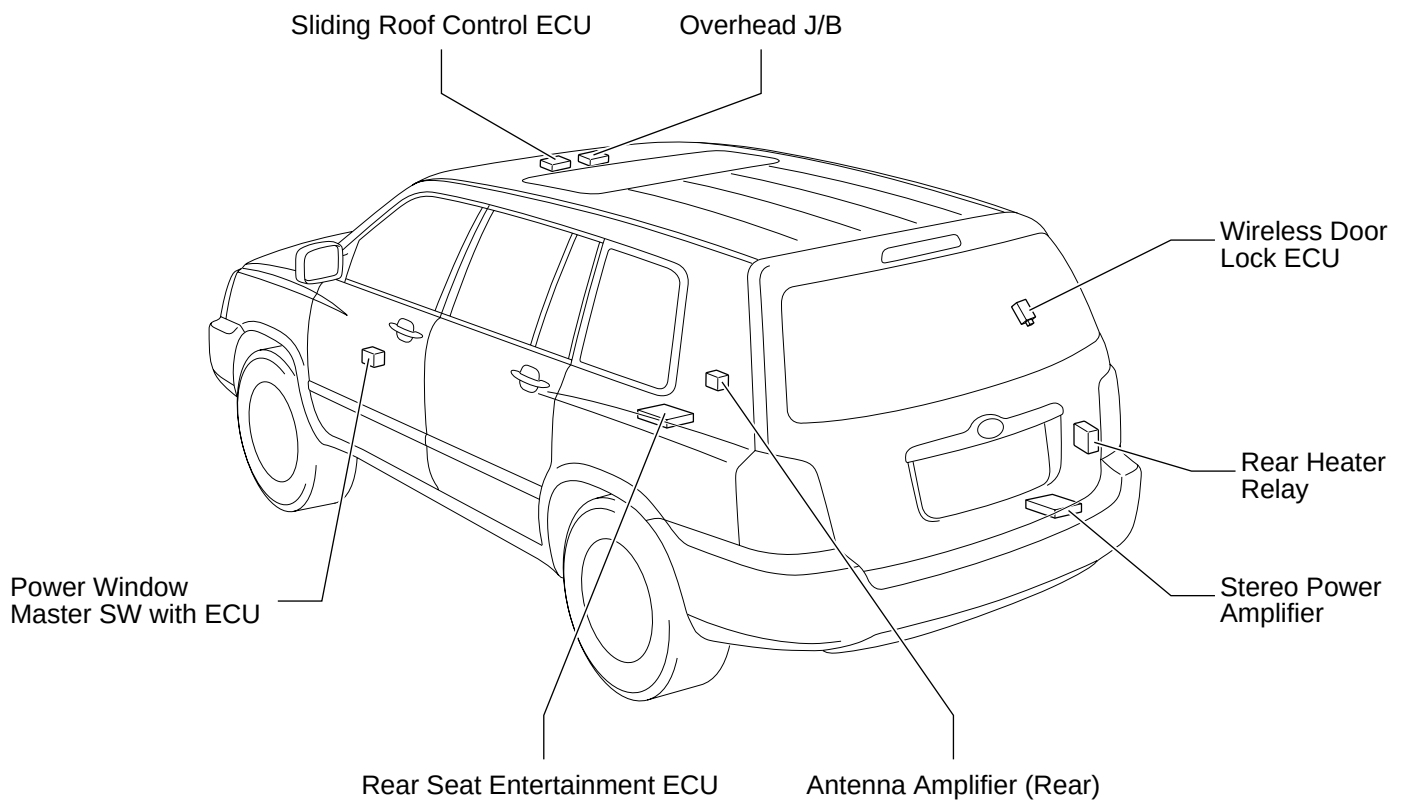
[Body]

F RELAY LOCATIONS

[Front Seat]

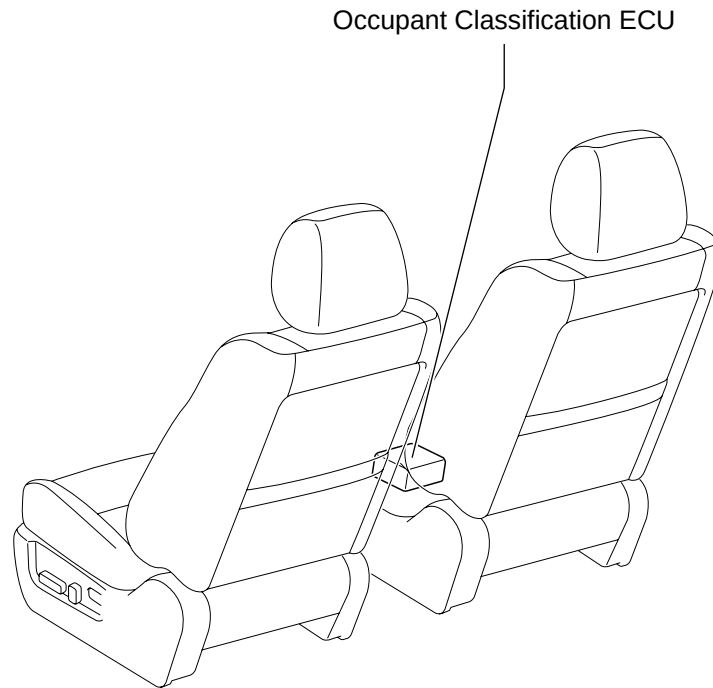


[Rear Seat]

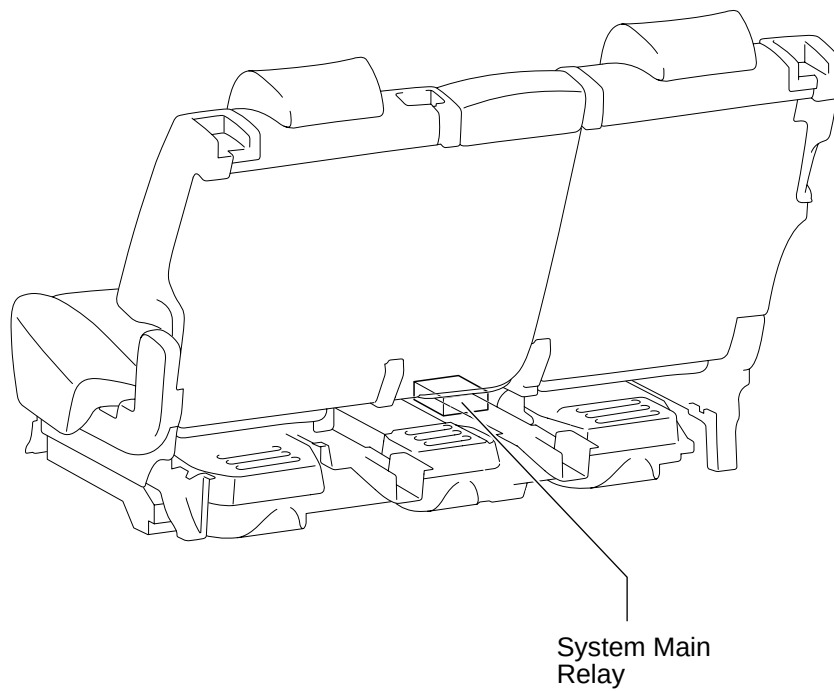

F RELAY LOCATIONS


⑦ : Fusible Link Block Engine Compartment Left (See Page 20)

- * 1:15A H-LP R UPR
- * 2:15A H-LP L UPR
- * 3:15A H-LP L LWR
- * 4:7.5A DRL
- * 5:20A PWR OUTLET NO.2

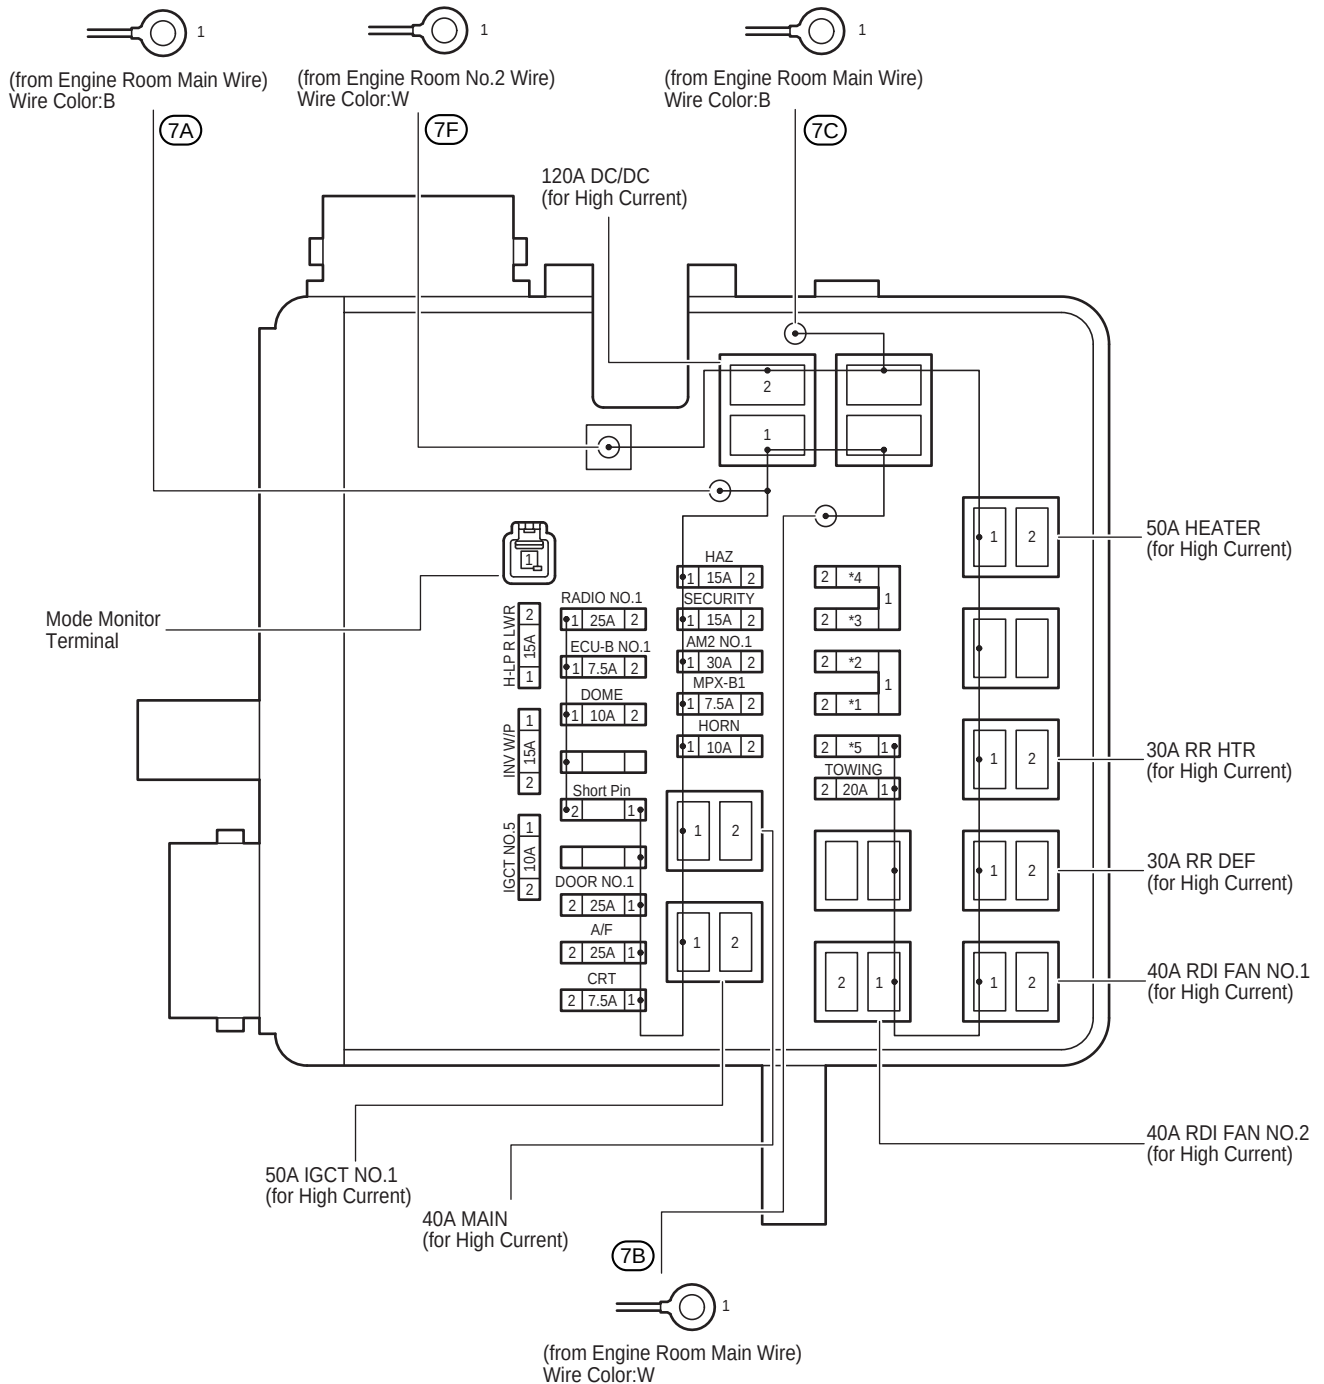


② : R/B No.2

Engine Compartment Left (See Page 20)

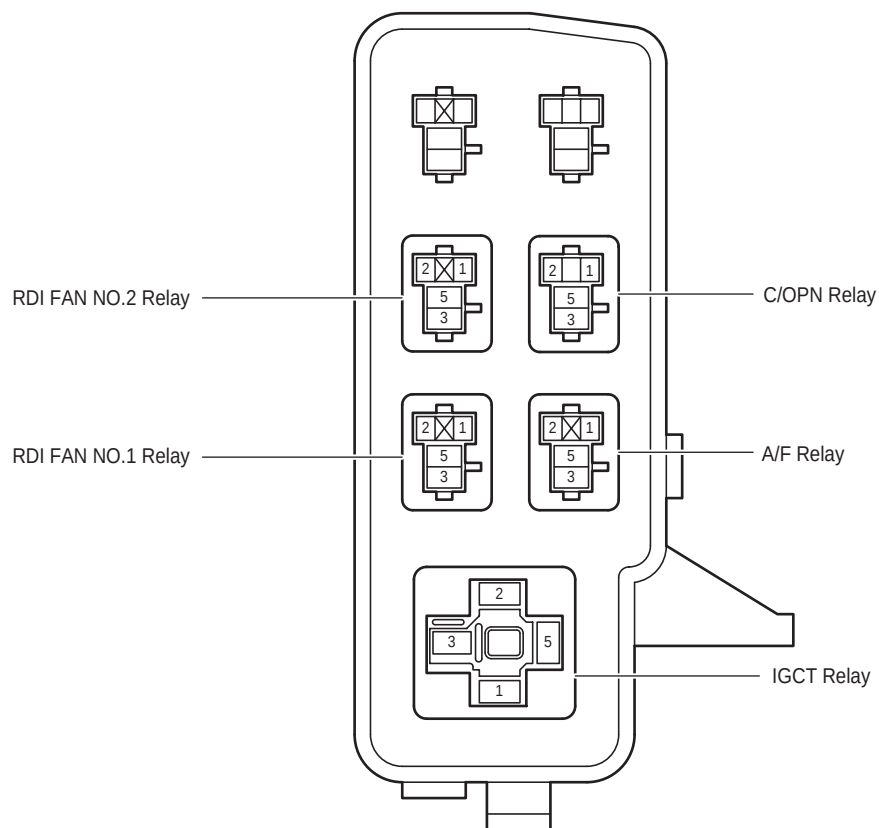


F RELAY LOCATIONS

① : R/B No.1	Lower Finish Panel (See Page 20)
--------------	----------------------------------

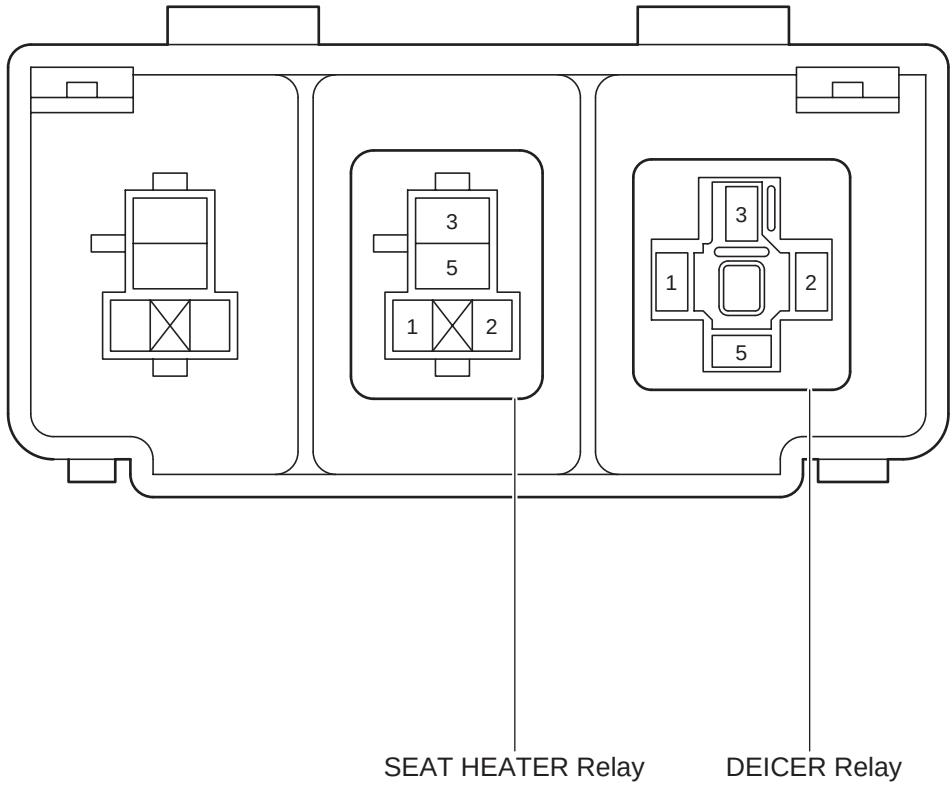


③ : R/B No.3	Engine Compartment Left (See Page 20)
--------------	---------------------------------------

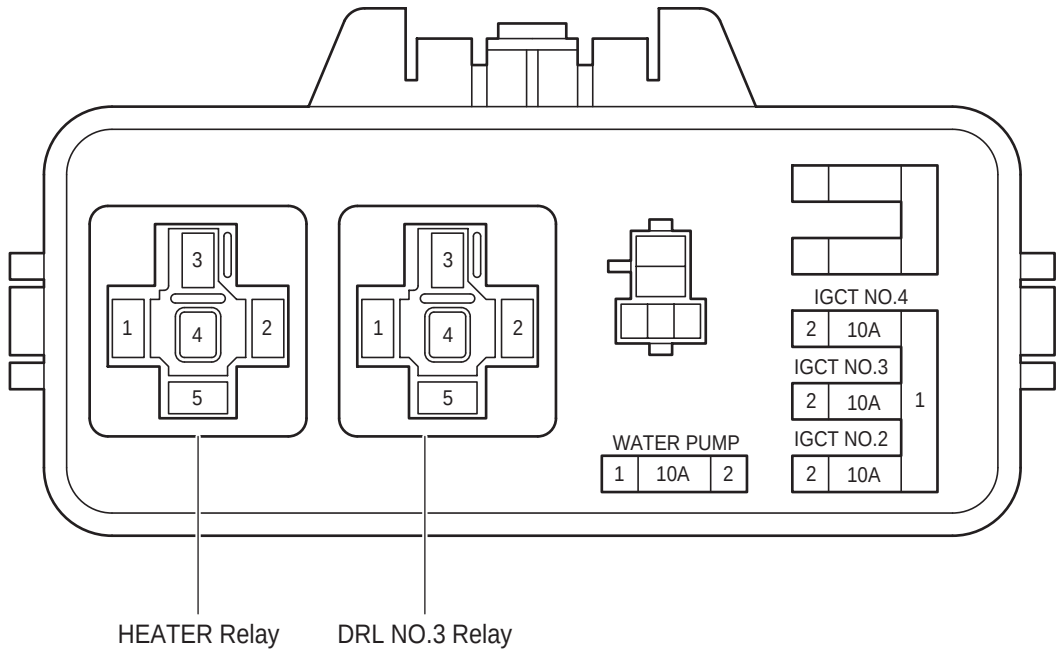

④ : R/B No.4


Engine Compartment Left (See Page 20)

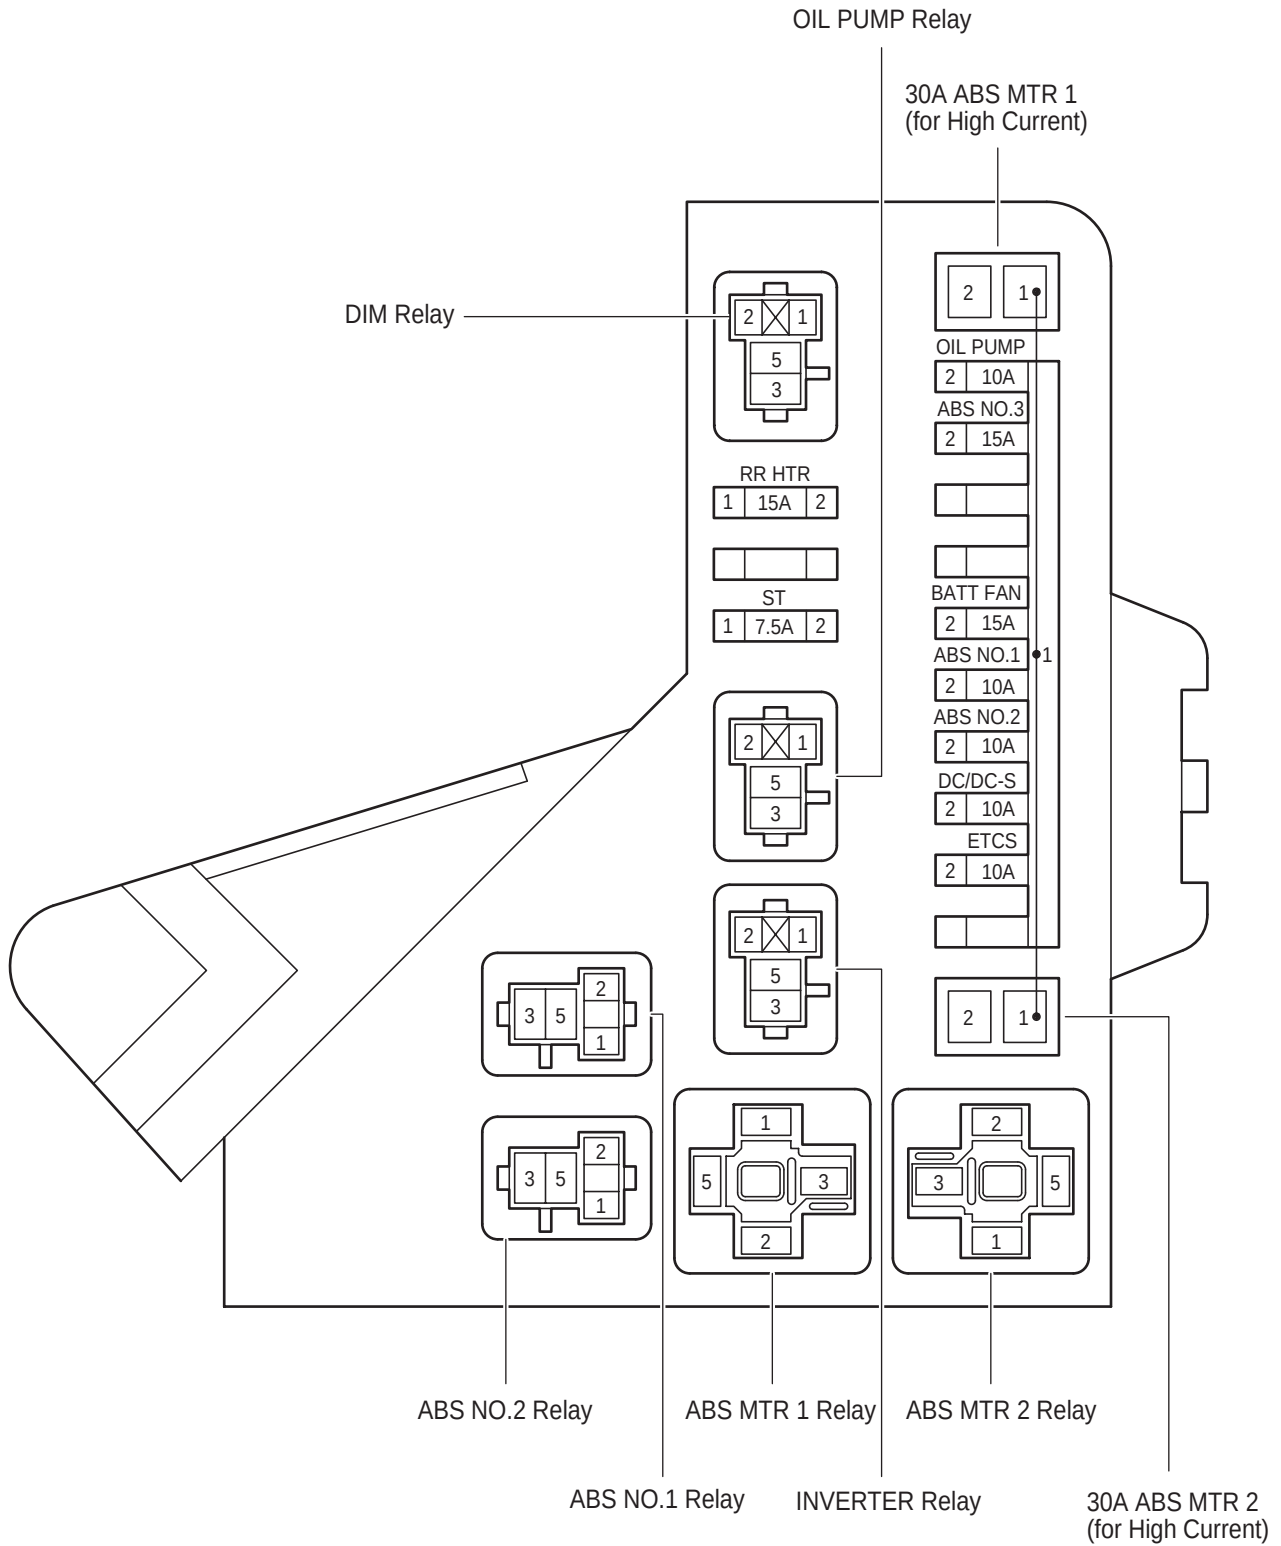


F RELAY LOCATIONS

○ : Engine Room J/B

Engine Compartment Left (See Page 20)

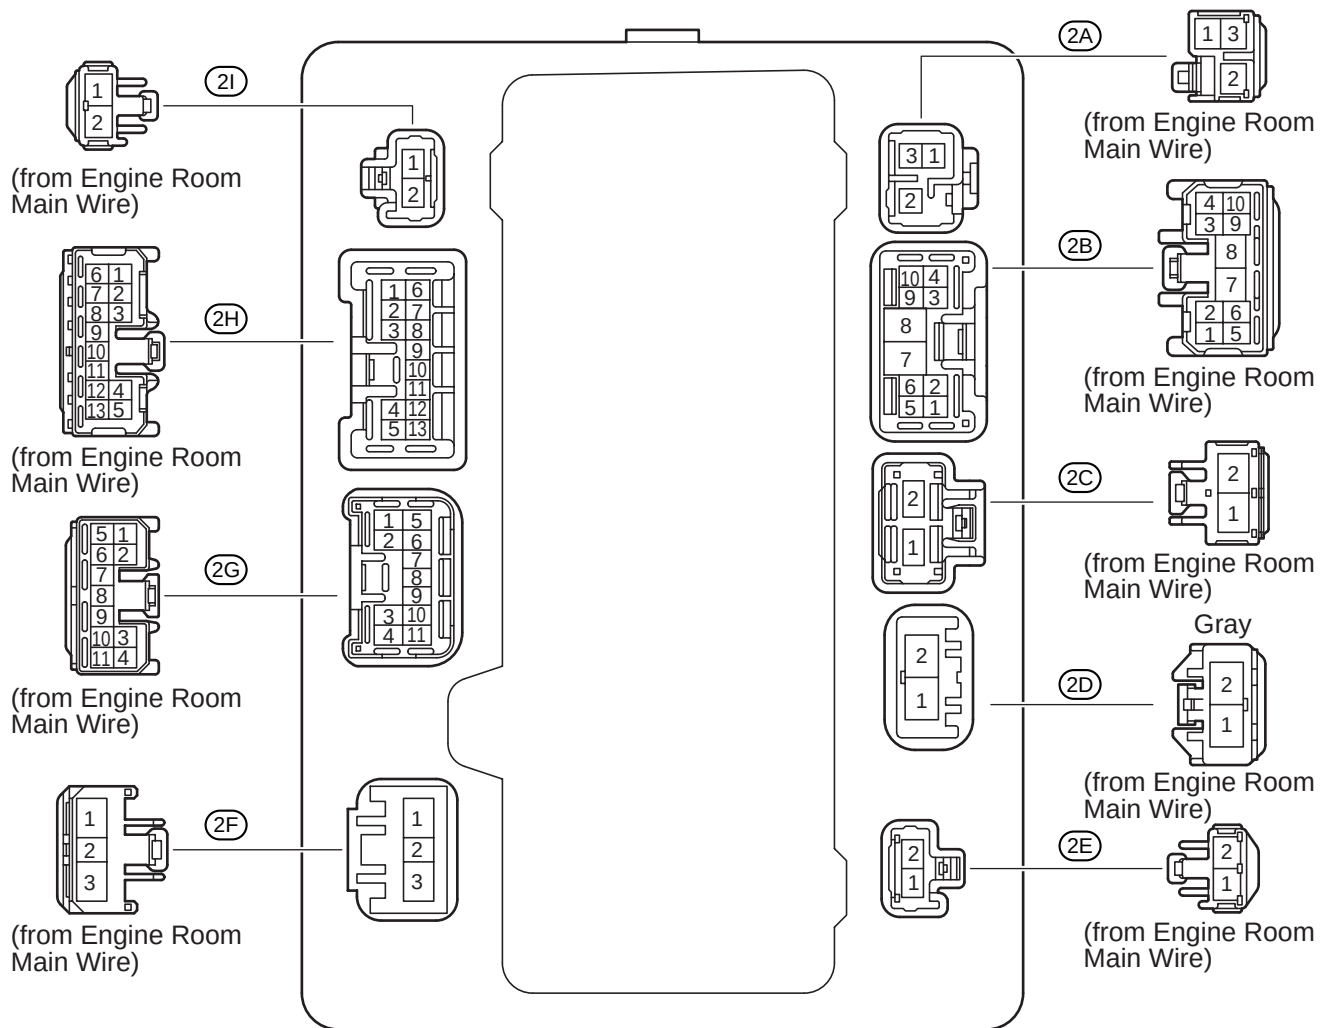


[Engine Room J/B Inner Circuit]

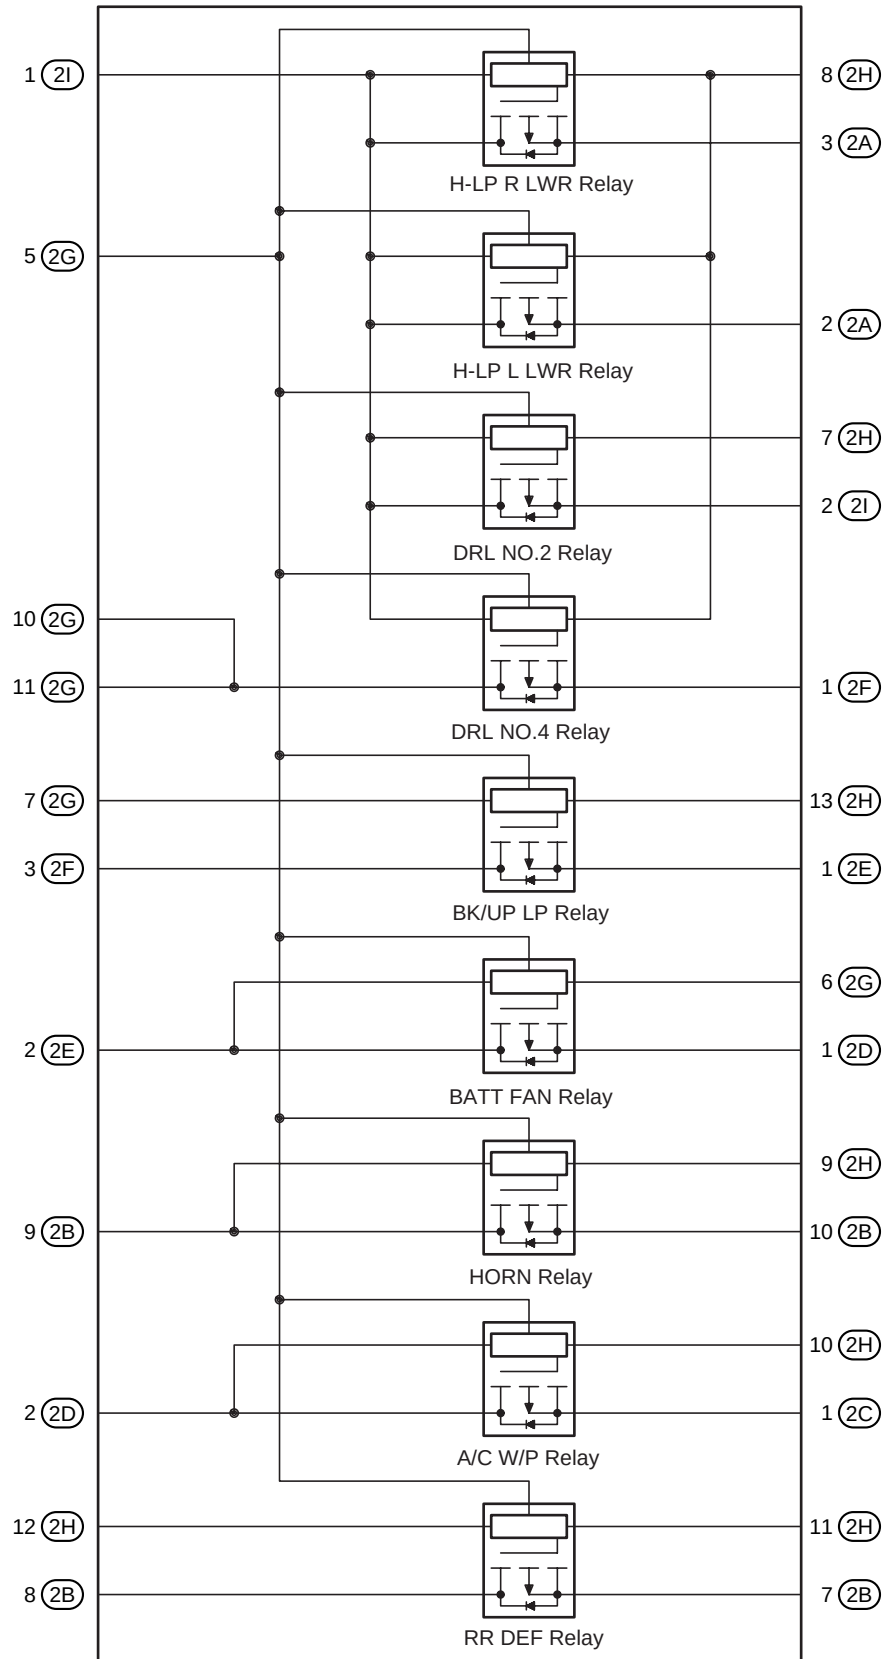


F RELAY LOCATIONS

 : Instrument Panel J/B Lower Finish Panel (See Page 20)


* 1:PWR OUTLET1

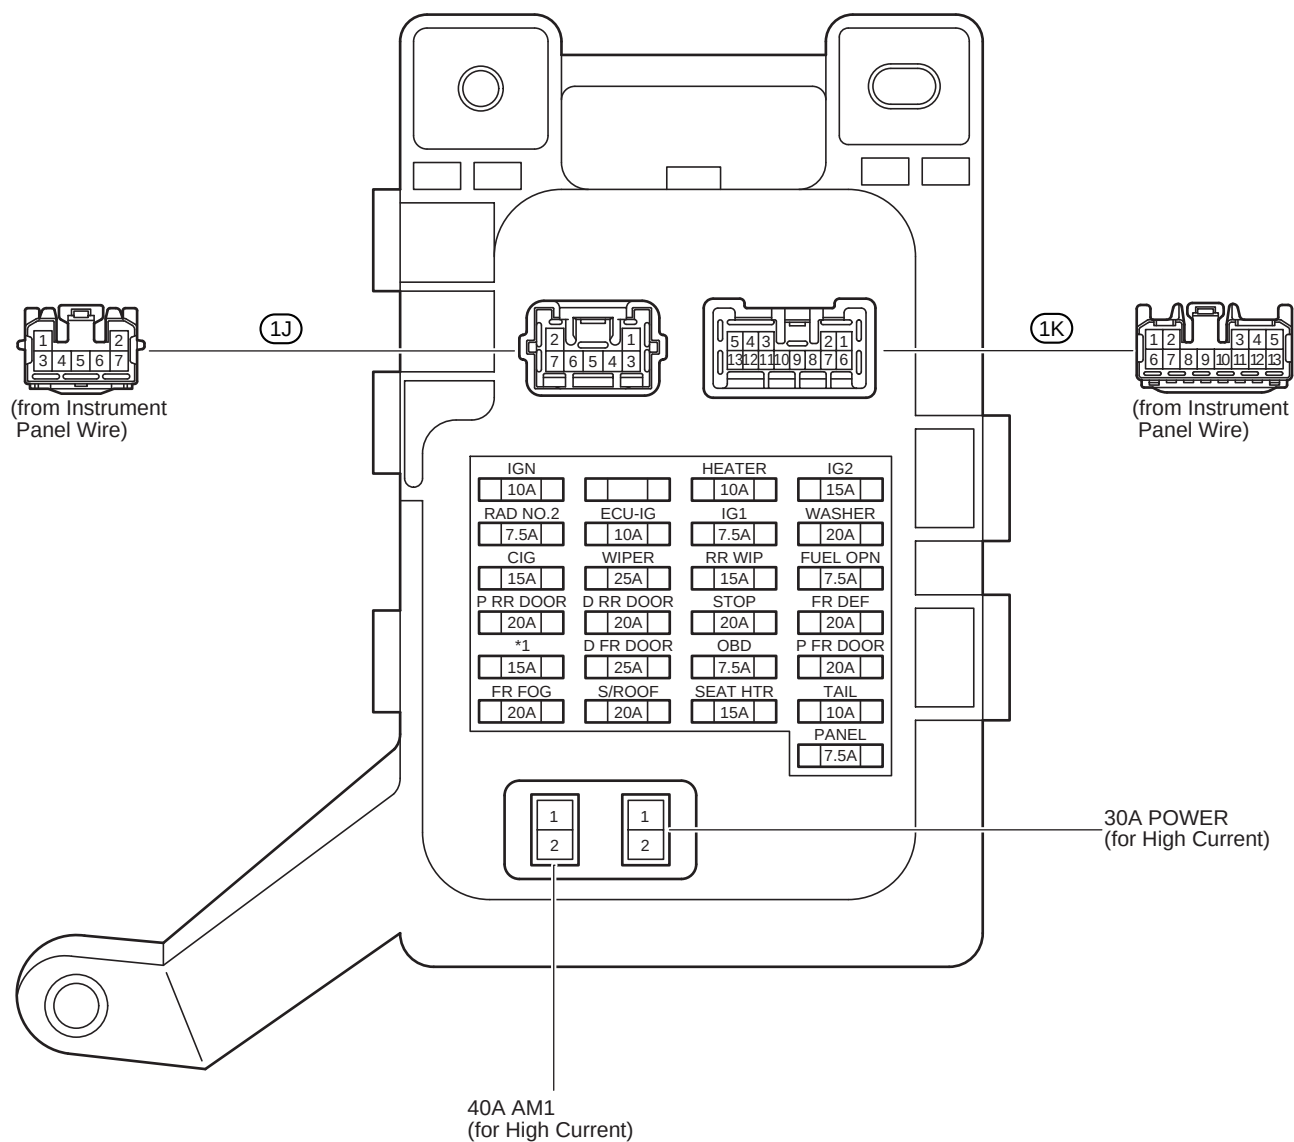

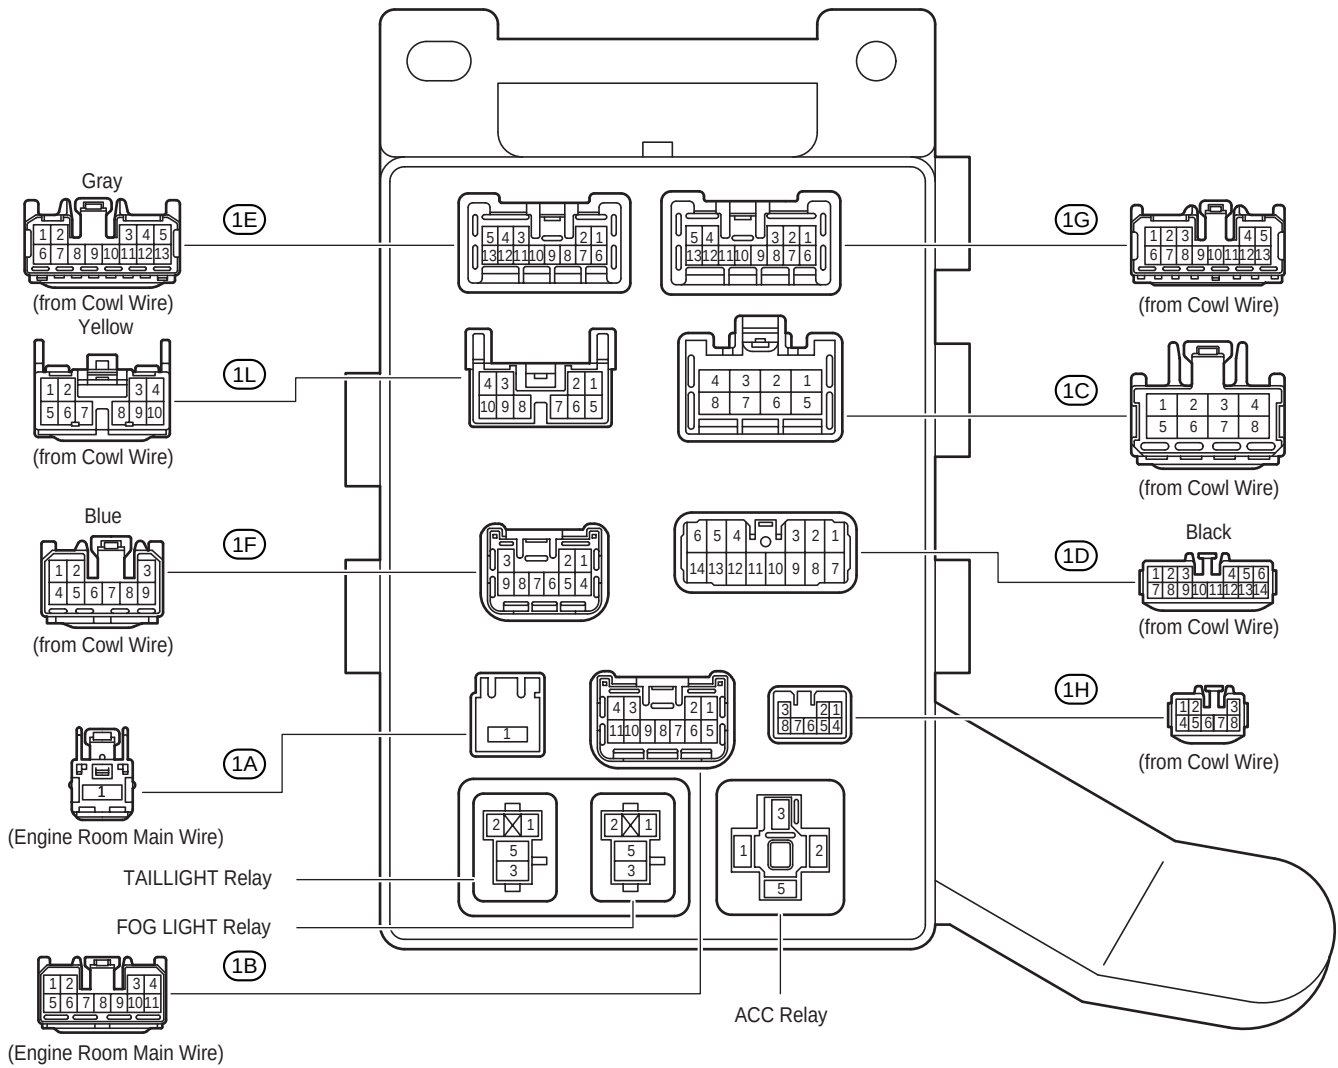

F RELAY LOCATIONS


[Instrument Panel J/B Inner Circuit]

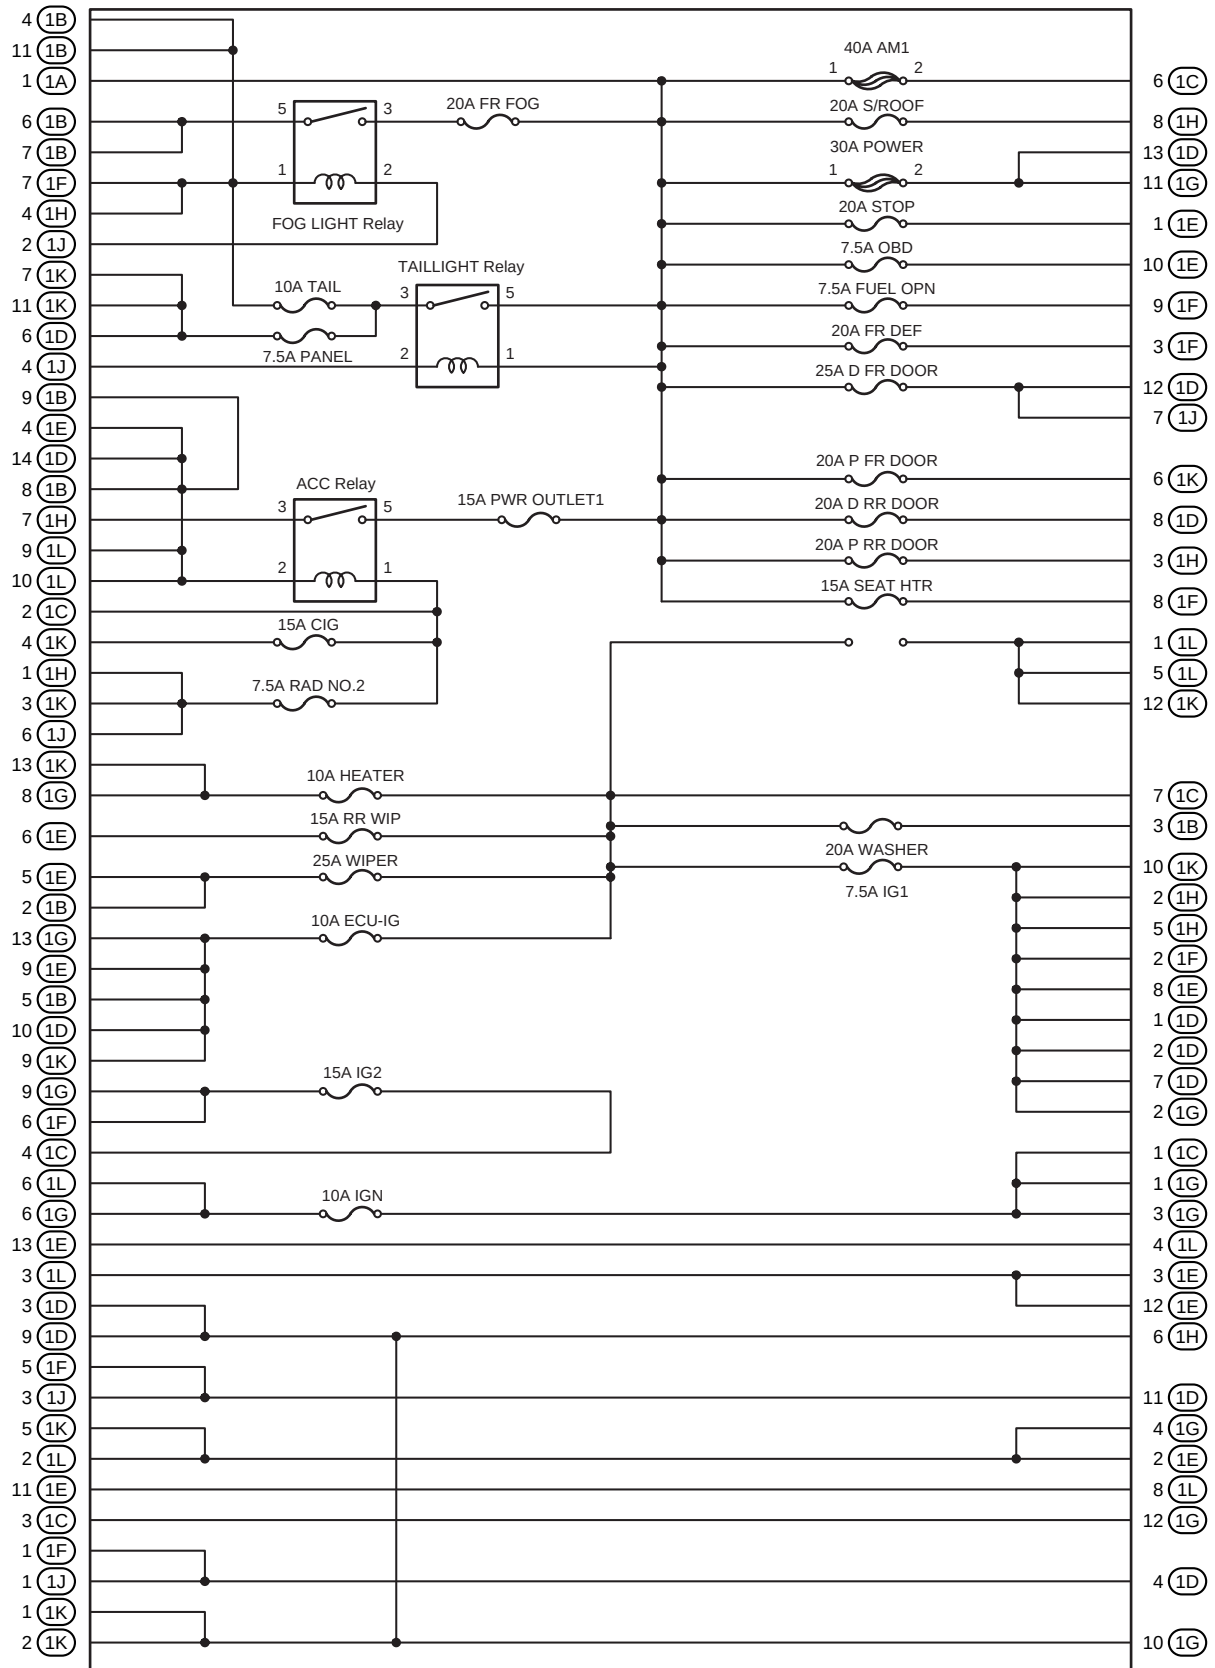


F RELAY LOCATIONS

○ : J/B No.3


Behind the Instrument Panel Center (See Page 20)

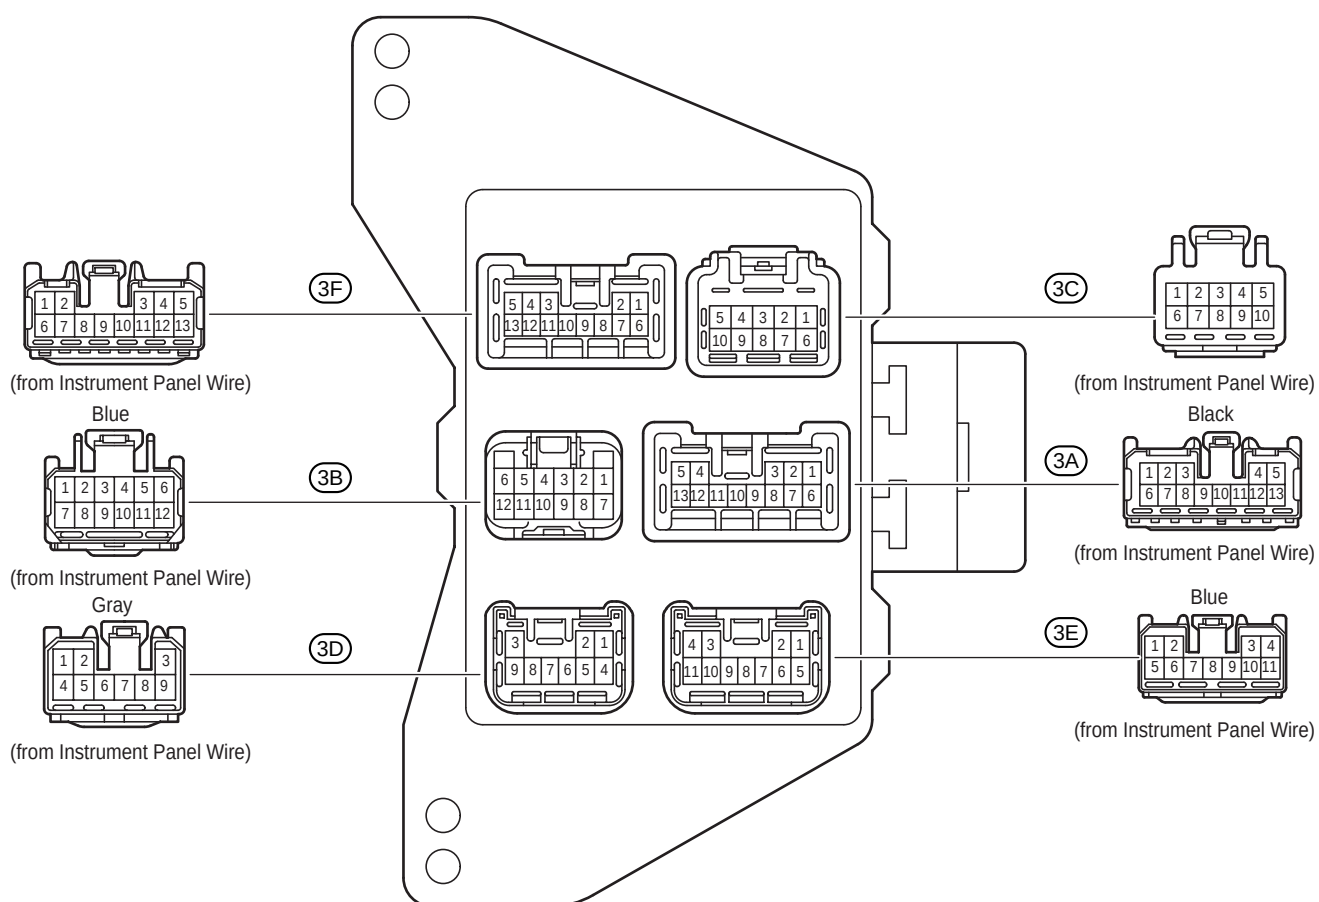

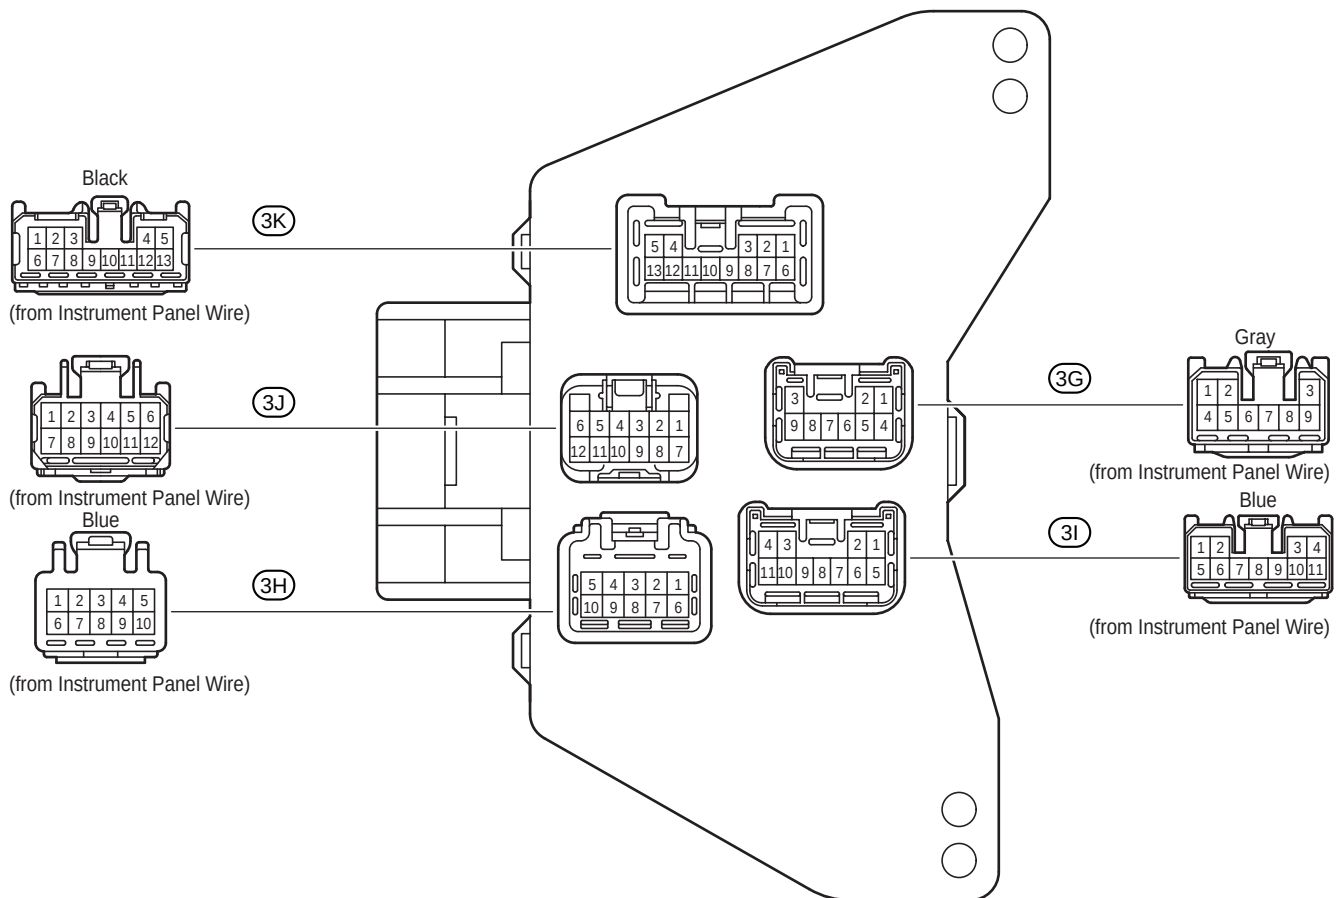

F RELAY LOCATIONS


[J/B No.3 Inner Circuit]

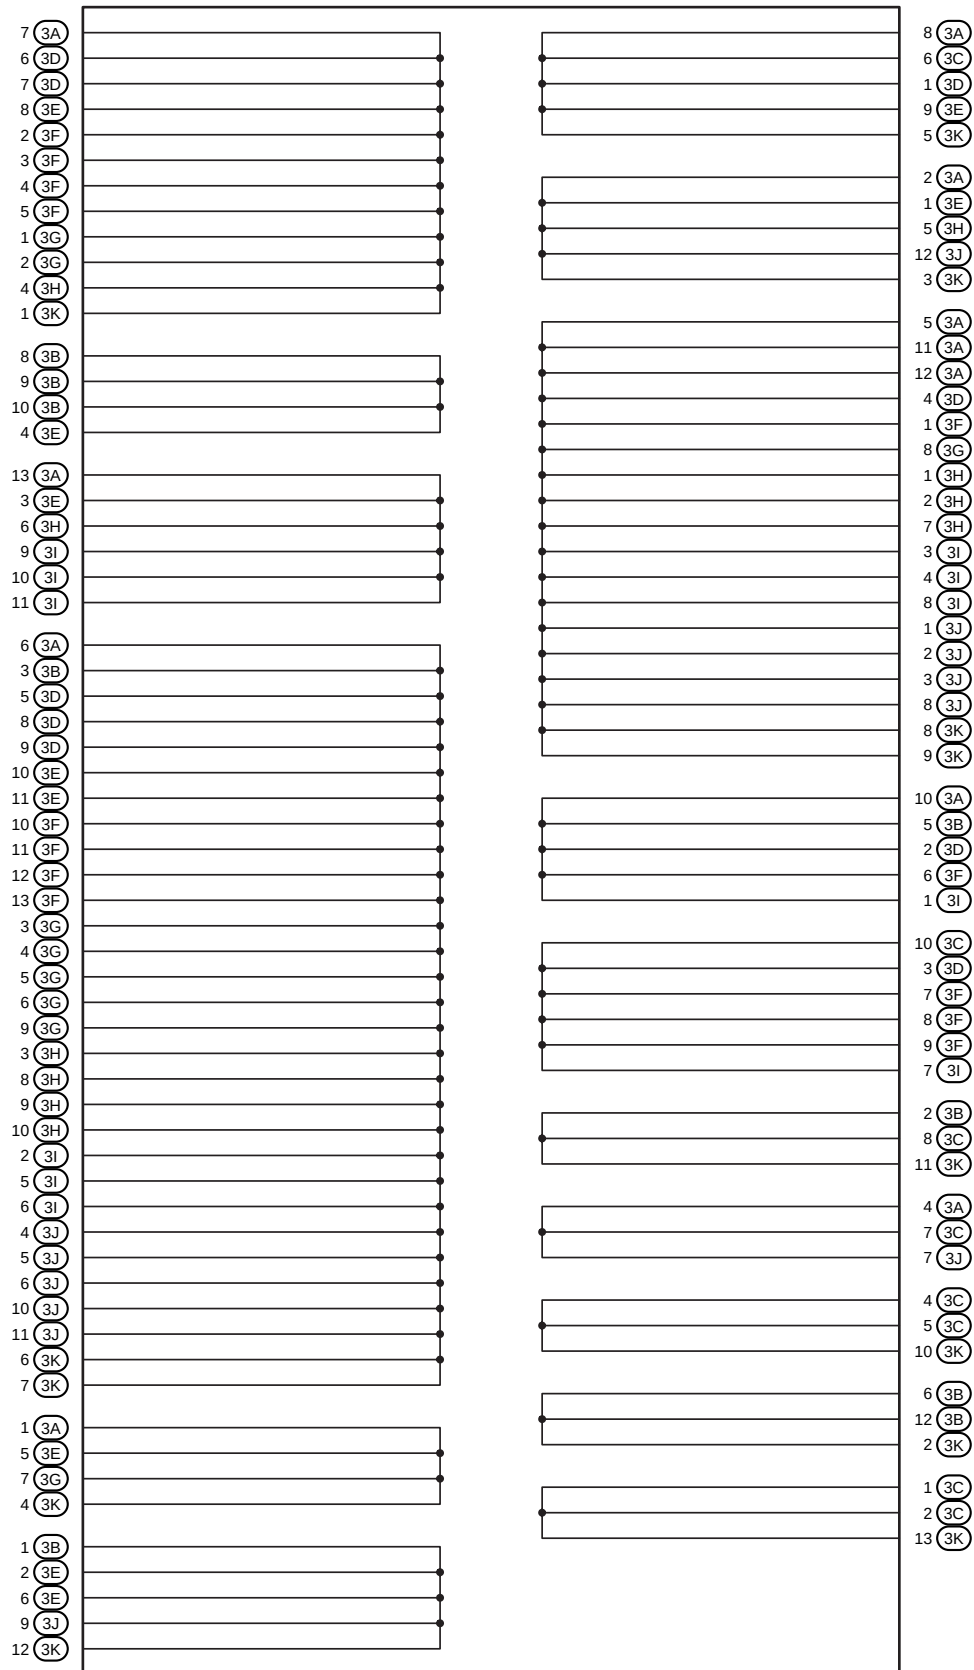


F RELAY LOCATIONS

 : J/B No.4

Right Side of Glove Box (See Page 20)

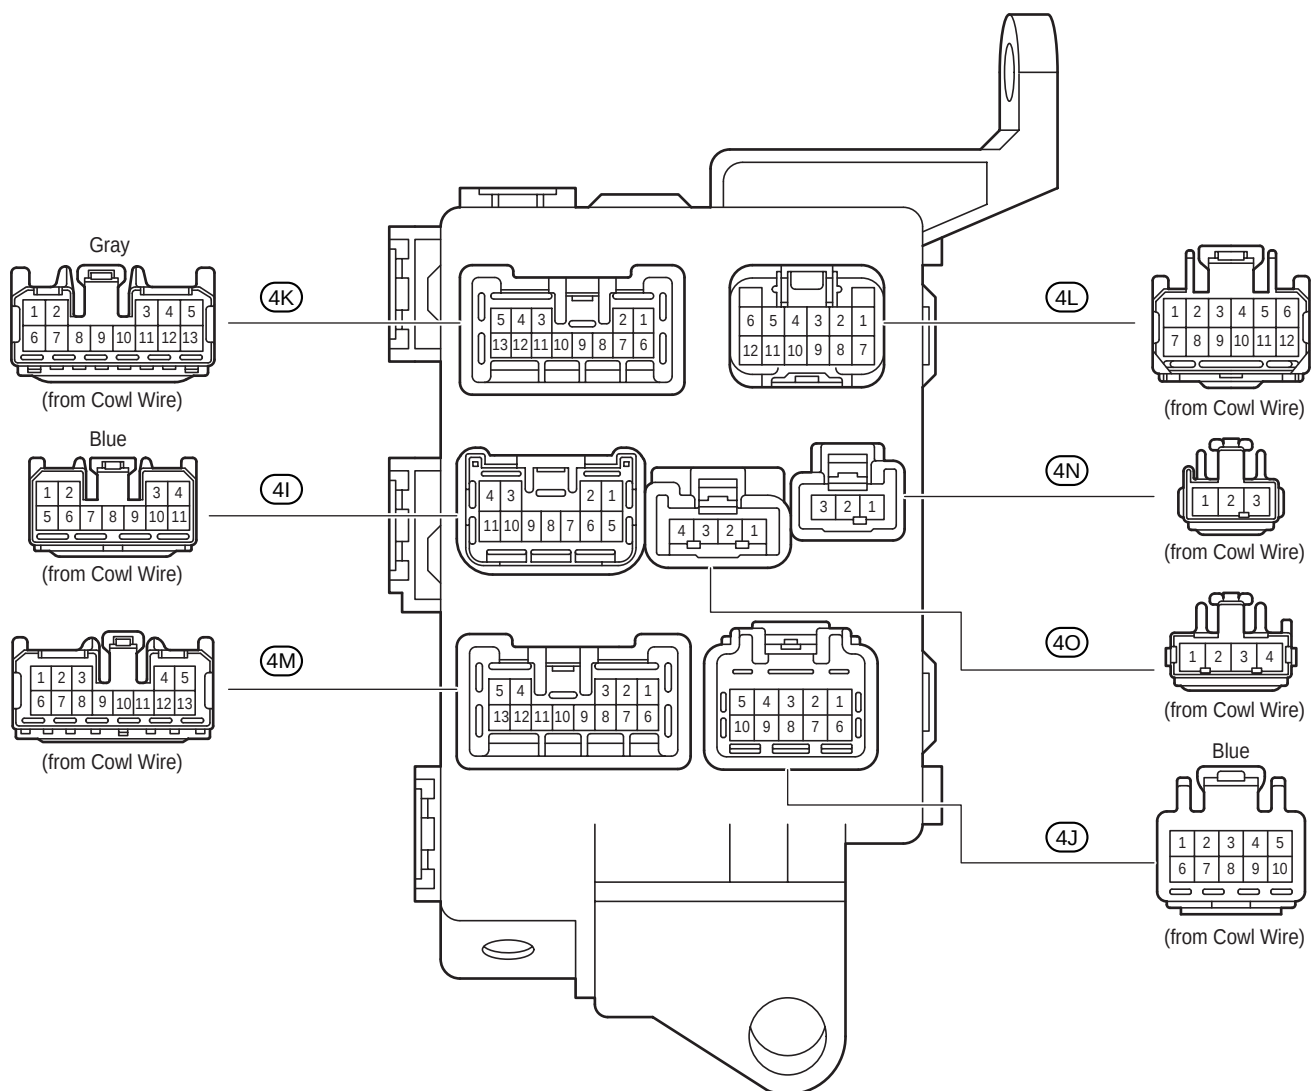

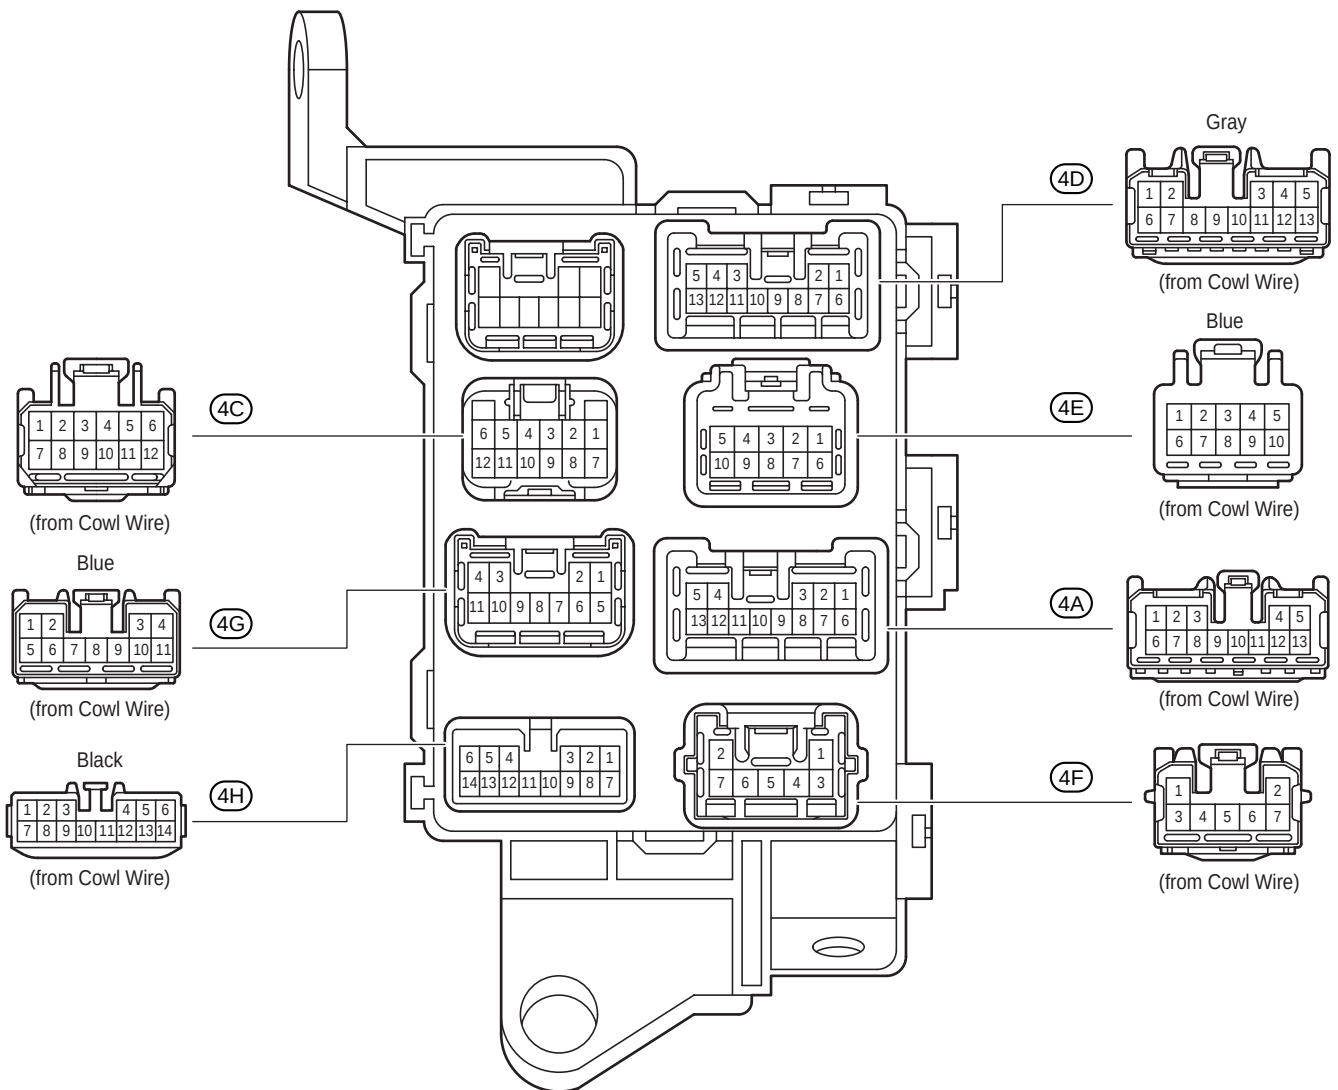

F RELAY LOCATIONS

[J/B No.4 Inner Circuit]

