


Hybrid Vehicle Immobiliser System

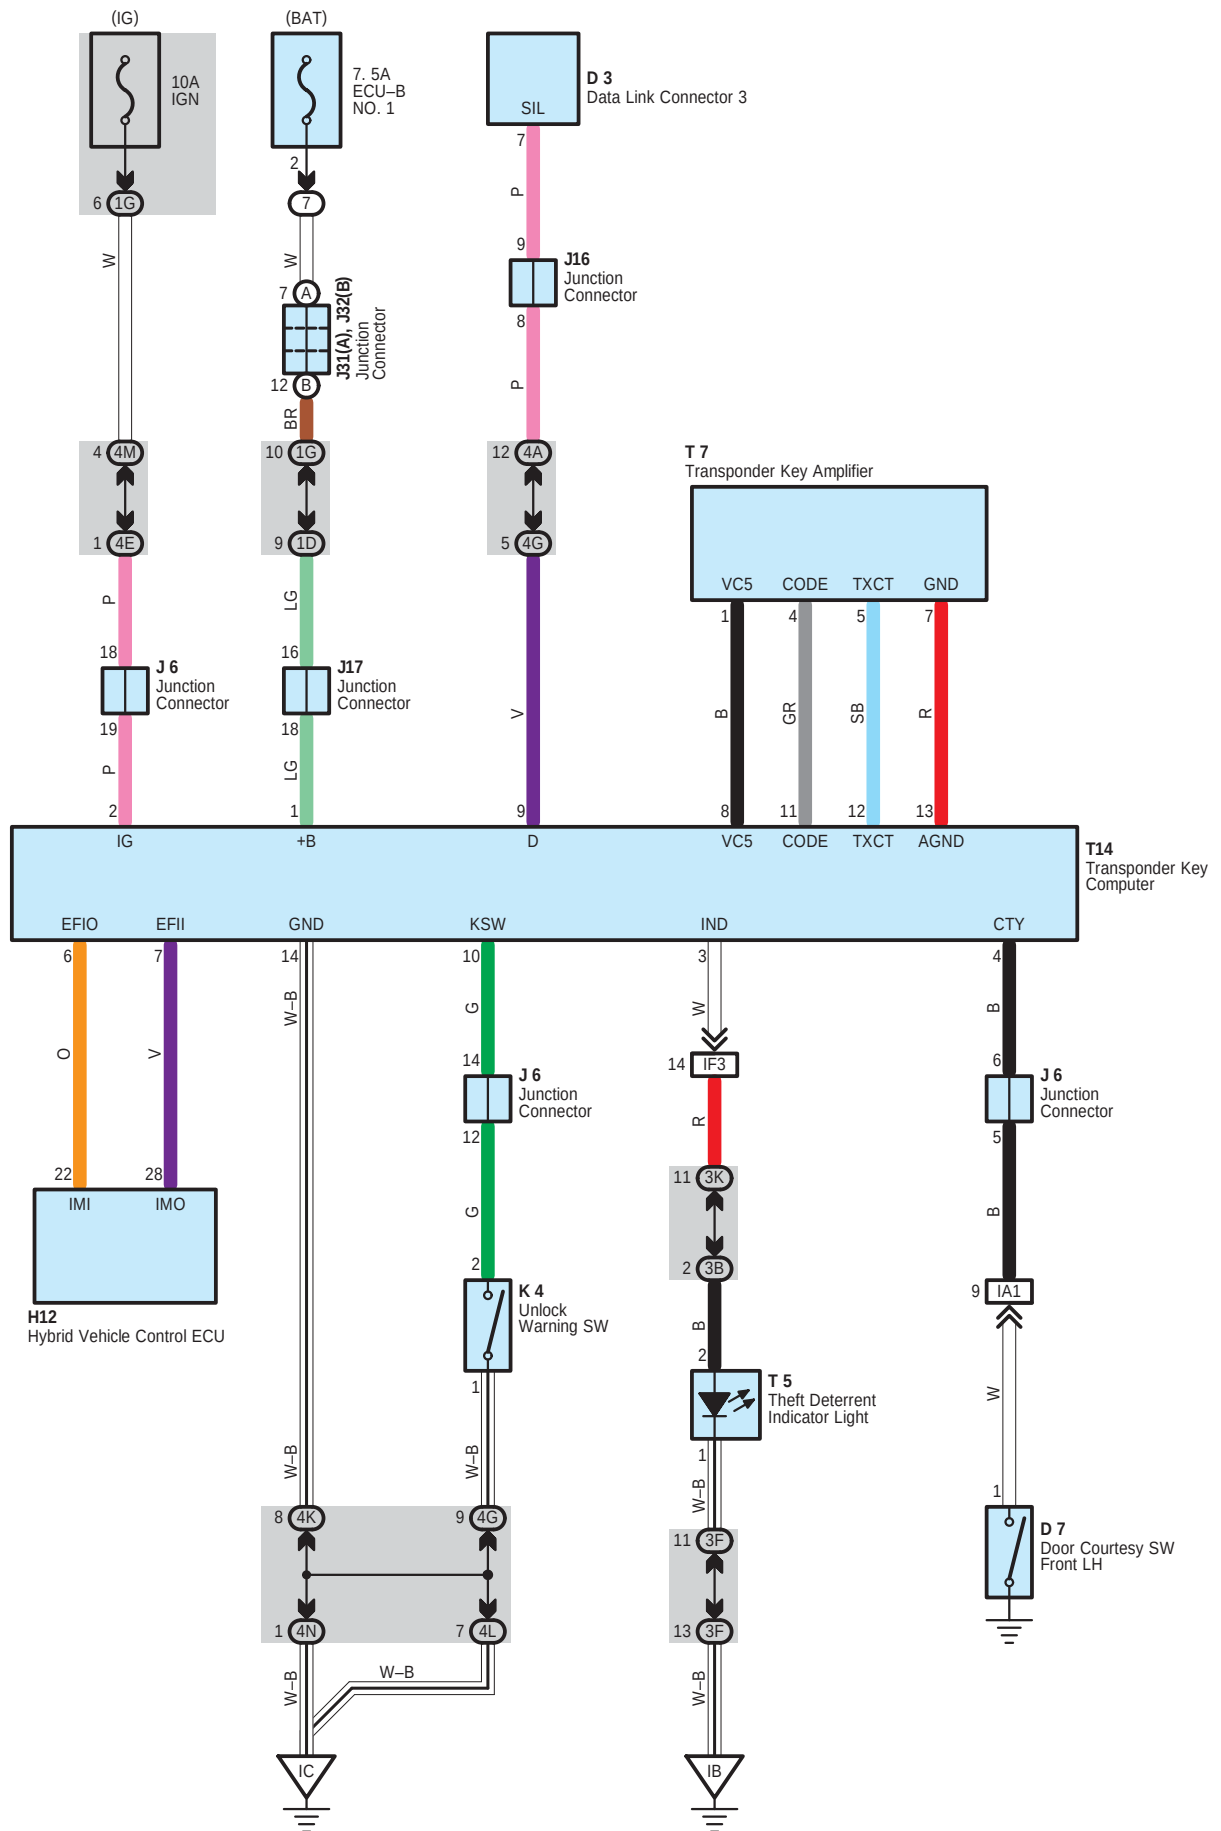

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
D3	44	J16	45	K4	45
D7	46	J17	45	T5	45
H12	44	J31	A 45	T7	45
J6	45	J32	B 45	T14	45

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
7	24	Fusible Link Block (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1G		
3B	34	Instrument Panel Wire and J/B No.3 (Behind the Instrument Panel Center)
3F		
3K	35	
4A	39	Cowl Wire and J/B No.4 (Right Side of Glove Box)
4E		
4G		
4K	38	
4L		
4M		
4N		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	54	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IF3	54	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)

 : Ground Points

Code	See Page	Ground Points Location
IB	54	Right Instrument Panel Brace
IC	54	Right Cowl Side Panel