




Headlight with Daytime Running Light

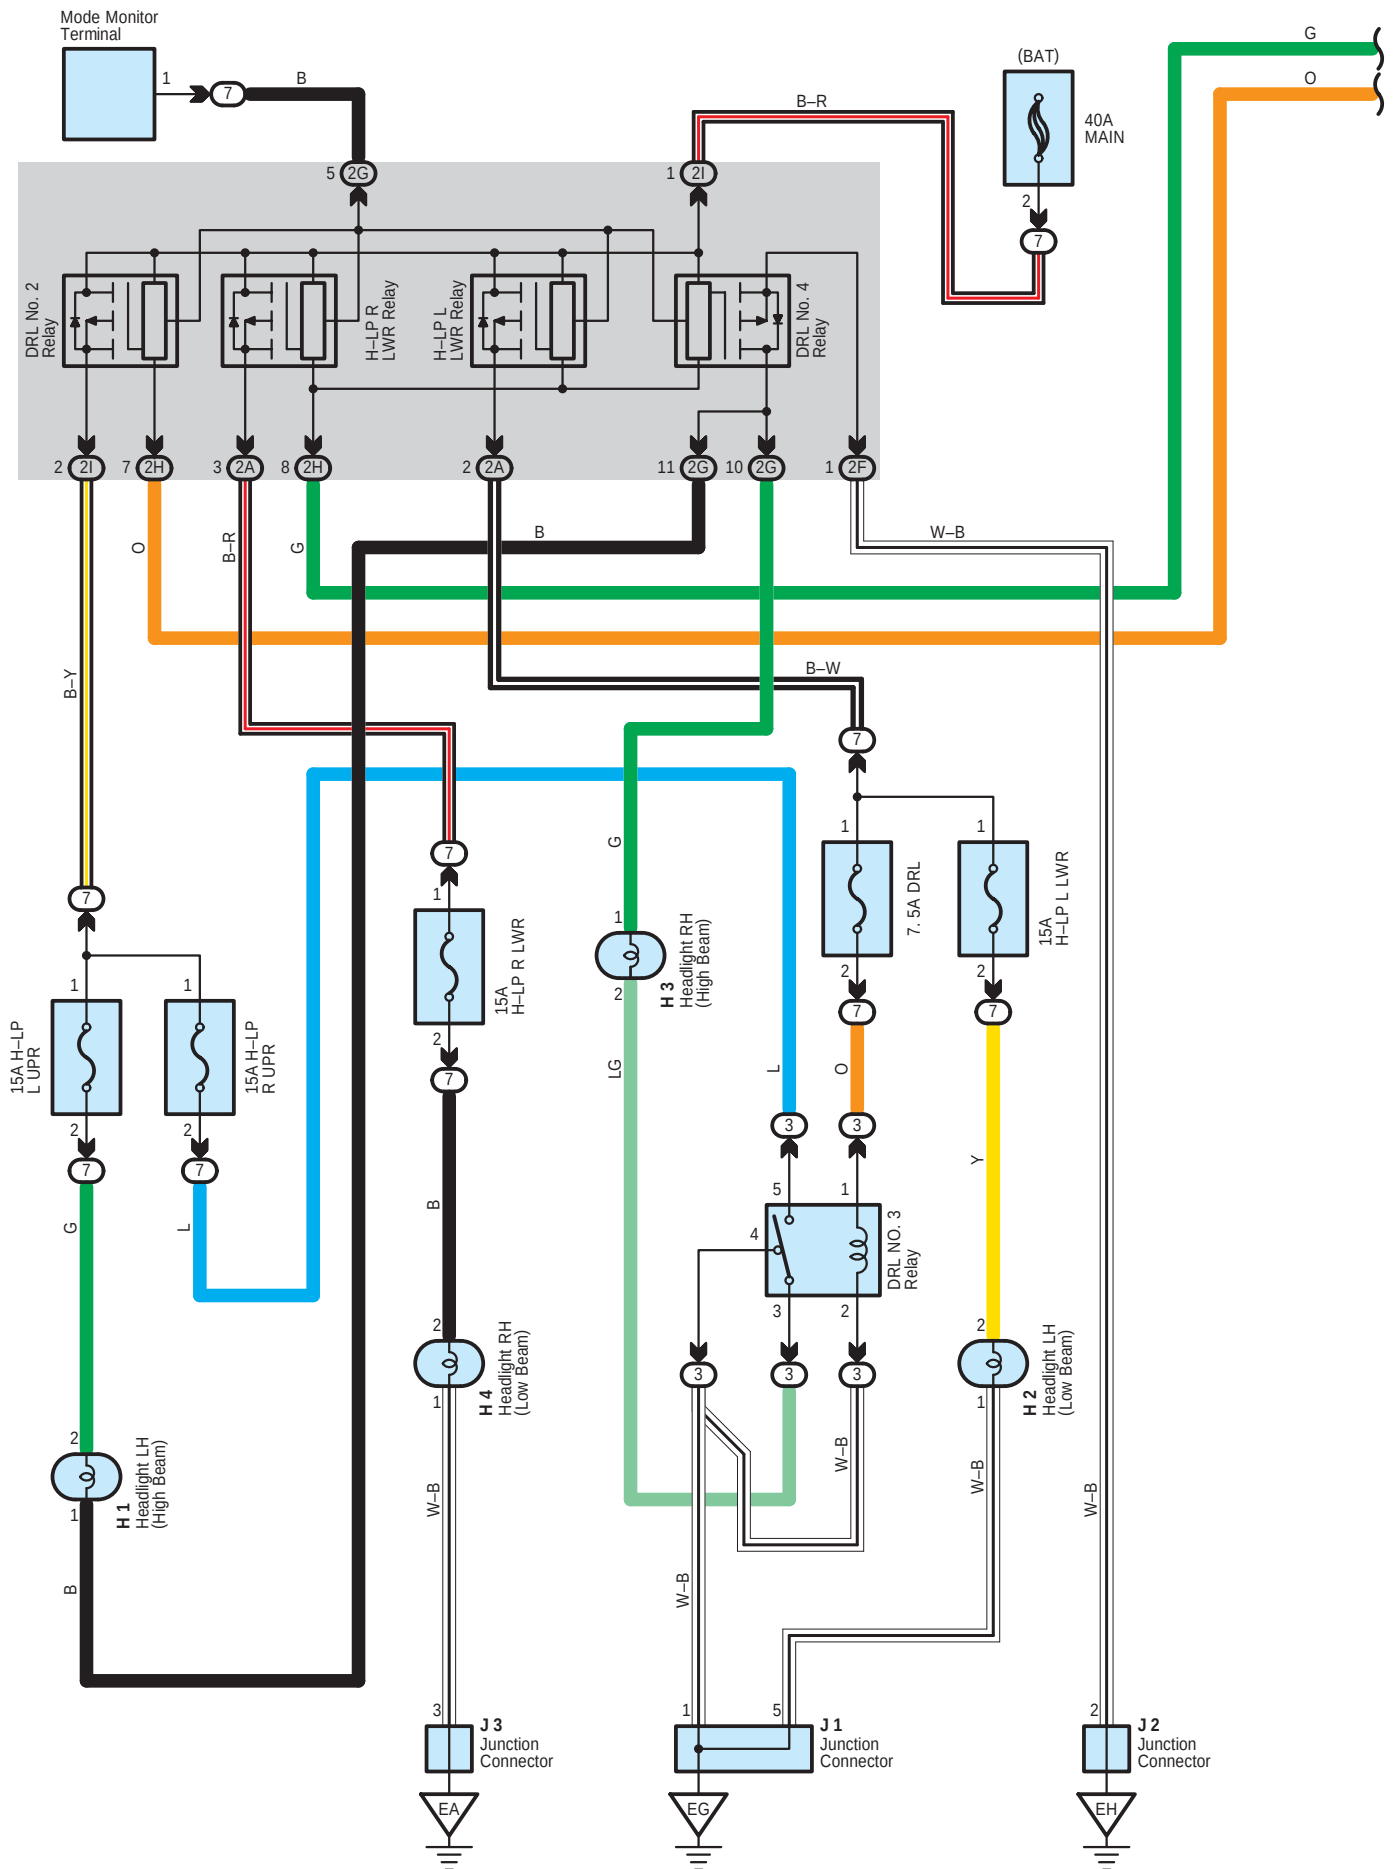

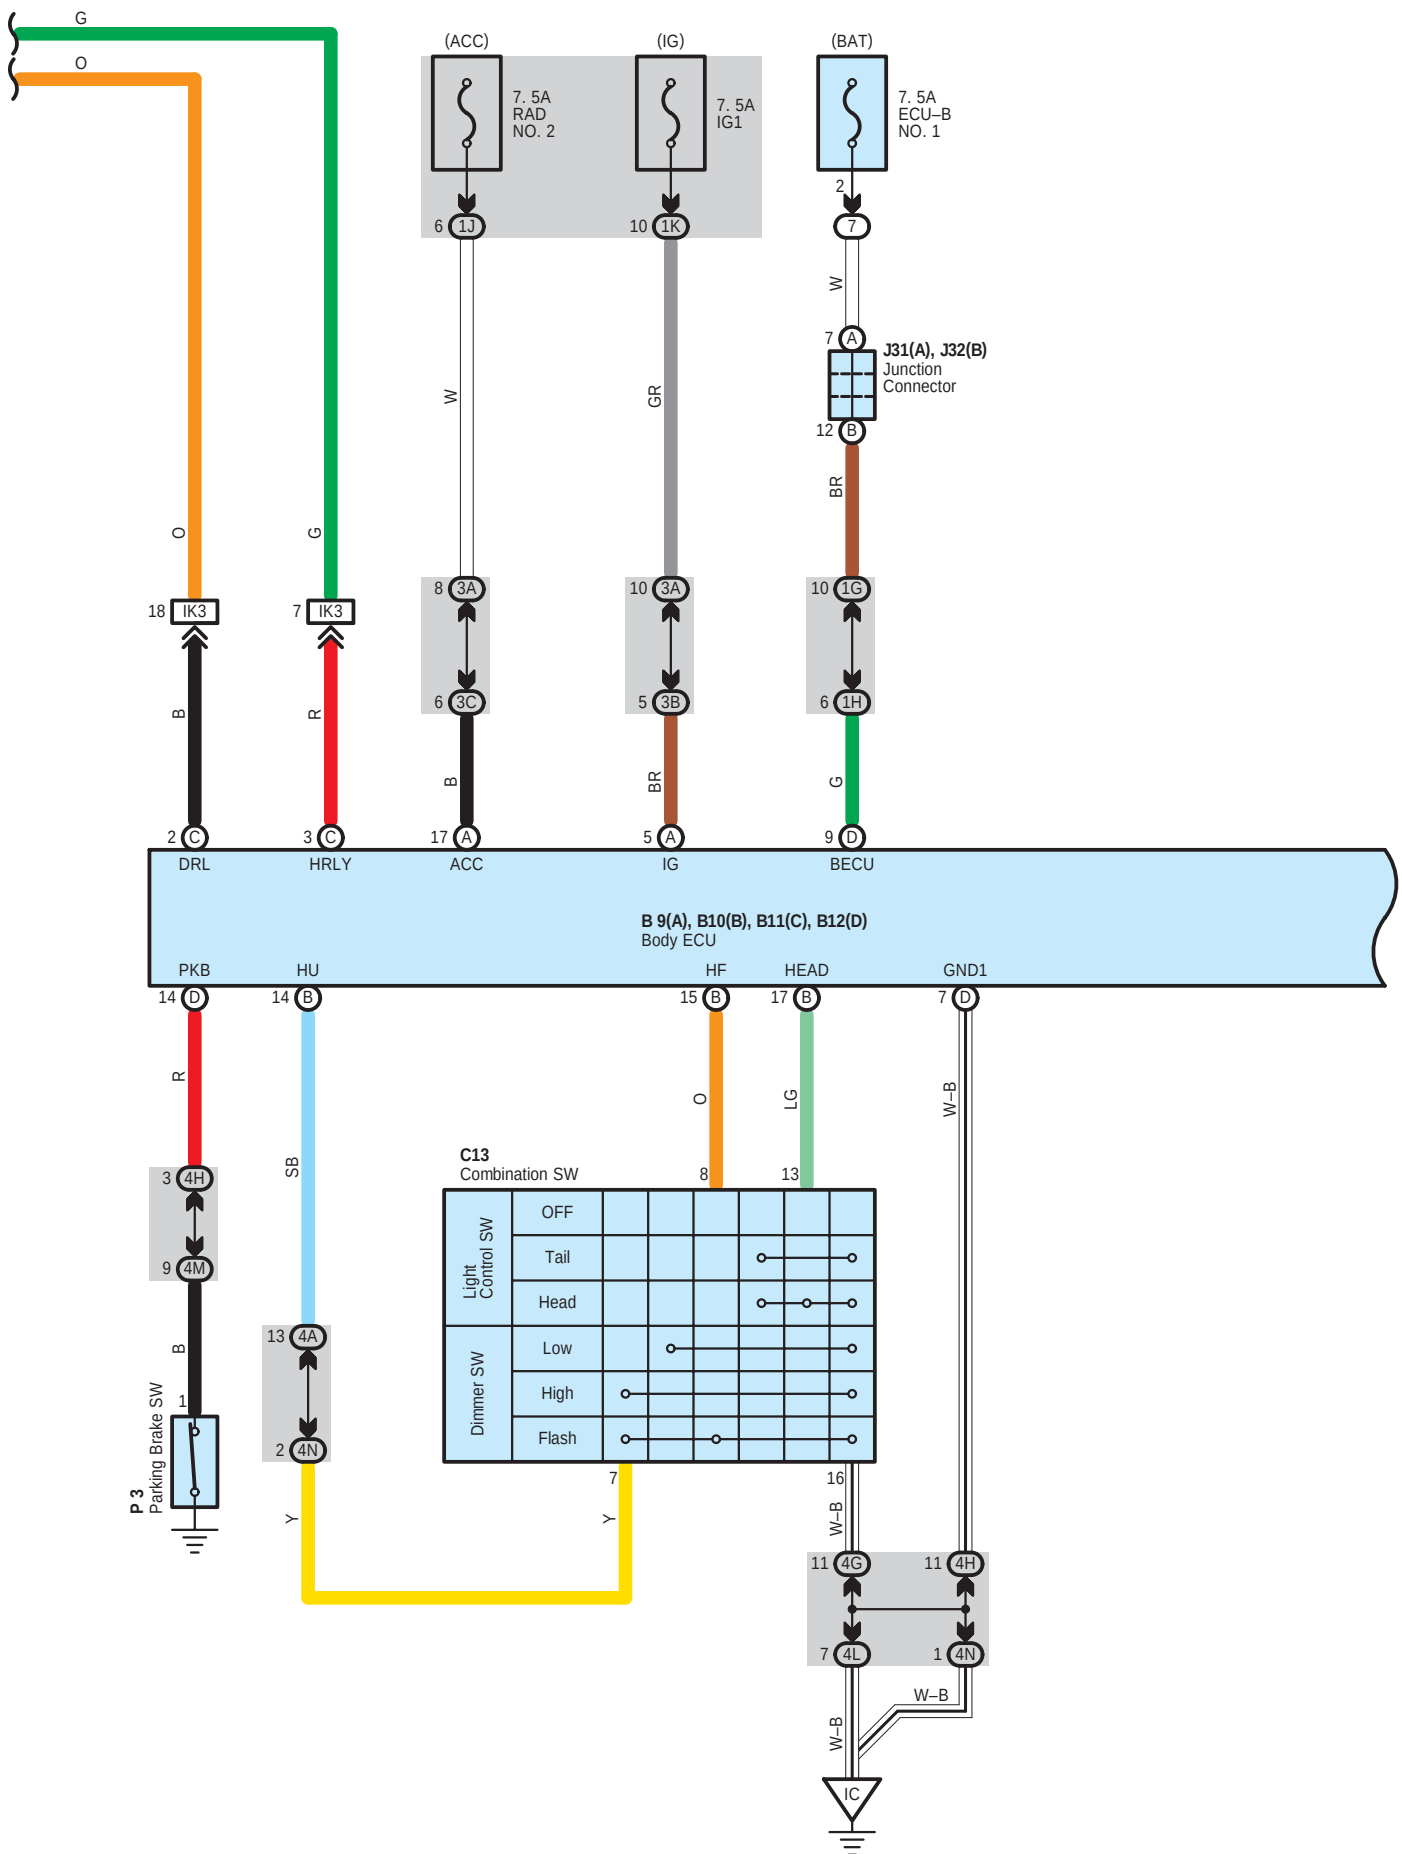

Headlight with Daytime Running Light

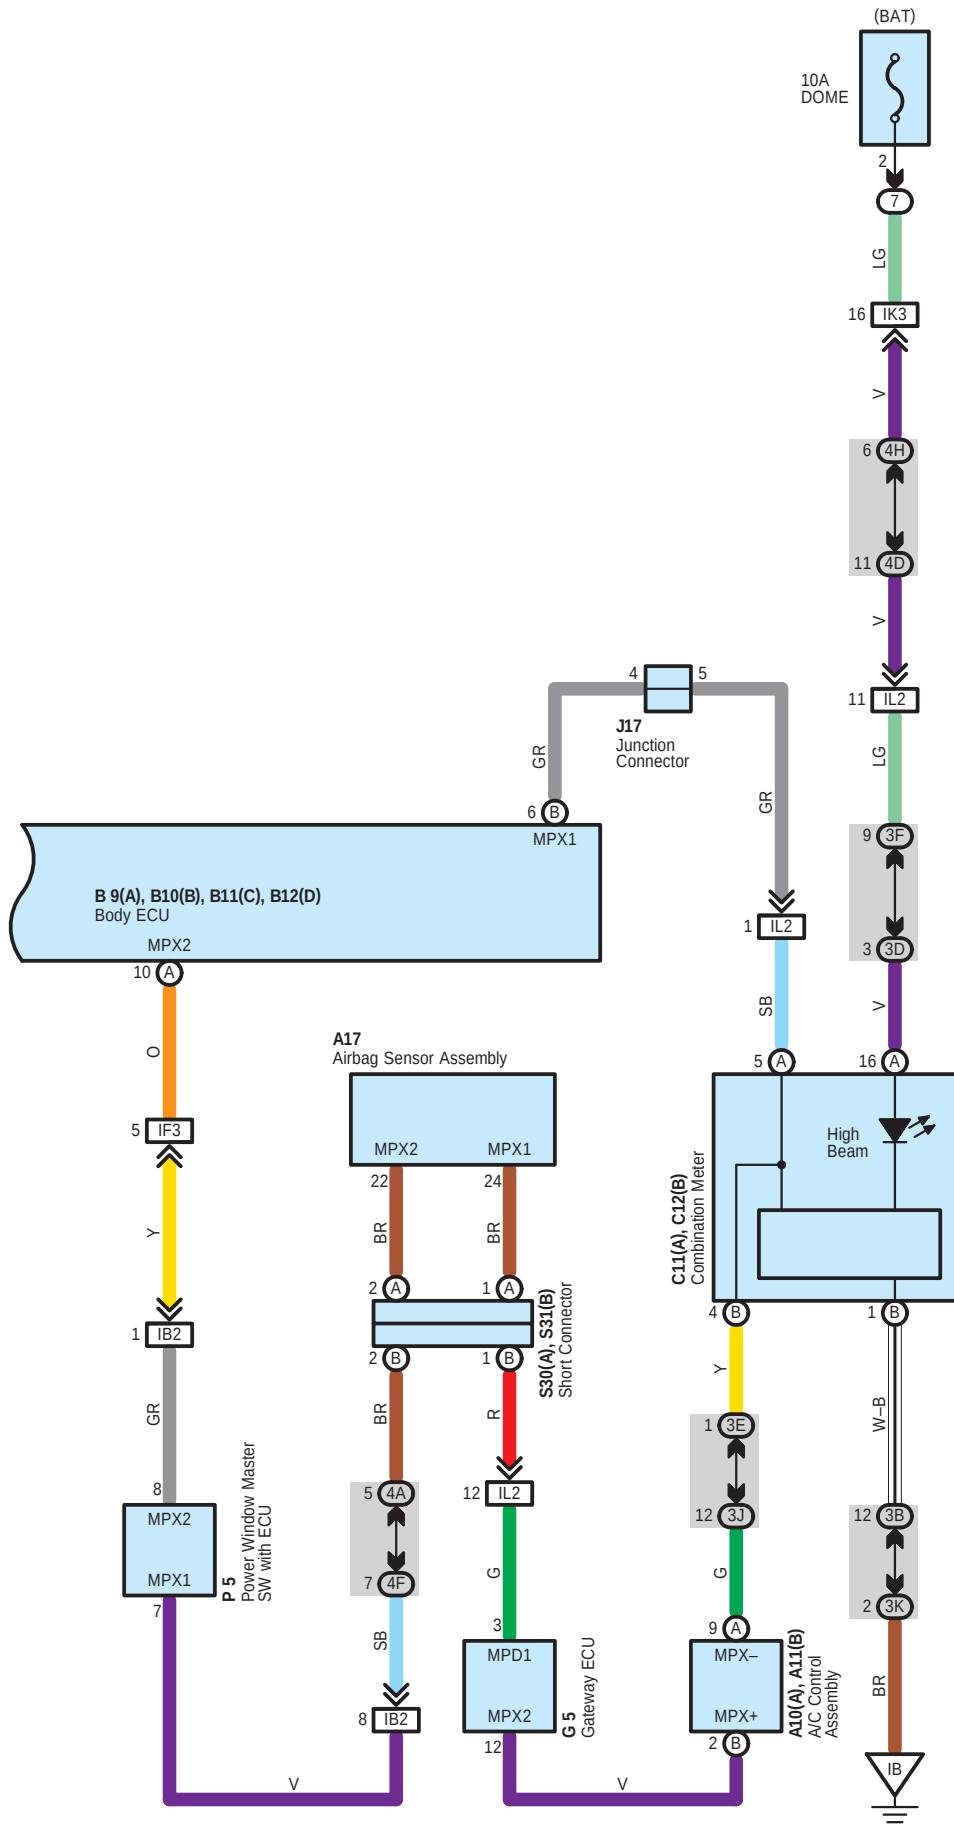

System Outline

1. Daytime Running Light Operation

The headlight is turned on when all the following conditions are satisfied

- * When the ignition switch is ON position
- * When the light control SW is OFF position
- * When the parking brake SW is OFF position

2. Headlight Operation

- * The headlight comes on at the LOW position when the dimmer SW is turned to the low beam position with the light control SW being HEAD position.
- * If the dimmer SW is turned to the HIGH position with the light control SW being HEAD position, the headlight comes on at the high beam position. Moreover, the high beam indicator light appears on the combination meter.
- * Regardless of the light control SW positions, the headlight comes on at the low beam position when the dimmer SW is turned to FLASH position. Moreover, the high beam indicator light appears on the combination meter.

○ : Parts Location

Code		See Page	Code	See Page	Code		See Page
A10	A	44	C13	44	J17		45
A11	B	44	G5	44	J31	A	45
A17		44	H1	42	J32	B	45
B9	A	44	H2	42	P3		45
B10	B	44	H3	42	P5		46
B11	C	44	H4	42	S30	A	45
B12	D	44	J1	43	S31	B	45
C11	A	44	J2	43			
C12	B	44	J3	43			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	26	R/B No.3 (Engine Compartment Left)
7	24	Fusible Link Block (Engine Compartment Left)

Headlight with Daytime Running Light



: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1H		
1J	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1K		
2A	28	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2F		
2G		
2H		
2I		
3A	34	Instrument Panel Wire and J/B No.3 (Behind the Instrument Panel Center)
3B		
3C		
3D		
3E		
3F		
3J	35	
3K		
4A	39	Cowl Wire and J/B No.4 (Right Side of Glove Box)
4D		
4F		
4G		
4H		
4L	38	
4M		
4N		



: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB2	54	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IF3	54	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IK3	55	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IL2	55	Instrument Panel Wire and Cowl Wire (Right Cowl Side Panel)



: Ground Points

Code	See Page	Ground Points Location
EA	52	Right Front Fender Apron
EG	52	Under the Left Headlight
EH		
IB	54	Right Instrument Panel Brace
IC	54	Right Cowl Side Panel

