



Headlight without Daytime Running Light

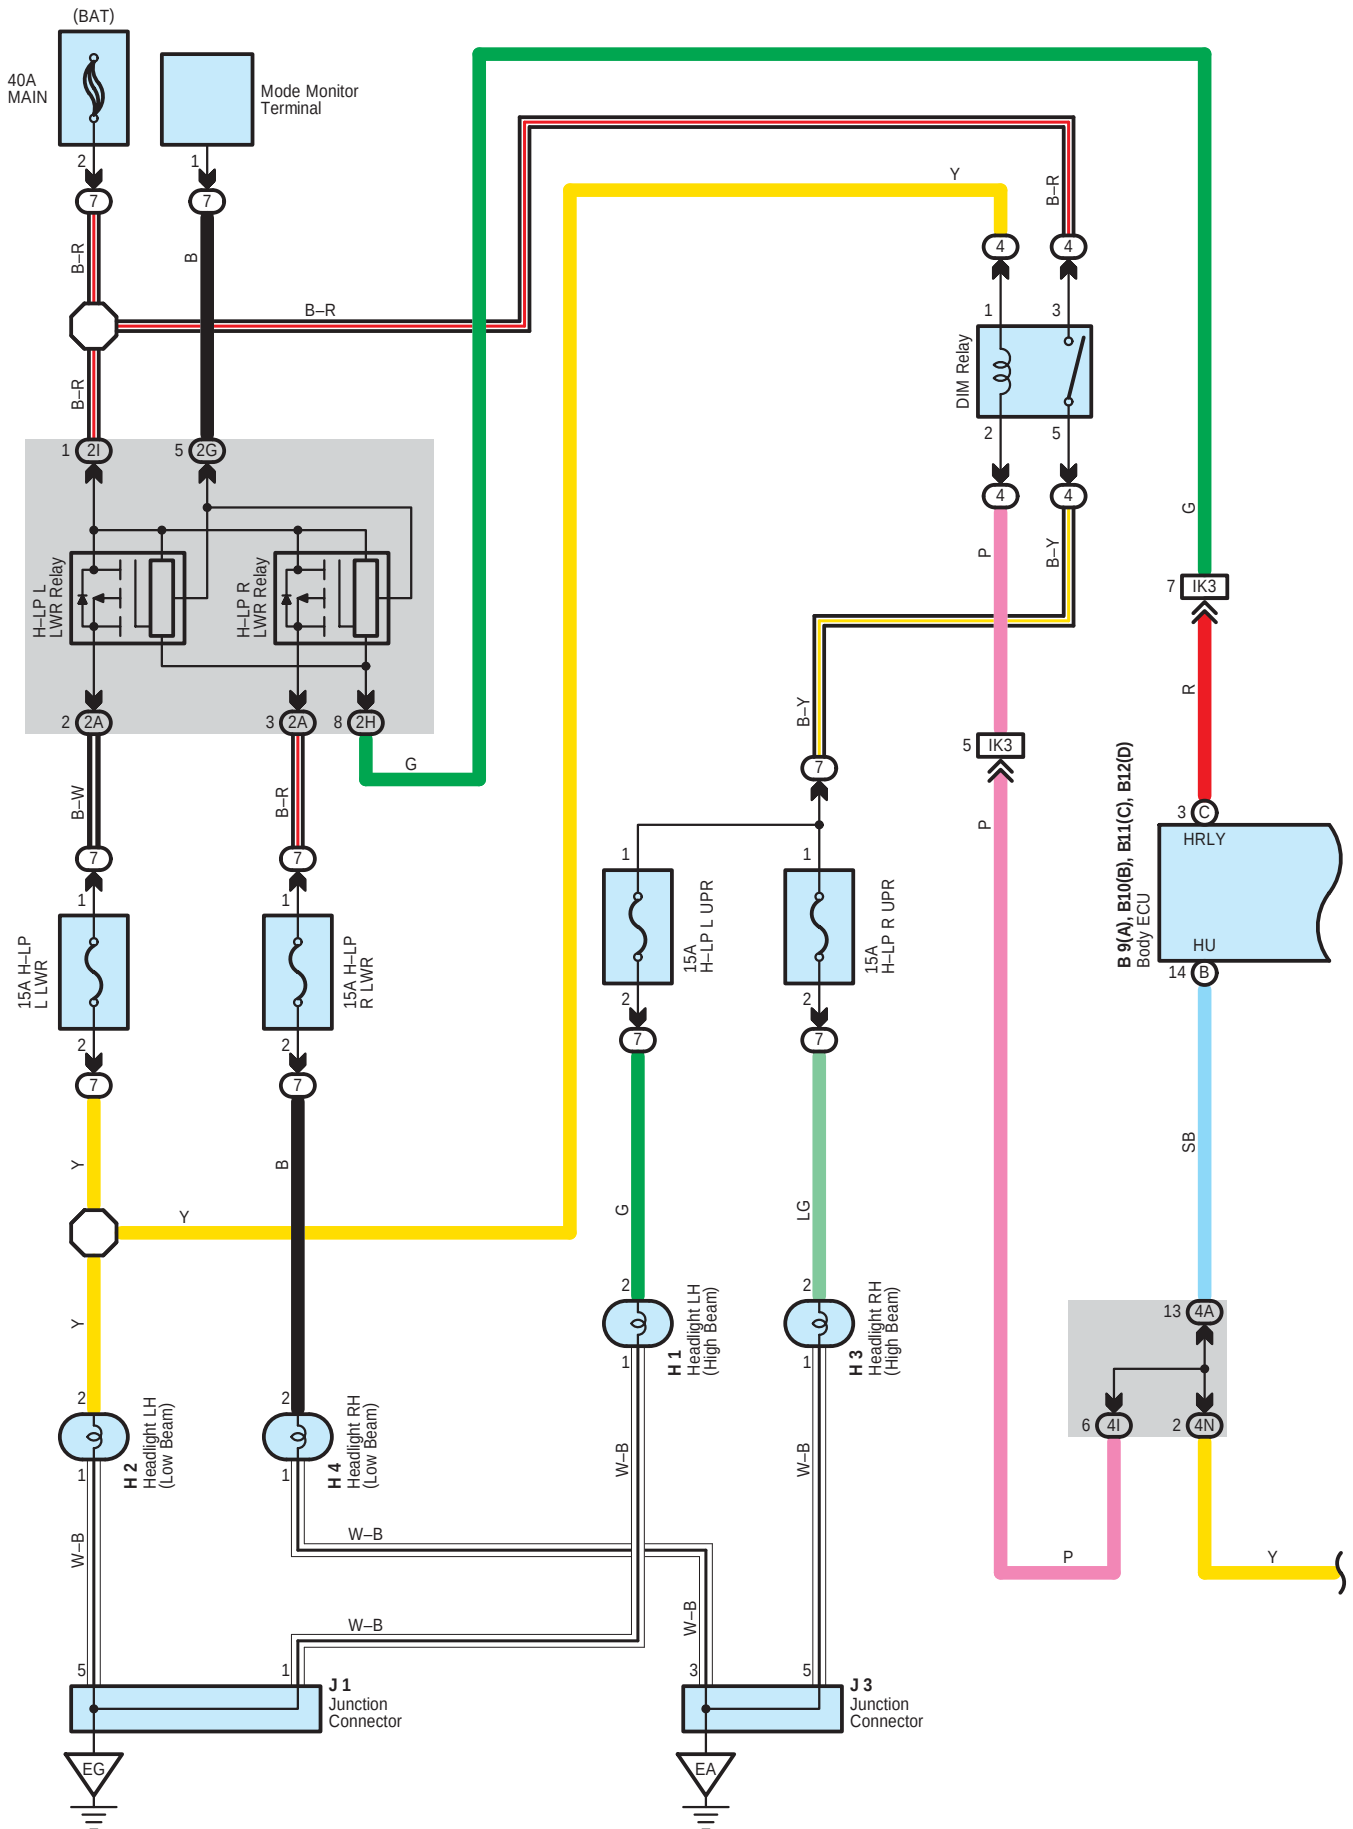

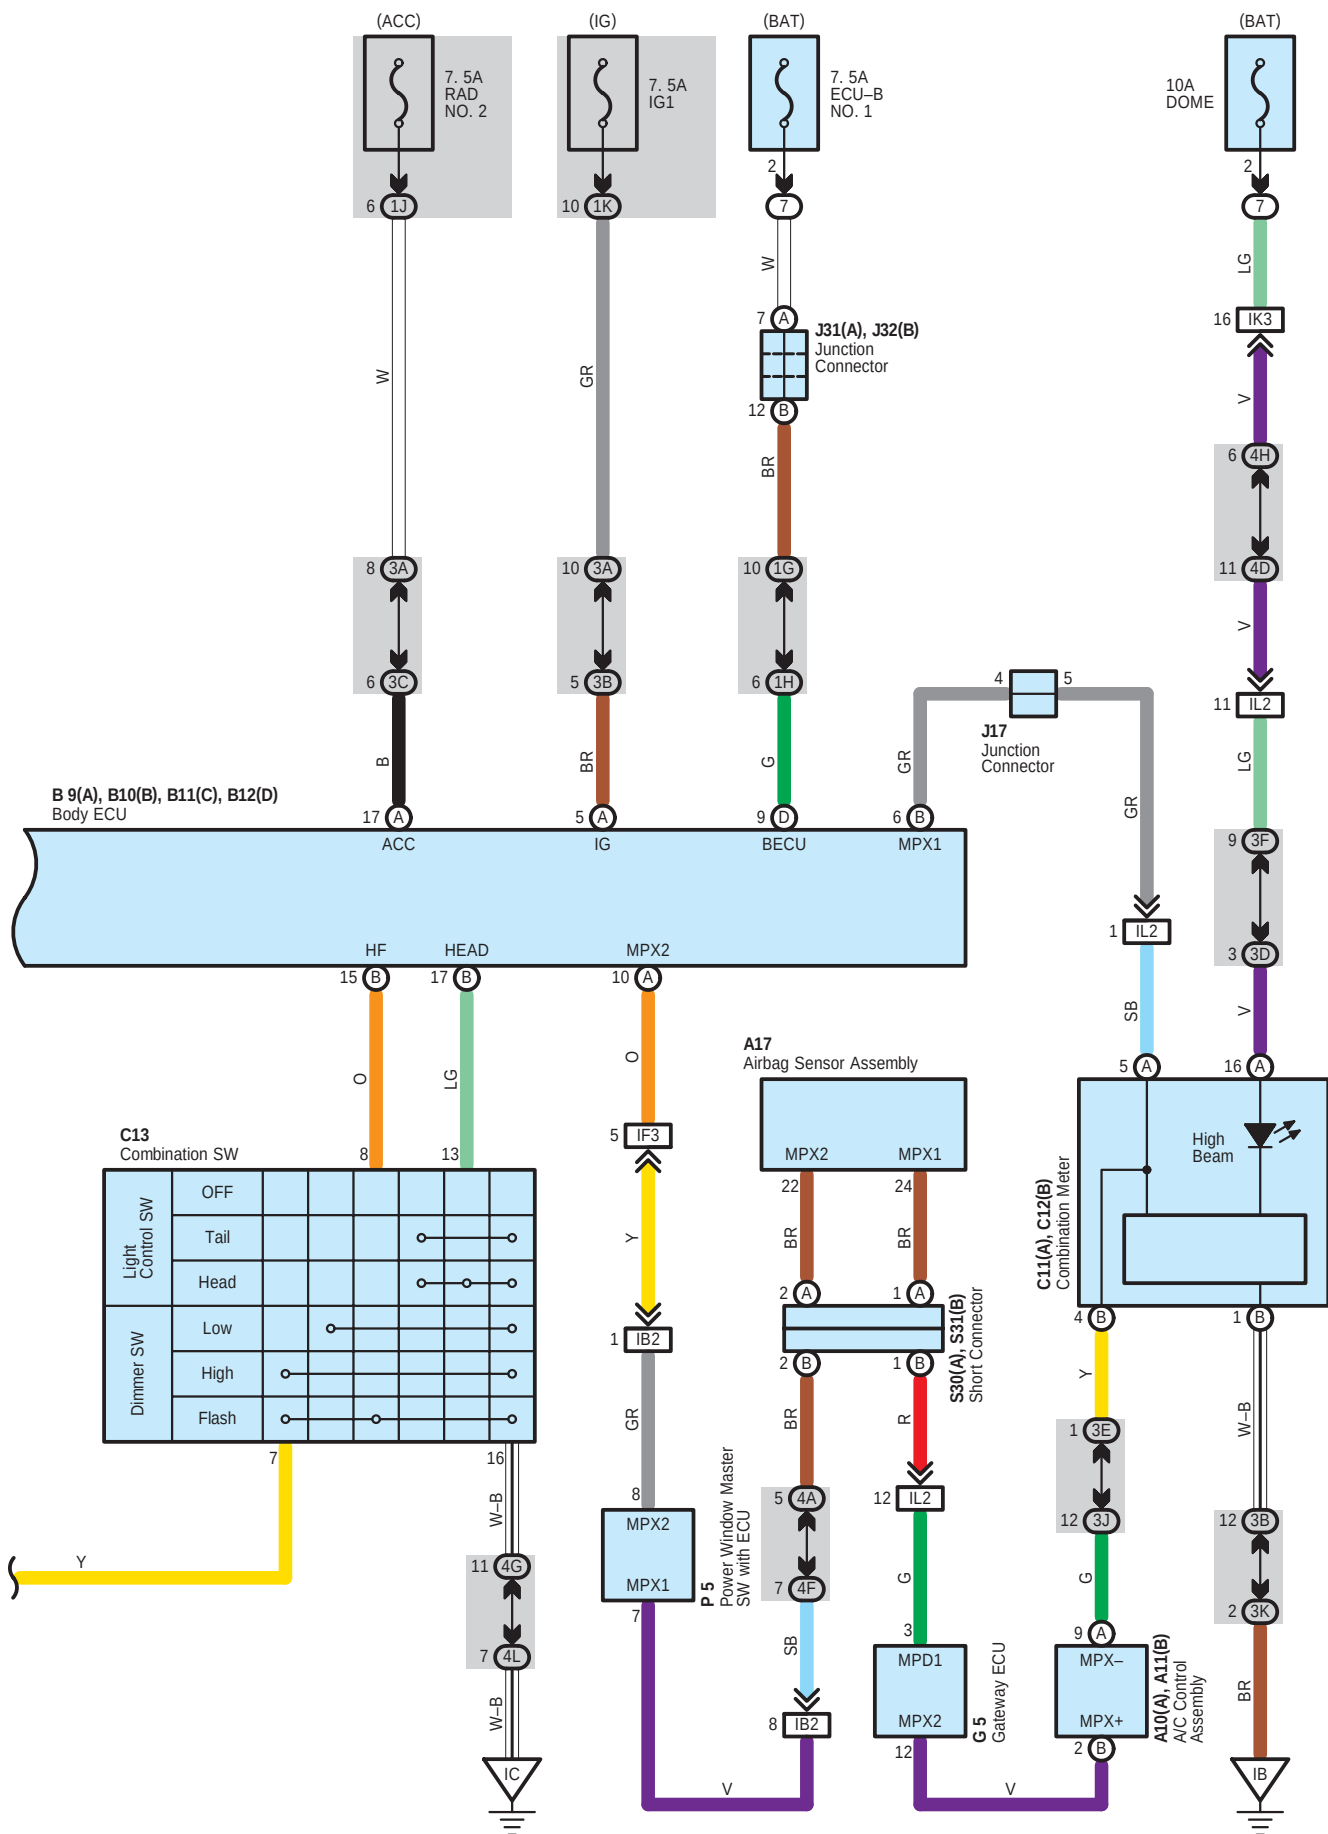

Headlight without Daytime Running Light

: Parts Location

Code		See Page	Code		See Page	Code		See Page
A10	A	44	C12	B	44	J3		43
A11	B	44	C13		44	J17		45
A17		44	G5		44	J31	A	45
B9	A	44	H1		42	J32	B	45
B10	B	44	H2		42	P5		46
B11	C	44	H3		42	S30	A	45
B12	D	44	H4		42	S31	B	45
C11	A	44	J1		43			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
4	27	R/B No.4 (Engine Compartment Left)
7	24	Fusible Link Block (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1H		
1J	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1K		
2A	28	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2G		
2H		
2I		
3A	34	Instrument Panel Wire and J/B No.3 (Behind the Instrument Panel Center)
3B		
3C		
3D		
3E		
3F		
3J	35	
3K		
4A	39	Cowl Wire and J/B No.4 (Right Side of Glove Box)
4D		
4F		
4G		
4H		
4I	38	
4L		
4N		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB2	54	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IF3	54	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IK3	55	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IL2	55	Instrument Panel Wire and Cowl Wire (Right Cowl Side Panel)



: Ground Points

Code	See Page	Ground Points Location
EA	52	Right Front Fender Apron
EG	52	Under the Left Headlight
IB	54	Right Instrument Panel Brace
IC	54	Right Cowl Side Panel