


Front Fog Light

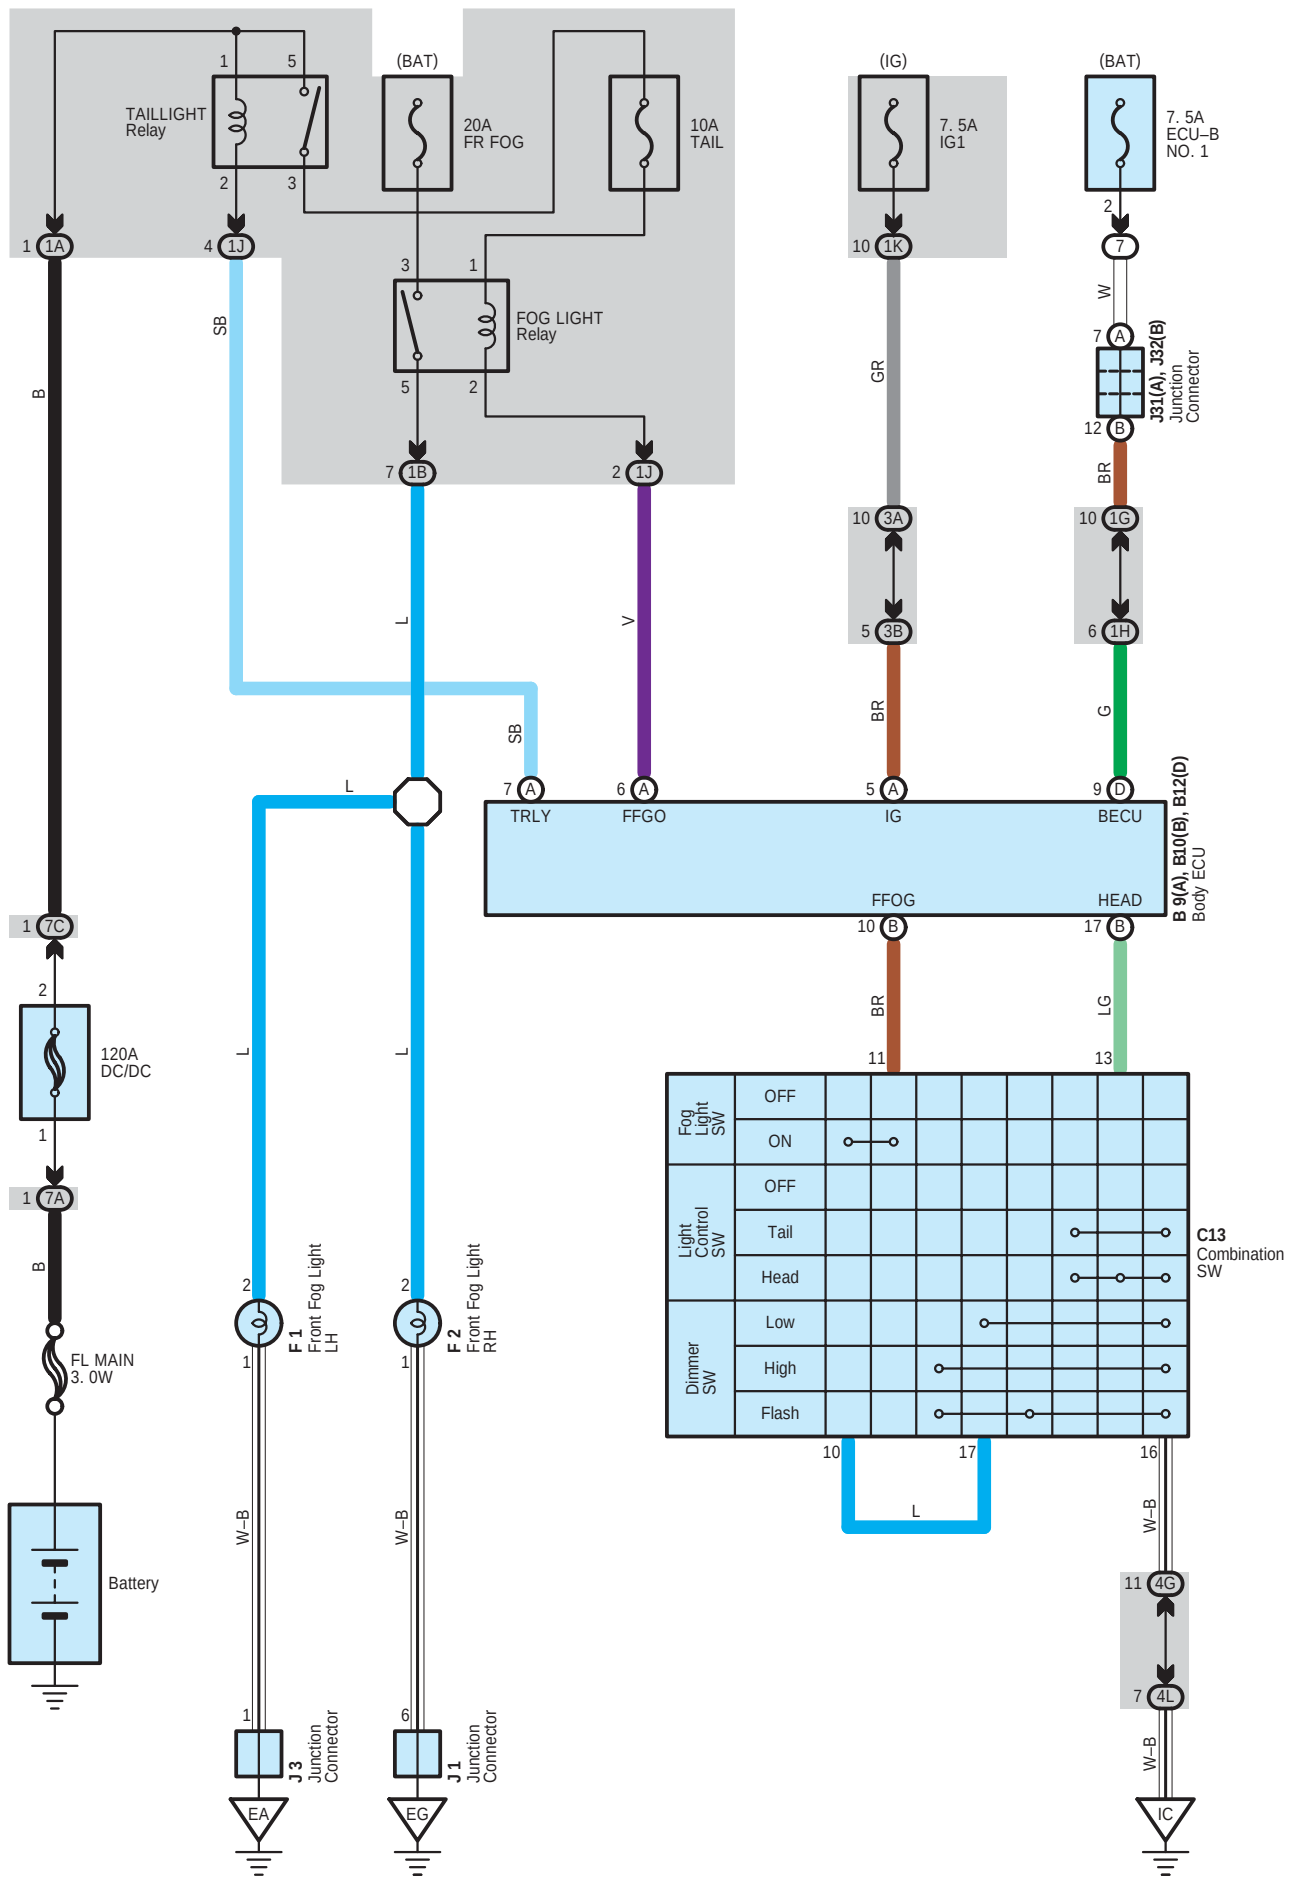

 : Parts Location

Code		See Page	Code	See Page	Code		See Page
B9	A	44	F1	42	J31	A	45
B10	B	44	F2	42	J32	B	45
B12	D	44	J1	43			
C13		44	J3	43			

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
7	24	Fusible Link Block (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	31	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1B		
1G	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1H		
1J	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1K		
3A	34	Instrument Panel Wire and J/B No.3 (Behind the Instrument Panel Center)
3B		
4G	39	Cowl Wire and J/B No.4 (Right Side of Glove Box)
4L	38	
7A	24	Engine Room Main Wire and Fusible Link Block (Engine Compartment Left)
7C		

 : Ground Points

Code	See Page	Ground Points Location
EA	52	Right Front Fender Apron
EG	52	Under the Left Headlight
IC	54	Right Cowl Side Panel