


Taillight

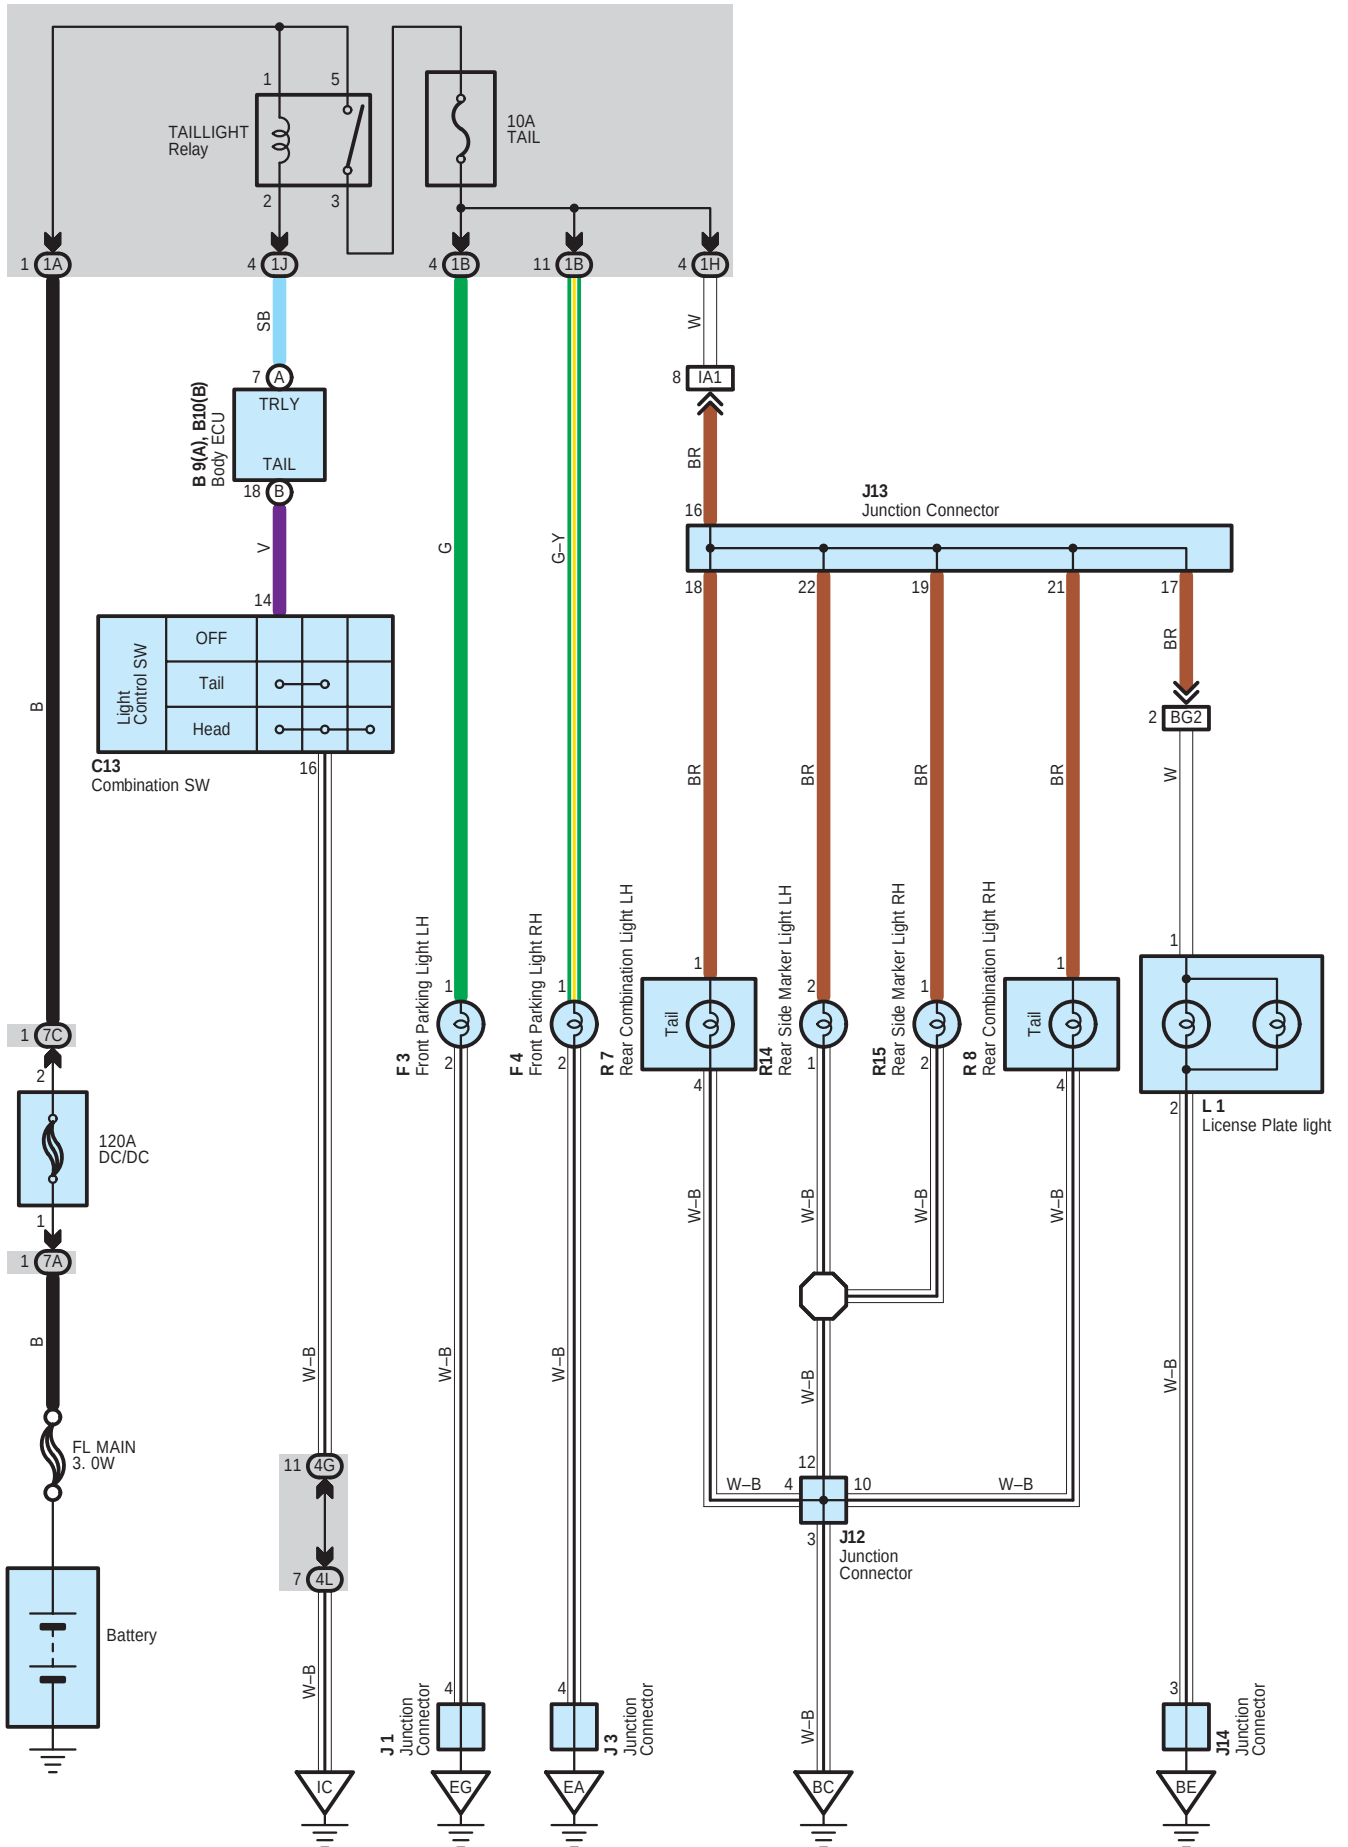

 : Parts Location

Code		See Page	Code	See Page	Code	See Page
B9	A	44	J1	43	L1	46
B10	B	44	J3	43	R7	47
C13		44	J12	46	R8	47
F3		42	J13	46	R14	47
F4		42	J14	46	R15	47

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	31	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1B		
1H	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1J	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
4G	39	Cowl Wire and J/B No.4 (Right Side of Glove Box)
4L	38	
7A	24	Engine Room Main Wire and Fusible Link Block (Engine Compartment Left)
7C		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	54	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
BG2	56	Back Door No.1 Wire and Floor No.2 Wire (Rear Left of the Roof)

 : Ground Points

Code	See Page	Ground Points Location
EA	52	Right Front Fender Apron
EG	52	Under the Left Headlight
IC	54	Right Cowl Side Panel
BC	56	Left Side of Rear Cross Member
BE	56	Left Side of Back Door