


Turn Signal and Hazard Warning Light

* 1 : w/ Navigation System
 * 2 : w/o Navigation System

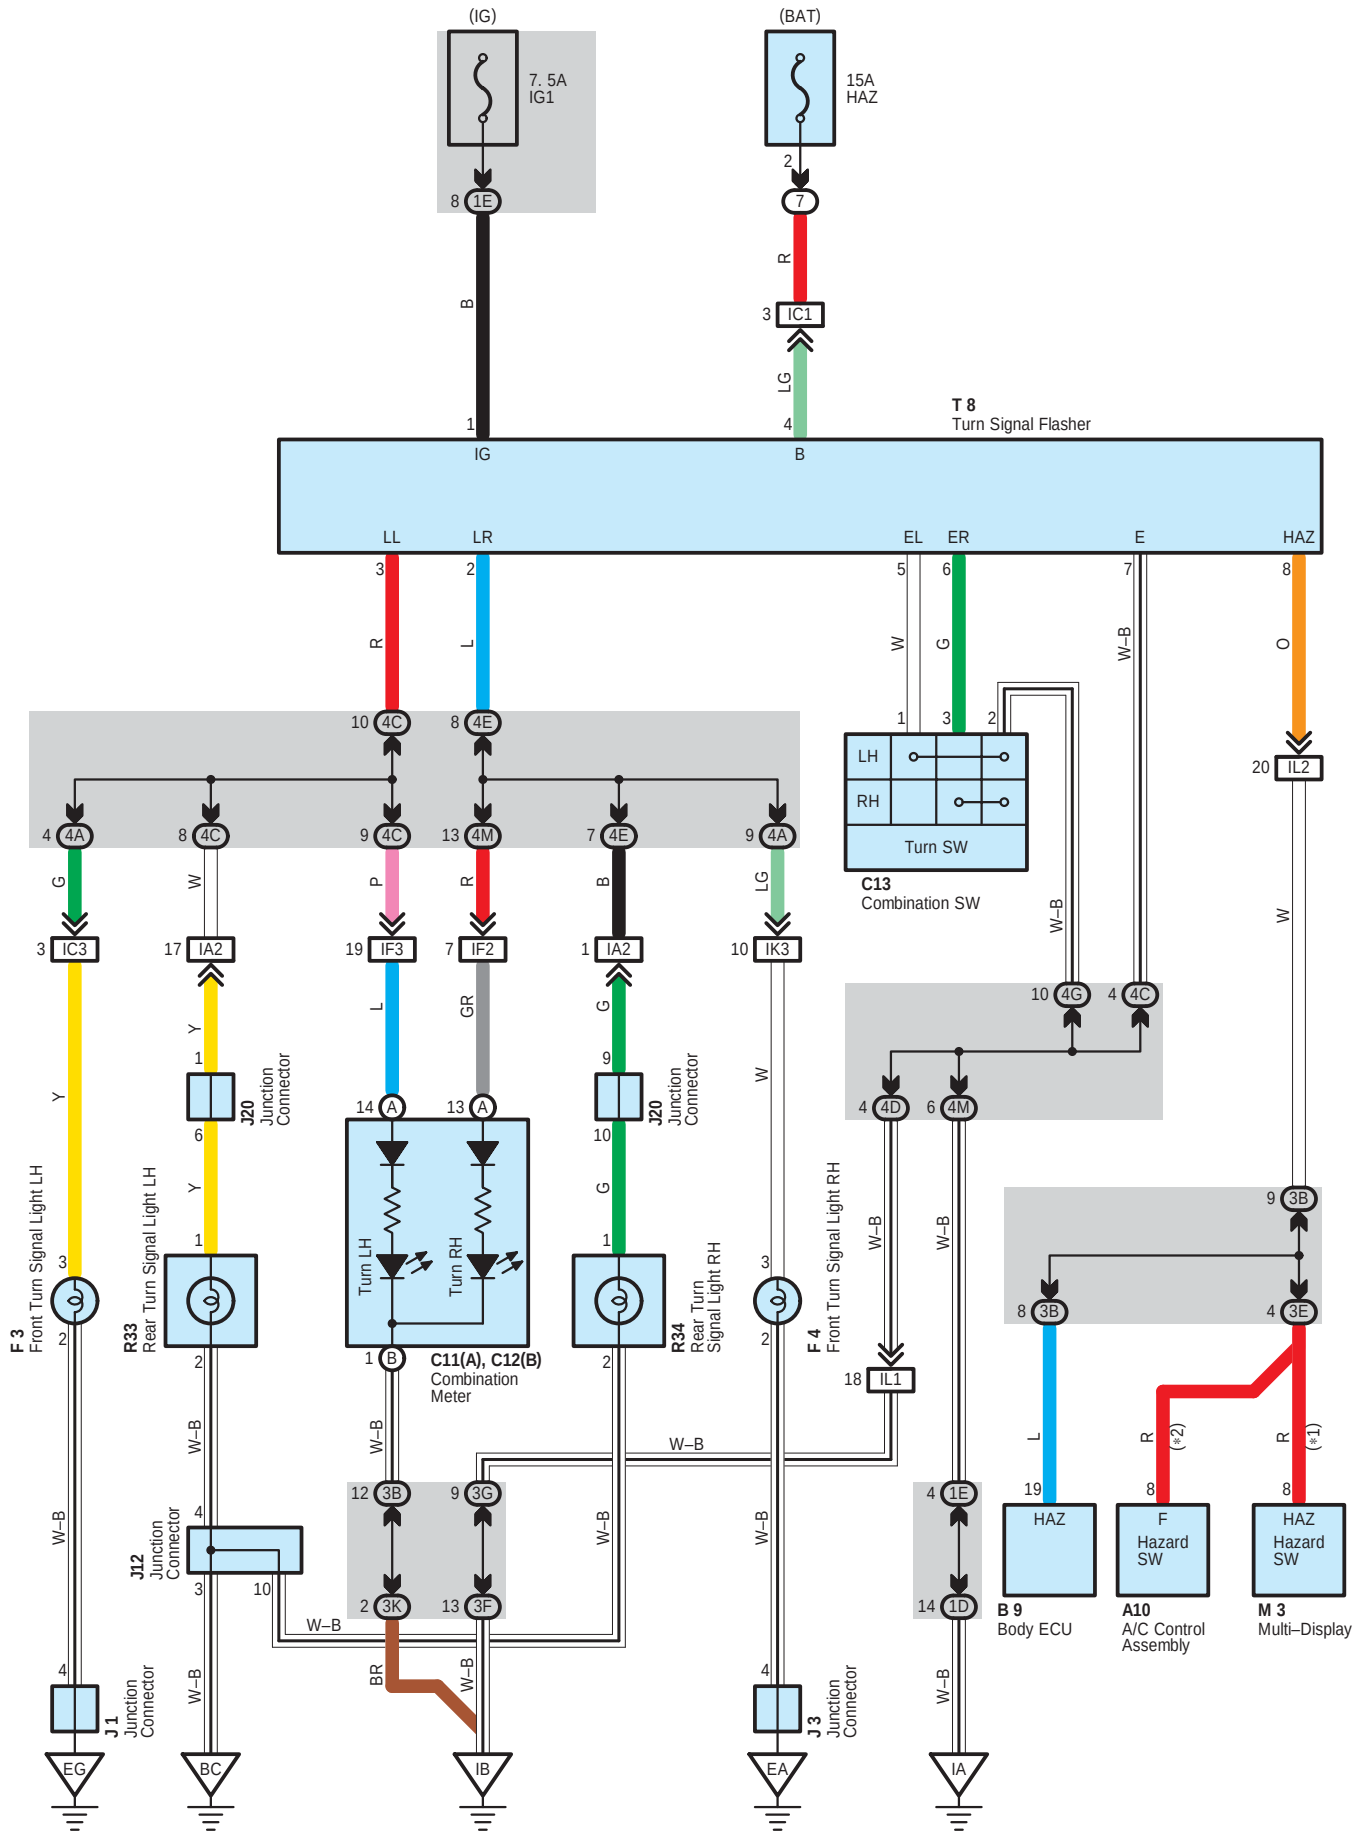

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
A10	44	F3	42	J20	46
B9	44	F4	42	M3	45
C11	A 44	J1	43	R33	47
C12	B 44	J3	43	R34	47
C13	44	J12	46	T8	45

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
7	24	Fusible Link Block (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
3B	34	Instrument Panel Wire and J/B No.3 (Behind the Instrument Panel Center)
3E		
3F		
3G	35	
3K		
4A	39	Cowl Wire and J/B No.4 (Right Side of Glove Box)
4C		
4D		
4E		
4G		
4M	38	

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	54	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IC1	54	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IC3		
IF2	54	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IF3		
IK3	55	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IL1	55	Instrument Panel Wire and Cowl Wire (Right Cowl Side Panel)
IL2		

 : Ground Points

Code	See Page	Ground Points Location
EA	52	Right Front Fender Apron
EG	52	Under the Left Headlight
IA	54	Left Cowl Side Panel
IB	54	Right Instrument Panel Brace
BC	56	Left Side of Rear Cross Member