



Back-Up Light

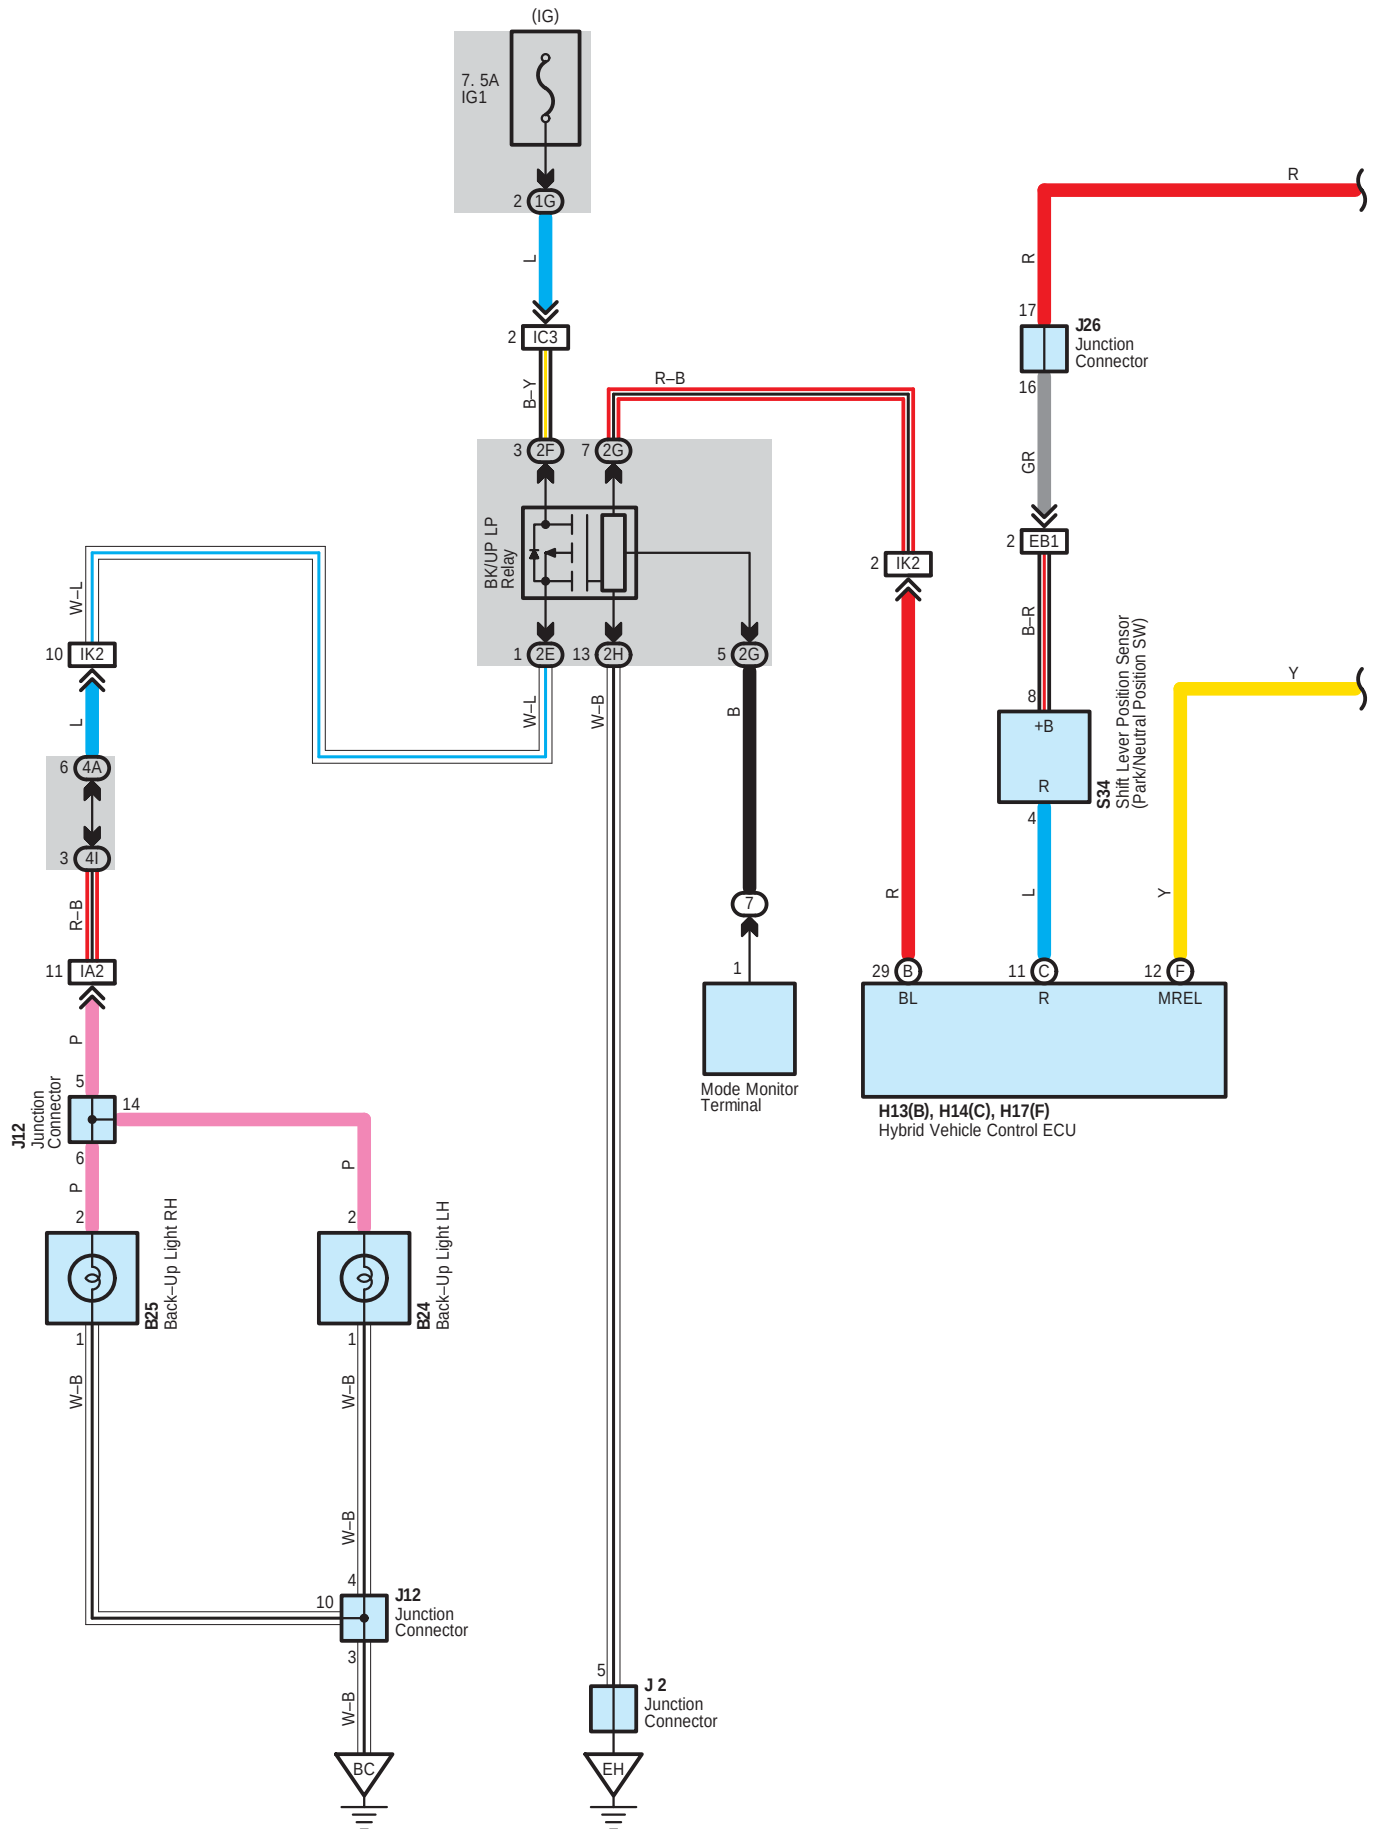

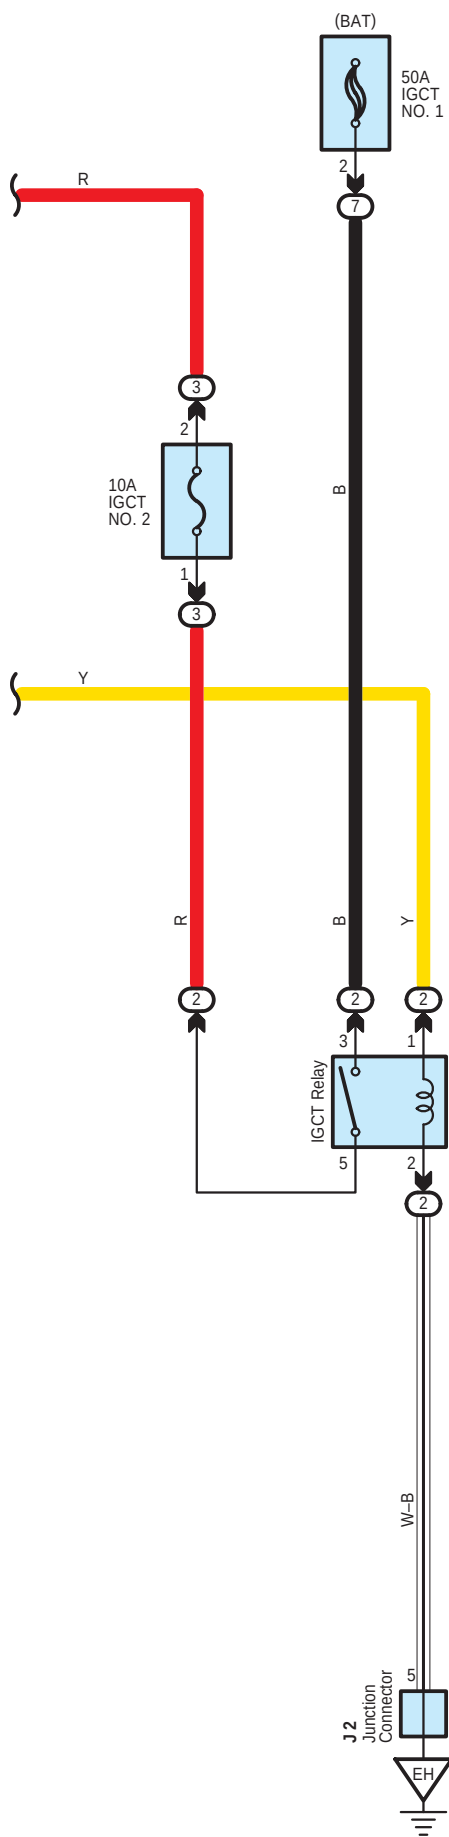

Back-Up Light

: Parts Location

Code	See Page	Code	See Page	Code	See Page
B24	46	H14	C 44	J12	46
B25	46	H17	F 44	J26	45
H13	B 44	J2	43	S34	43

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	25	R/B No.2 (Engine Compartment Left)
3	26	R/B No.3 (Engine Compartment Left)
7	24	Fusible Link Block (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
2E	28	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2F		
2G		
2H		
4A	39	Cowl Wire and J/B No.4 (Right Side of Glove Box)
4I	38	

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	52	Engine Wire and Engine Room Main Wire (Front Side of Engine Room R/B No.4)
IA2	54	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IC3	54	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IK2	55	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)

: Ground Points

Code	See Page	Ground Points Location
EH	52	Under the Left Headlight
BC	56	Left Side of Rear Cross Member

