



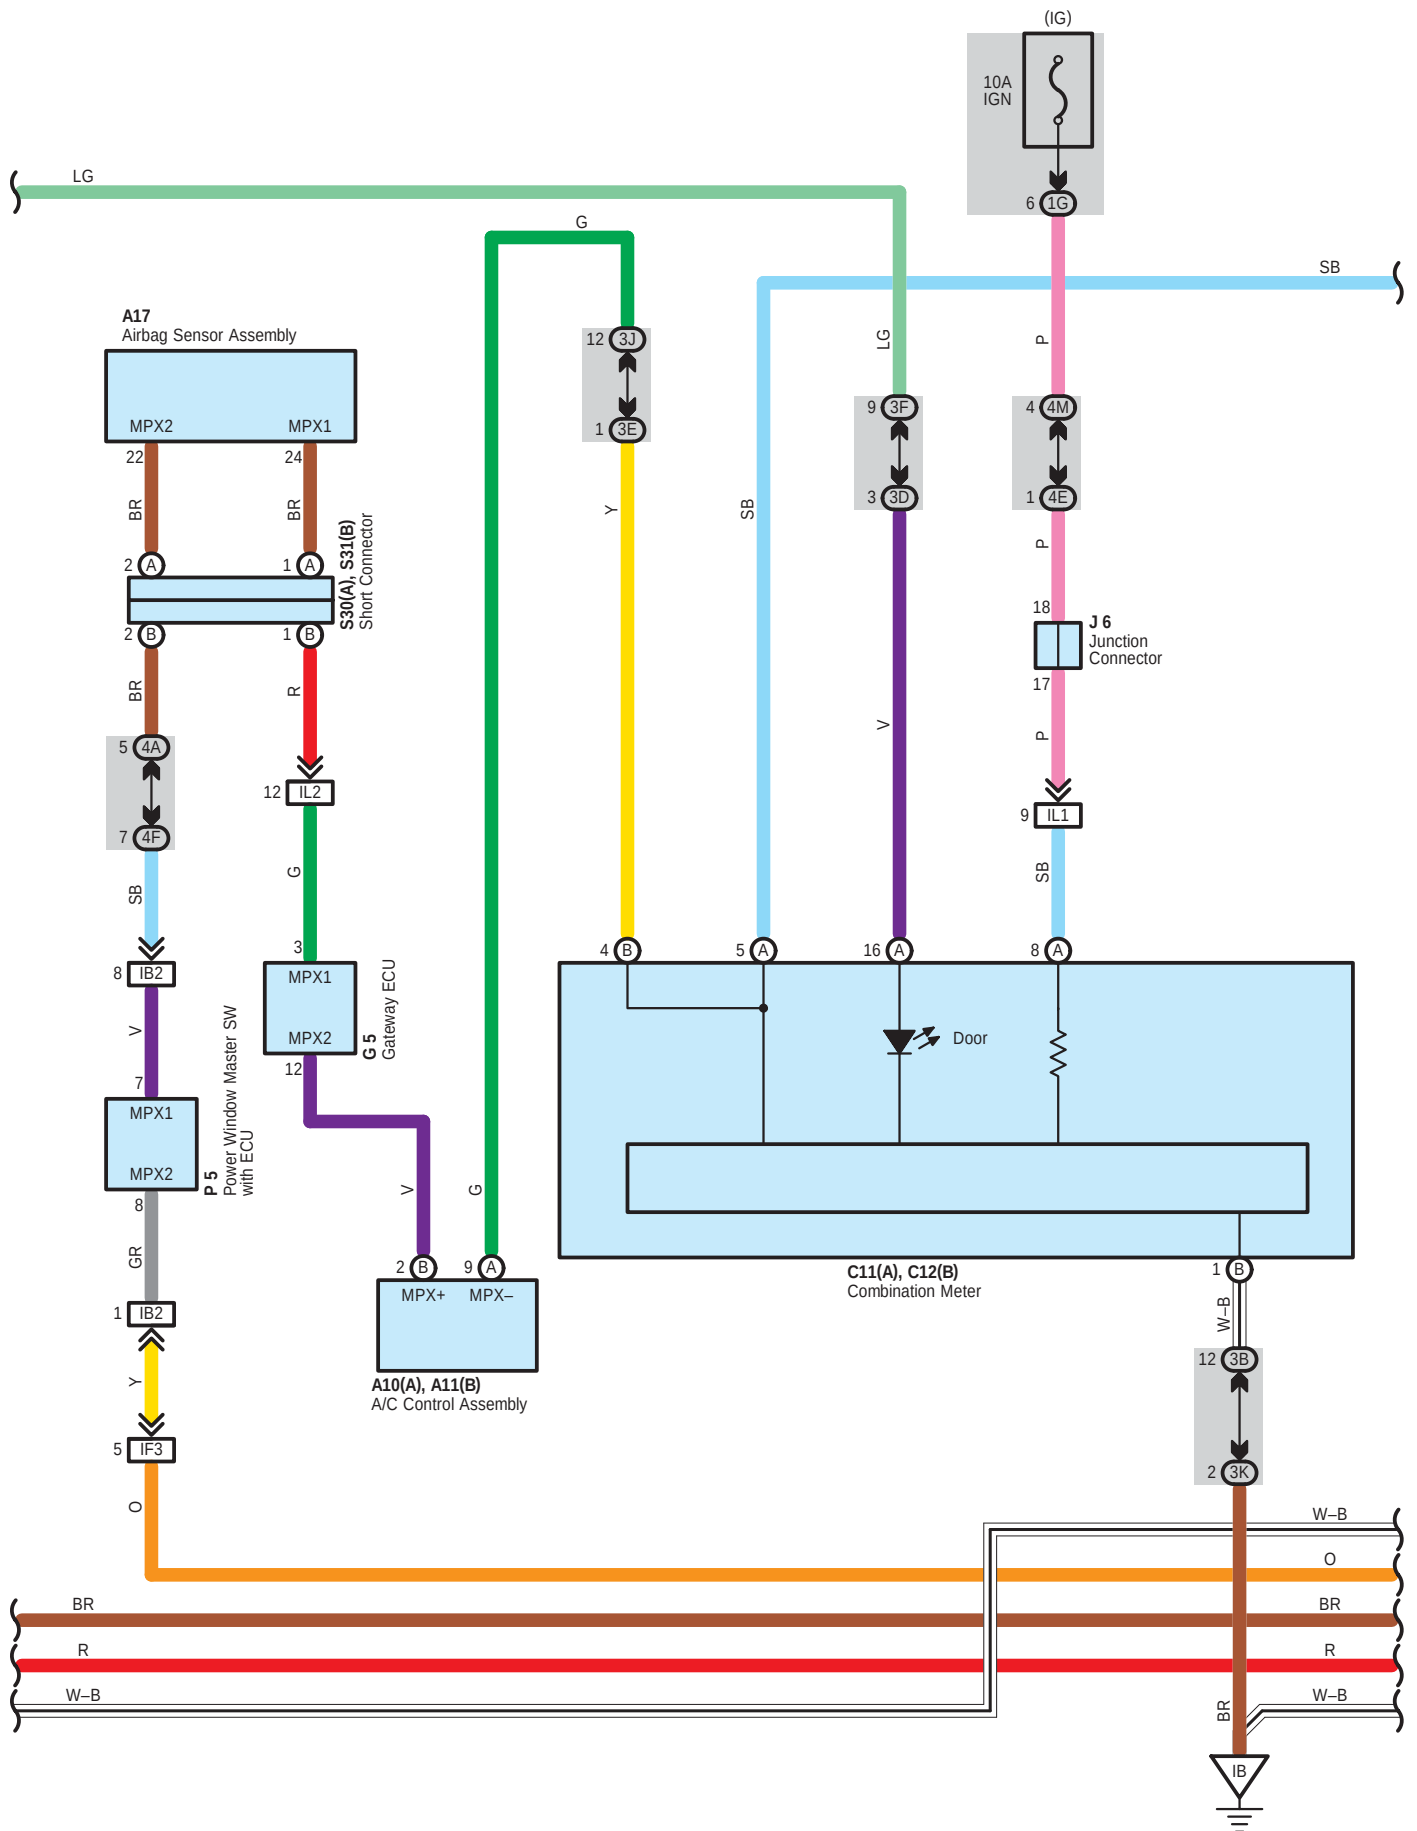

Interior Light

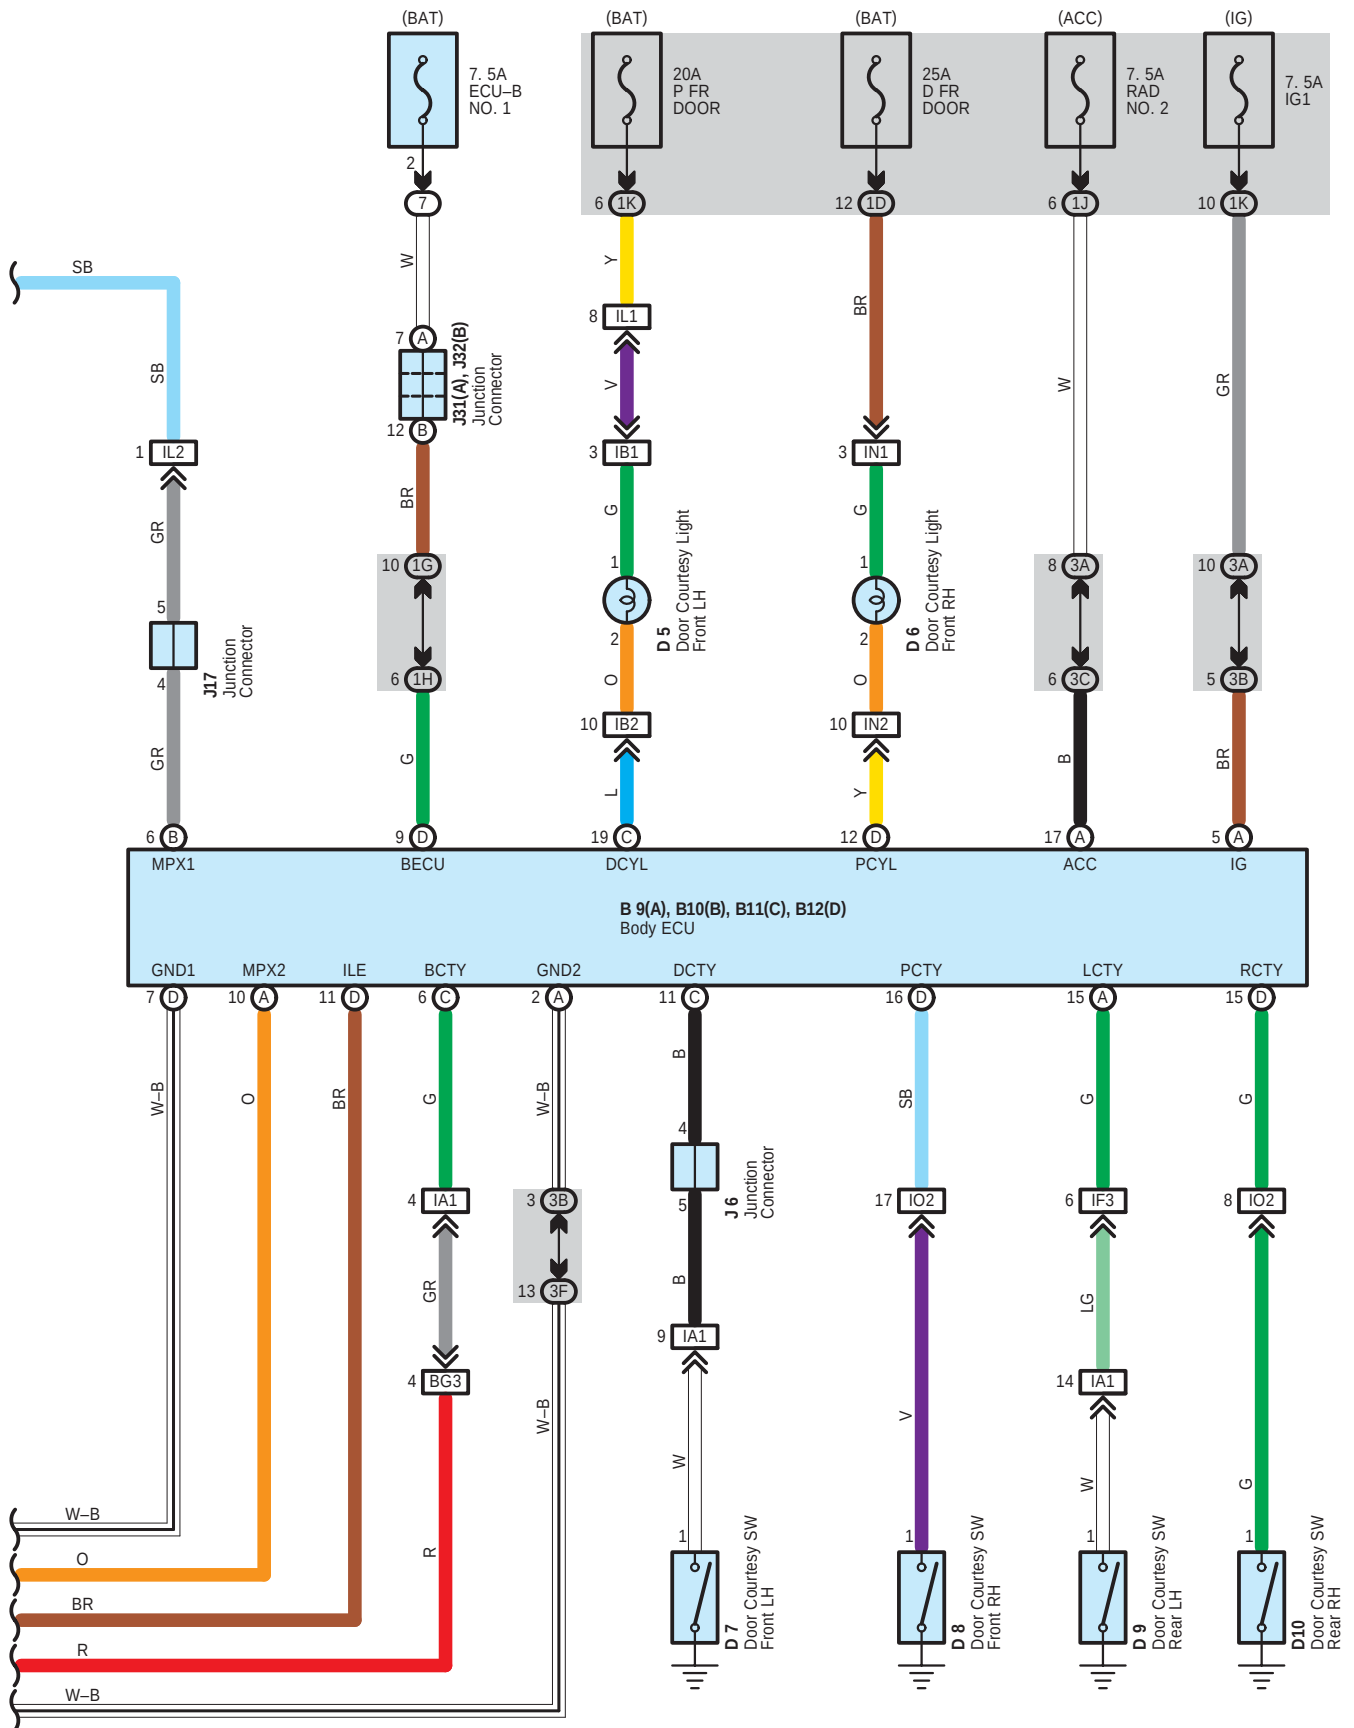

System Outline

Illuminated Entry System

This system provides various functions listed below through communication control of the body ECU etc.

- * Each relevant light lights up if any door is opened.
- * If all the doors are closed with the ignition SW set at OFF after any door is opened, each light lights up for 15 sec., and then fades out when the time set on the timer has elapsed.
- * If any door is unlocked from the driver or passenger side or if any door is unlocked with the unlock SW on the transmitter after all the doors are closed and locked, each light lights up for 15 sec., and then fades out when the time set on the timer has elapsed.
- * If the ignition SW is turned to the ACC or ON position while each light is being lit by the timer, the timer lighting is cancelled and the light fades out.
- * If all the doors are closed with the ignition SW set at ACC or ON after any door is opened, the timer lighting is cancelled and the light fades out.
- * Each light above is the interior light, ignition key cylinder light, and door courtesy lights.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A10	A 44	D6	46	J31	A 45
A11	B 44	D7	46	J32	B 45
A17	44	D8	46	O5	46
B9	A 44	D9	46	R11	47
B10	B 44	D10	46	R12	47
B11	C 44	G5	44	S30	A 45
B12	D 44	I14	44	S31	B 45
C11	A 44	I16	46	T7	45
C12	B 44	J6	45	V9	47
D4	46	J14	46	V10	47
D5	46	J17	45		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
7	24	Fusible Link Block (Engine Compartment Left)

Interior Light



: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1G		
1H		
1J	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1K		
3A	34	Instrument Panel Wire and J/B No.3 (Behind the Instrument Panel Center)
3B		
3C		
3D		
3E		
3F		
3J	35	
3K		
4A	39	
4D		
4E		
4F		
4H	38	Cowl Wire and J/B No.4 (Right Side of Glove Box)
4J		
4L		
4M		
4N		



: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	54	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IB1	54	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IB2		
IE1	54	Roof Wire and Cowl Wire (Near the Bottom of Left Front Pillar)
IF3	54	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IK3	55	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IL1	55	Instrument Panel Wire and Cowl Wire (Right Cowl Side Panel)
IL2		
IN1	55	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IN2		
IO2	55	Cowl Wire and Floor Wire (Right Kick Panel)
BG3	56	Back Door No.1 Wire and Floor No.2 Wire (Rear Left of the Roof)



: Ground Points

Code	See Page	Ground Points Location
IA	54	Left Cowl Side Panel
IB	54	Right Instrument Panel Brace
IC	54	Right Cowl Side Panel
BE	56	Left Side of Back Door

