




Illumination

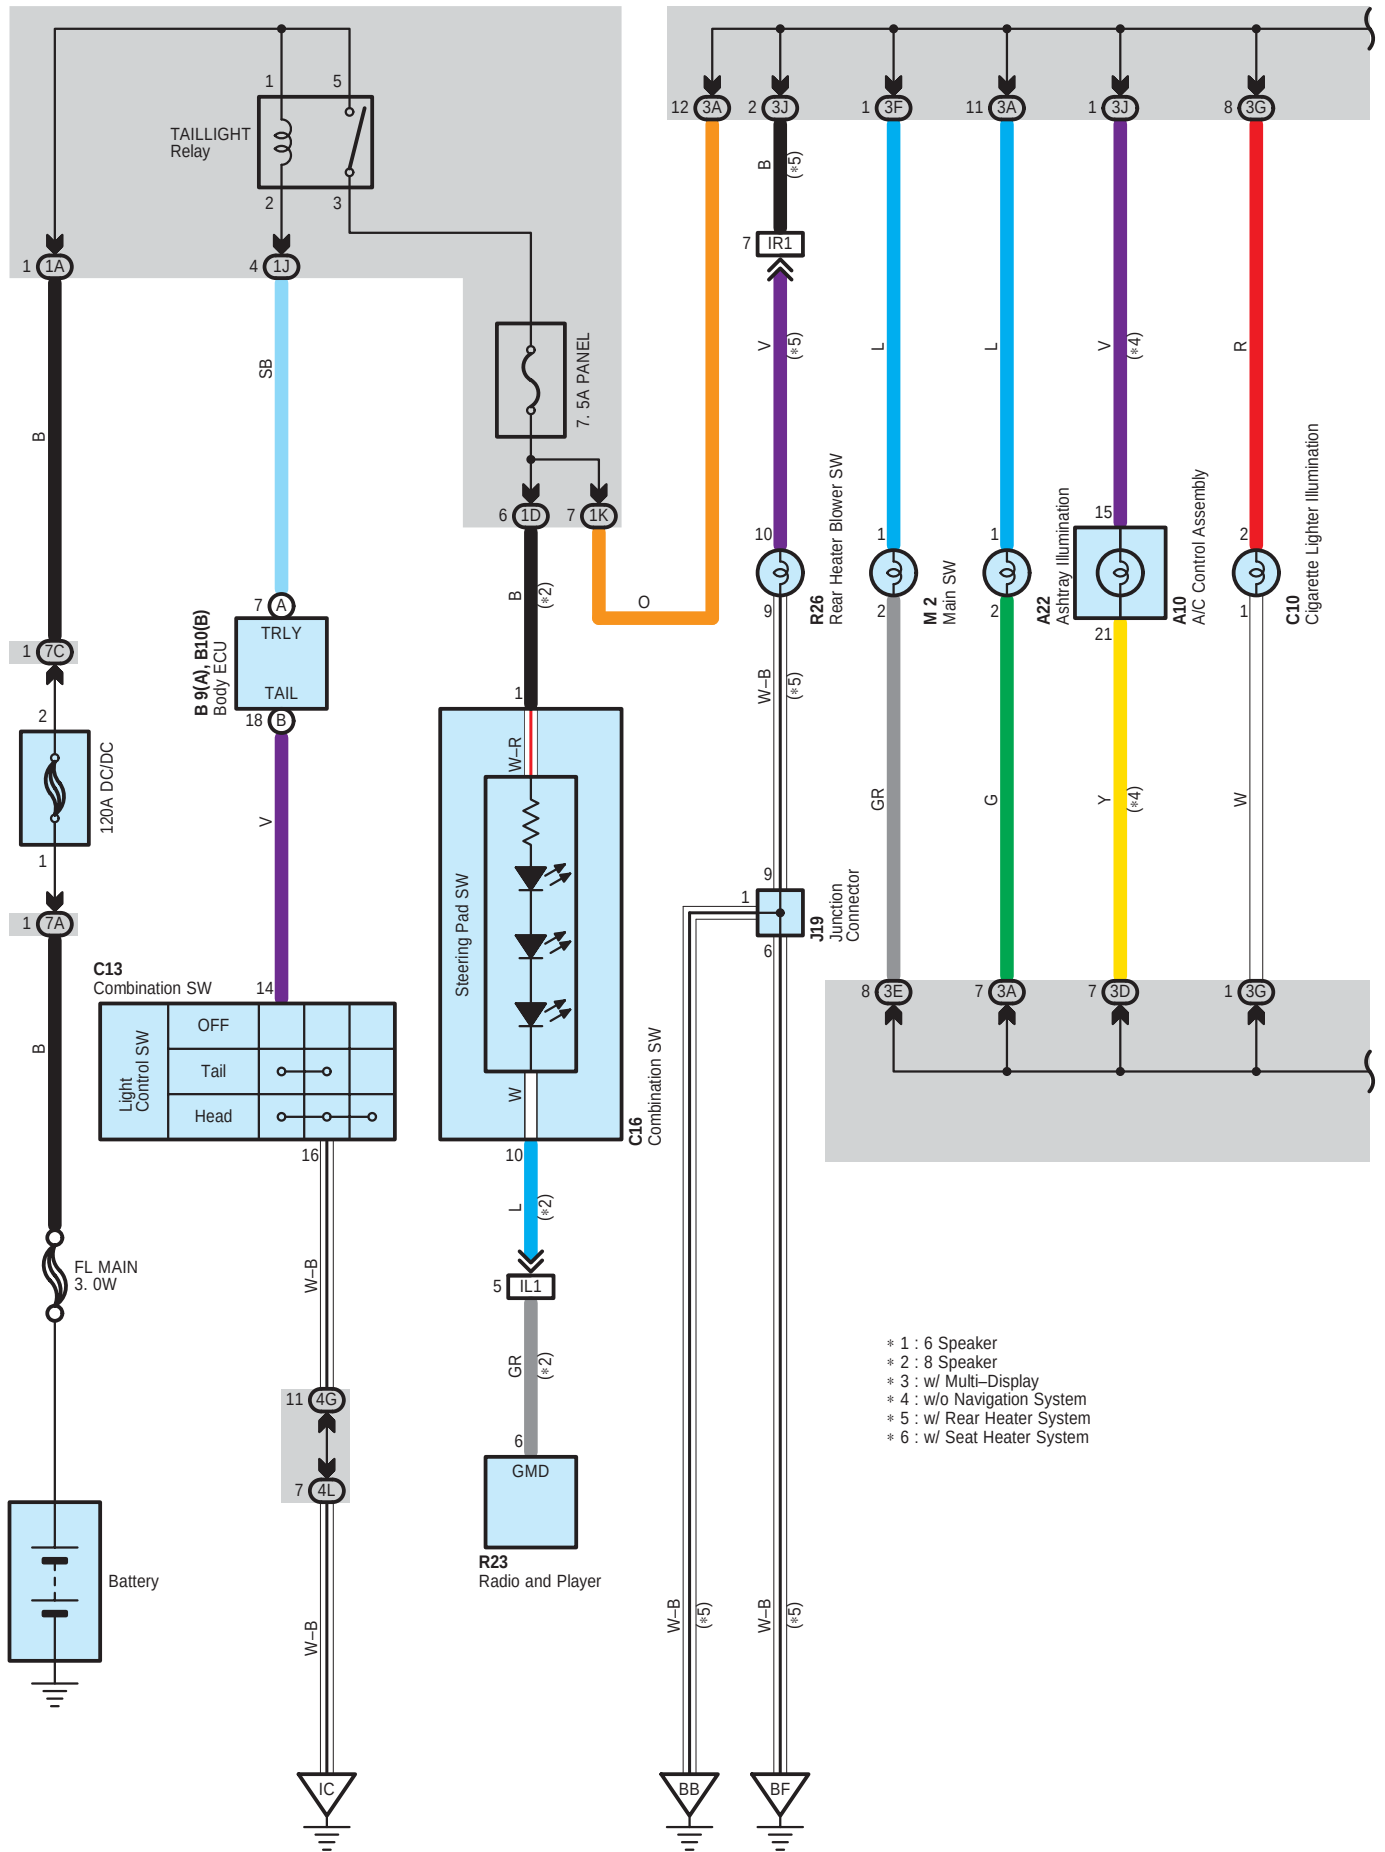

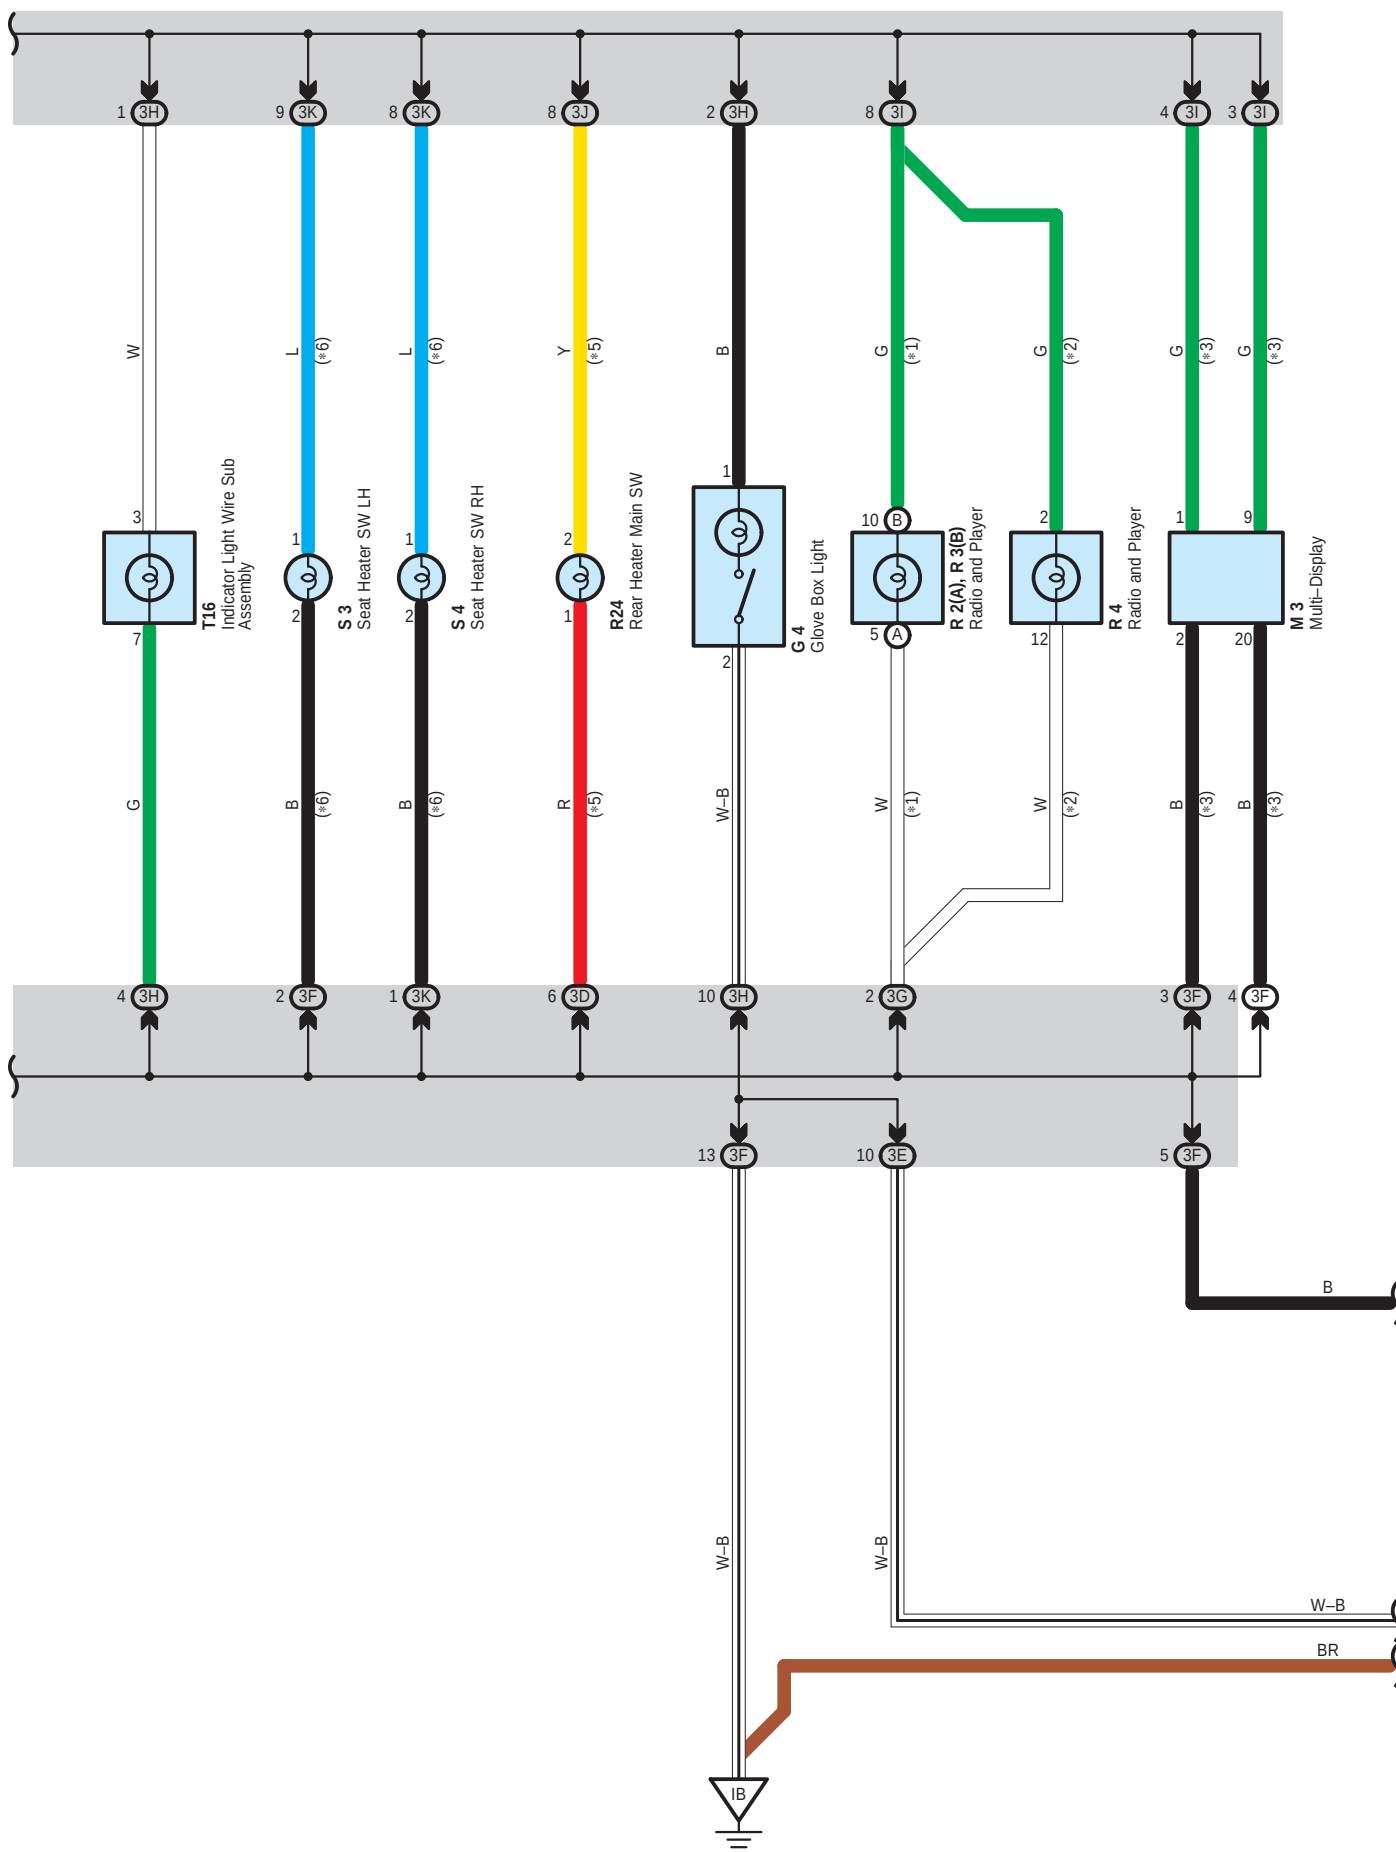

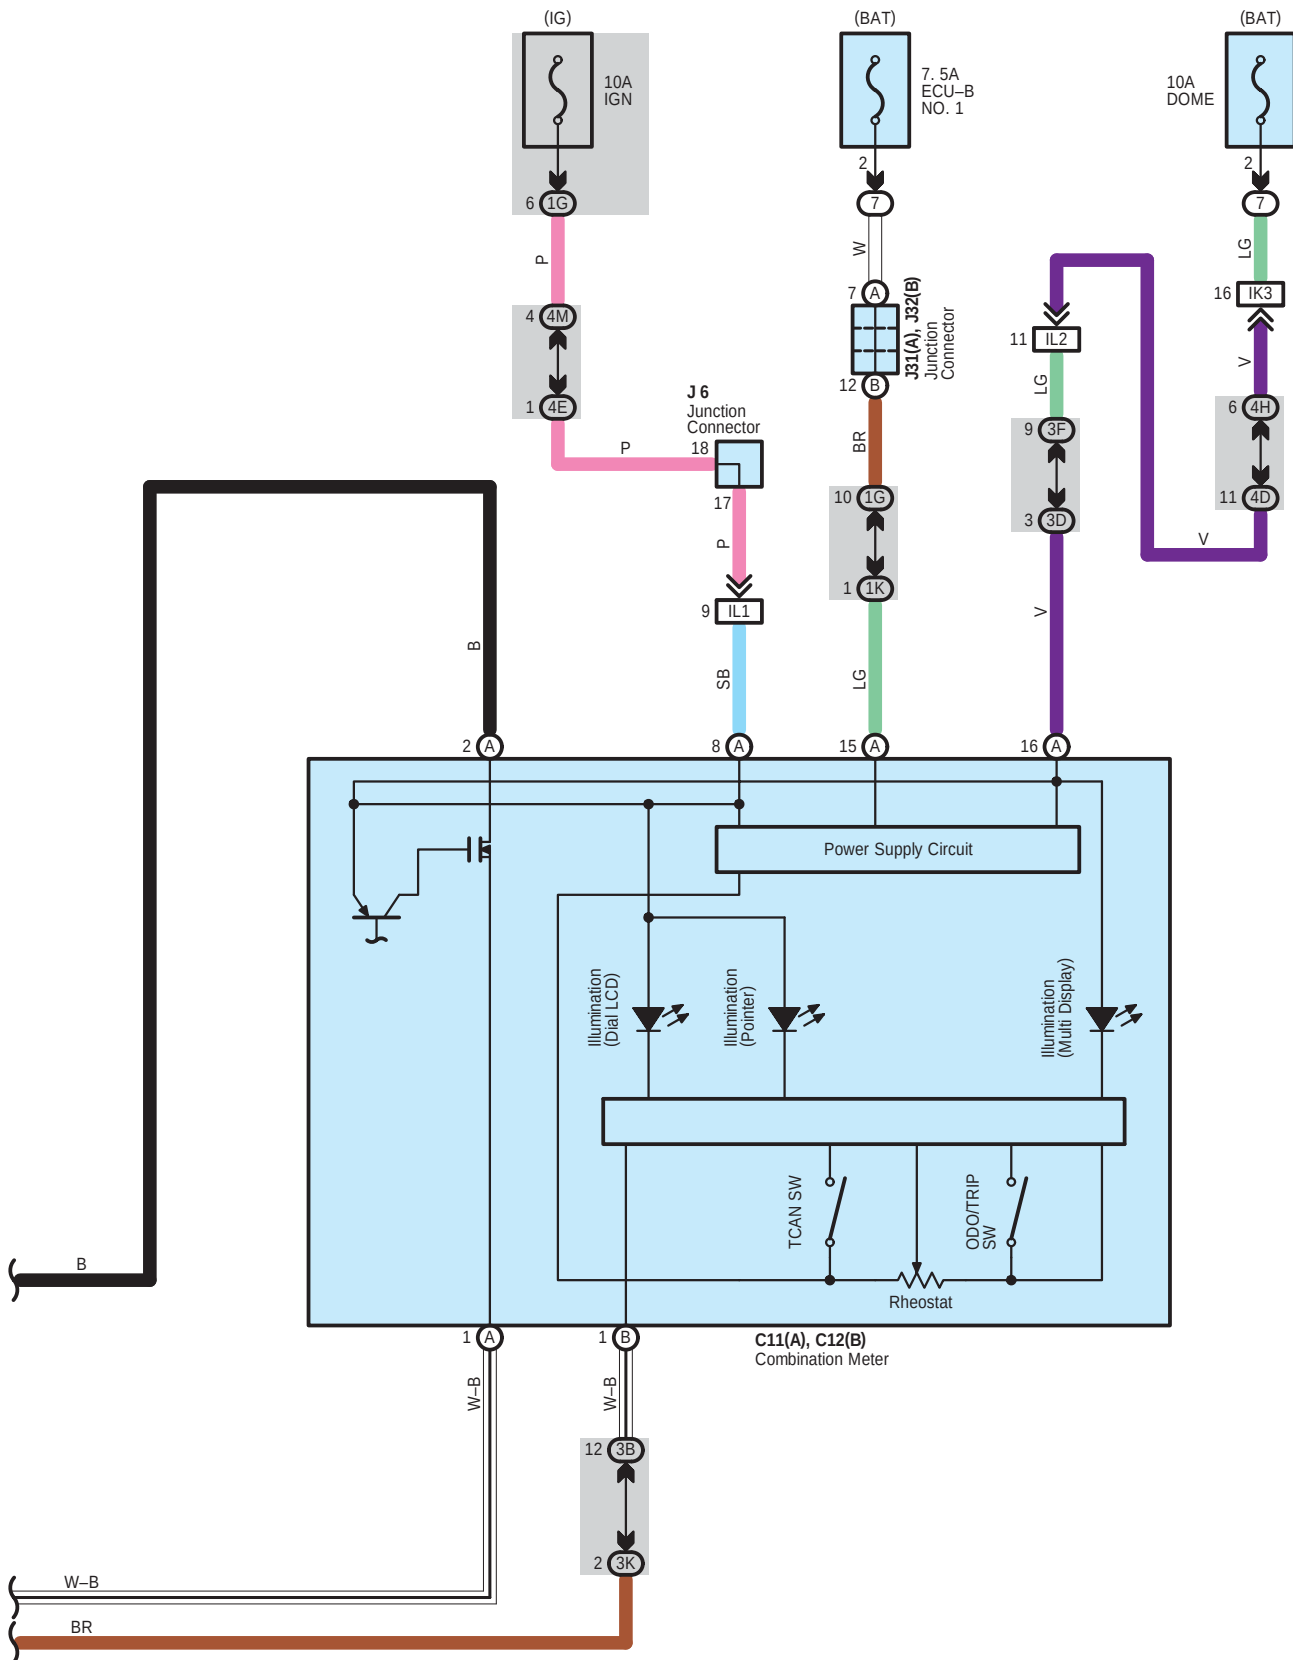

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
A10	44	G4	44	R4	45
A22	44	J6	45	R23	45
B9	A 44	J19	46	R24	45
B10	B 44	J31	A 45	R26	47
C10	44	J32	B 45	S3	45
C11	A 44	M2	45	S4	45
C12	B 44	M3	45	T16	45
C13	44	R2	A 45		
C16	44	R3	B 45		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
7	24	Fusible Link Block (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	31	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1D	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1G		
1J	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1K		
3A	34	Instrument Panel Wire and J/B No.3 (Behind the Instrument Panel Center)
3B		
3D		
3E		
3F		
3G	35	
3H		
3I		
3J		
3K		
4D	39	Cowl Wire and J/B No.4 (Right Side of Glove Box)
4E		
4G		
4H		
4L	38	
4M		
7A	24	Engine Room Main Wire and Fusible Link Block (Engine Compartment Left)
7C		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IK3	55	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IL1	55	Instrument Panel Wire and Cowl Wire (Right Cowl Side Panel)
IL2		
IR1	55	Instrument Panel Wire and Floor Wire (Under the Shift Lever)

Illumination



: Ground Points

Code	See Page	Ground Points Location
IB	54	Right Instrument Panel Brace
IC	54	Right Cowl Side Panel
BB	56	Right Center Pillar
BF	56	Near the Rear Side Marker Light RH

