


Automatic Light Control

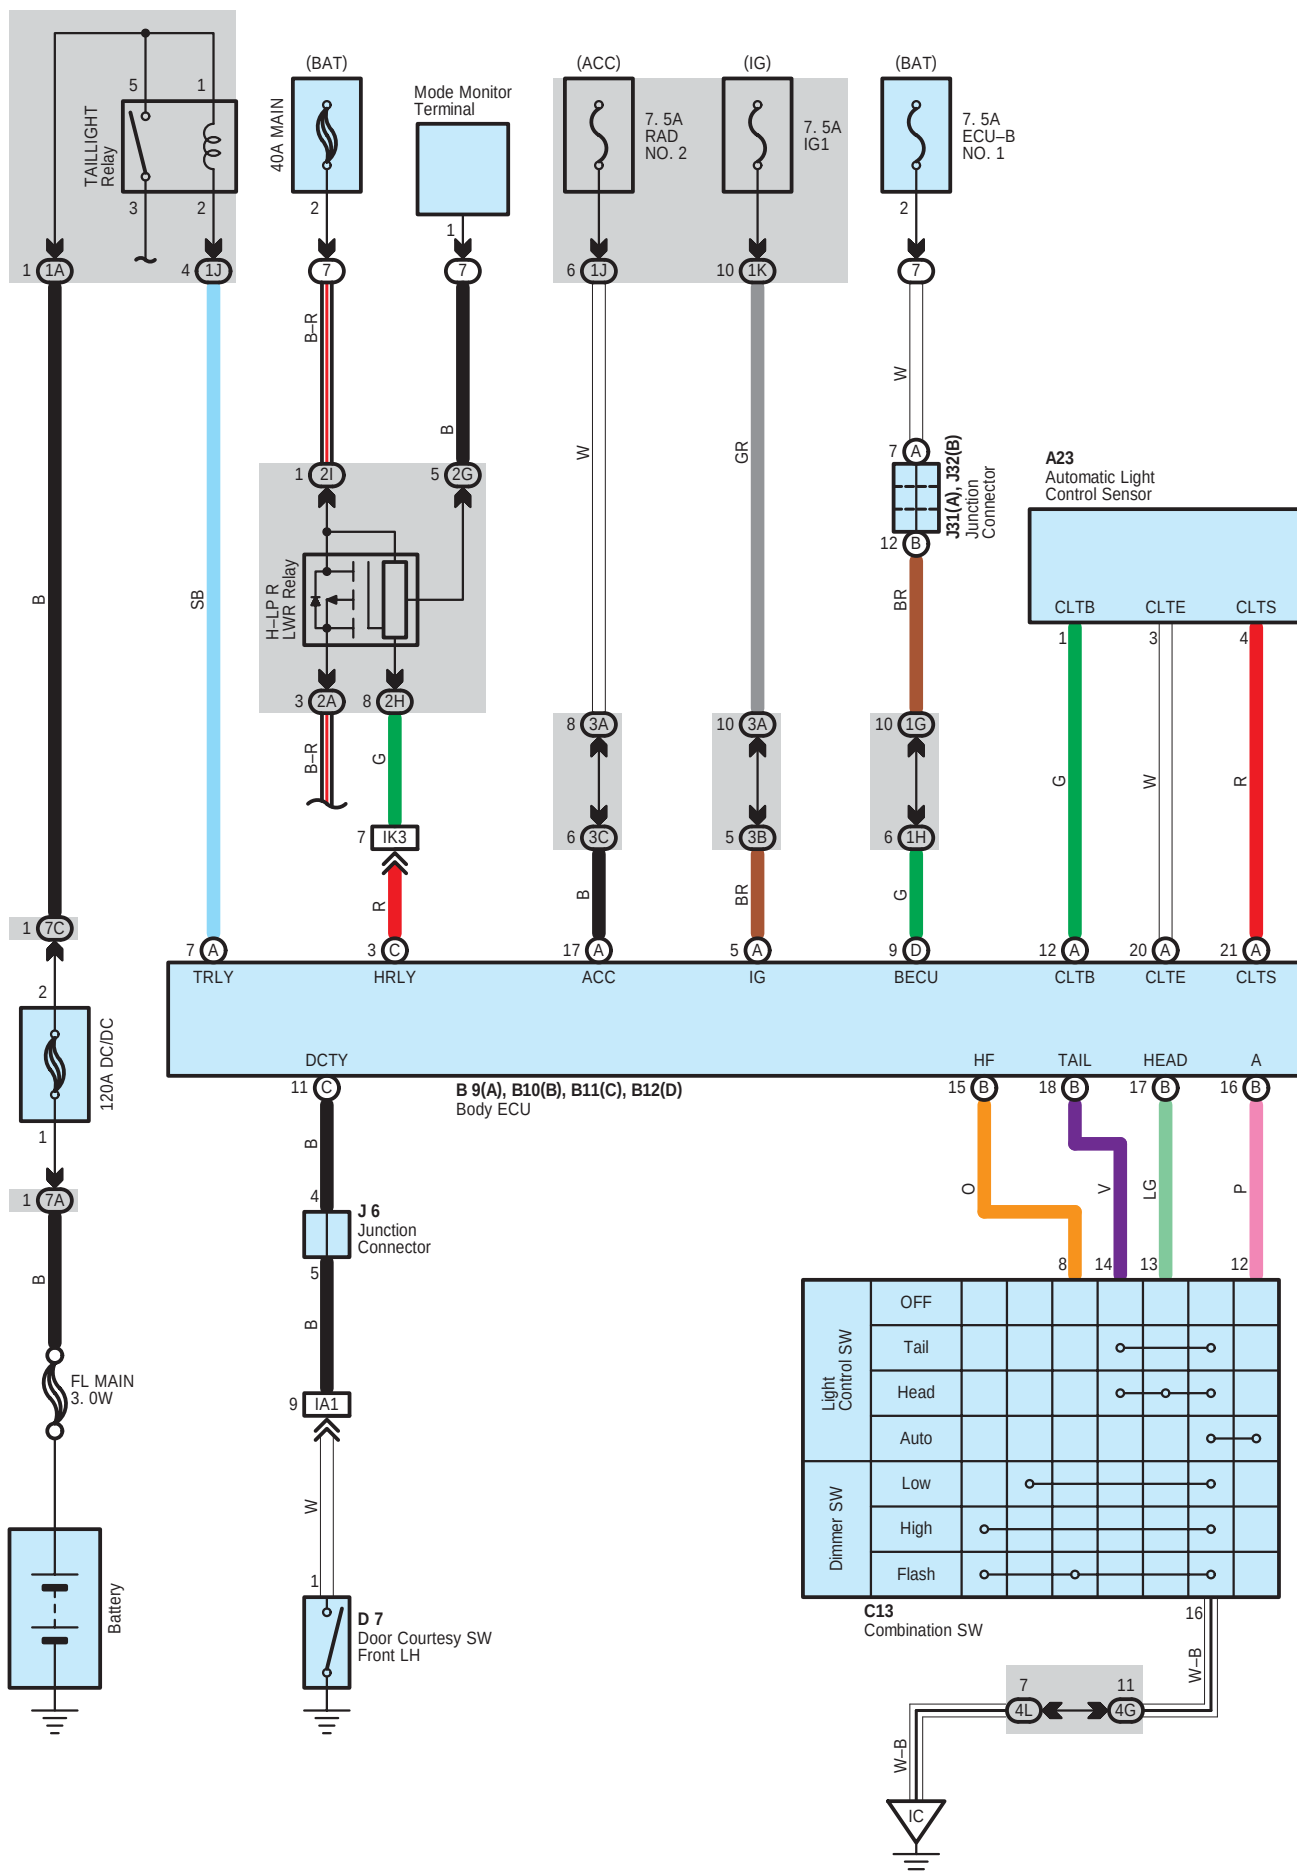

System Outline

Automatic light control is designed for turning taillights and headlights on/off automatically according to the surroundings brightness when the light control SW is on AUTO position under the condition that the ignition SW is on.

Automatic Light Control Operation

When the surrounding darkens (Darker than the value set for taillight lightning), taillight is automatically turned on under the condition that the ignition SW is on with the light control SW being on AUTO position. When further darkens (Darker than the value set for headlight lightning), the headlight is automatically turned on.

In addition, if the brightness reaches the value set for turning the each light off, each light is turned off.

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
A23		44		B12	D	44		J31	A	45	
B9	A	44		C13		44		J32	B	45	
B10	B	44		D7		46					
B11	C	44		J6		45					

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
7	24	Fusible Link Block (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	31	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1G	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1H		
1J	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1K		
2A	28	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2G		
2H		
2I		
3A	34	Instrument Panel Wire and J/B No.3 (Behind the Instrument Panel Center)
3B		
3C		
4G	39	Cowl Wire and J/B No.4 (Right Side of Glove Box)
4L	38	
7A	24	Engine Room Main Wire and Fusible Link Block (Engine Compartment Left)
7C		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	54	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IK3	55	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
IC	54	Right Cowl Side Panel