



Trailer Towing

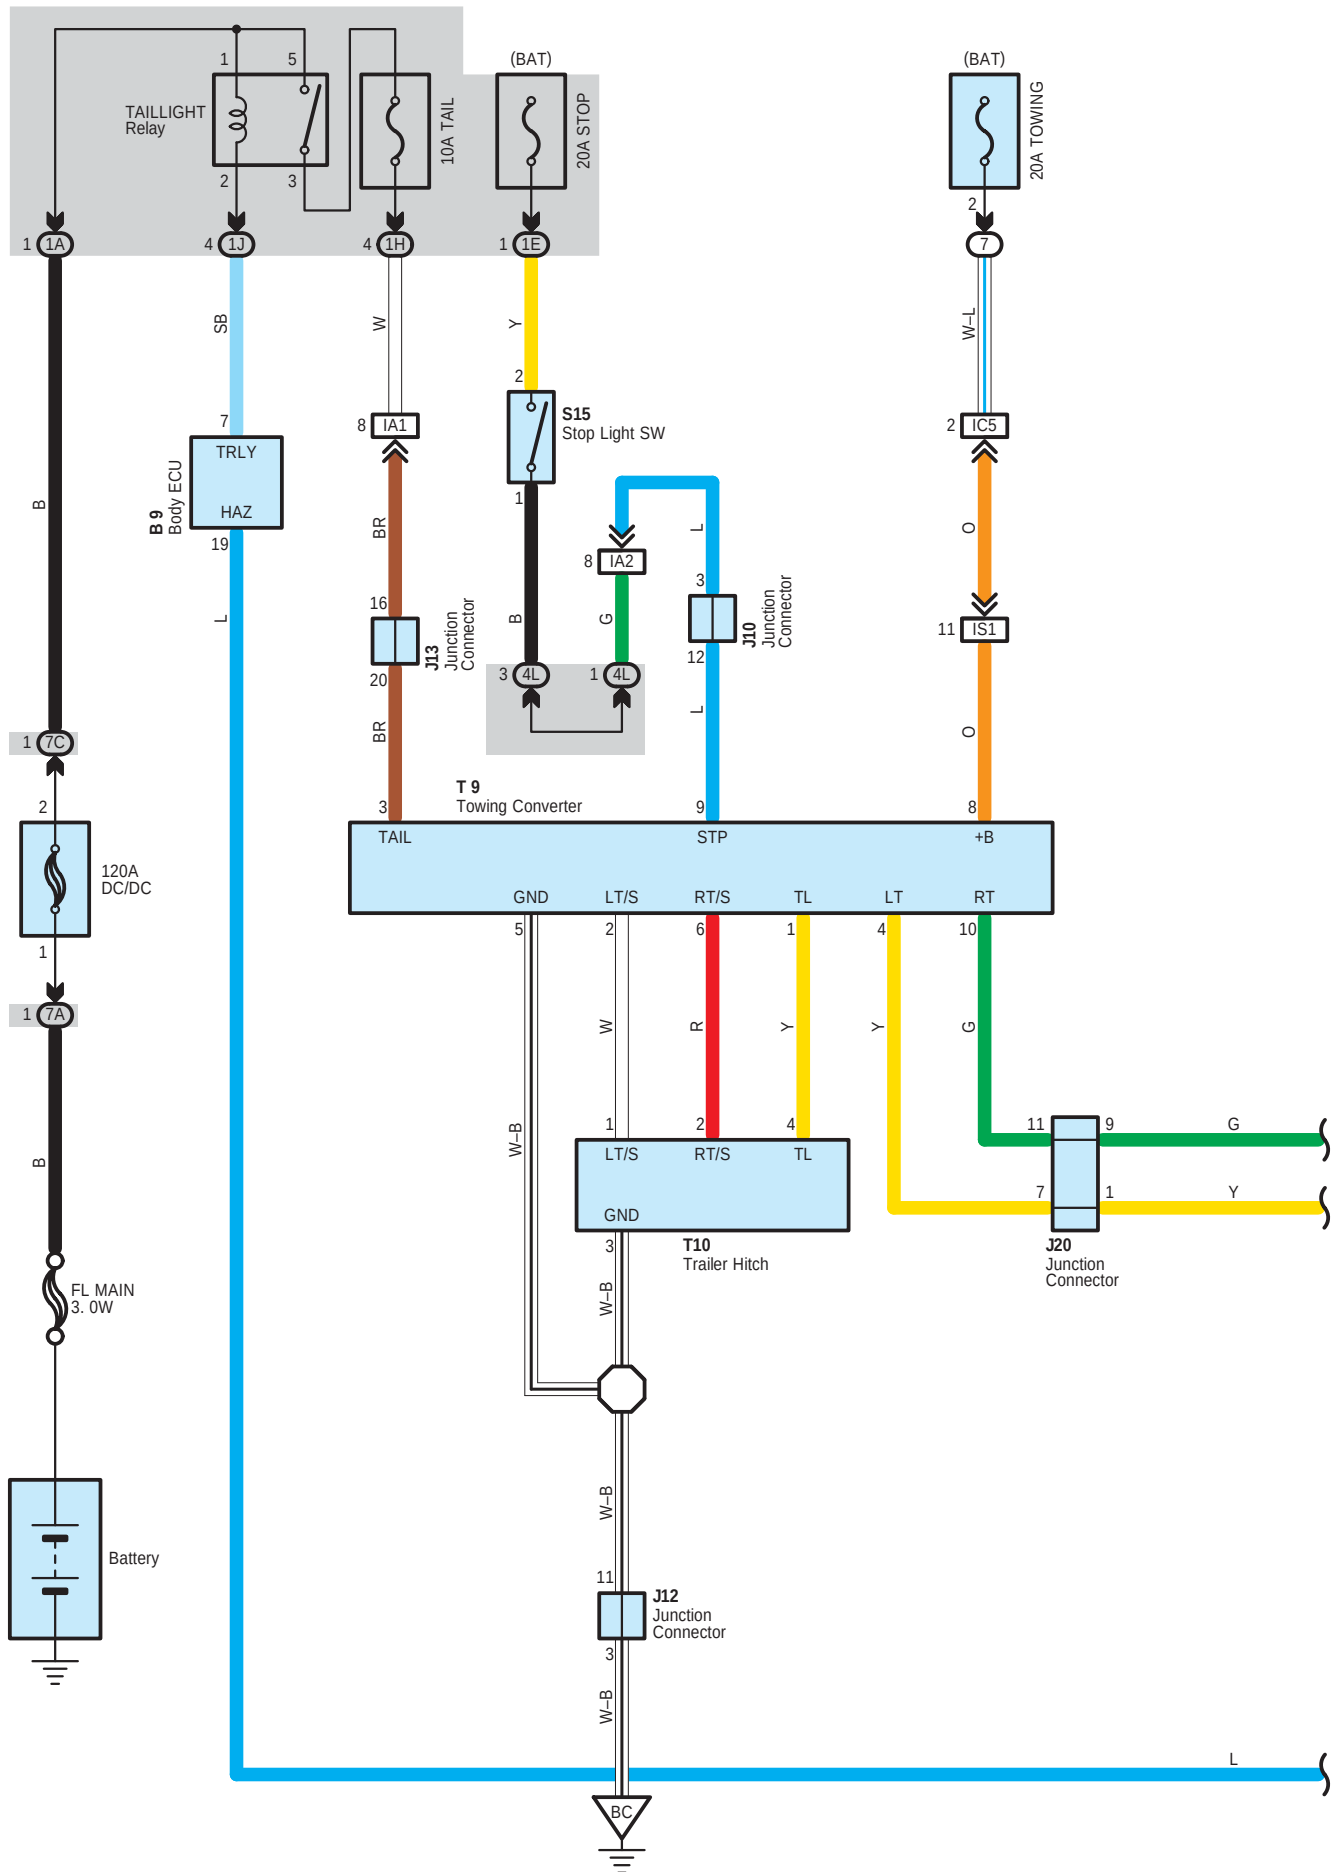

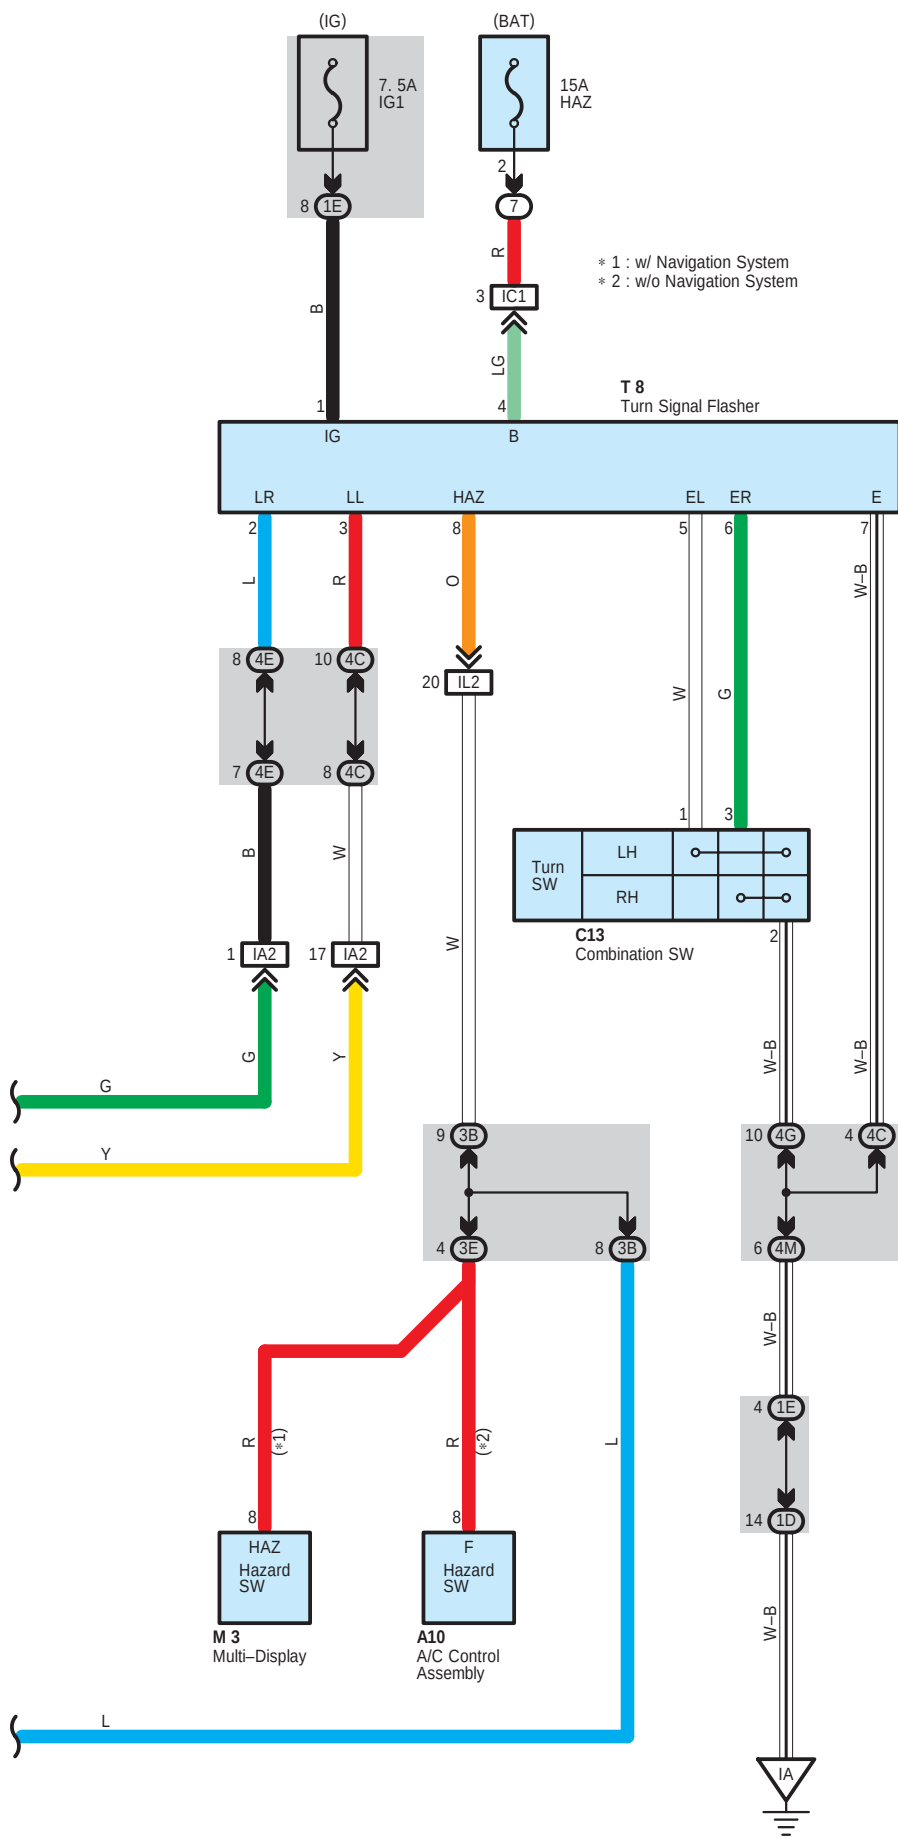

Trailer Towing

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A10	44	J12	46	S15	45
B9	44	J13	46	T8	45
C13	44	J20	46	T9	47
J10	46	M3	45	T10	47

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
7	24	Fusible Link Block (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	31	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1D	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1H		
1J	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
3B	34	Instrument Panel Wire and J/B No.3 (Behind the Instrument Panel Center)
3E		
4C	39	Cowl Wire and J/B No.4 (Right Side of Glove Box)
4E		
4G		
4L	38	
4M		
7A	24	Engine Room Main Wire and Fusible Link Block (Engine Compartment Left)
7C		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	54	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IA2		
IC1	54	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IC5		
IL2	55	Instrument Panel Wire and Cowl Wire (Right Cowl Side Panel)
IS1	55	Floor No.2 Wire and Cowl Wire (Left Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
IA	54	Left Cowl Side Panel
BC	56	Left Side of Rear Cross Member