

System Outline

The sliding roof can be operated when the ignition SW is turned to ON position.

1. Slide Open Operation

The sliding roof fully opens automatically by pressing the SLIDE OPEN button of the overhead J/B once. If the sliding roof control switch is pressed again when the sliding roof is operating, the movement of the sliding roof stops.

The operation of SLIDE OPEN is not worked when the sliding roof at TILT UP position.

2. Slide Close Operation

If you keep pressing the TILT UP button of the overhead J/B when the sliding roof is open, the sliding roof closes half and stops the operation once. If you keep pressing the TILT UP once again, the sliding roof fully closes.

3. Tilt Up Operation

If you press the TILT UP button of the overhead J/B, the sliding roof is tilted up. However, the sliding roof is not tilted up when it is open

4. Tilt Down Operation

If you press the SLIDE OPEN button when the TILT UP of the overhead J/B is pressed, the sliding roof is tilted down.

5. Key Off Sliding Roof Operation

When the ignition SW is turned from ON position to OFF or ACC position, the sliding roof can be operated within about 40 seconds. However, even if it is within about 40 seconds, the sliding roof can not be operated when each of the front doors opens.

: Parts Location

Code	See Page	Code		See Page	Code	See Page
B10	44	J31	A	45	S20	47
C12	44	J32	B	45		
J17	45	O5		46		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
7	24	Fusible Link Block (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1G		
1H		
4D	39	Cowl Wire and J/B No.4 (Right Side of Glove Box)
4L	38	
4M		
4N		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	54	Roof Wire and Cowl Wire (Near the Bottom of Left Front Pillar)
IL2	55	Instrument Panel Wire and Cowl Wire (Right Cowl Side Panel)

: Ground Points

Code	See Page	Ground Points Location
IA	54	Left Cowl Side Panel
IC	54	Right Cowl Side Panel