




Key Reminder and Seat Belt Warning

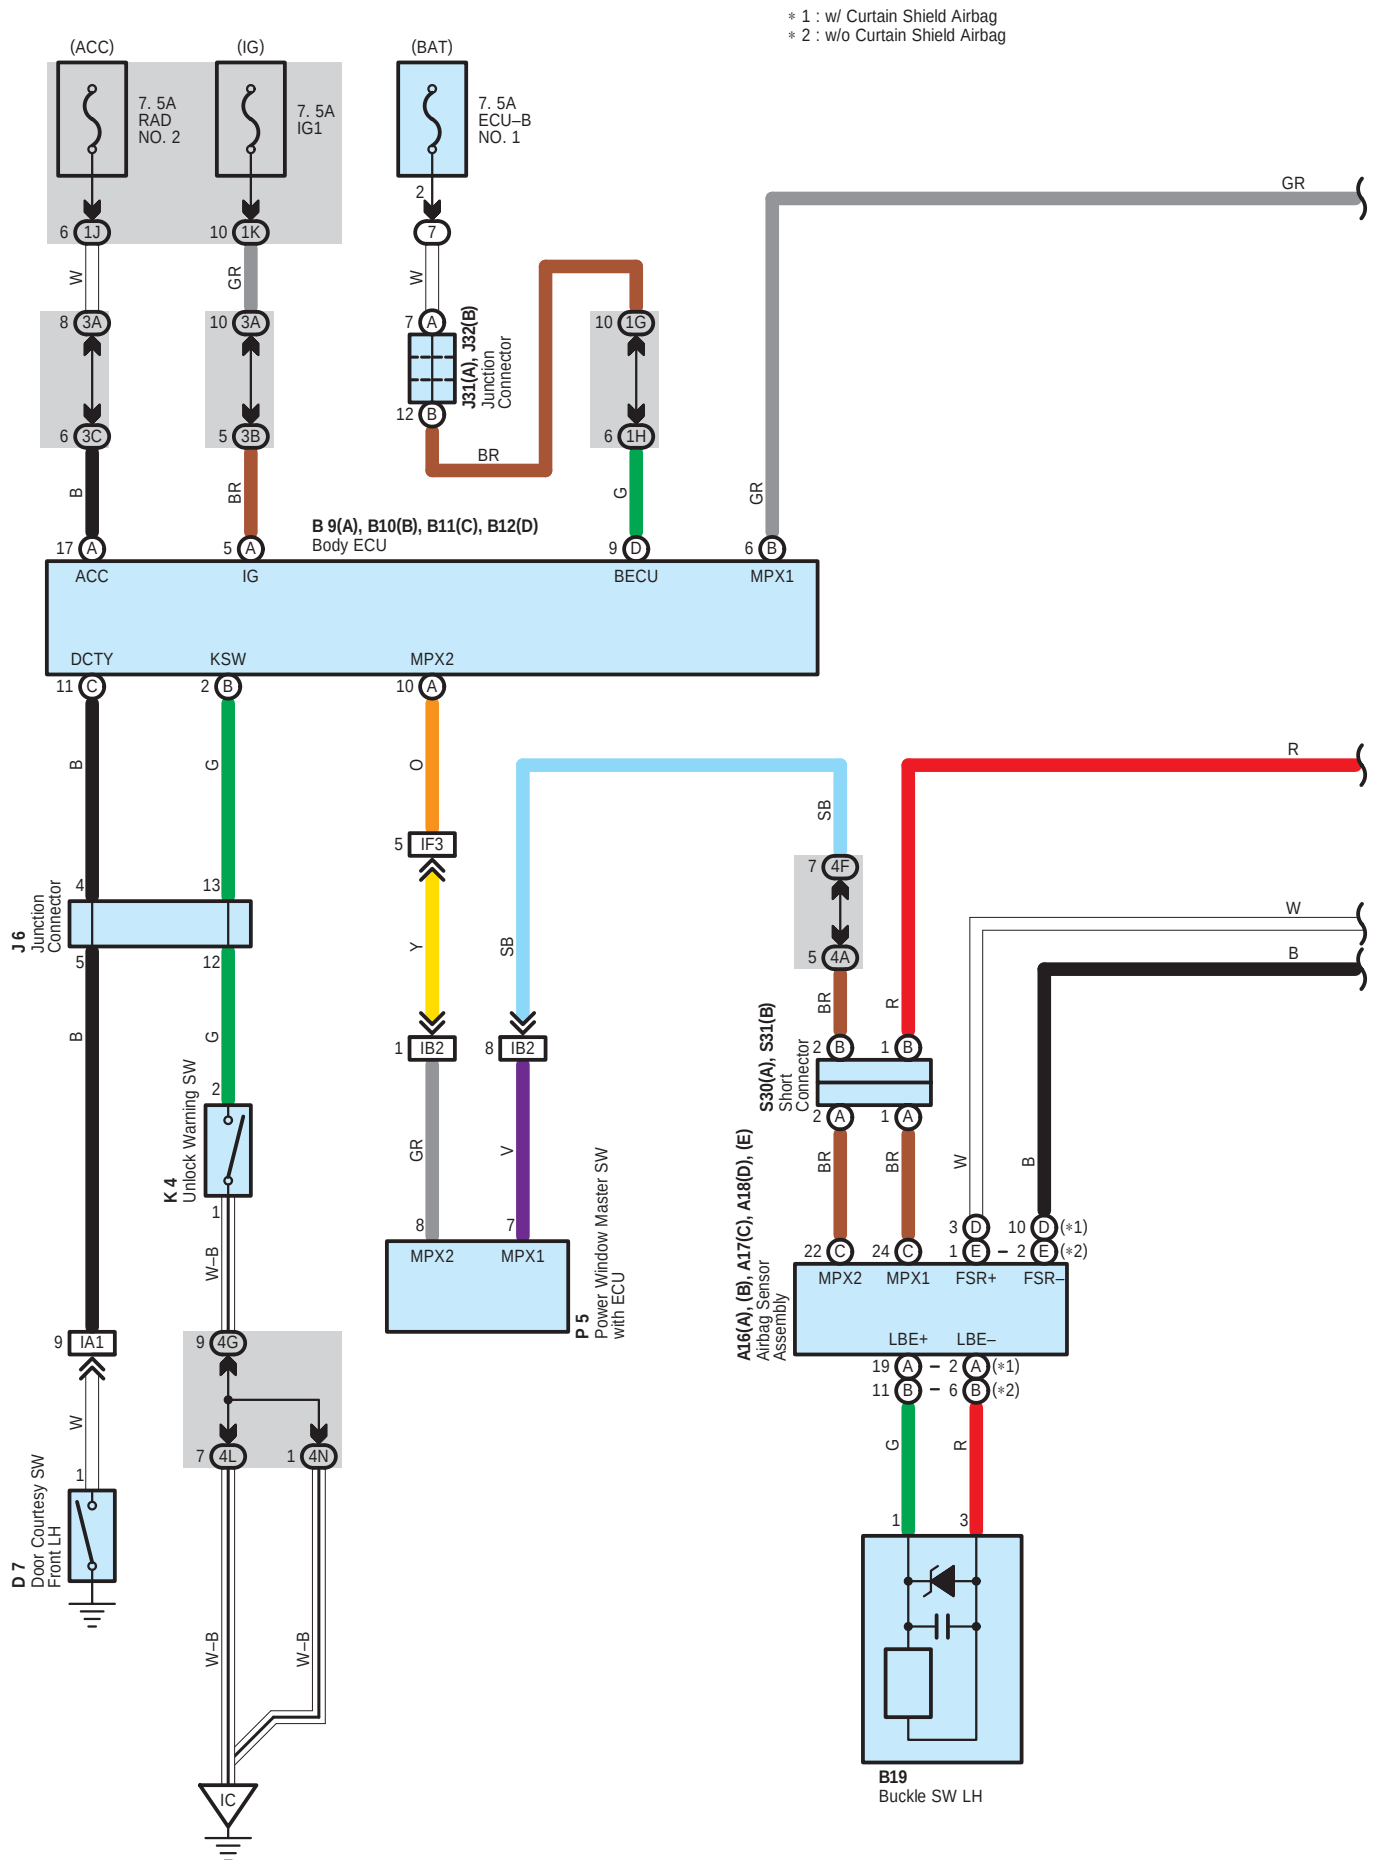

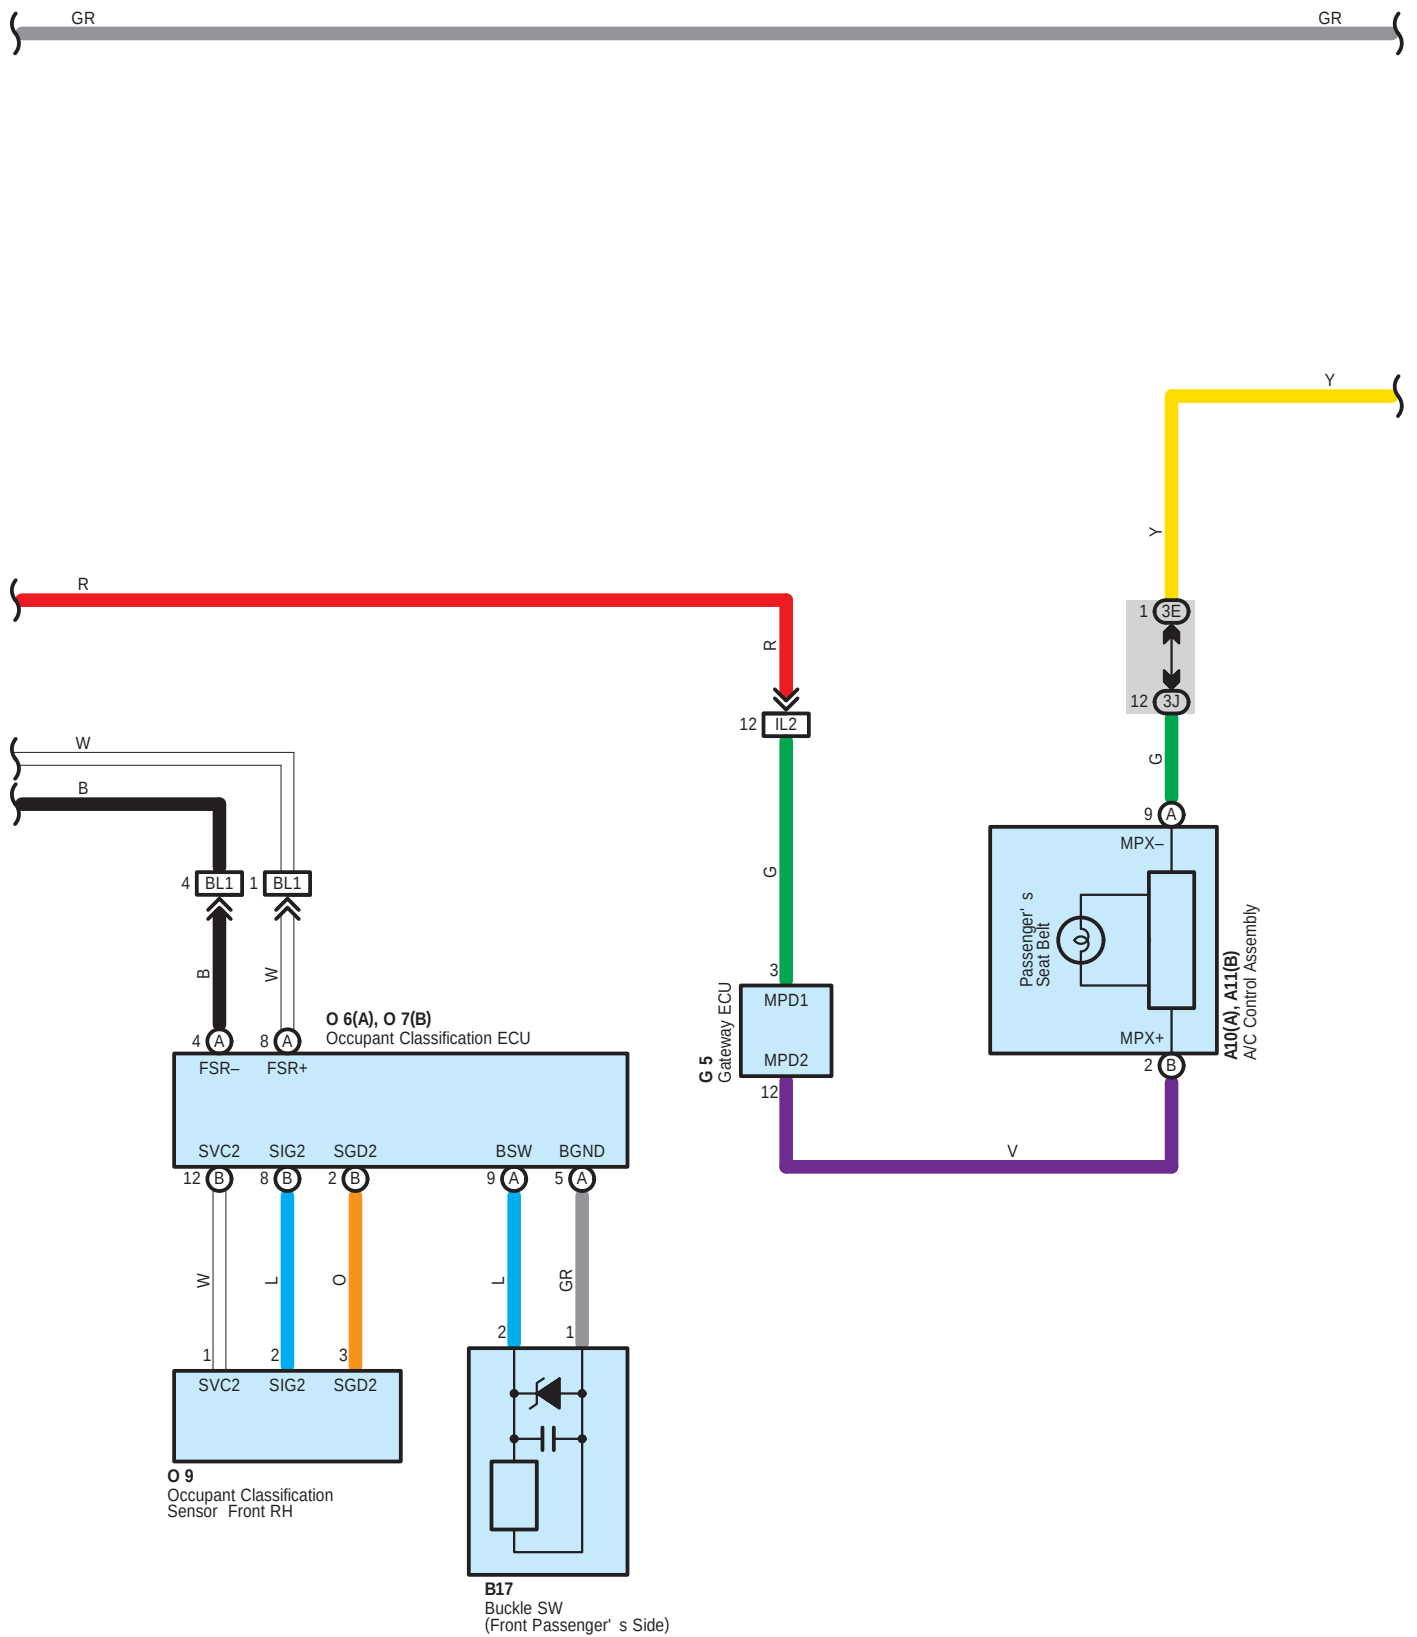

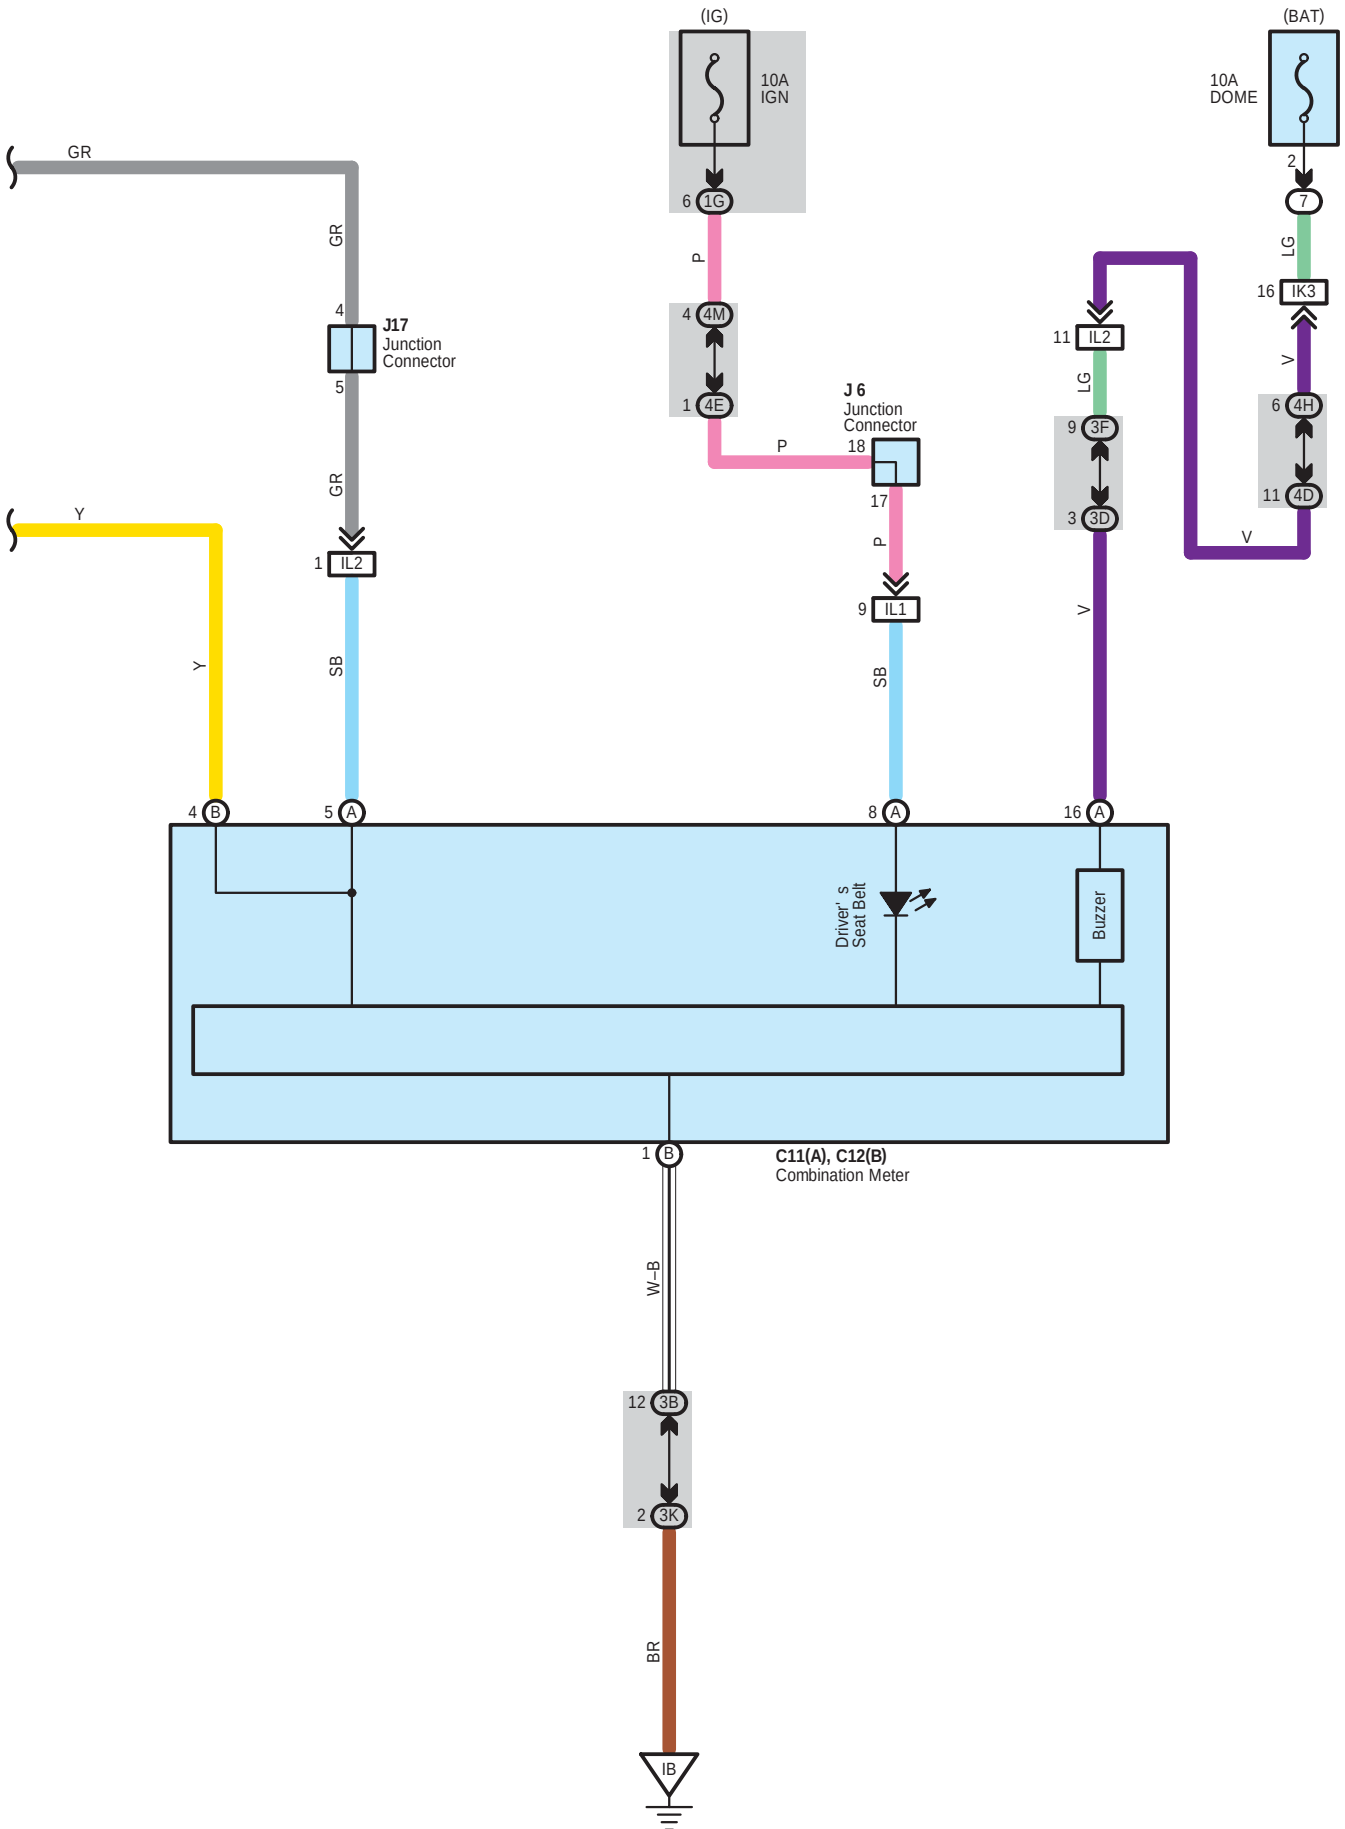

System Outline

1. Seat Belt Warning System

When the ignition SW is turned to the ON position, the signal is input to the body ECU. At this time, to judge whether or not the driver fastens the seat belt, the signal from the buckle SW LH is input to TERMINAL (A) 10 of the body ECU via multiplex communication system (Bean bus). If the driver does not fasten the seat belt, the seat belt warning light in the combination meter flashes and the alarm buzzer goes on, in response to the communication control of the body ECU etc.

Additionally, the sensor (Inside of buckle SW (Front passenger's side)) installed on the front passenger seat detects the passenger and determines whether or not the passenger fastens the seat belt.

If the passenger does not fasten the seat belt, the front passenger seat belt warning light is flashed.

2. Key Reminder System

If the driver door is opened with the ignition SW set at the ACC or OFF position and the ignition key remained inserted into the key cylinder (The unlock warning SW is on), the signal from the unlock warning SW is input to TERMINAL (B) 2 of the body ECU and the signal from the door courtesy SW LH is input to TERMINAL (C) 11 of body ECU. As a result, through communication control of the body ECU etc. the buzzer in the combination meter goes on to warn the driver that the ignition key is still inserted.

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
A10	A	44	B17		48 (*1)	J32	B	45
A11	B	44			49 (*2)	K4		45
A16	A	44	B19		48 (*1)	O6	A	48 (*1)
	B	44			49 (*2)			49 (*2)
A17	C	44	C11	A	44	O7	B	48 (*1)
A18	D	44	C12	B	44			49 (*2)
	E	44	D7		46	O9		48 (*1)
B9	A	44	G5		44			49 (*2)
B10	B	44	J6		45	P5		46
B11	C	44	J17		45	S30	A	45
B12	D	44	J31	A	45	S31	B	45

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
7	24	Fusible Link Block (Engine Compartment Left)

* 1 : w/ Power Seat * 2 : w/o Power Seat

Key Reminder and Seat Belt Warning



: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)	
1G	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)	
1H			
1J	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)	
1K			
3A	34	Instrument Panel Wire and J/B No.3 (Behind the Instrument Panel Center)	
3B			
3C			
3D			
3E			
3F			
3J	35		
3K			
4A	39		Cowl Wire and J/B No.4 (Right Side of Glove Box)
4D			
4E			
4F			
4G			
4H			
4L	38		
4M			
4N			



: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	54	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IB2	54	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IF3	54	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IK3	55	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IL1	55	Instrument Panel Wire and Cowl Wire (Right Cowl Side Panel)
IL2		
BL1	58 (*1)	Floor Wire and Front Seat RH Wire (Under the Front Passenger's Seat)
	59 (*2)	



: Ground Points

Code	See Page	Ground Points Location
IB	54	Right Instrument Panel Brace
IC	54	Right Cowl Side Panel

* 1 : w/ Power Seat * 2 : w/o Power Seat

