



Power Seat for Driver's Seat

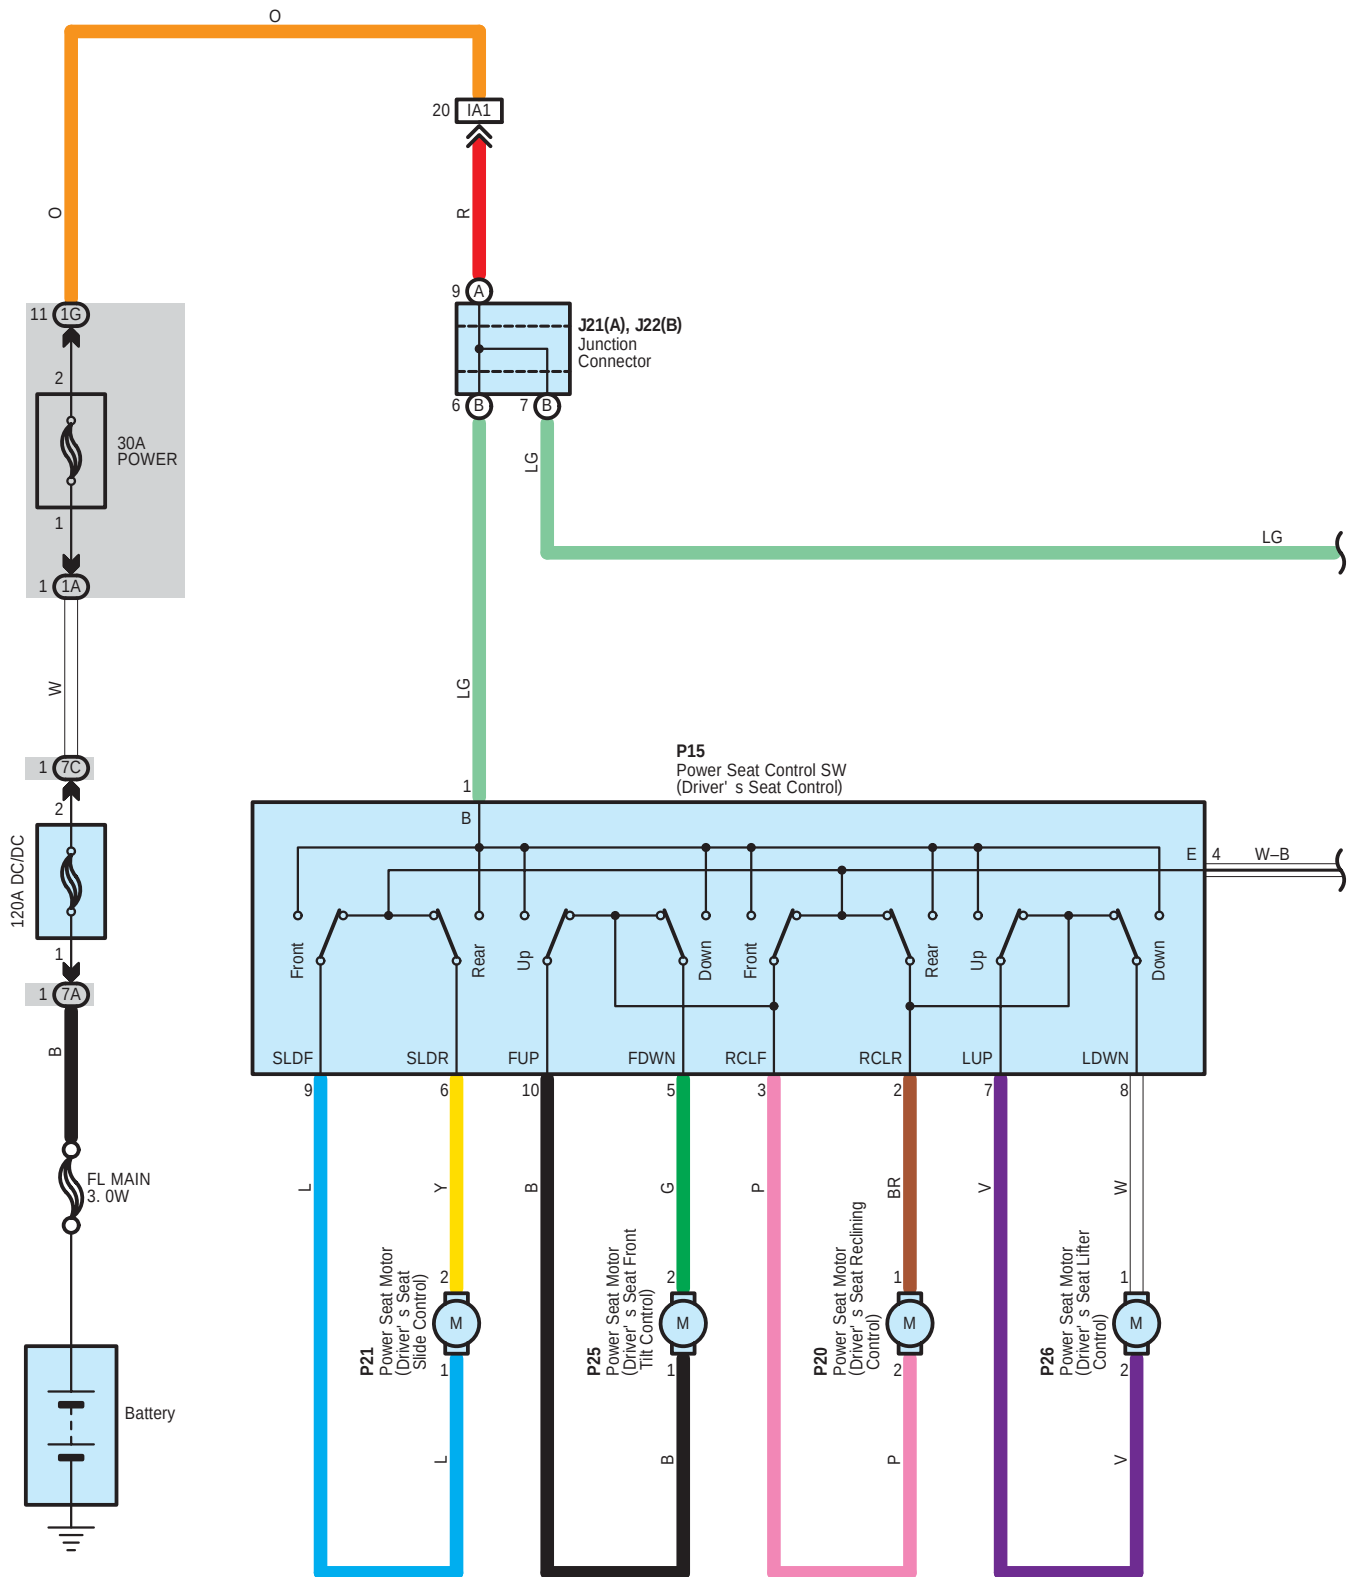

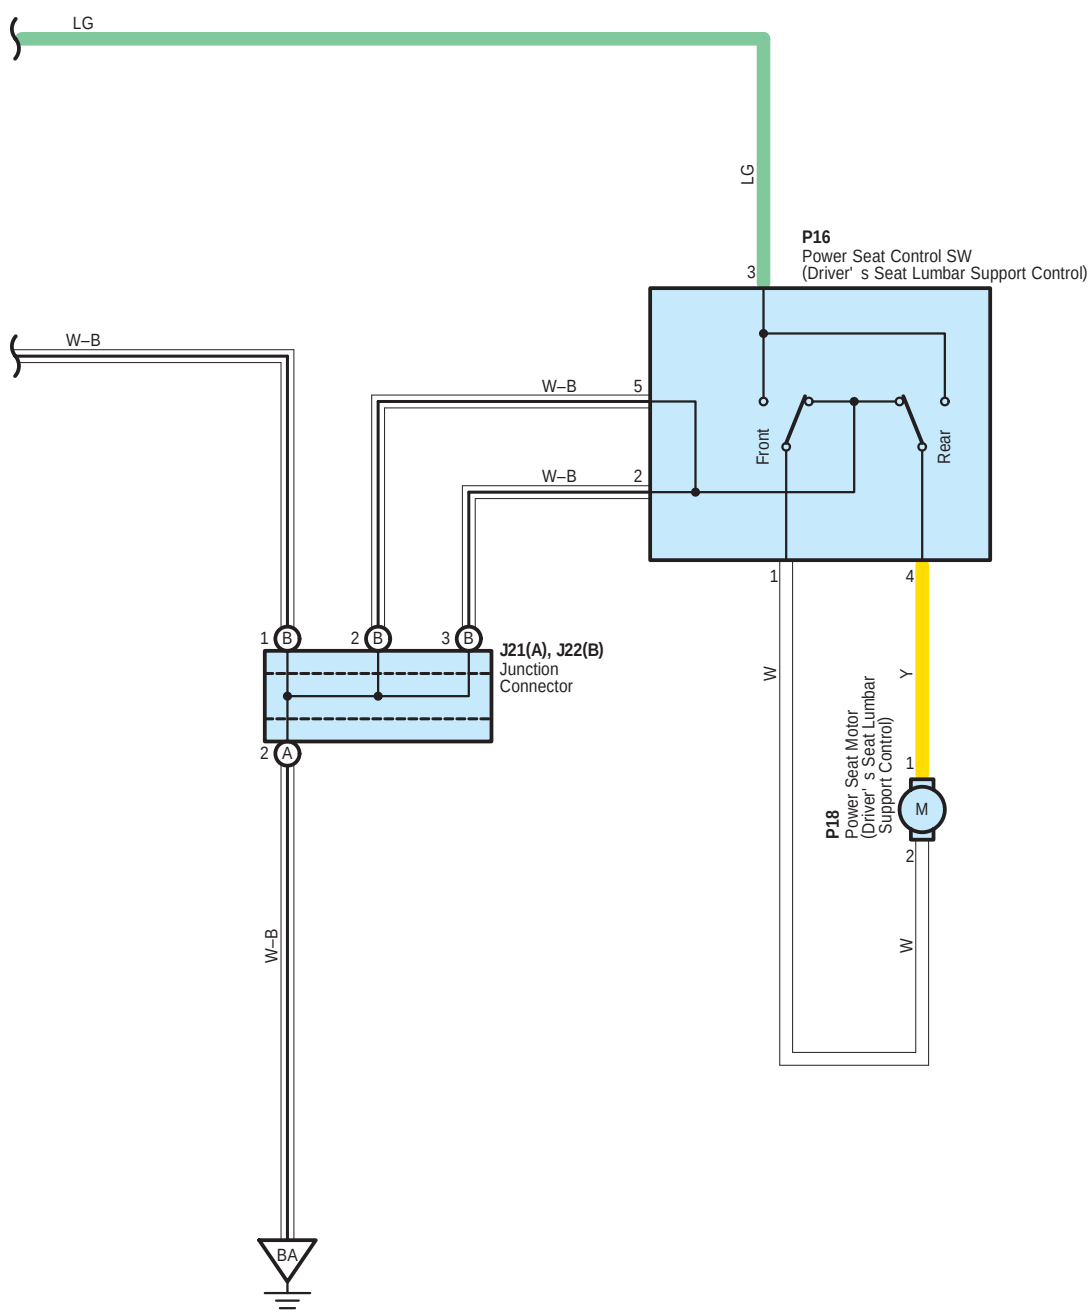

Power Seat for Driver's Seat

: Parts Location

Code		See Page	Code		See Page	Code		See Page
J21	A	48 (*1)	P16	48 (*1)		P21	48 (*1)	
J22	B	48 (*1)	P18	48 (*1)		P25	48 (*1)	
P15		48 (*1)	P20	48 (*1)		P26	48 (*1)	

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	31	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1G	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
7A	24	Engine Room Main Wire and Fusible Link Block (Engine Compartment Left)
7C		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	54	Cowl Wire and Floor No.2 Wire (Left Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
BA	56	Left Center Pillar

* 1 : w/ Power Seat * 2 : w/o Power Seat

