


# Power Outlet

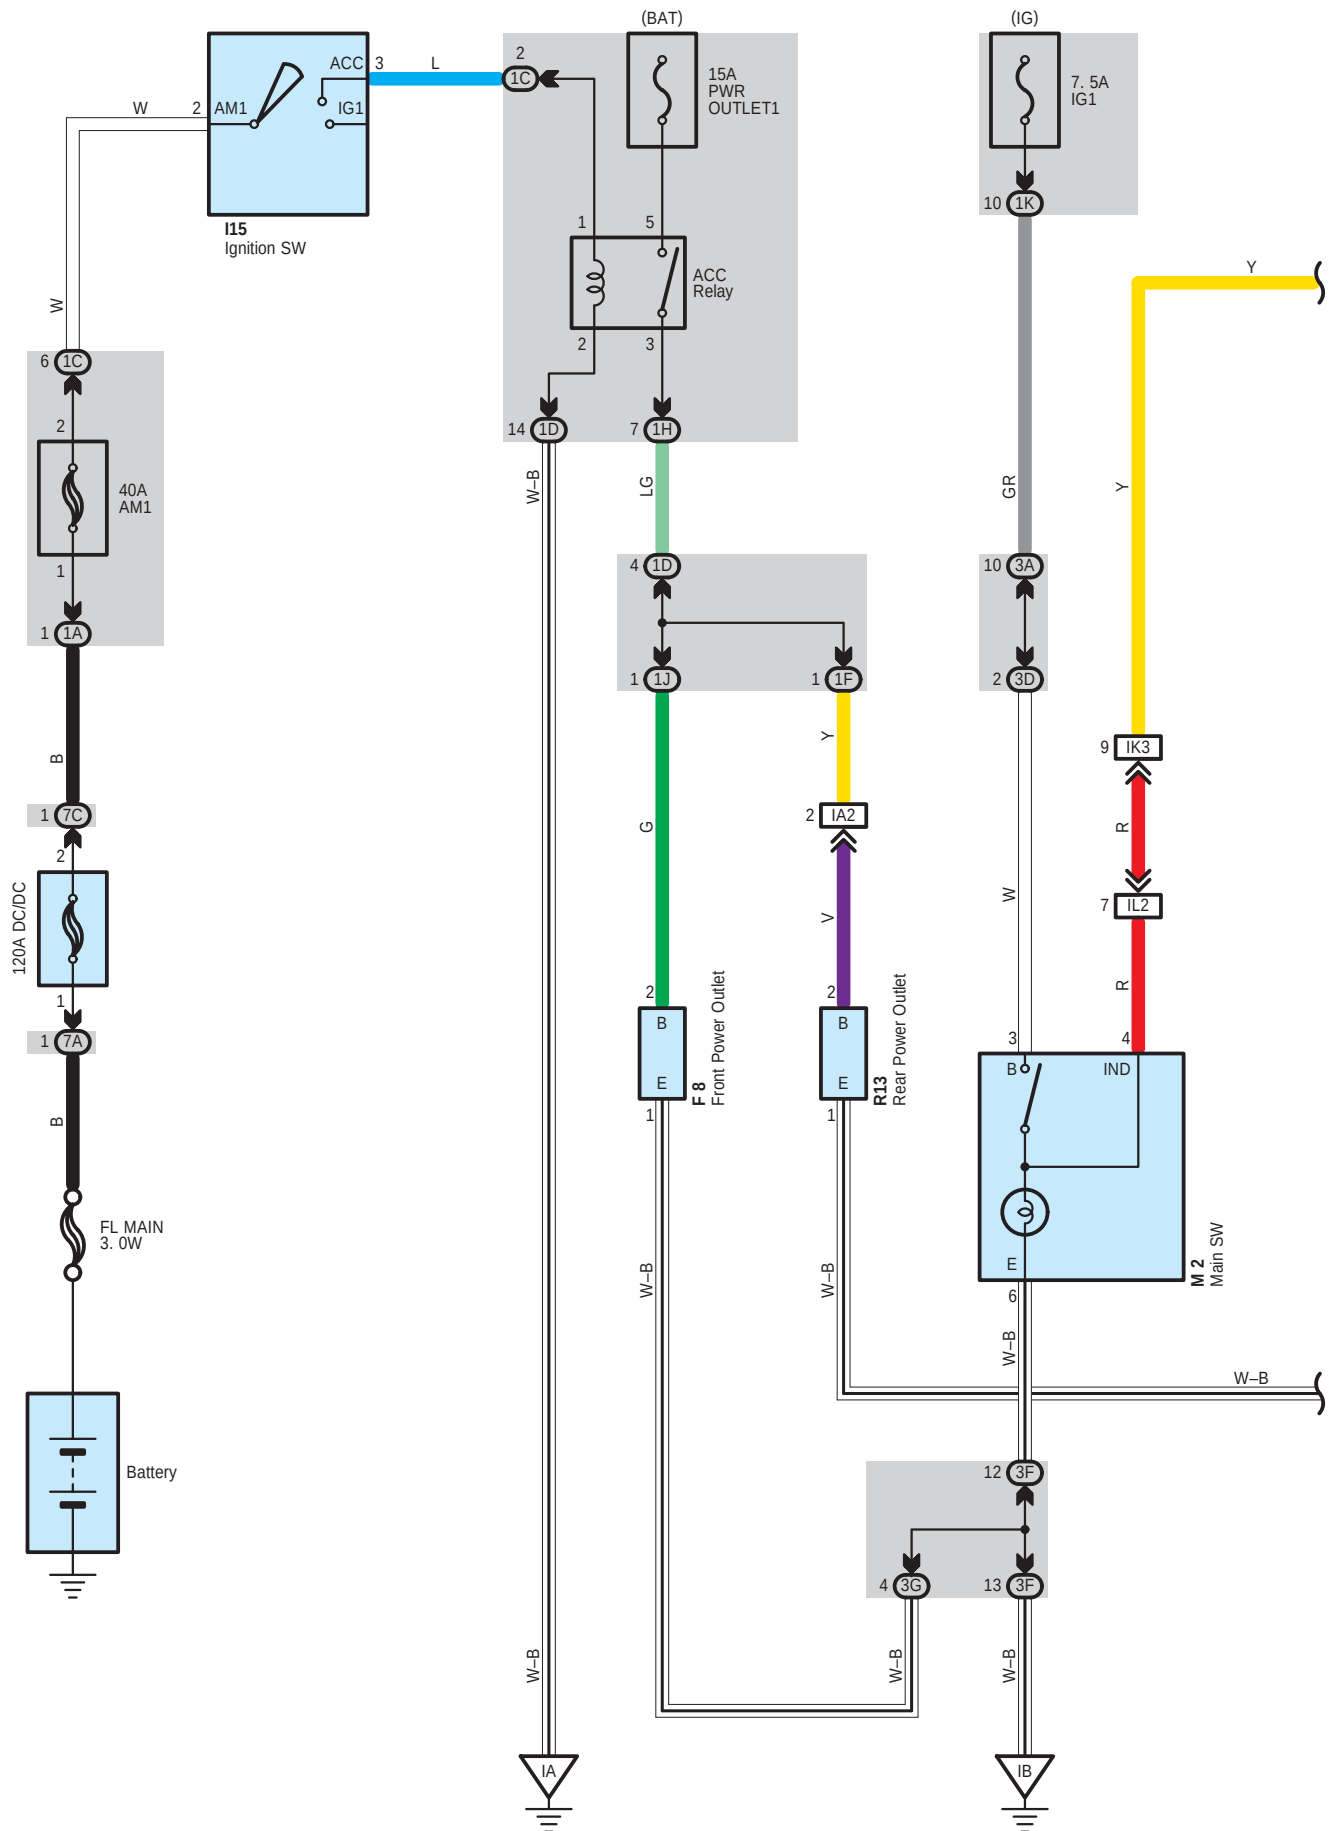



## Power Outlet

### : Parts Location

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| F8   | 44       | J12  | 46       | R13  | 47       |
| I15  | 44       | M2   | 45       | V15  | 47       |
| J2   | 43       | P23  | 46       |      |          |

### : Relay Blocks

| Code | See Page | Relay Blocks (Relay Block Location)          |
|------|----------|----------------------------------------------|
| 4    | 27       | R/B No.4 (Engine Compartment Left)           |
| 7    | 24       | Fusible Link Block (Engine Compartment Left) |

### : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location)                    |
|------|----------|-------------------------------------------------------------------------|
| 1A   | 31       | Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)     |
| 1C   | 31       | Cowl Wire and Instrument Panel J/B (Lower Finish Panel)                 |
| 1D   |          |                                                                         |
| 1F   |          |                                                                         |
| 1H   |          |                                                                         |
| 1J   | 30       | Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)     |
| 1K   |          |                                                                         |
| 3A   | 34       | Instrument Panel Wire and J/B No.3 (Behind the Instrument Panel Center) |
| 3D   |          |                                                                         |
| 3F   |          |                                                                         |
| 3G   | 35       |                                                                         |
| 7A   | 24       | Engine Room Main Wire and Fusible Link Block (Engine Compartment Left)  |
| 7C   |          |                                                                         |

### : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)  |
|------|----------|-------------------------------------------------------------|
| IA2  | 54       | Cowl Wire and Floor No.2 Wire (Left Kick Panel)             |
| IC5  | 54       | Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)  |
| IK3  | 55       | Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel) |
| IL2  | 55       | Instrument Panel Wire and Cowl Wire (Right Cowl Side Panel) |
| IS1  | 55       | Floor No.2 Wire and Cowl Wire (Left Kick Panel)             |

### : Ground Points

| Code | See Page | Ground Points Location         |
|------|----------|--------------------------------|
| EH   | 52       | Under the Left Headlight       |
| IA   | 54       | Left Cowl Side Panel           |
| IB   | 54       | Right Instrument Panel Brace   |
| BC   | 56       | Left Side of Rear Cross Member |

