


Garage Door Opener

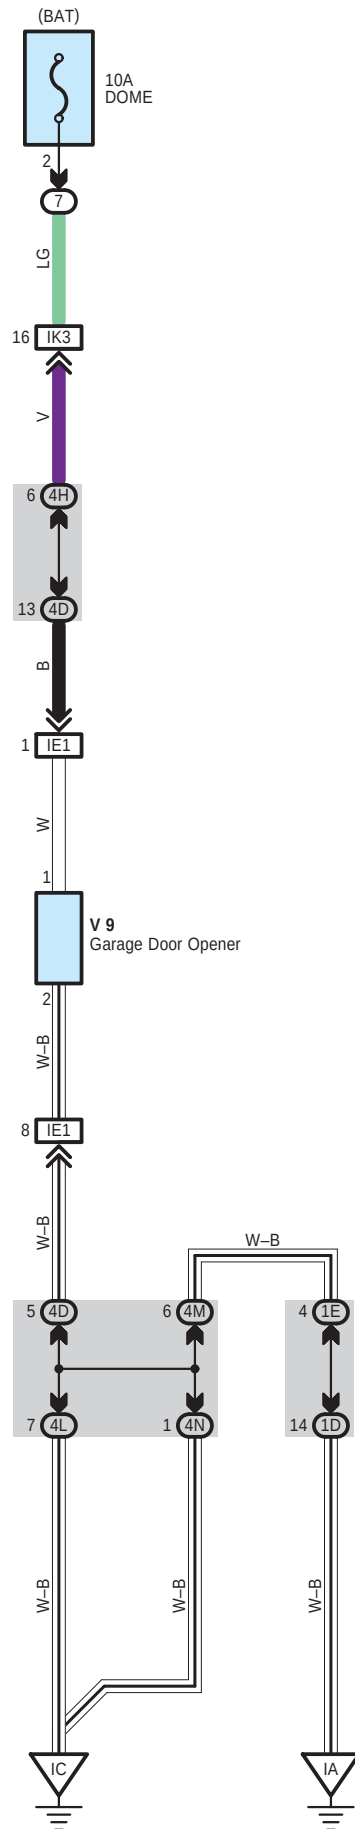

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
V9	47				

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
7	24	Fusible Link Block (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
4D	39	Cowl Wire and J/B No.4 (Right Side of Glove Box)
4H		
4L	38	
4M		
4N		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	54	Roof Wire and Cowl Wire (Near the Bottom of Left Front Pillar)
IK3	55	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)

 : Ground Points

Code	See Page	Ground Points Location
IA	54	Left Cowl Side Panel
IC	54	Right Cowl Side Panel