


Rear Window Defogger

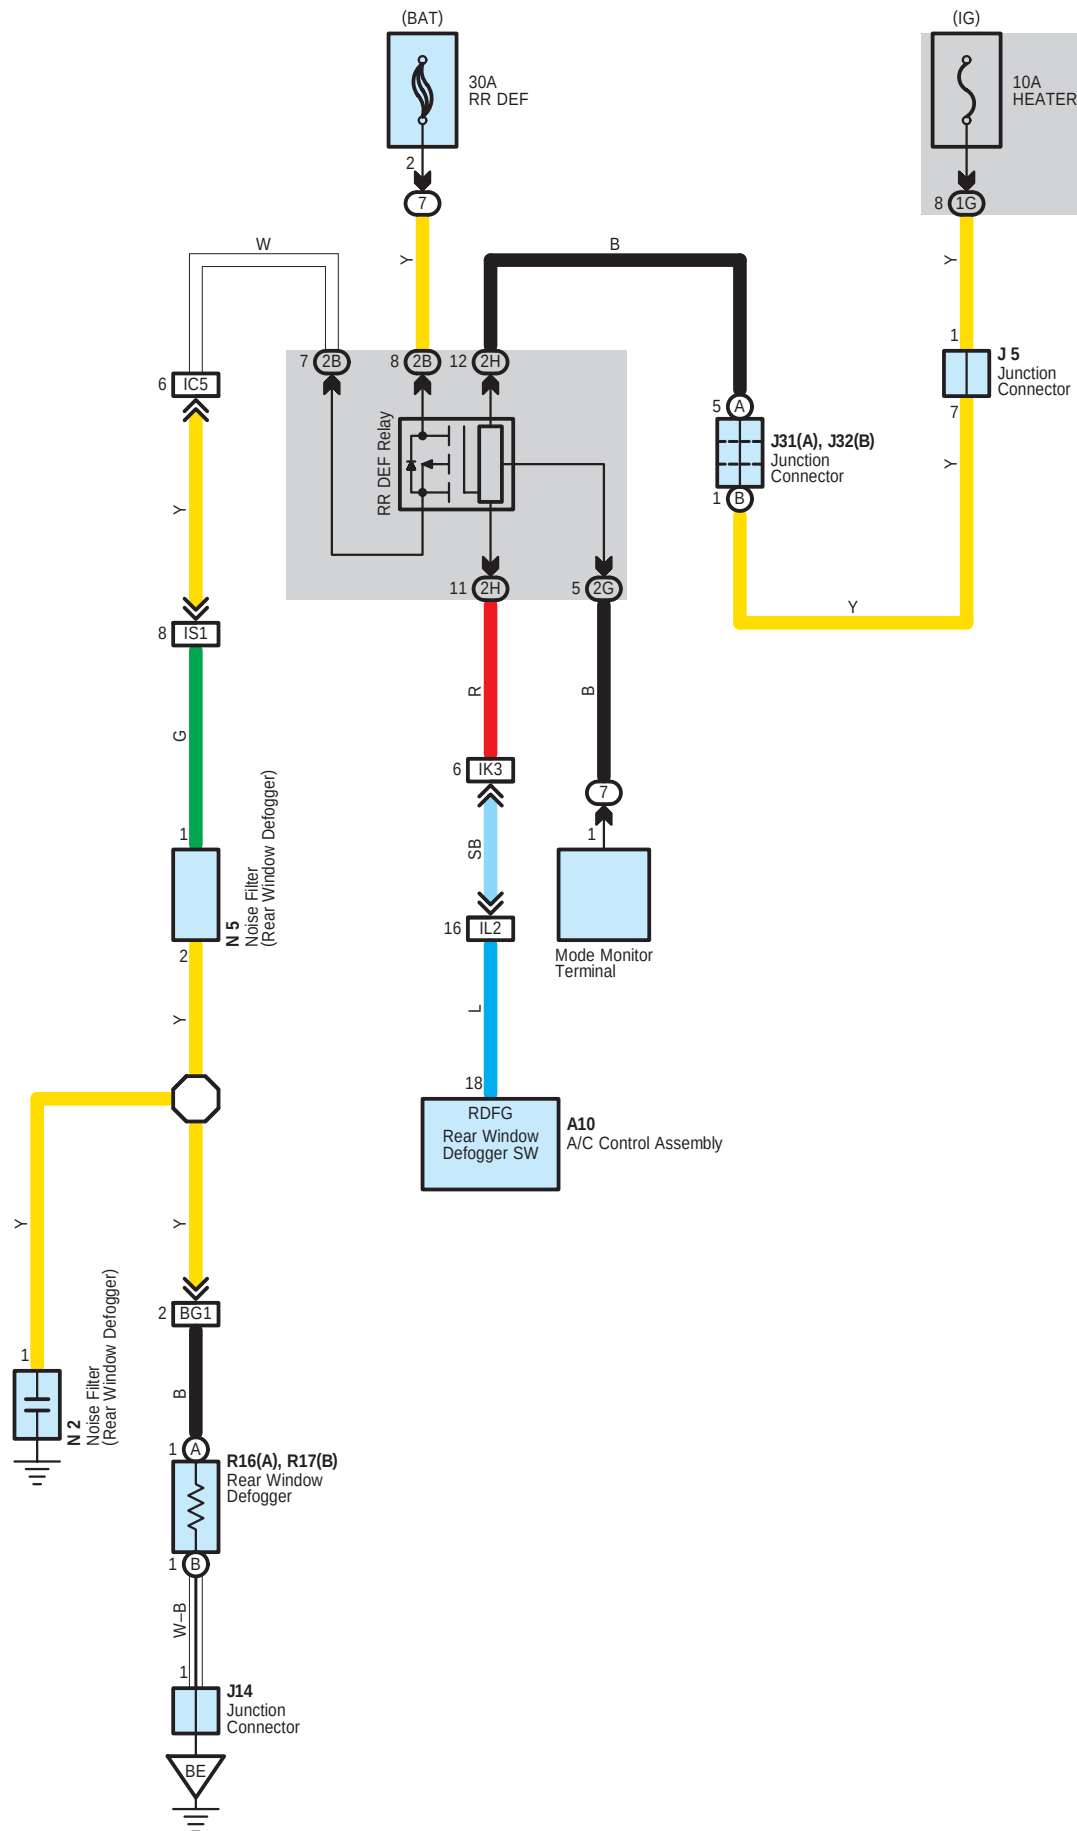

 : Parts Location

Code	See Page	Code		See Page	Code		See Page
A10	44	J31	A	45	N5		46
J5	45	J32	B	45	R16	A	47
J14	46	N2		46	R17	B	47

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
7	24	Fusible Link Block (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
2B	28	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2G		
2H		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC5	54	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IK3	55	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IL2	55	Instrument Panel Wire and Cowl Wire (Right Cowl Side Panel)
IS1	55	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
BG1	56	Back Door No.1 Wire and Floor No.2 Wire (Rear Left of the Roof)

 : Ground Points

Code	See Page	Ground Points Location
BE	56	Left Side of Back Door