



 : Parts Location

Code		See Page	Code		See Page	Code		See Page
C11	A	44	F16	B	46	J6	45	
C12	B	44	F17		46	J39	46	
F15		44	H12	A	44			
F16	A	46	H13	B	44			

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
7	24	Fusible Link Block (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1G		
3B	34	Instrument Panel Wire and J/B No.3 (Behind the Instrument Panel Center)
3D		
3F		
3K	35	
4D	39	Cowl Wire and J/B No.4 (Right Side of Glove Box)
4E		
4H		
4J	38	
4L		
4M		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF3	54	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IK3	55	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IL1	55	Instrument Panel Wire and Cowl Wire (Right Cowl Side Panel)
IL2		
IT1	55	Floor No.2 Wire and Cowl Wire (Under the Shift Lever)

 : Ground Points

Code	See Page	Ground Points Location
IB	54	Right Instrument Panel Brace
IC	54	Right Cowl Side Panel
BC	56	Left Side of Rear Cross Member