


Seat Heater

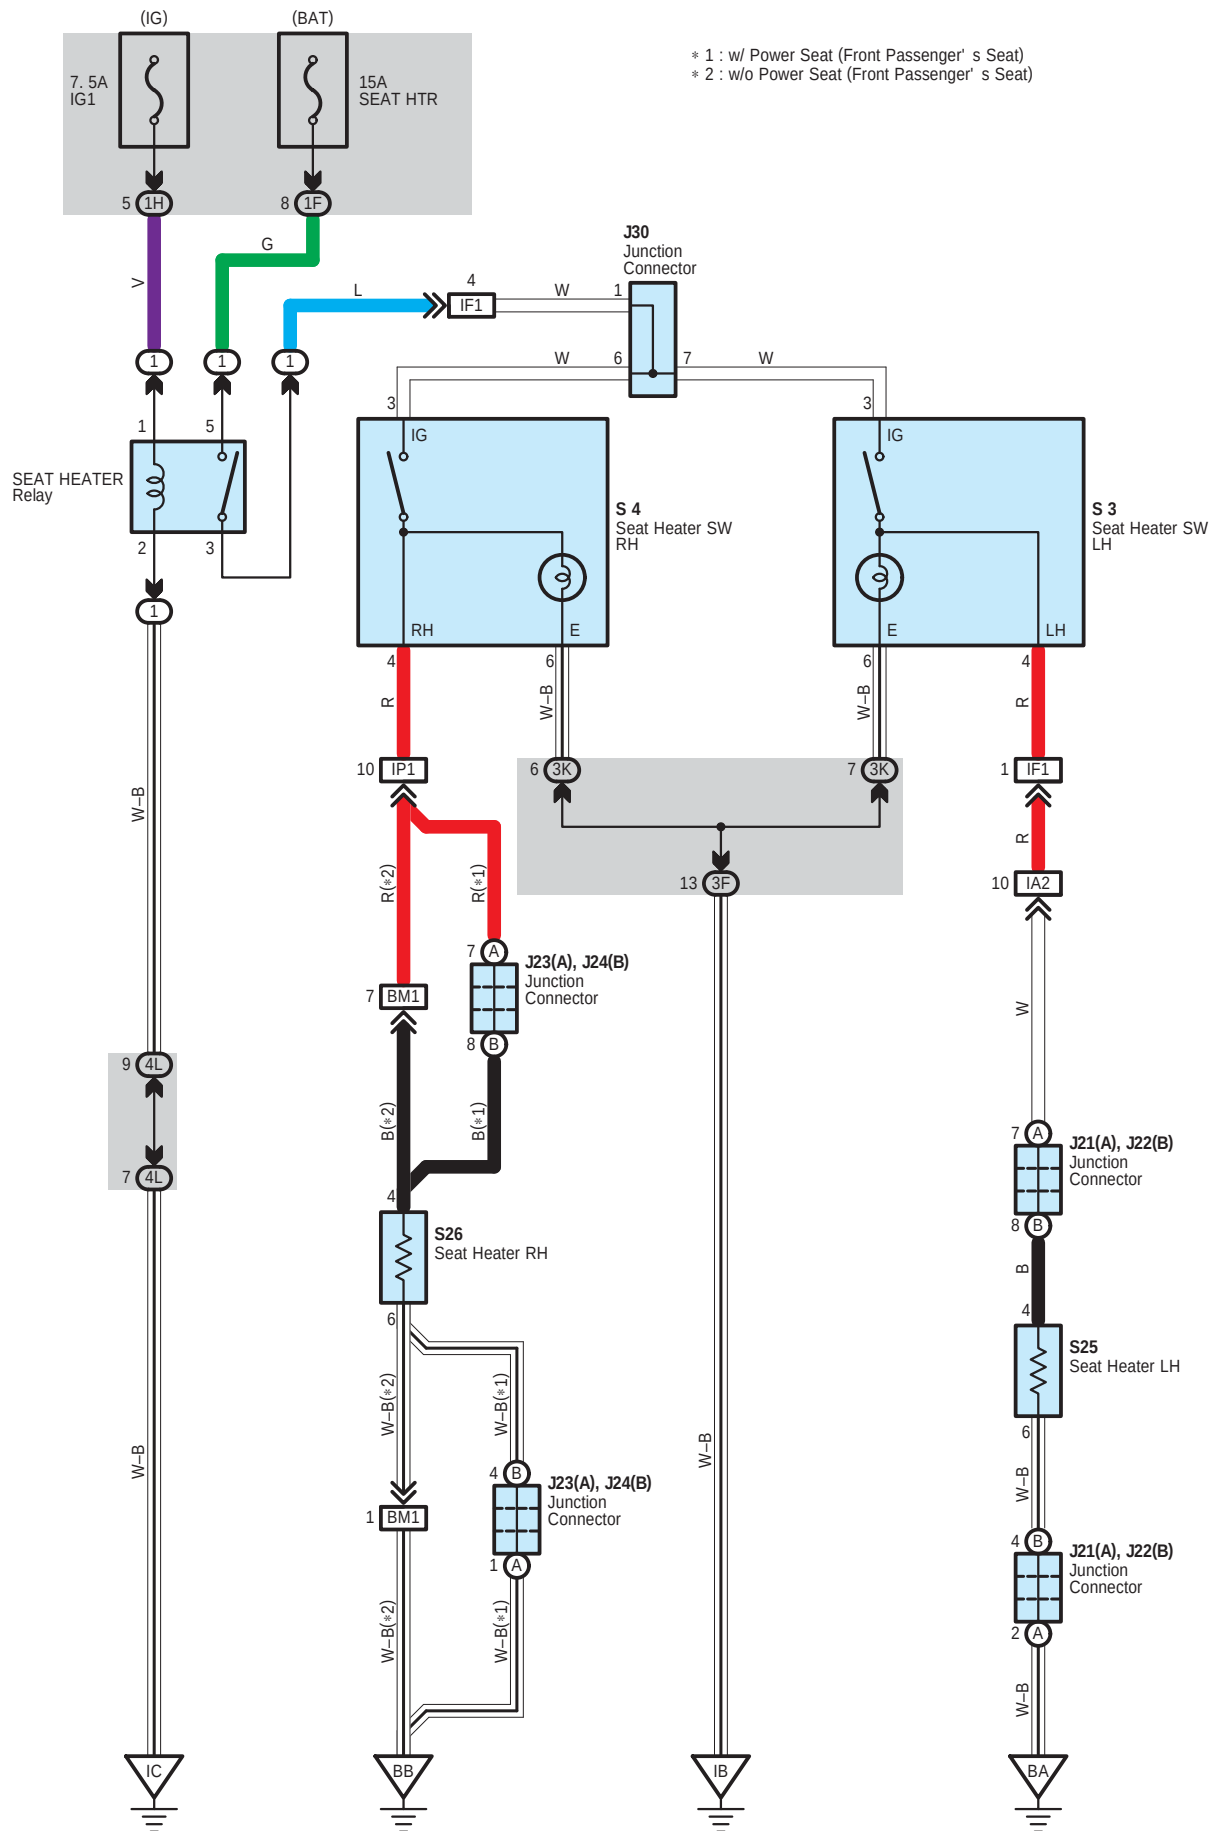

 : Parts Location

Code		See Page	Code	See Page	Code	See Page
J21	A	48 (*1)	J30	45	S26	48 (*1)
J22	B	48 (*1)	S3	45		49 (*2)
J23	A	48 (*1)	S4	45		
J24	B	48 (*1)	S25	48 (*1)		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	26	R/B No.1 (Lower Finish Panel)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1H		
3F	34	Instrument Panel Wire and J/B No.3 (Behind the Instrument Panel Center)
3K	35	
4L	38	Cowl Wire and J/B No.4 (Right Side of Glove Box)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	54	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IF1	54	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IP1	55	Instrument Panel Wire and Floor Wire (Right Cowl Side Panel)
BM1	59 (*2)	Floor Wire and Front Seat RH Wire (Under the Front Passenger's Seat)

 : Ground Points

Code	See Page	Ground Points Location
IB	54	Right Instrument Panel Brace
IC	54	Right Cowl Side Panel
BA	56	Left Center Pillar
BB	56	Right Center Pillar

* 1 : w/ Power Seat * 2 : w/o Power Seat