




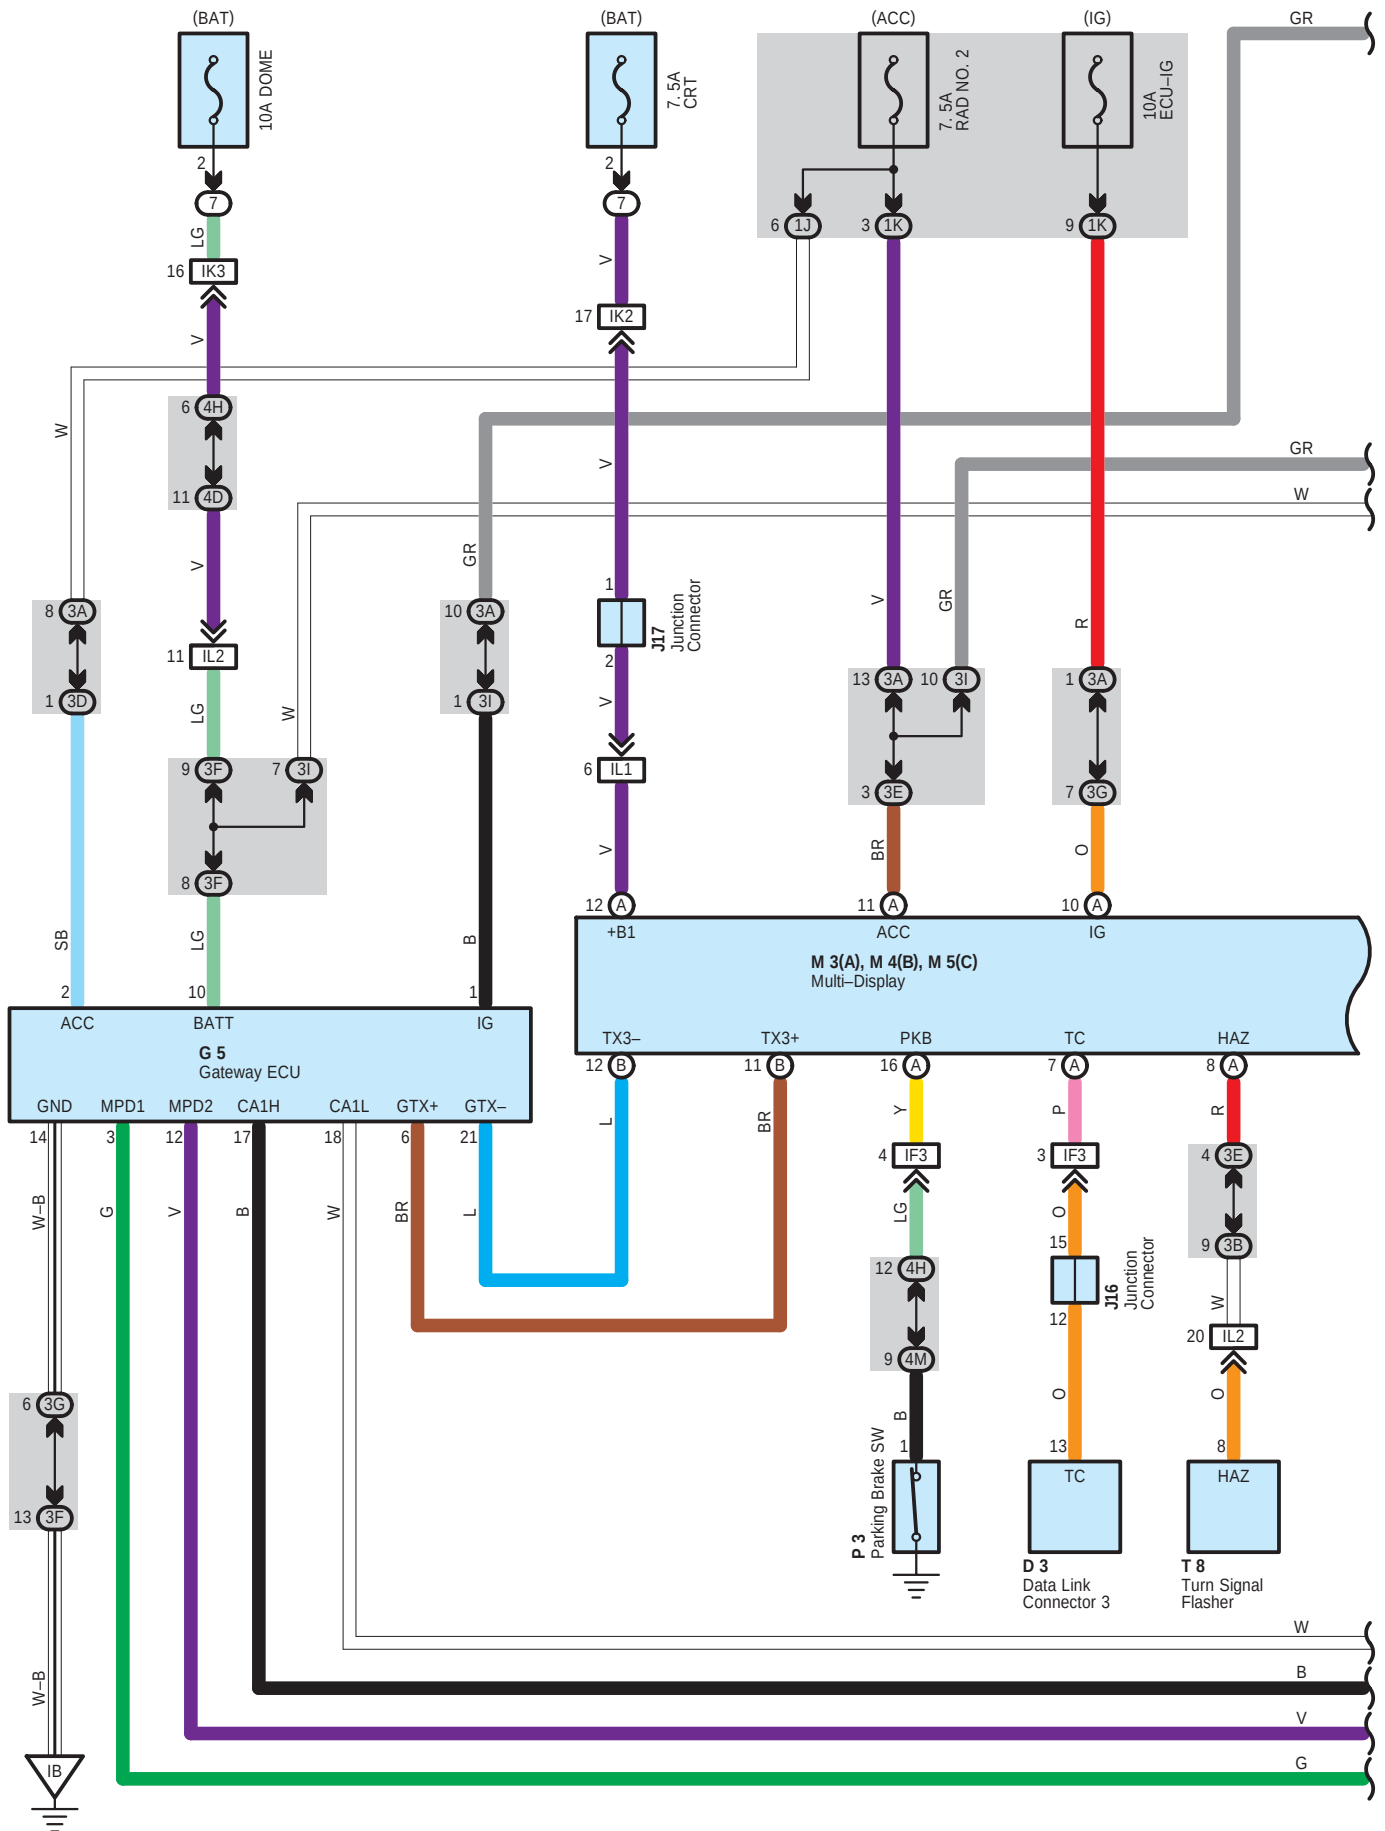

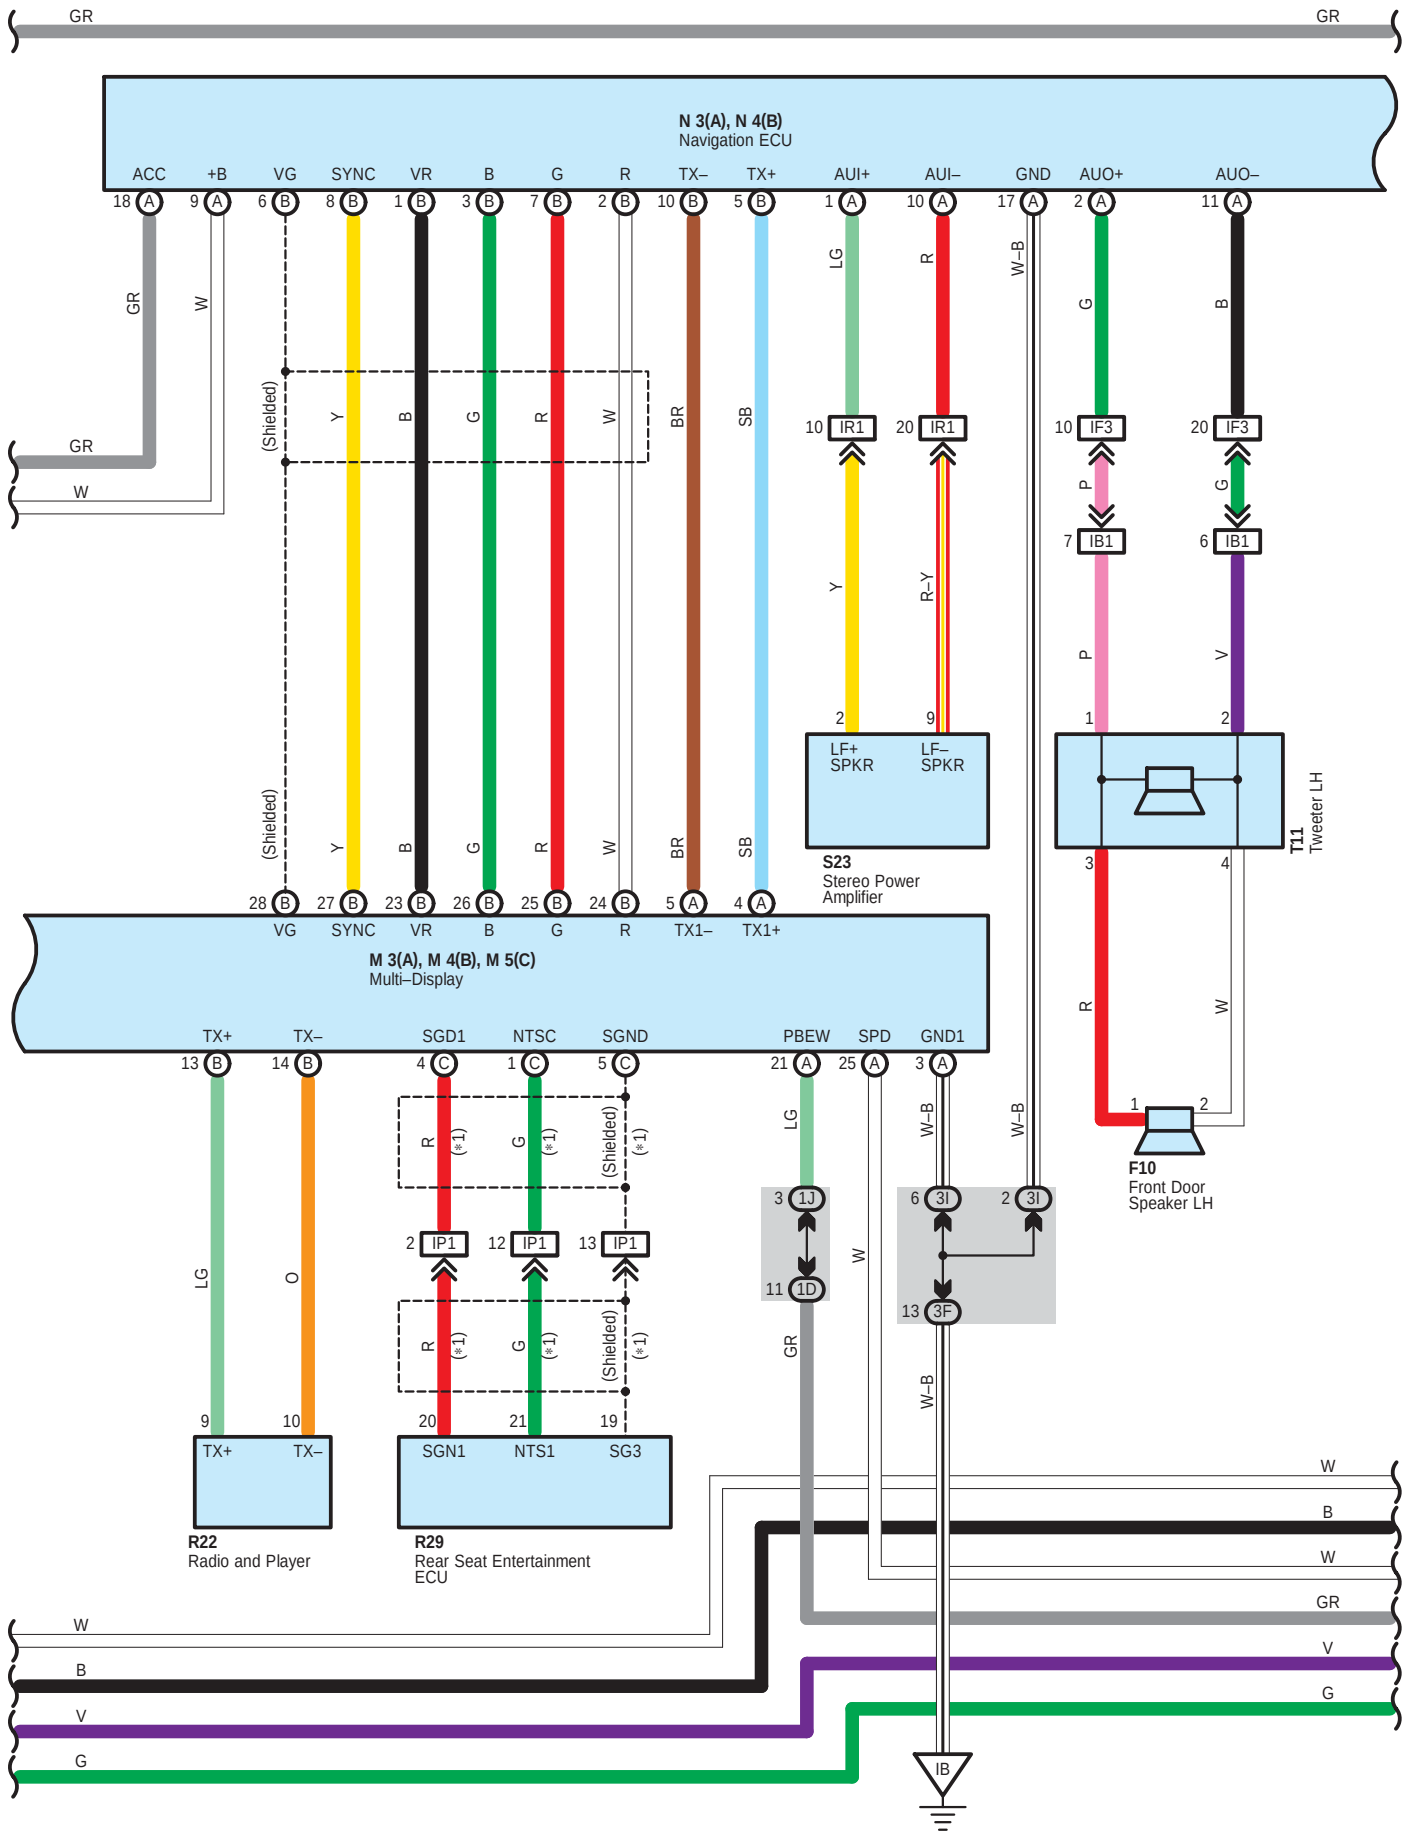

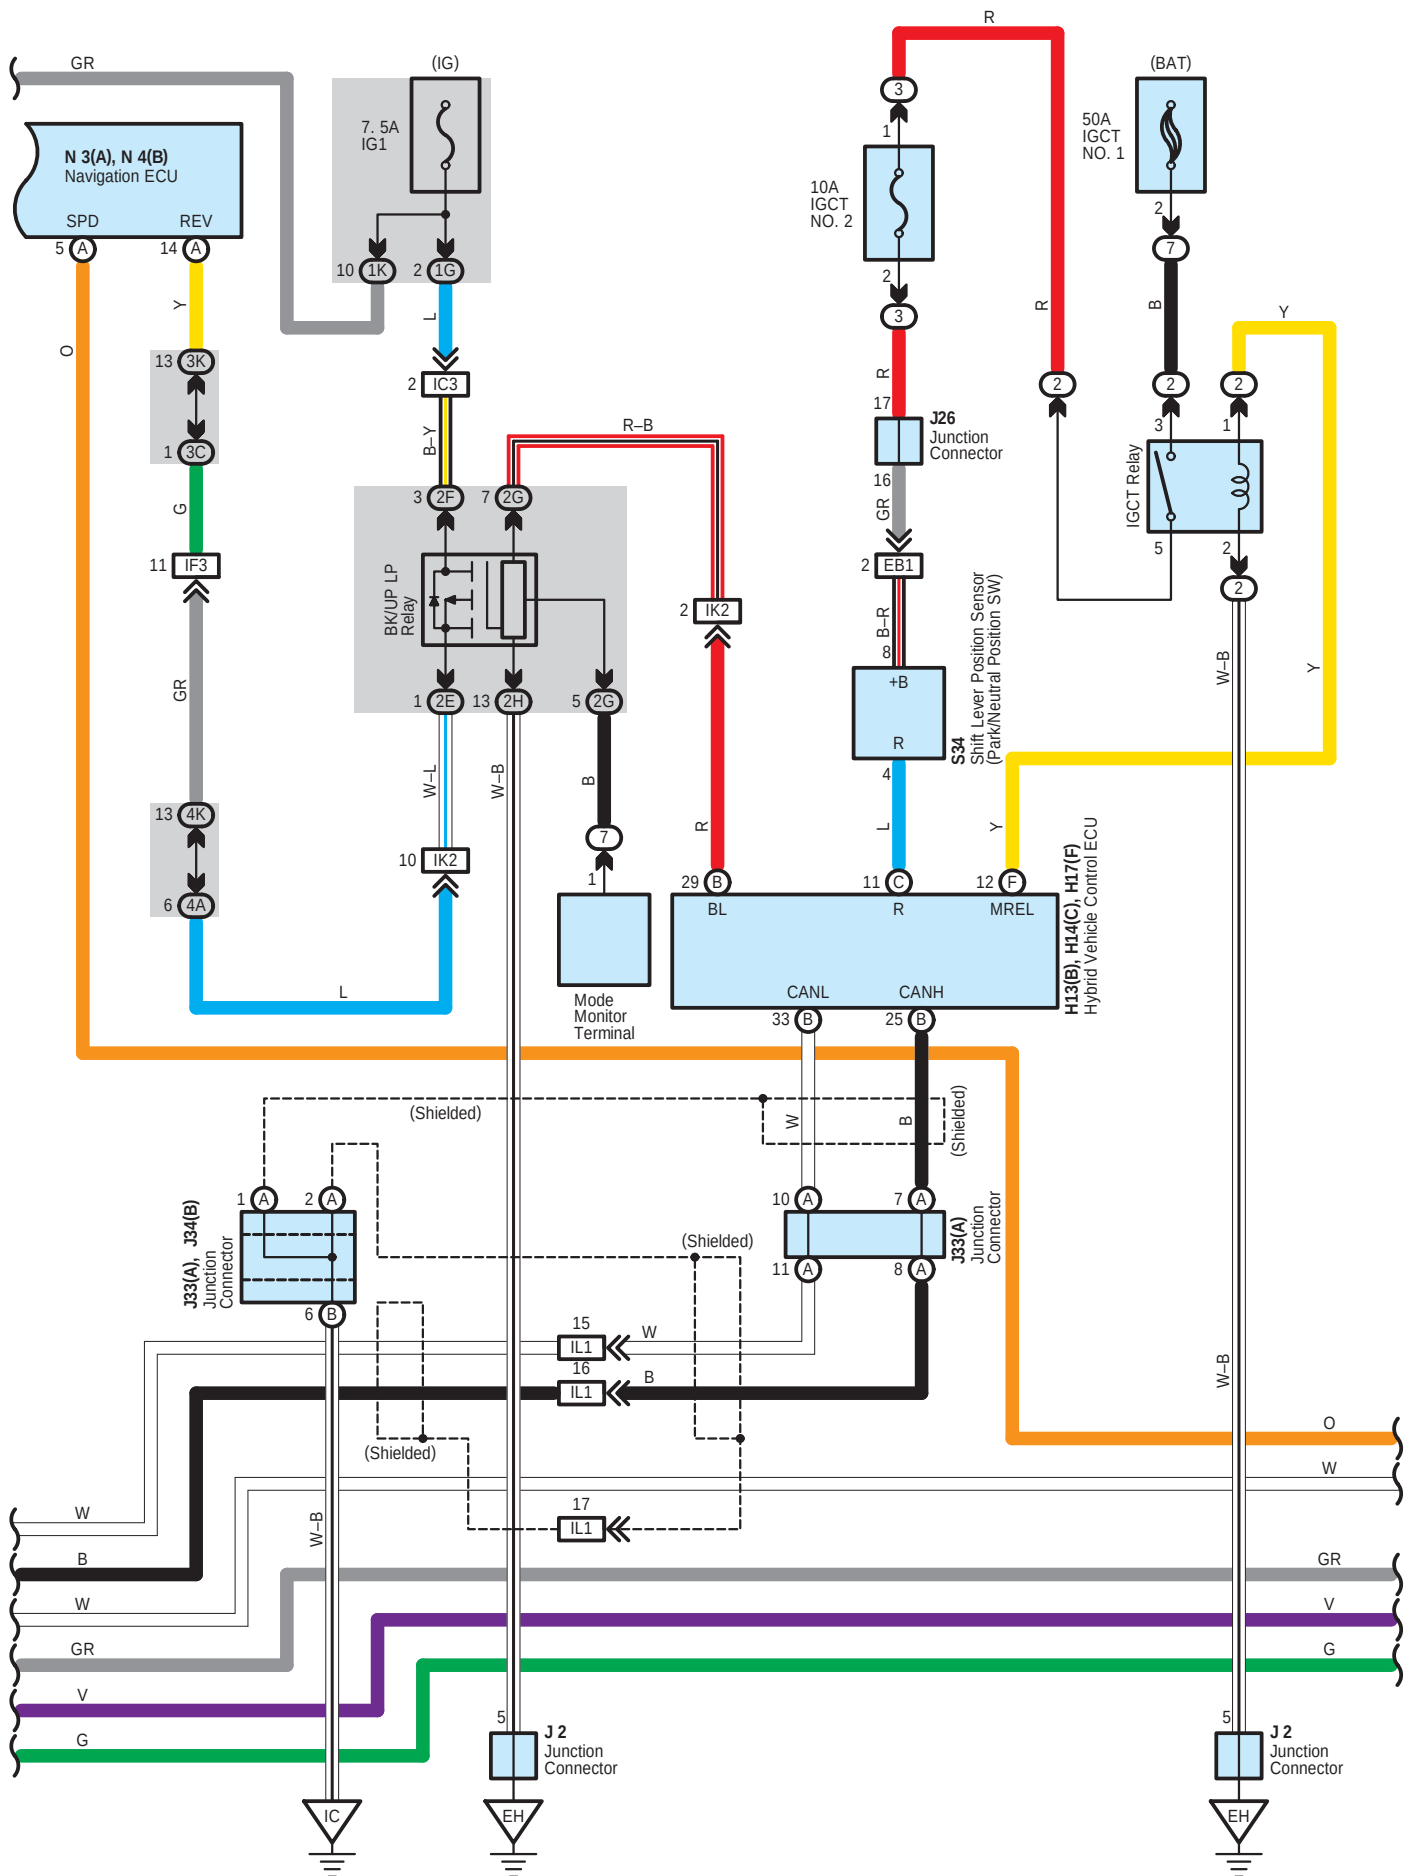

Navigation System

: Parts Location

Code			See Page			Code			See Page			Code			See Page		
A10	A	44				H17	F	44				N4	B	45			
A11	B	44				J2		43				P3		45			
A17		44				J6		45				P5		46			
B9	A	44				J16		45				R22		45			
B10	B	44				J17		45				R29		47			
C11	A	44				J26		45				S23		47			
C12	B	44				J33	A	45				S30	A	45			
D3		44				J34	B	45				S31	B	45			
F10		46				M3	A	45				S34		43			
G5		44				M4	B	45				S38		45			
H13	B	44				M5	C	45				T8		45			
H14	C	44				N3	A	45				T11		47			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	25	R/B No.2 (Engine Compartment Left)
3	26	R/B No.3 (Engine Compartment Left)
7	24	Fusible Link Block (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1G		
1J	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1K		
2E	28	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2F		
2G		
2H		
3A	34	Instrument Panel Wire and J/B No.3 (Behind the Instrument Panel Center)
3B		
3C		
3D		
3E		
3F		
3G	35	
3I		
3J		
3K		
4A	39	Cowl Wire and J/B No.4 (Right Side of Glove Box)
4D		
4E		
4F		
4H		
4K	38	
4M		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	52	Engine Wire and Engine Room Main Wire (Front Side of Engine Room R/B No.4)
IB1	54	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IB2		
IC3	54	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IF3	54	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IK2	55	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IK3		
IL1	55	Instrument Panel Wire and Cowl Wire (Right Cowl Side Panel)
IL2		
IP1	55	Instrument Panel Wire and Floor Wire (Right Cowl Side Panel)
IR1	55	Instrument Panel Wire and Floor Wire (Under the Shift Lever)

 : Ground Points

Code	See Page	Ground Points Location
EH	52	Under the Left Headlight
IB	54	Right Instrument Panel Brace
IC	54	Right Cowl Side Panel