


Audio System with 6 Speaker

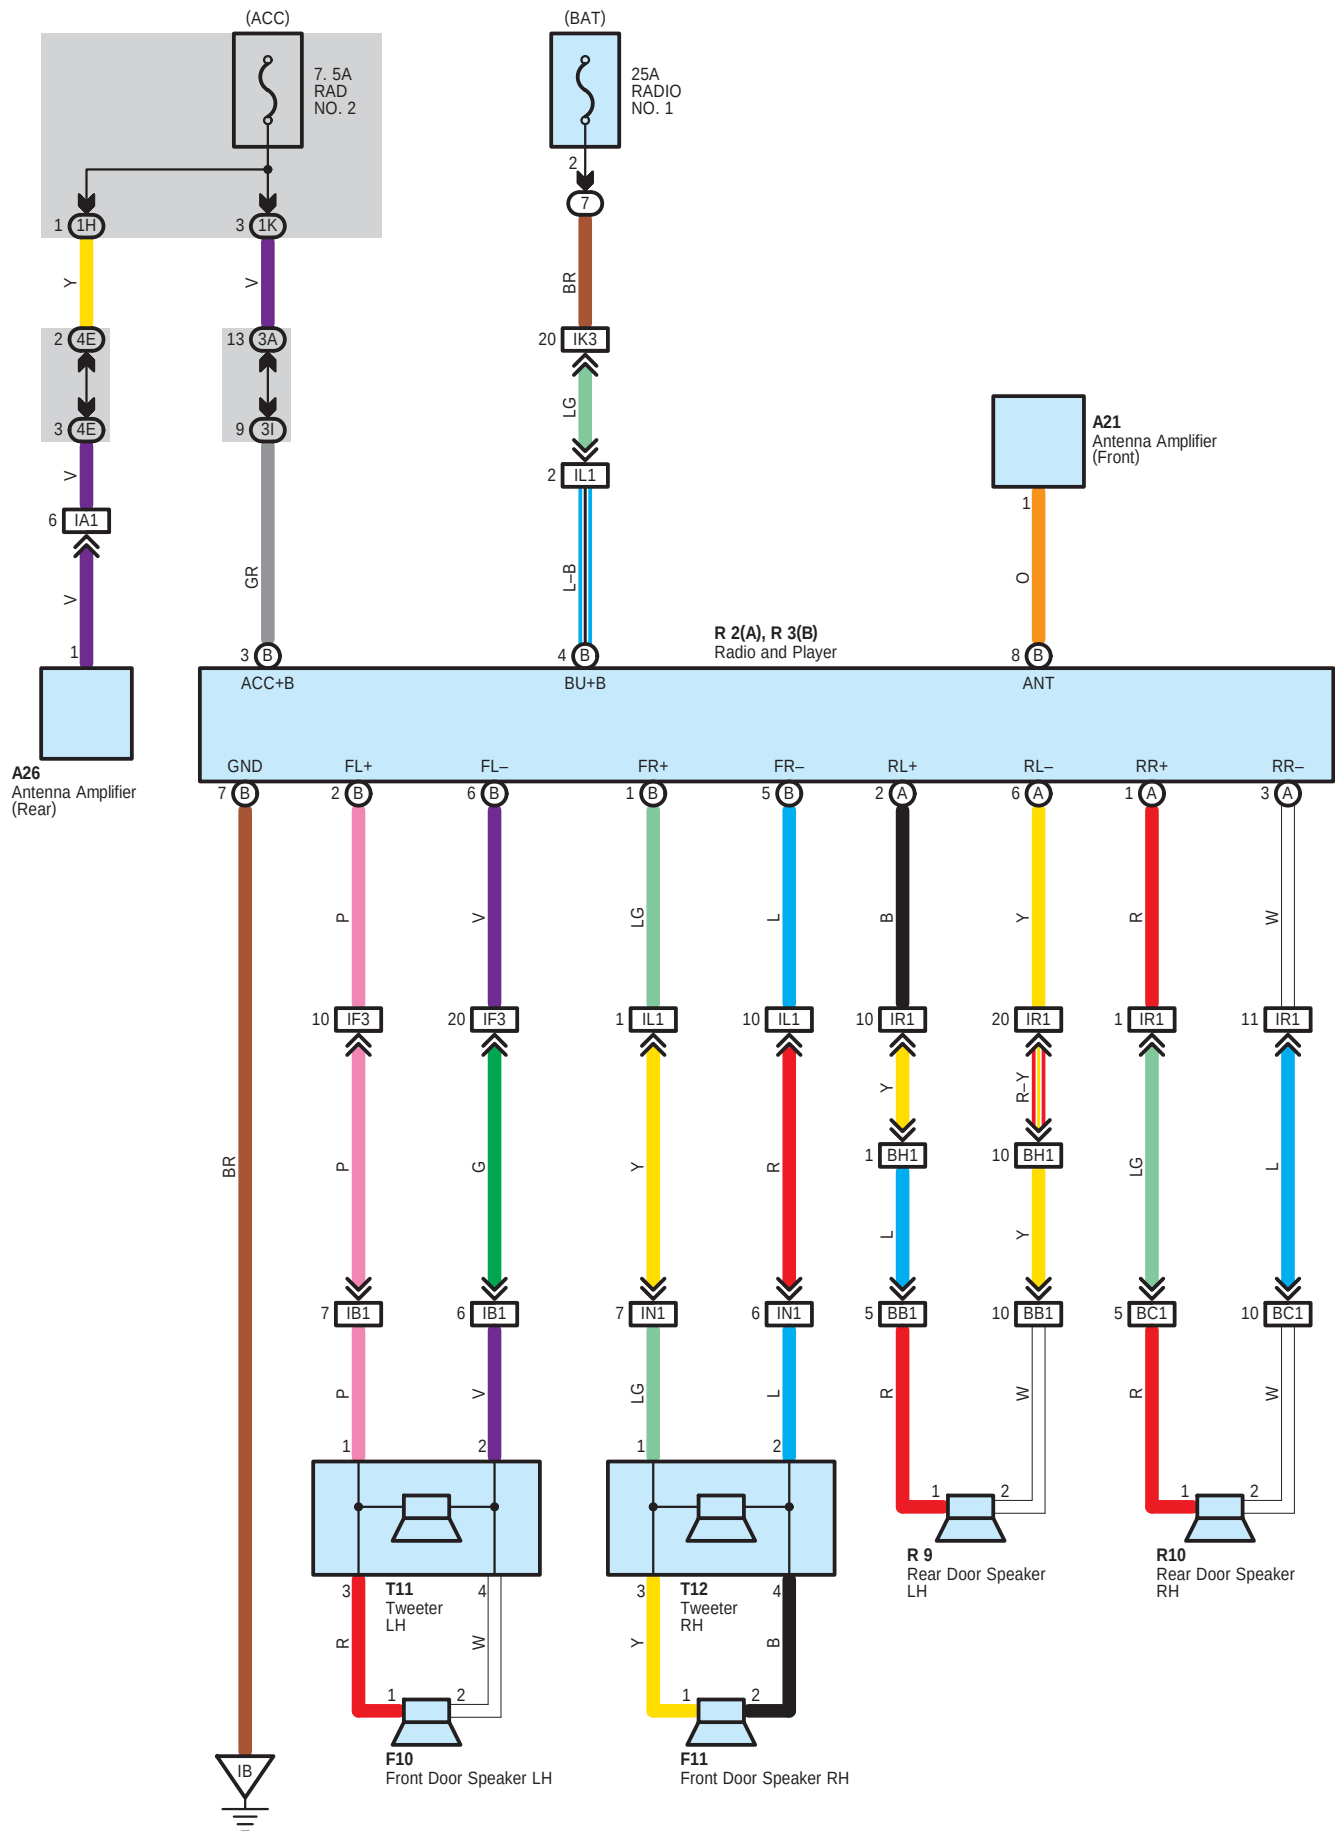

 : Parts Location

Code	See Page	Code		See Page	Code	See Page
A21	44	R2	A	45	T11	47
A26	46	R3	B	45	T12	47
F10	46	R9		47		
F11	46	R10		47		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
7	24	Fusible Link Block (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1K	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
3A	34	Instrument Panel Wire and J/B No.3 (Behind the Instrument Panel Center)
3I	35	
4E	39	Cowl Wire and J/B No.4 (Right Side of Glove Box)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	54	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IB1	54	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IF3	54	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IK3	55	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IL1	55	Instrument Panel Wire and Cowl Wire (Right Cowl Side Panel)
IN1	55	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IR1	55	Instrument Panel Wire and Floor Wire (Under the Shift Lever)
BB1	56	Rear Door No.1 LH Wire and Floor No.2 Wire (Left Center Pillar)
BC1	56	Rear Door No.1 RH Wire and Floor Wire (Right Center Pillar)
BH1	56	Floor No.2 Wire and Floor Wire (Near the Rear Side Marker Light RH)

 : Ground Points

Code	See Page	Ground Points Location
IB	54	Right Instrument Panel Brace