





Audio System with 8 Speaker

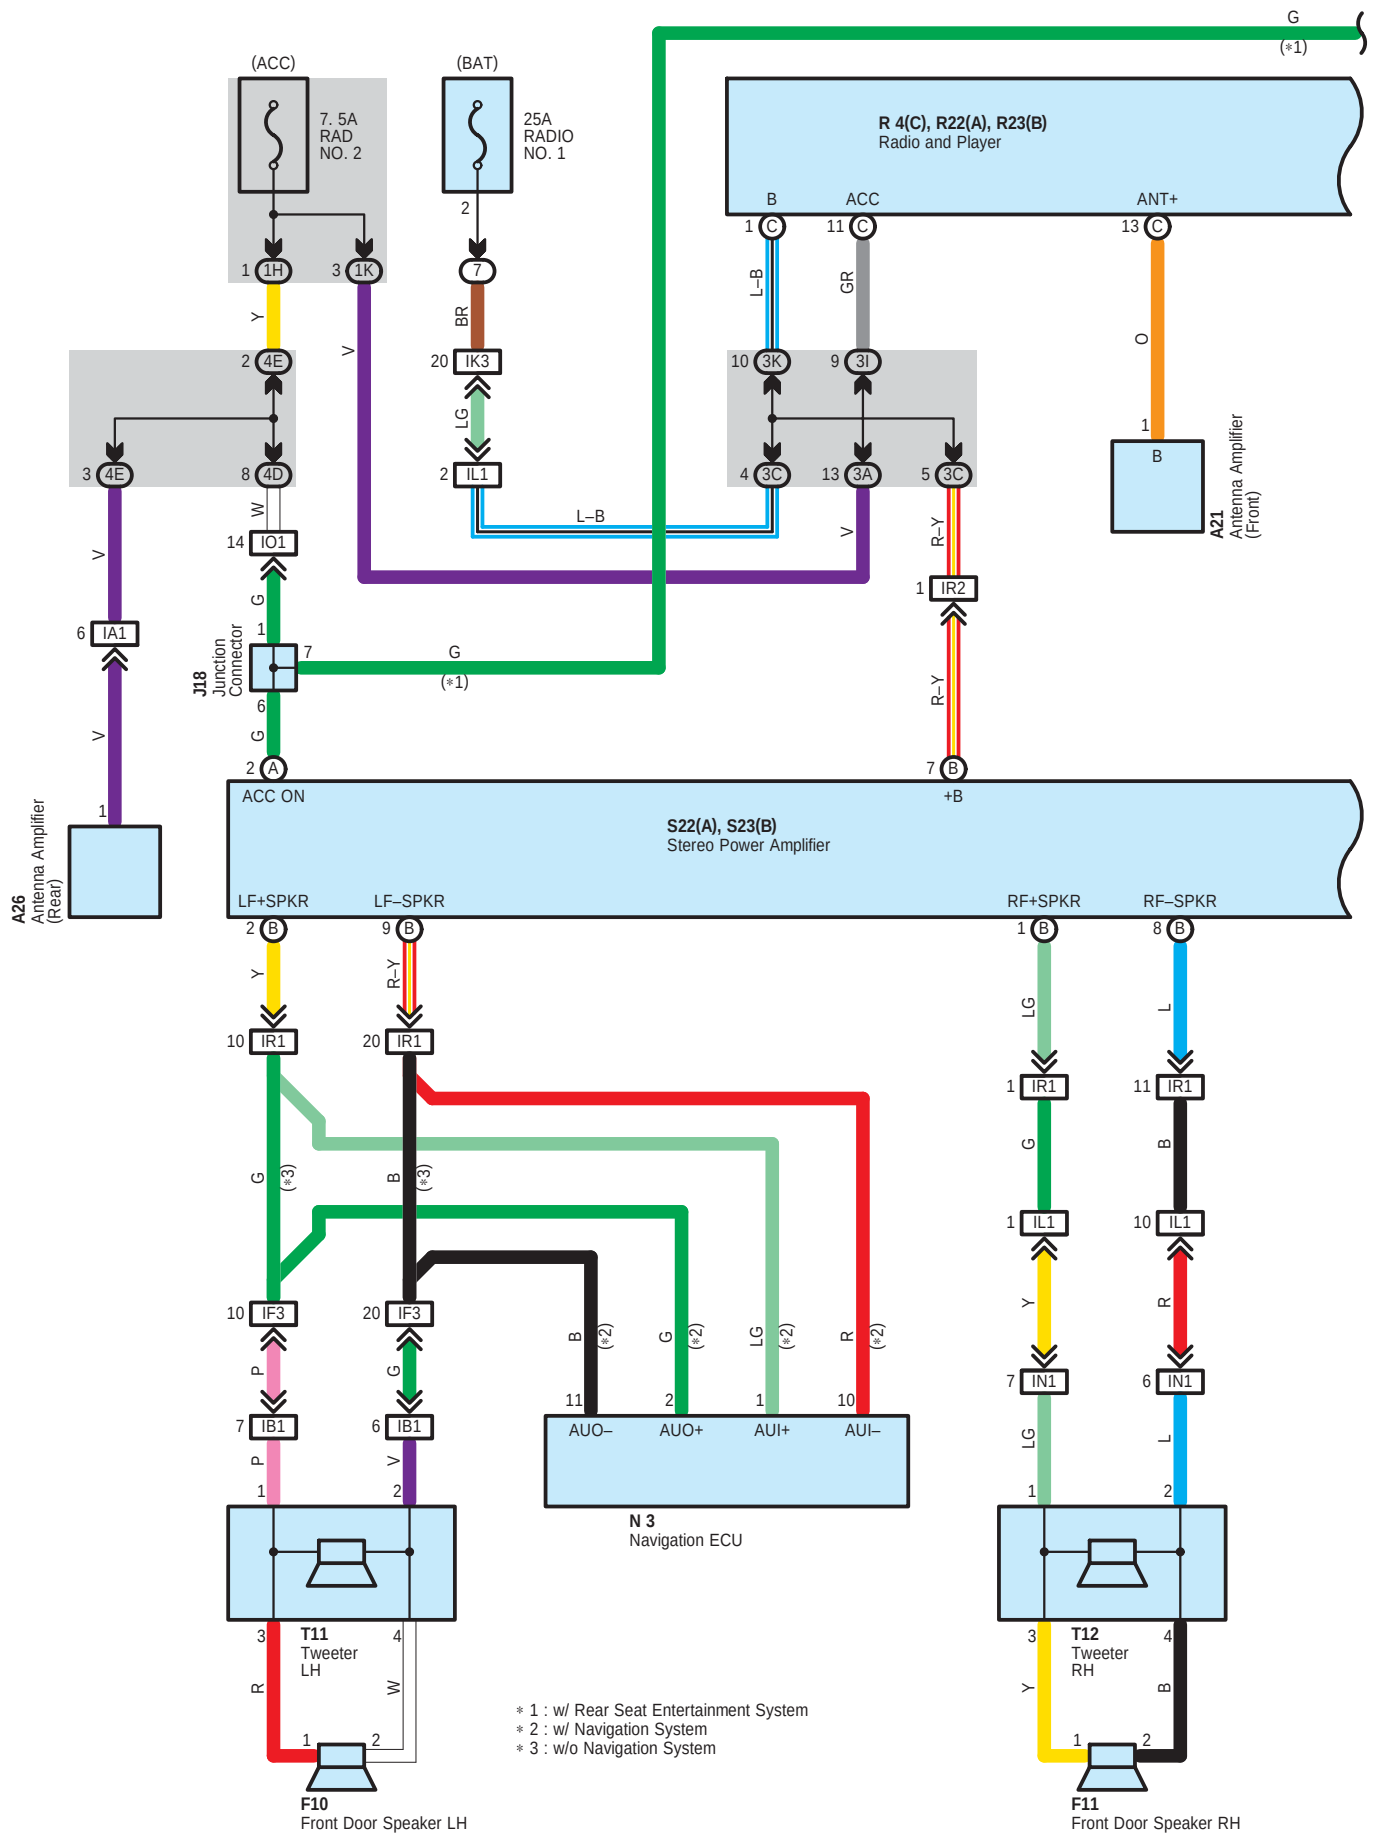

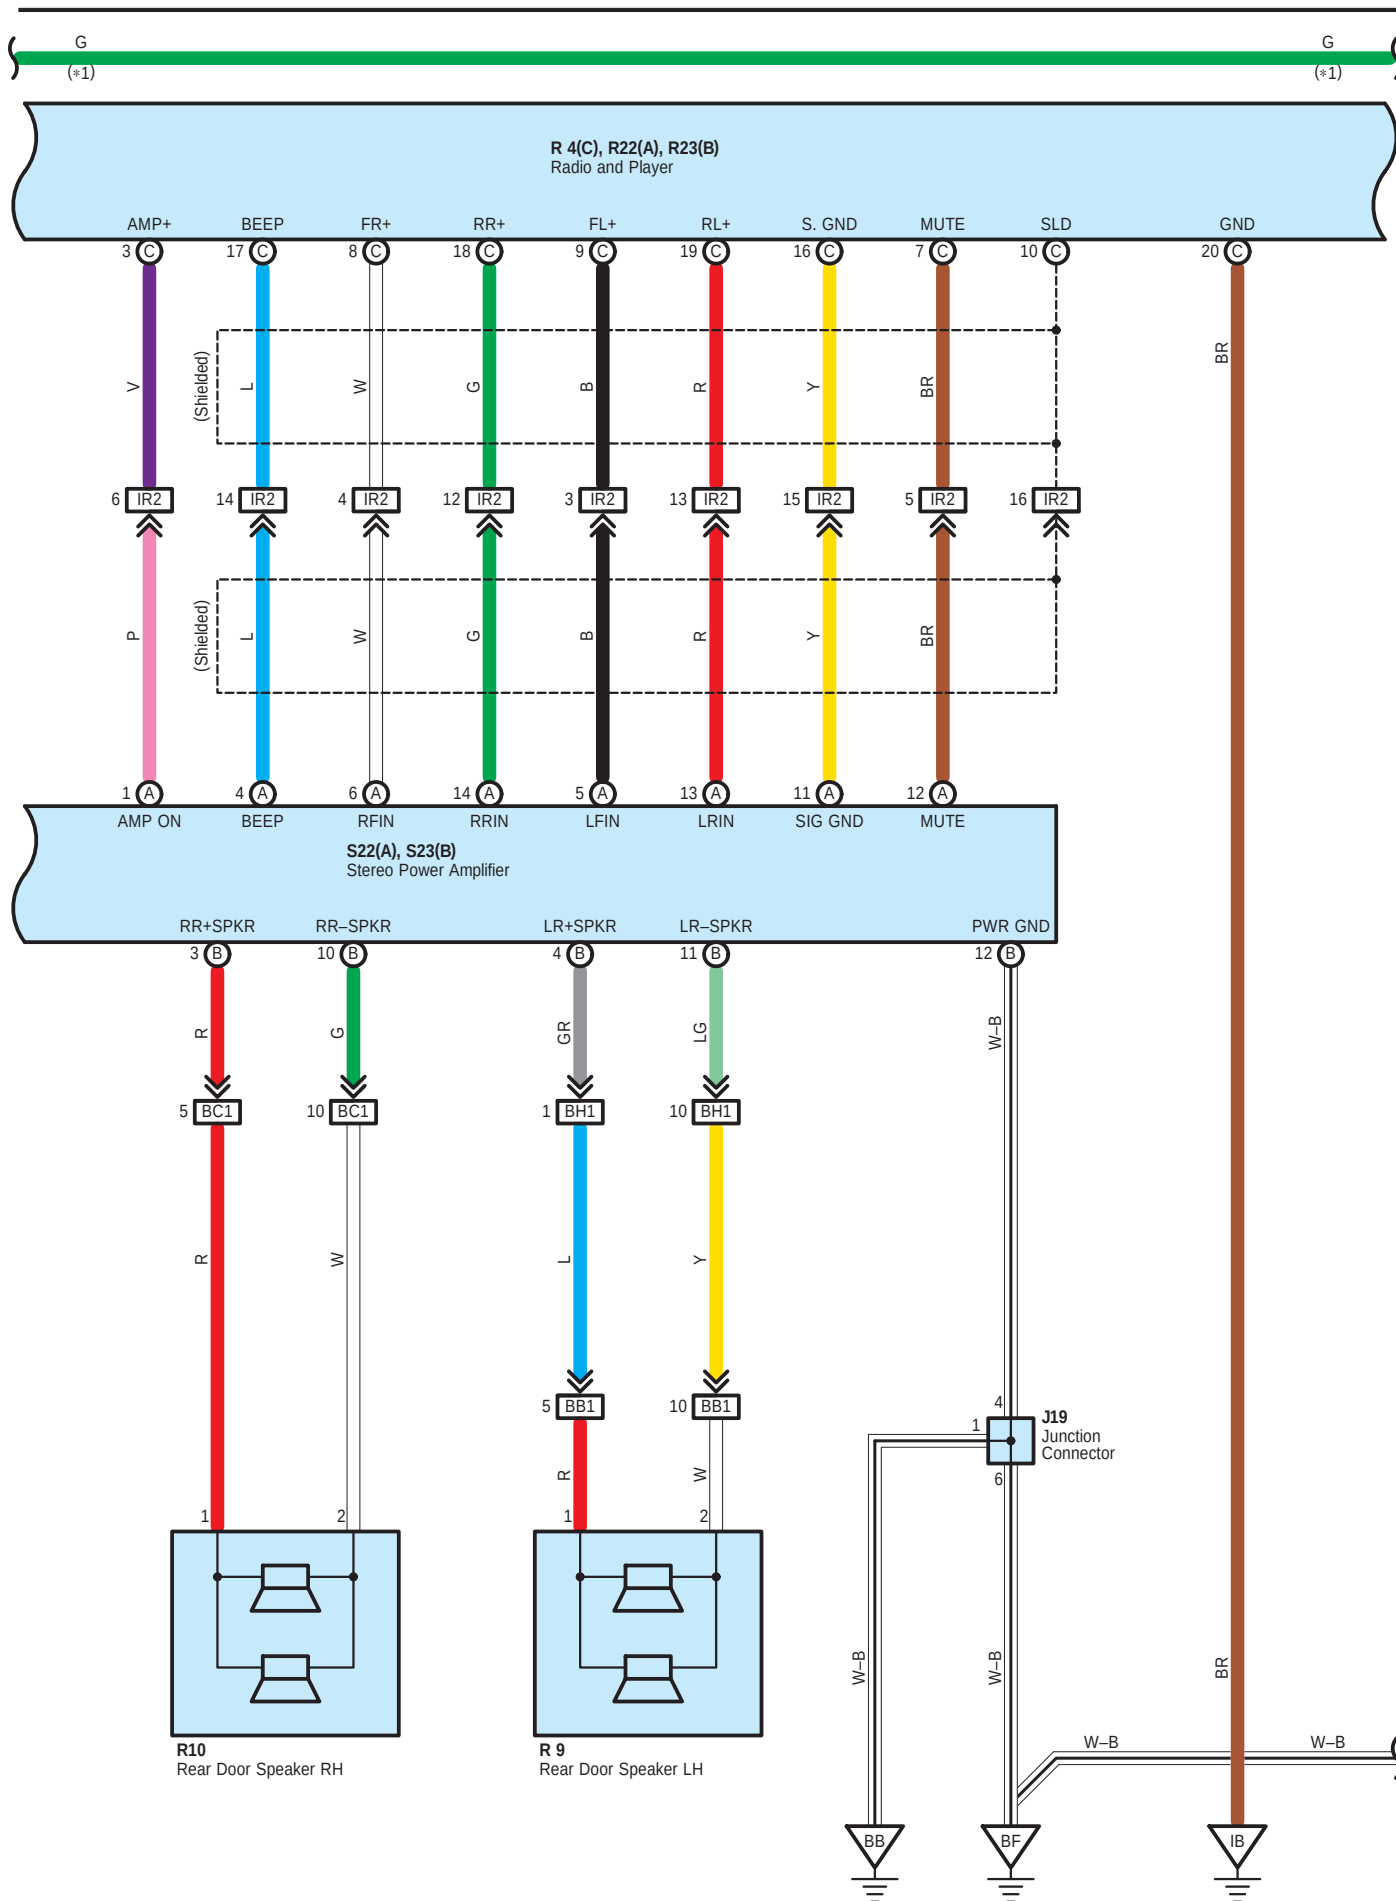


Audio System with 8 Speaker

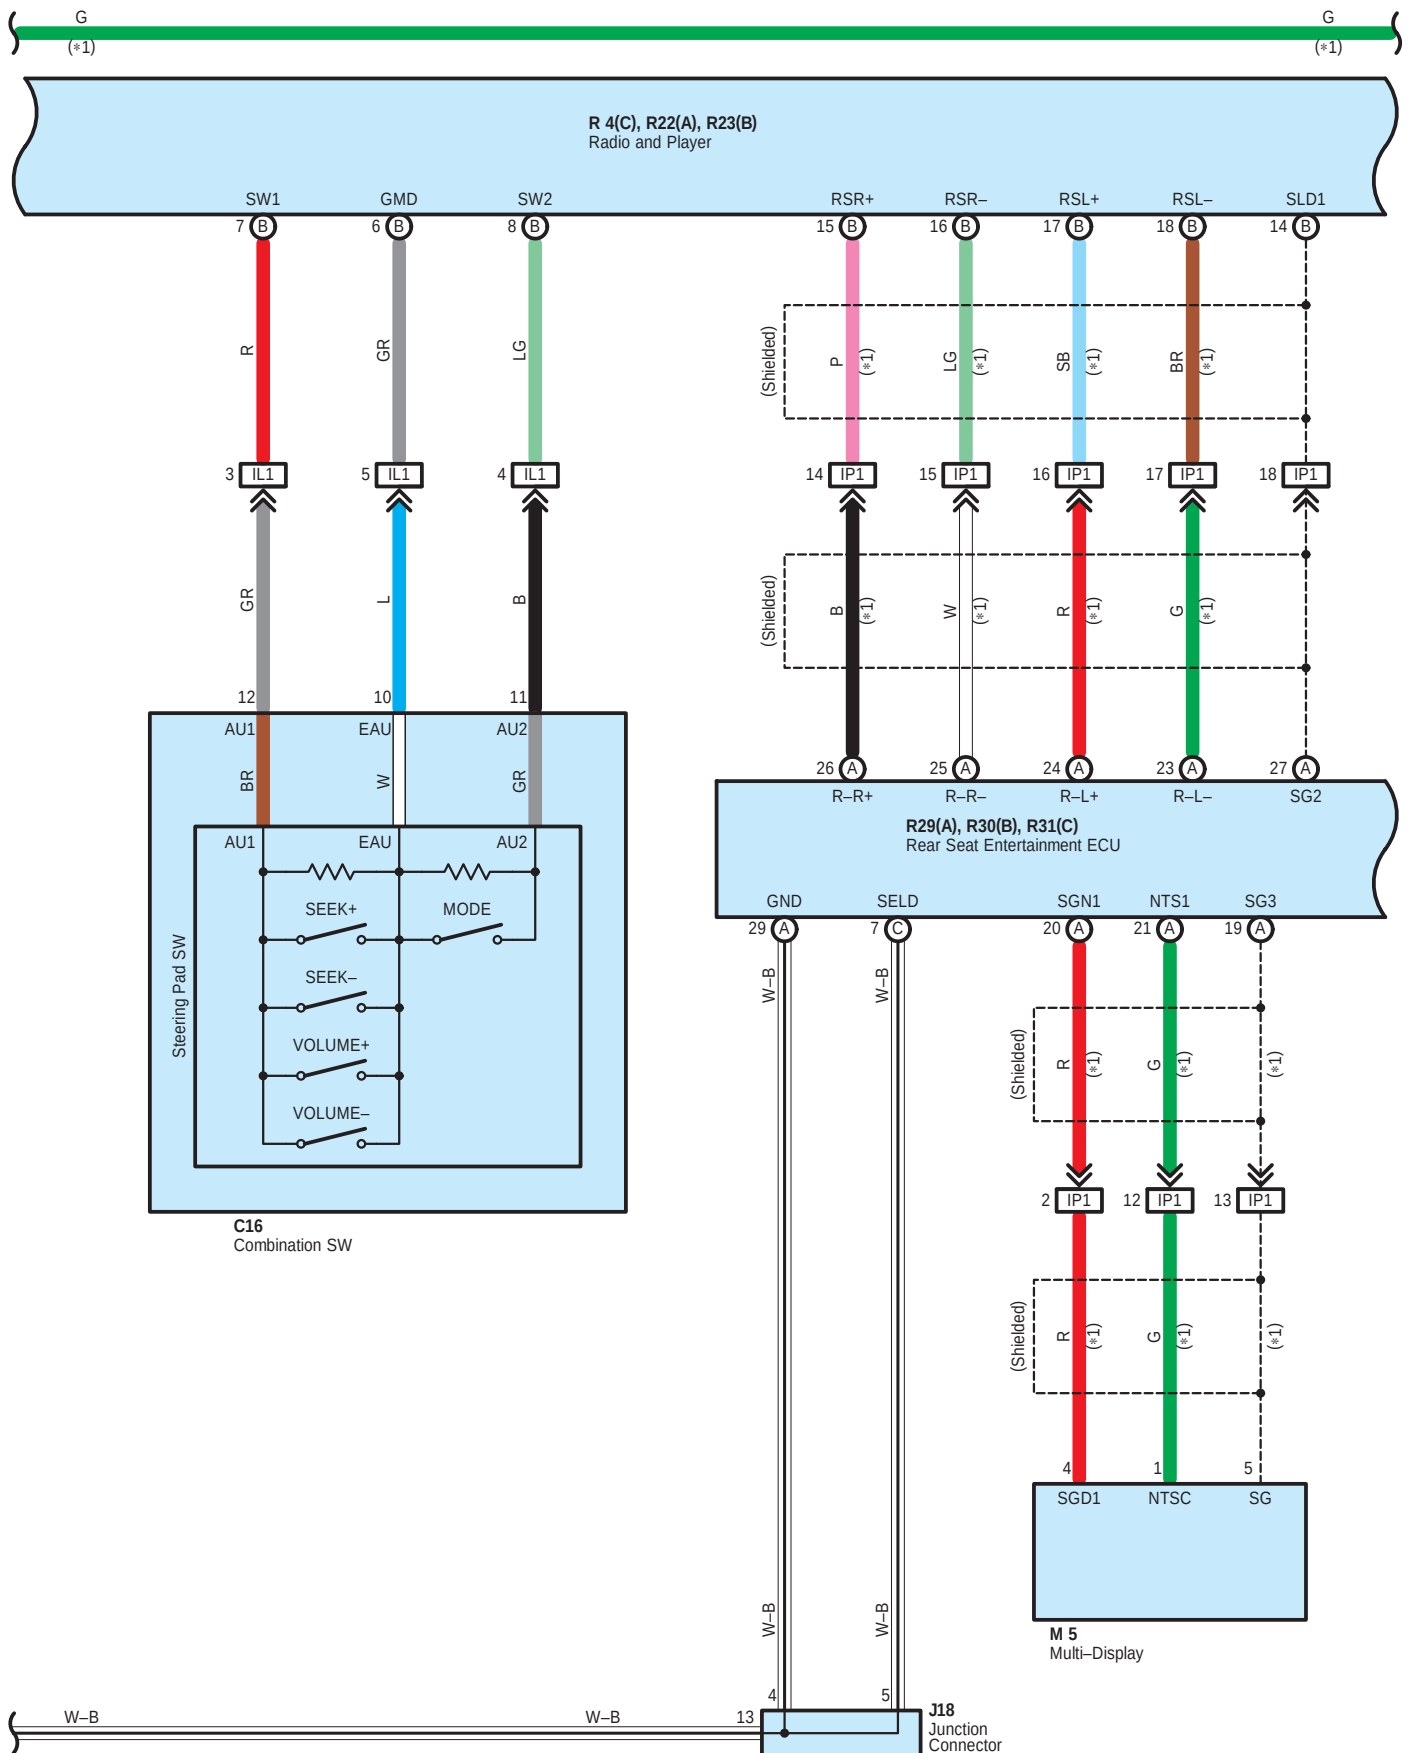

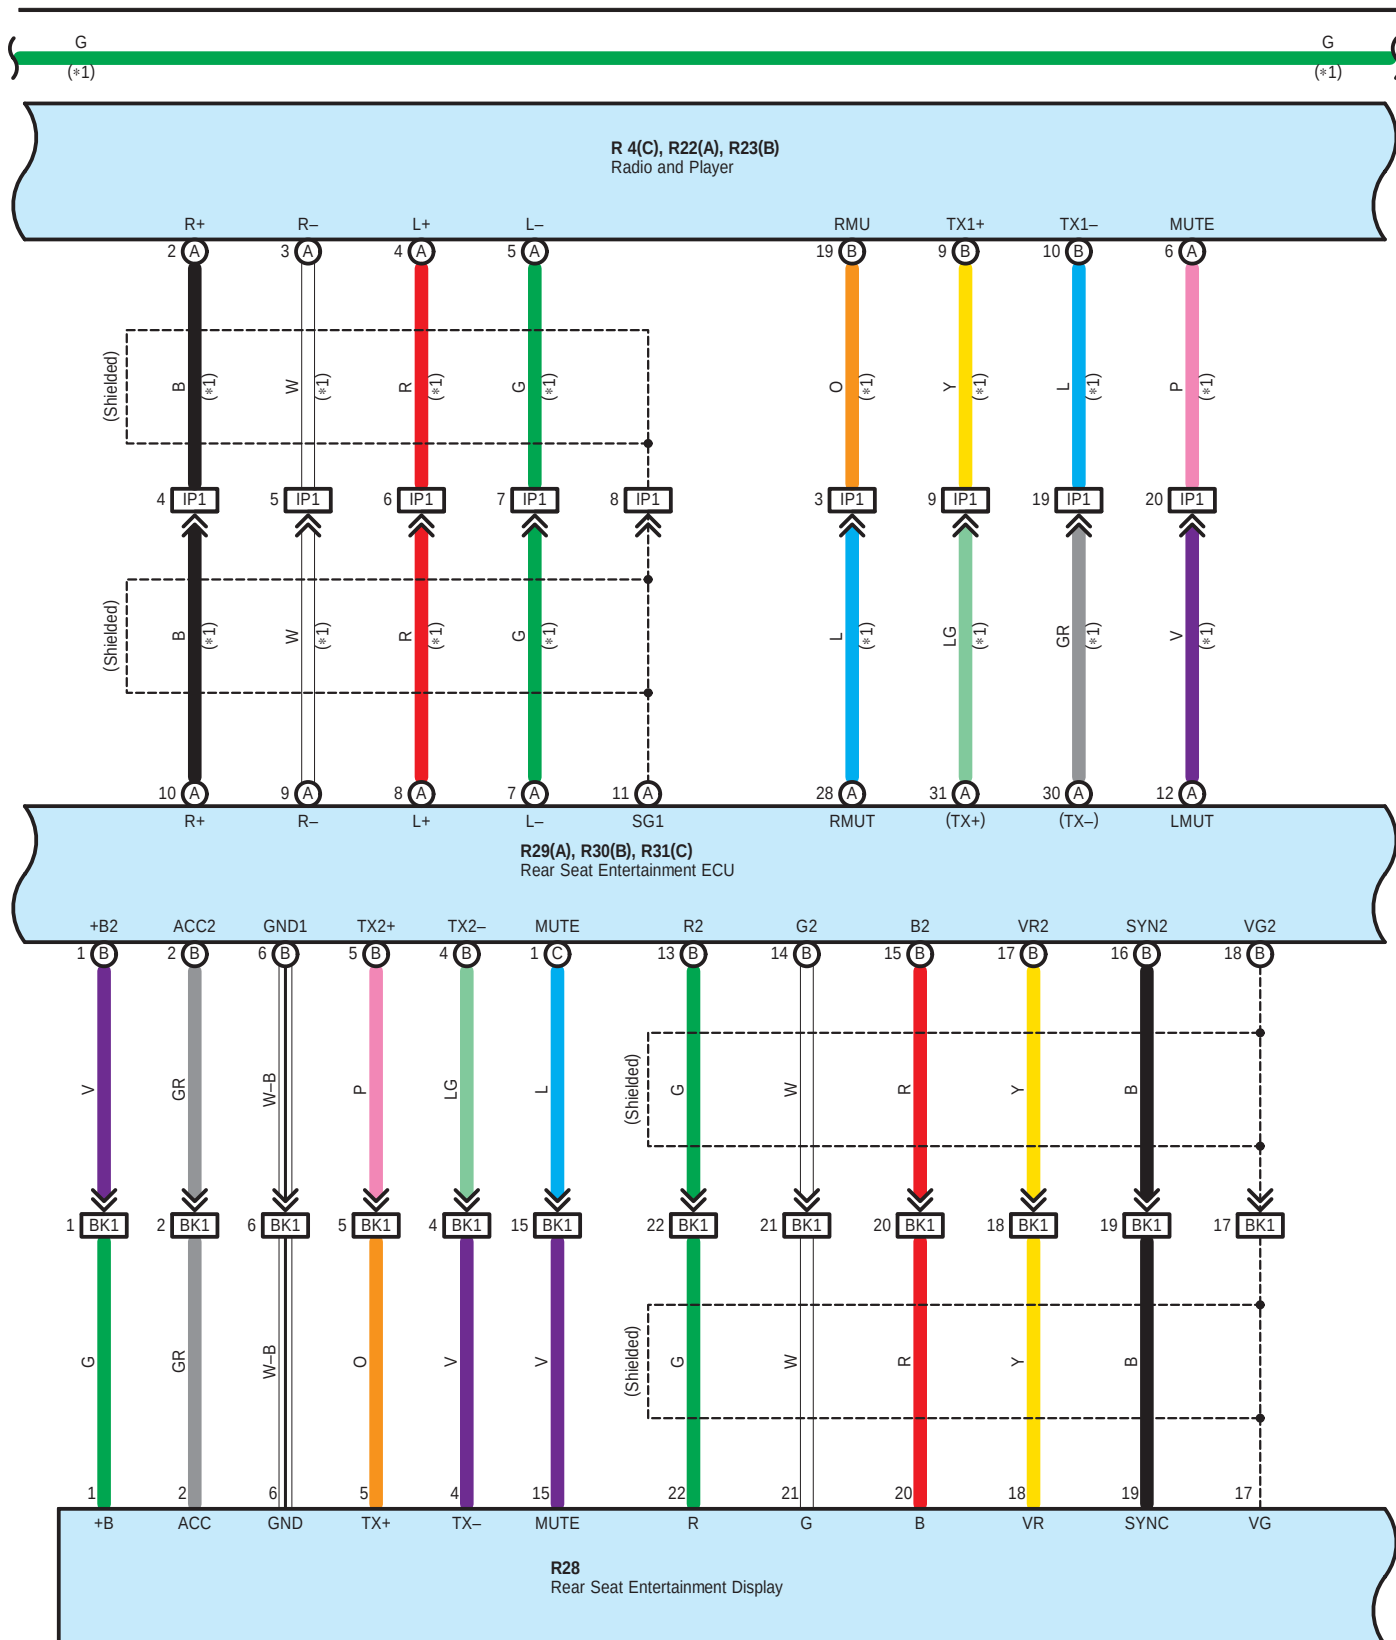


* 1 : w/ Rear Seat Entertainment System

Audio System with 8 Speaker

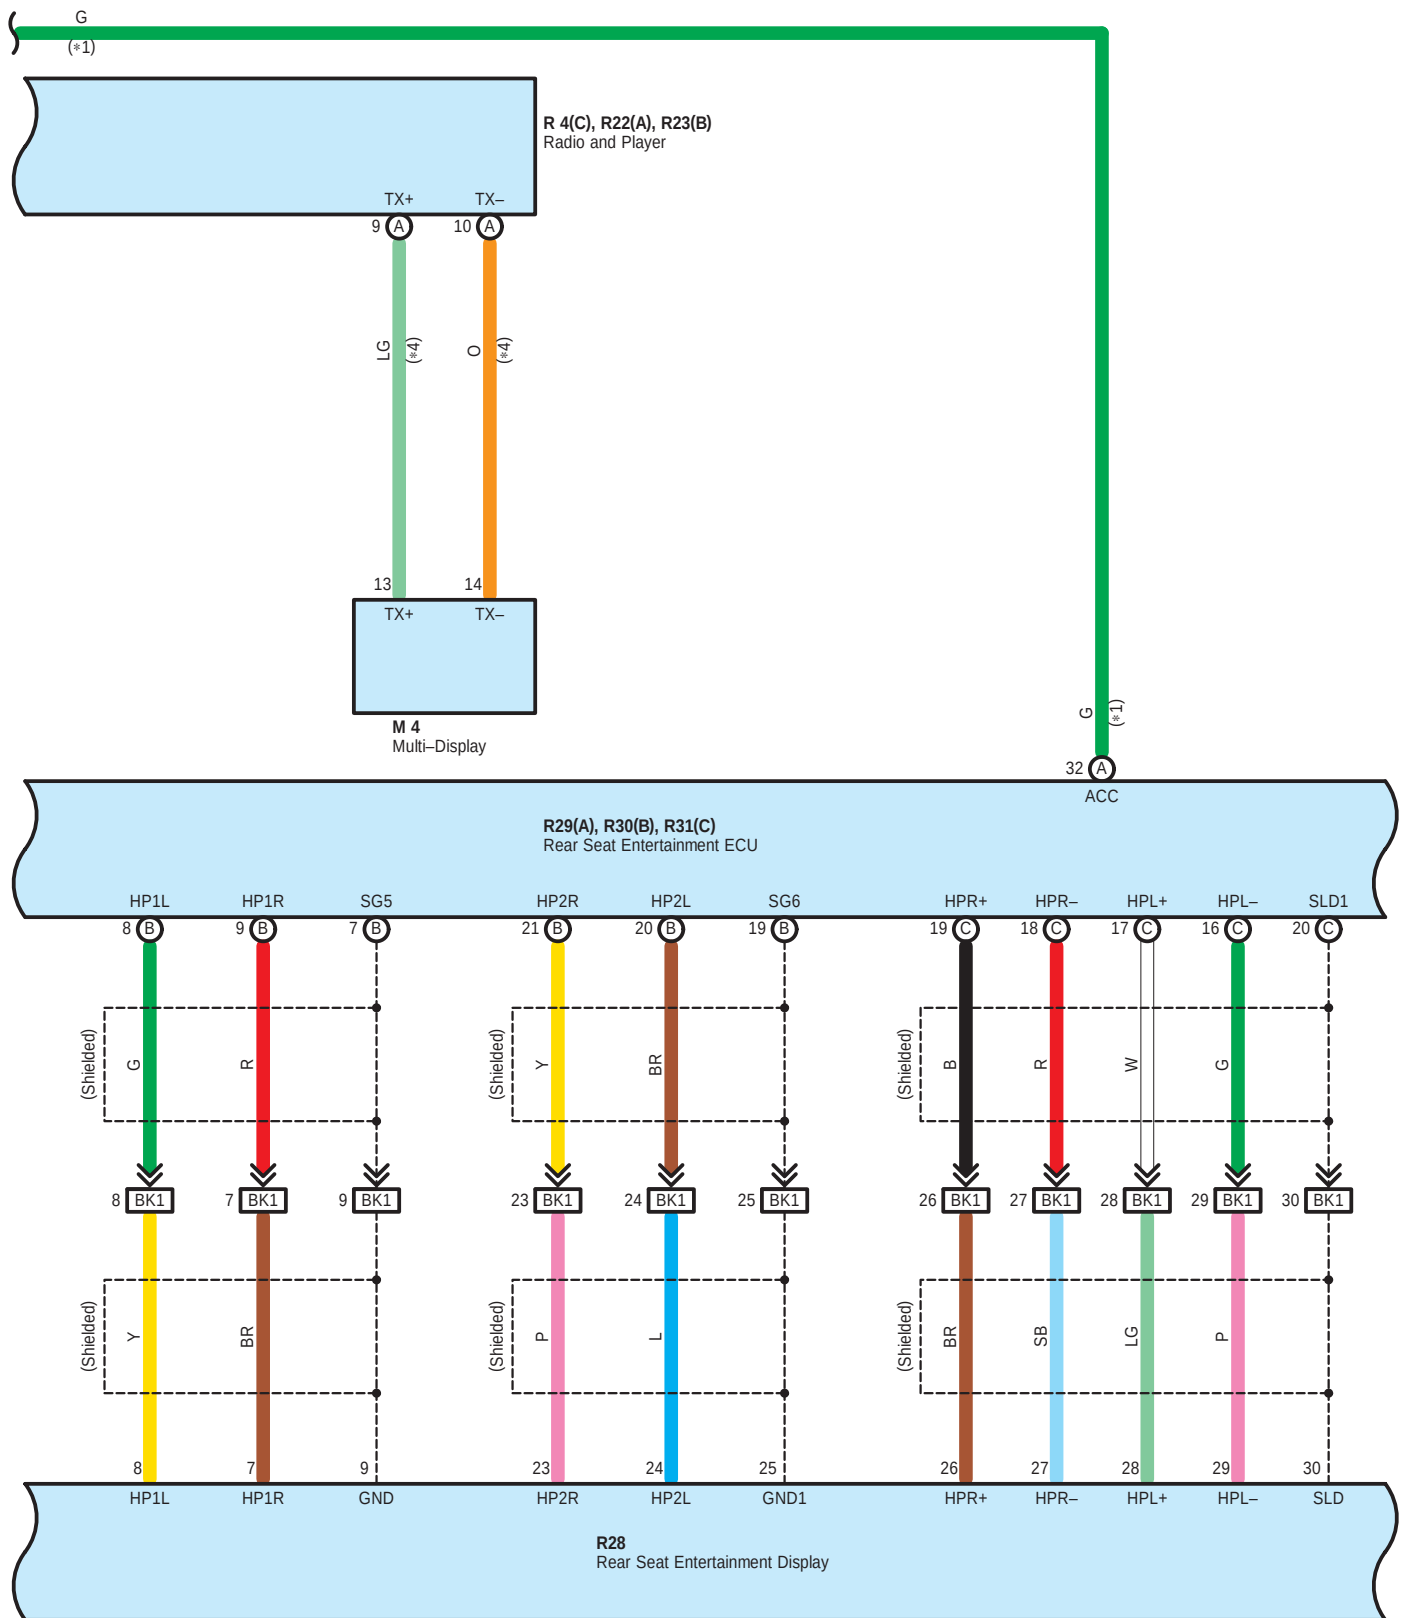

* 1 : w/ Rear Seat Entertainment System
 * 4 : w/o Rear Seat Entertainment System

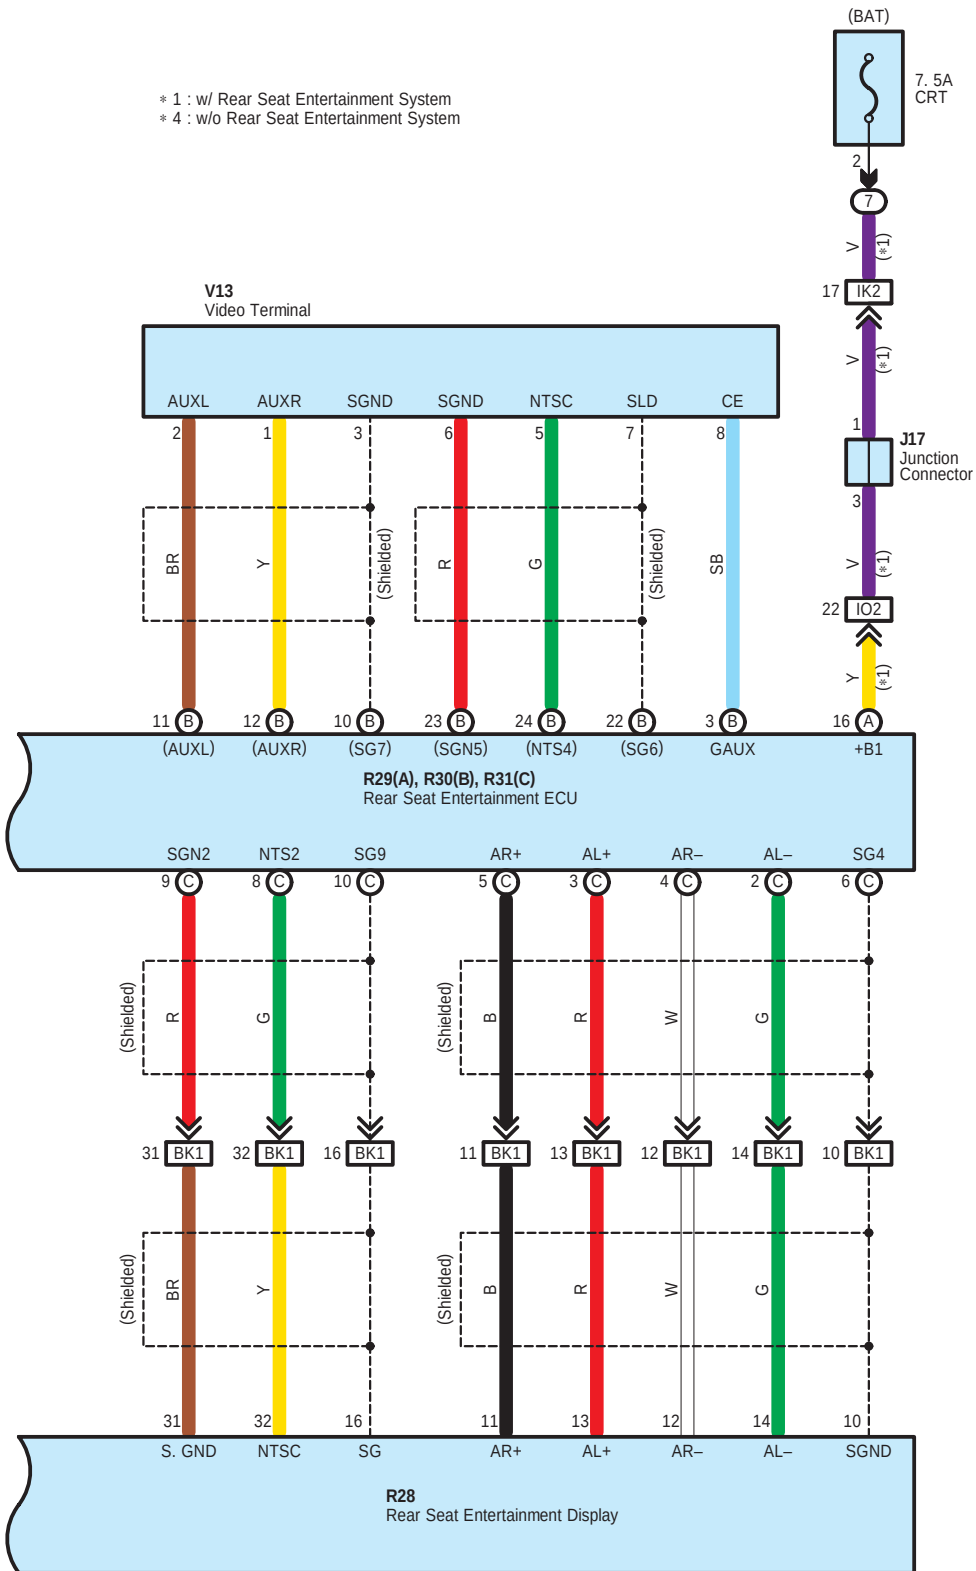

Audio System with 8 Speaker

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A21	44	M5	45	R30	B 47
A26	46	N3	45	R31	C 47
C16	44	R4	C 45	S22	A 47
F10	46	R9	47	S23	B 47
F11	46	R10	47	T11	47
J17	45	R22	A 45	T12	47
J18	46	R23	B 45	V13	47
J19	46	R28	47		
M4	45	R29	A 47		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
7	24	Fusible Link Block (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1K	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
3A	34	Instrument Panel Wire and J/B No.3 (Behind the Instrument Panel Center)
3C		
3I	35	
3K		
4D	39	Cowl Wire and J/B No.4 (Right Side of Glove Box)
4E		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	54	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IB1	54	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IF3	54	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IK2	55	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IK3		
IL1	55	Instrument Panel Wire and Cowl Wire (Right Cowl Side Panel)
IN1	55	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IO1	55	Cowl Wire and Floor Wire (Right Kick Panel)
IO2		
IP1	55	Instrument Panel Wire and Floor Wire (Right Cowl Side Panel)
IR1	55	Instrument Panel Wire and Floor Wire (Under the Shift Lever)
IR2		
BB1	56	Rear Door No.1 LH Wire and Floor No.2 Wire (Left Center Pillar)
BC1	56	Rear Door No.1 RH Wire and Floor Wire (Right Center Pillar)
BH1	56	Floor No.2 Wire and Floor Wire (Near the Rear Side Marker Light RH)
BK1	56	Roof No.2 Wire and Floor Wire (Right Rear Quarter Panel)

: Ground Points

Code	See Page	Ground Points Location
IB	54	Right Instrument Panel Brace
BB	56	Right Center Pillar
BF	56	Near the Rear Side Marker Light RH

