




# Combination Meter


\* 1 : USA  
\* 2 : Canada

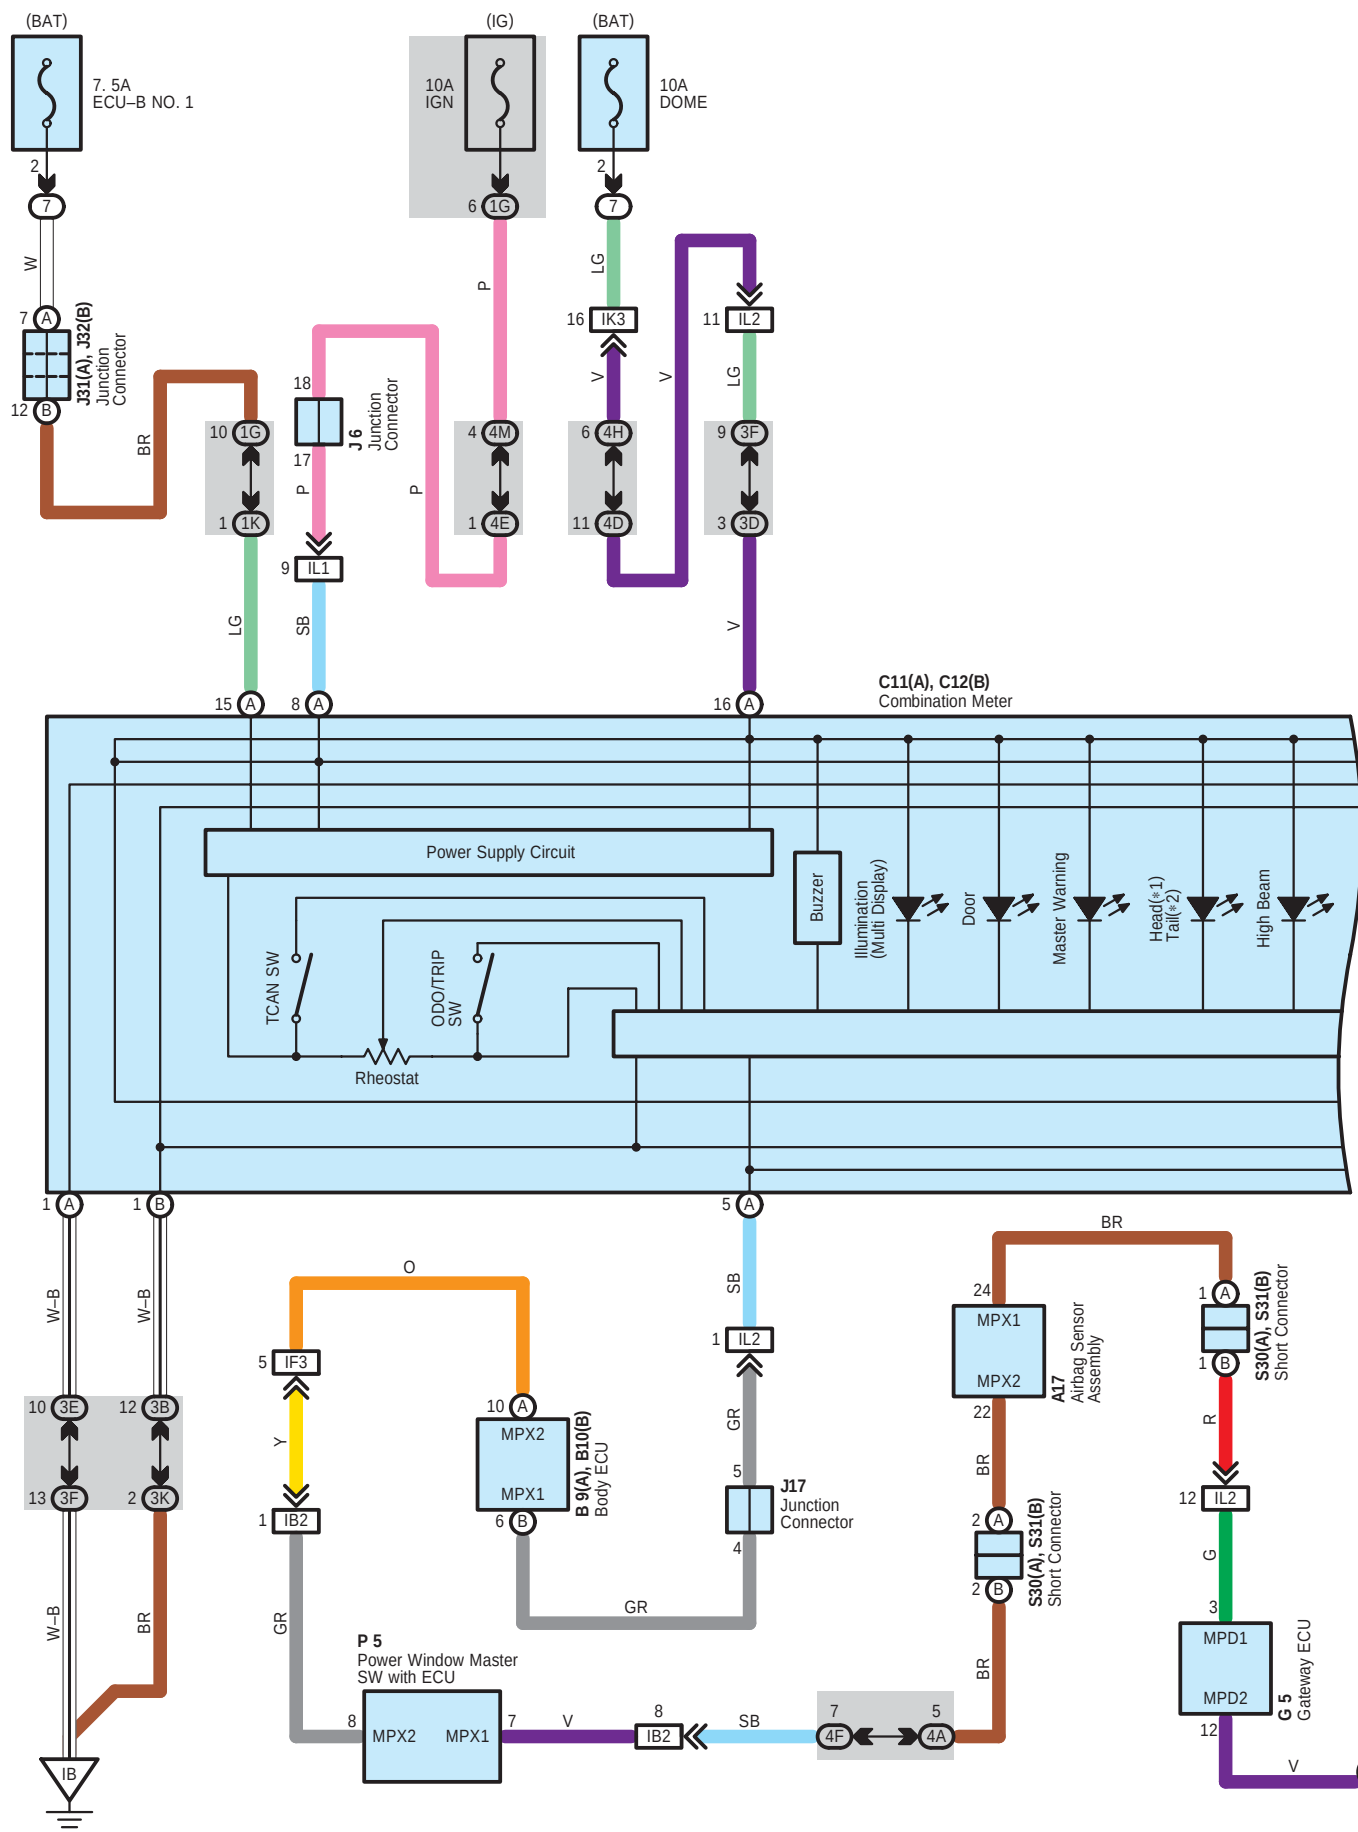

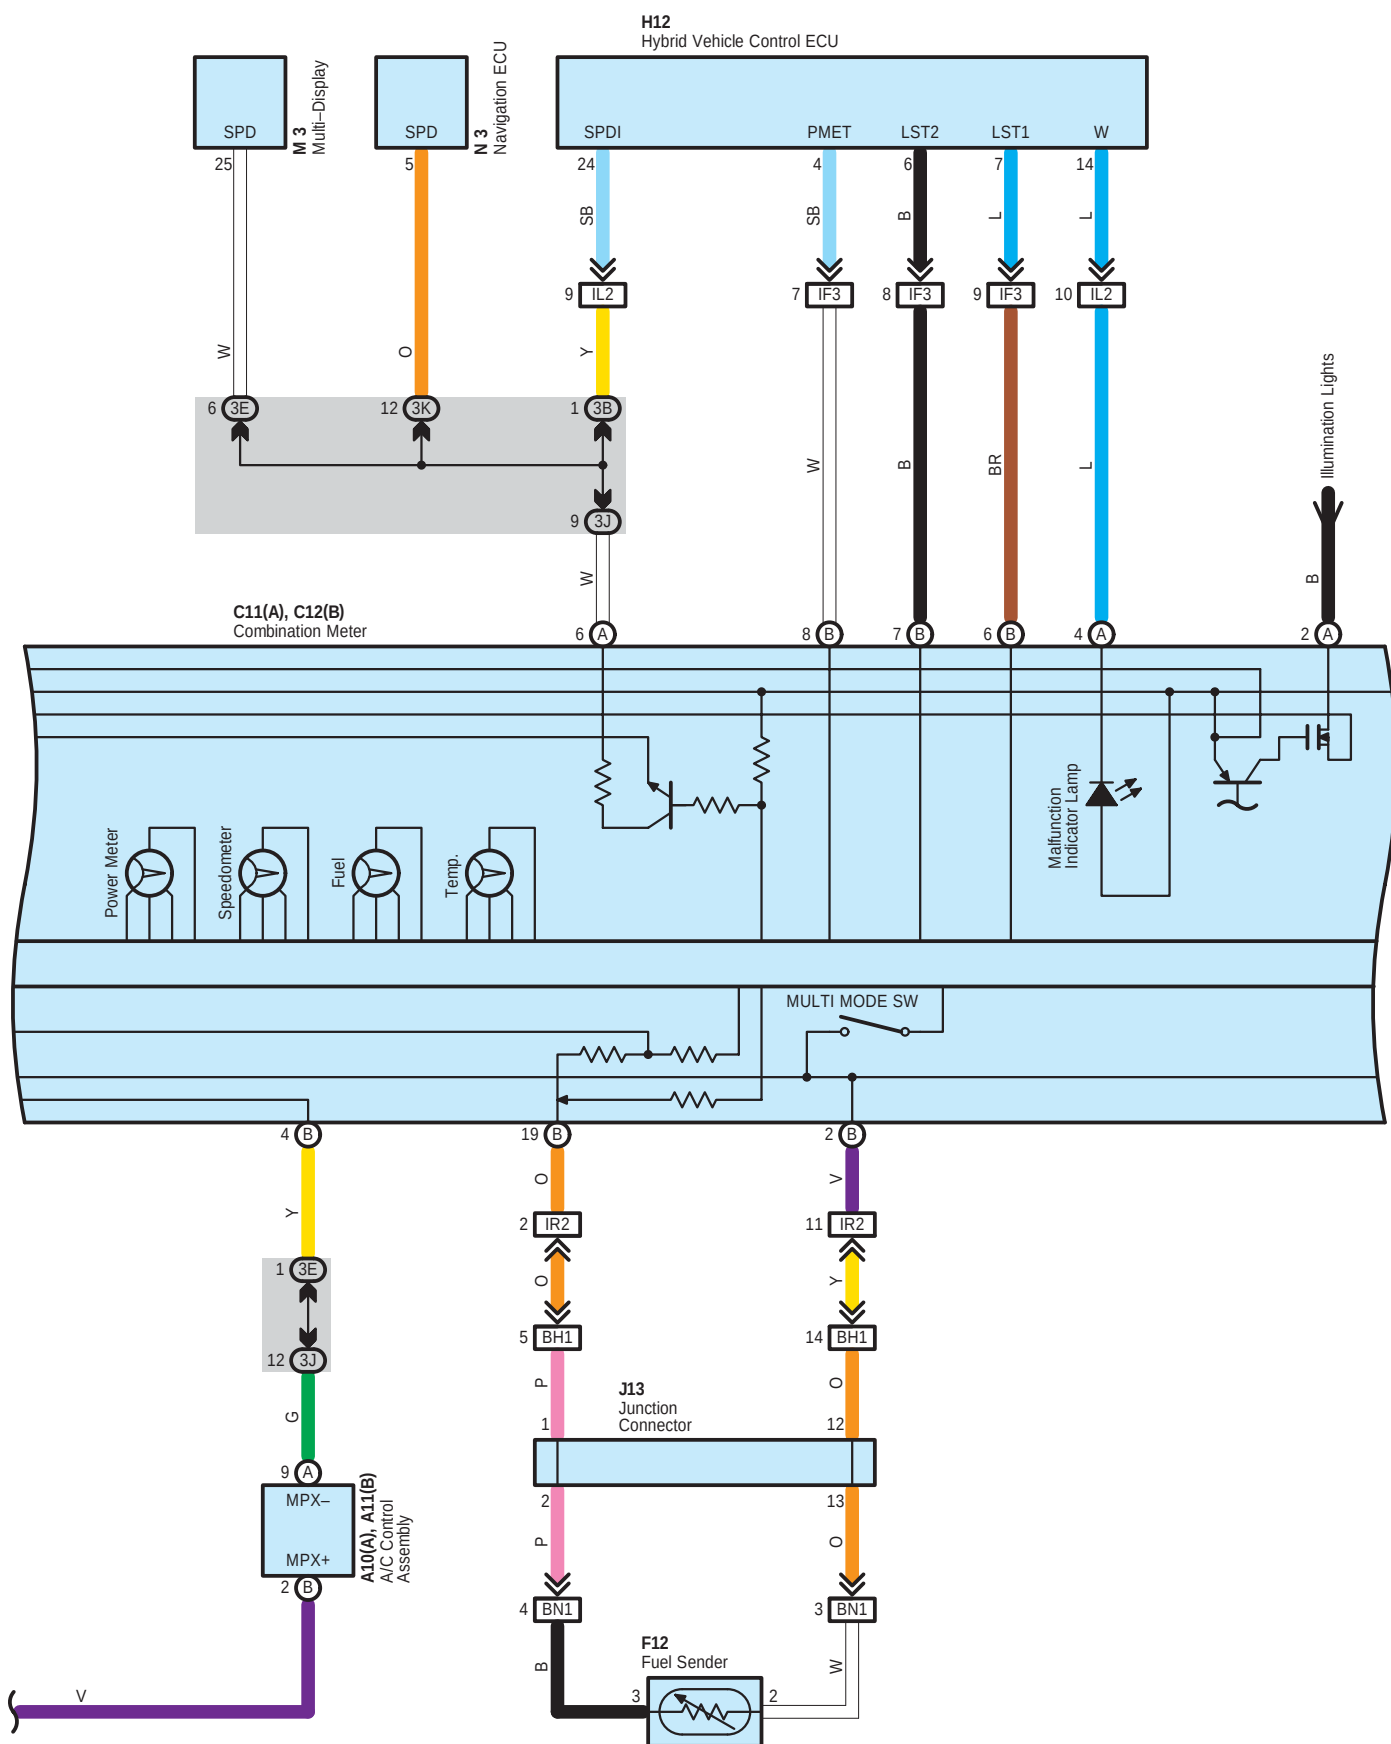

# Combination Meter

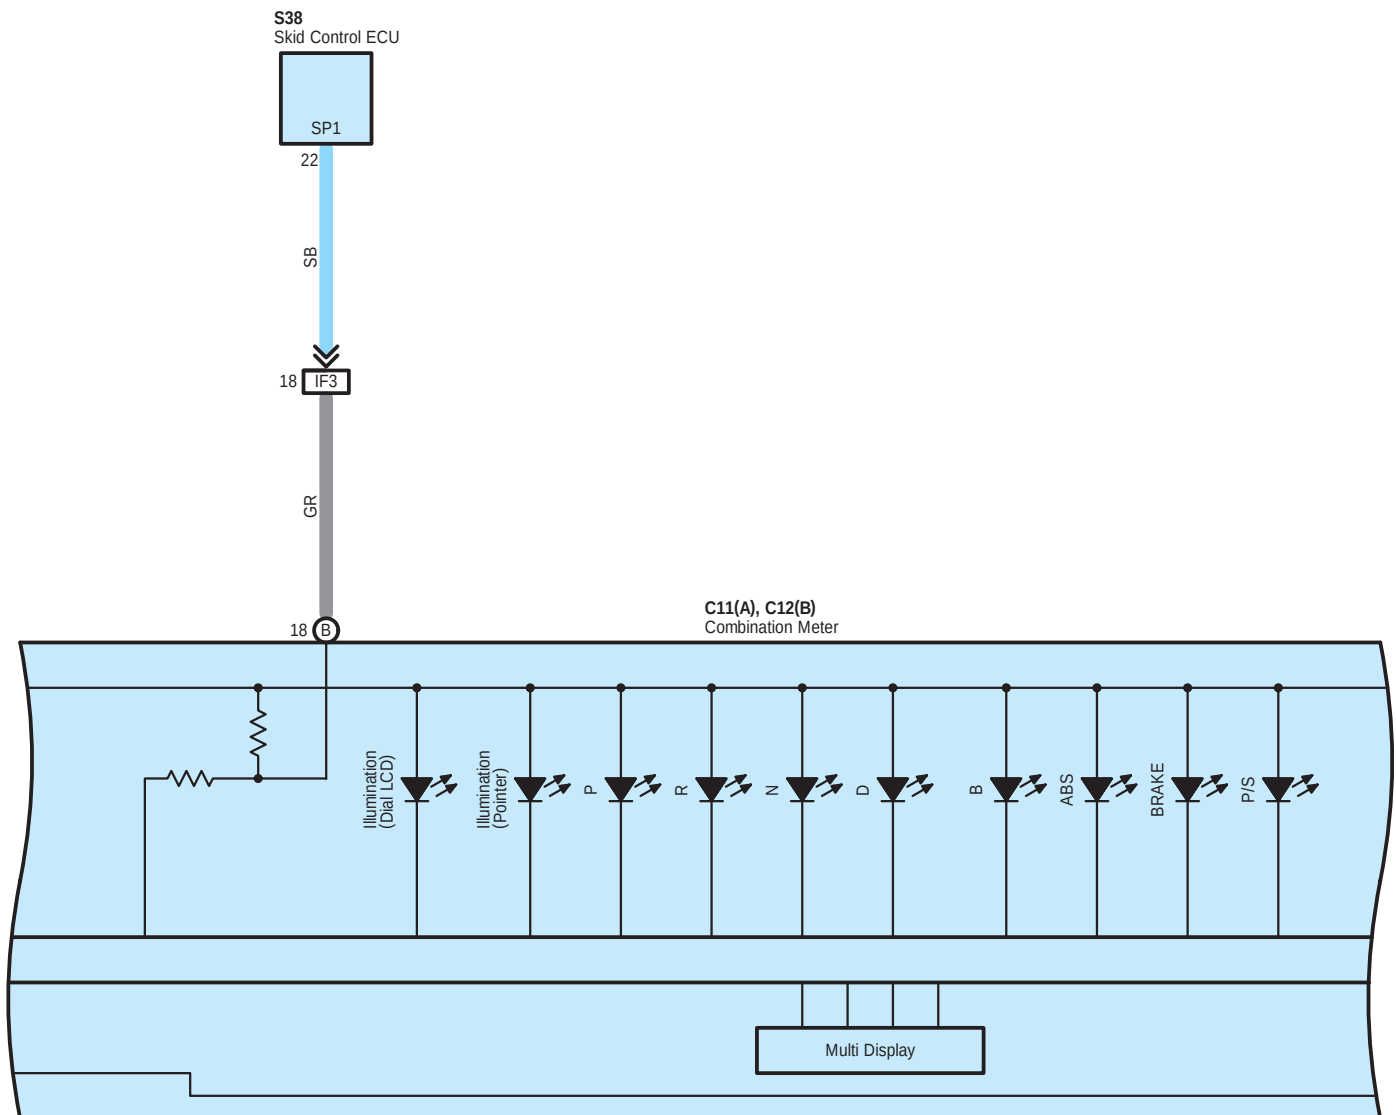

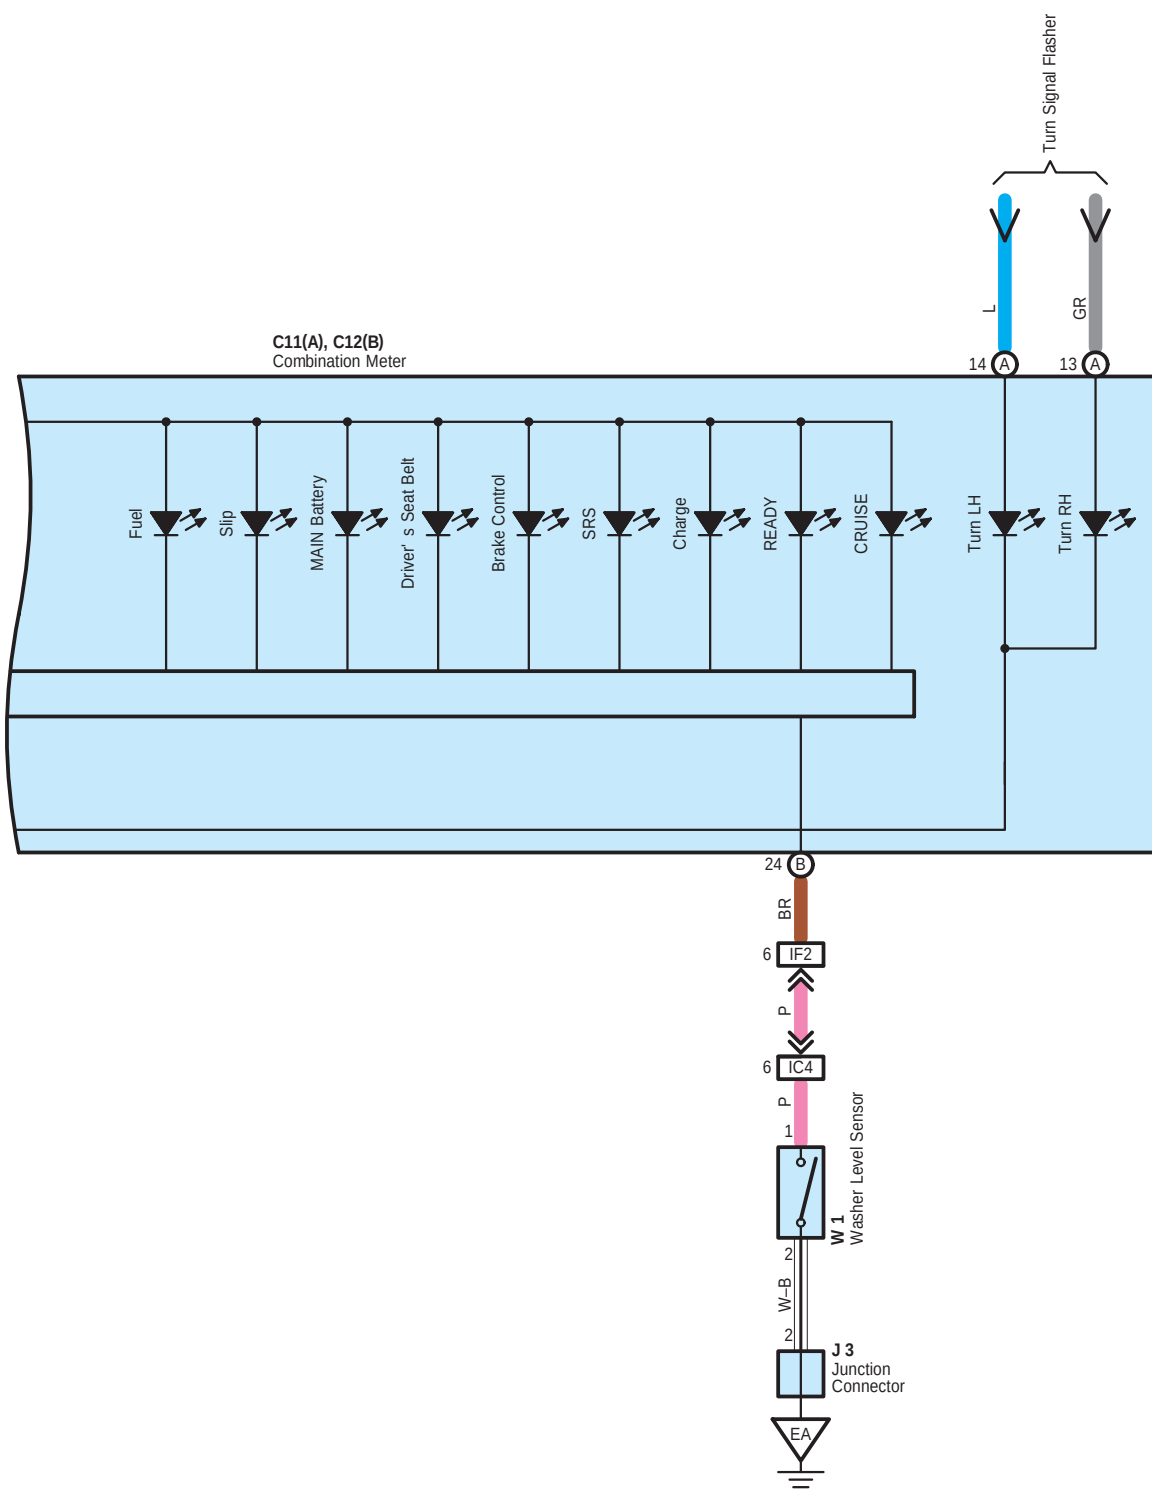

# Combination Meter

## : Parts Location

| Code |   | See Page | Code |    | See Page | Code |    | See Page |
|------|---|----------|------|----|----------|------|----|----------|
| A10  | A | 44       | G5   | 44 |          | M3   | 45 |          |
| A11  | B | 44       | H12  | 44 |          | N3   | 45 |          |
| A17  |   | 44       | J3   | 43 |          | P5   | 46 |          |
| B9   | A | 44       | J6   | 45 |          | S30  | A  | 45       |
| B10  | B | 44       | J13  | 46 |          | S31  | B  | 45       |
| C11  | A | 44       | J17  | 45 |          | S38  |    | 45       |
| C12  | B | 44       | J31  | A  | 45       | W1   |    | 43       |
| F12  |   | 46       | J32  | B  | 45       |      |    |          |

## : Relay Blocks

| Code | See Page | Relay Blocks (Relay Block Location)          |
|------|----------|----------------------------------------------|
| 7    | 24       | Fusible Link Block (Engine Compartment Left) |

## : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location)                    |
|------|----------|-------------------------------------------------------------------------|
| 1G   | 31       | Cowl Wire and Instrument Panel J/B (Lower Finish Panel)                 |
| 1K   | 30       | Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)     |
| 3B   | 34       | Instrument Panel Wire and J/B No.3 (Behind the Instrument Panel Center) |
| 3D   |          |                                                                         |
| 3E   |          |                                                                         |
| 3F   |          |                                                                         |
| 3J   | 35       |                                                                         |
| 3K   |          |                                                                         |
| 4A   | 39       | Cowl Wire and J/B No.4 (Right Side of Glove Box)                        |
| 4D   |          |                                                                         |
| 4E   |          |                                                                         |
| 4F   |          |                                                                         |
| 4H   |          |                                                                         |
| 4M   | 38       |                                                                         |

## : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)                     |
|------|----------|--------------------------------------------------------------------------------|
| IB2  | 54       | Front Door LH Wire and Cowl Wire (Left Kick Panel)                             |
| IC4  | 54       | Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)                     |
| IF2  | 54       | Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)       |
| IF3  |          |                                                                                |
| IK3  | 55       | Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)                    |
| IL1  | 55       | Instrument Panel Wire and Cowl Wire (Right Cowl Side Panel)                    |
| IL2  |          |                                                                                |
| IR2  | 55       | Instrument Panel Wire and Floor Wire (Under the Shift Lever)                   |
| BH1  | 56       | Floor No.2 Wire and Floor Wire (Near the Rear Side Marker Light RH)            |
| BN1  | 56       | Fuel Tank Wire and Floor No.2 Wire (Front Side of Rear Quarter Wheel House LH) |

## : Ground Points

| Code | See Page | Ground Points Location       |
|------|----------|------------------------------|
| EA   | 52       | Right Front Fender Apron     |
| IB   | 54       | Right Instrument Panel Brace |

