


Rear Heater

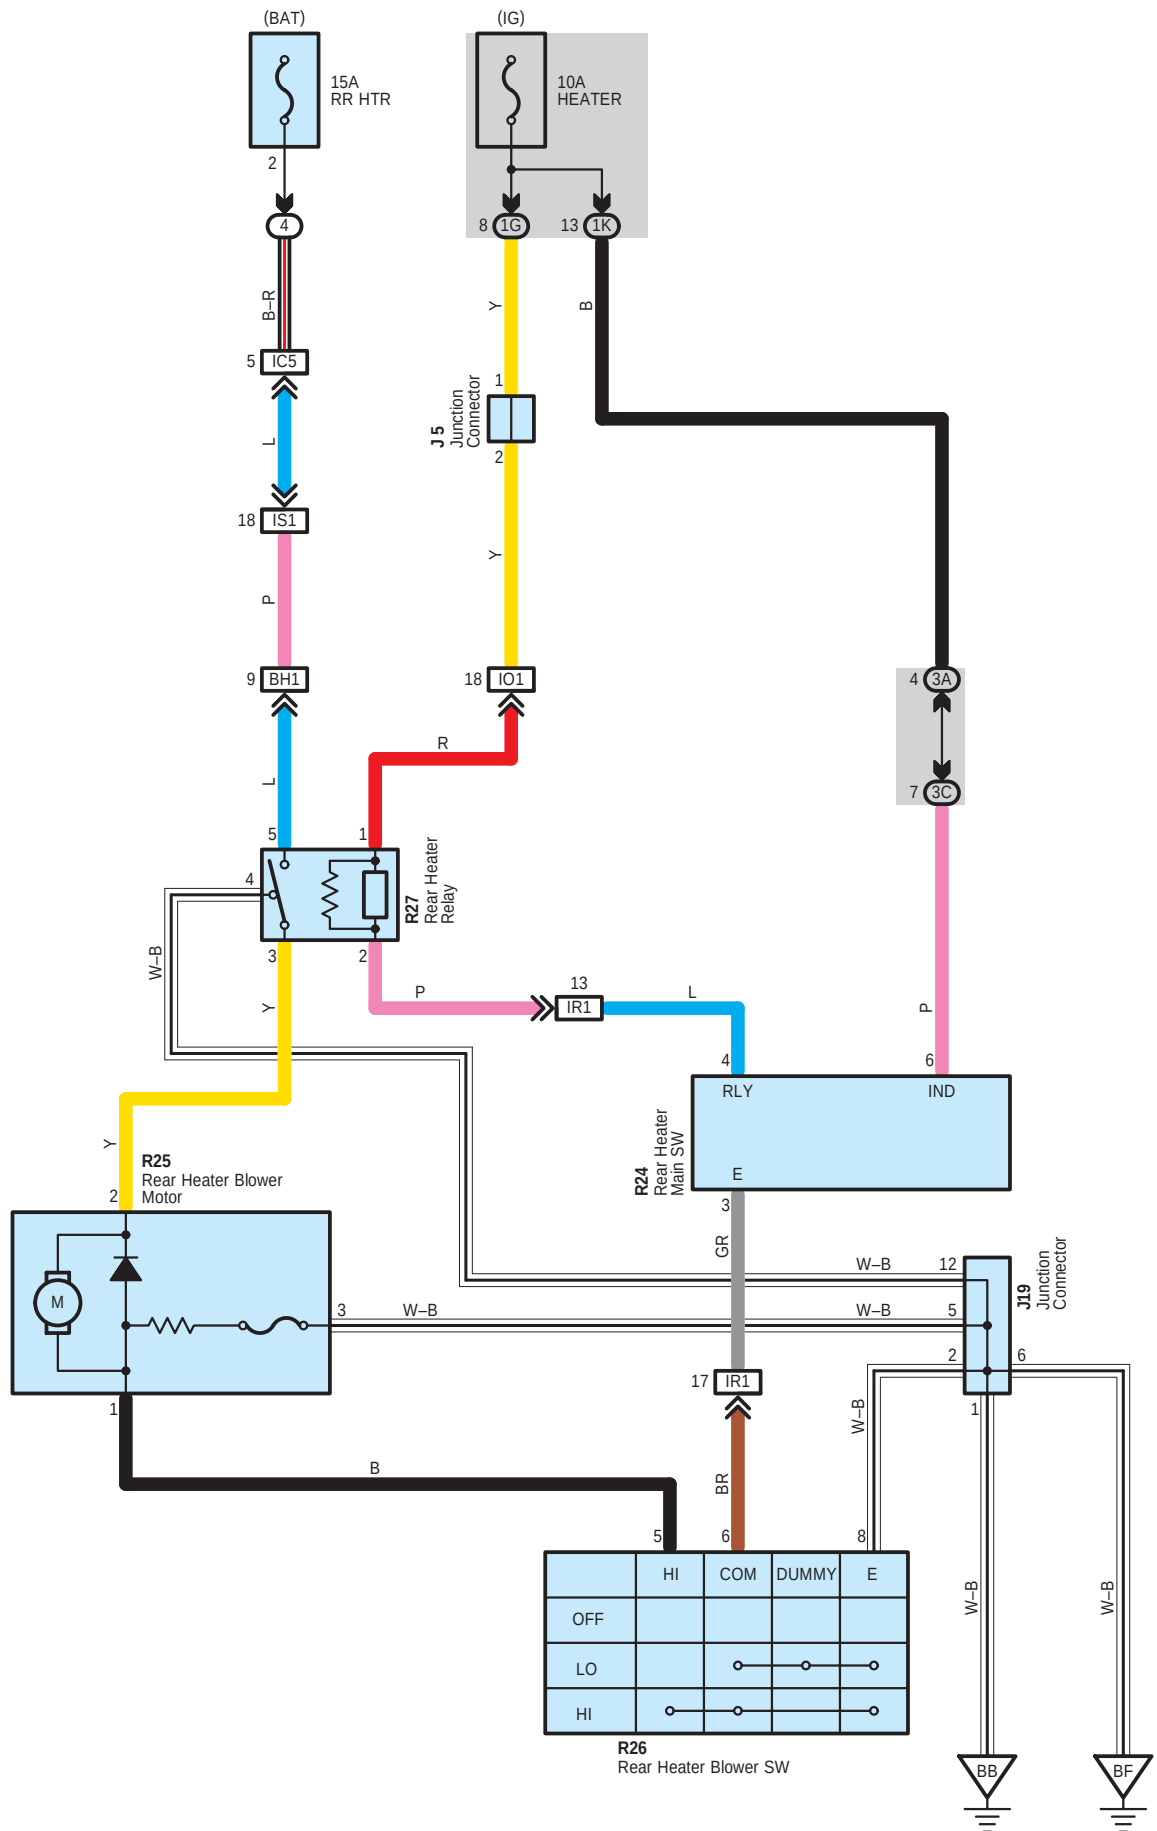

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
J5	45	R24	45	R26	47
J19	46	R25	47	R27	47

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
4	27	R/B No.4 (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1K	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
3A	34	Instrument Panel Wire and J/B No.3 (Behind the Instrument Panel Center)
3C		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC5	54	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IO1	55	Cowl Wire and Floor Wire (Right Kick Panel)
IR1	55	Instrument Panel Wire and Floor Wire (Under the Shift Lever)
IS1	55	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
BH1	56	Floor No.2 Wire and Floor Wire (Near the Rear Side Marker Light RH)

 : Ground Points

Code	See Page	Ground Points Location
BB	56	Right Center Pillar
BF	56	Near the Rear Side Marker Light RH