


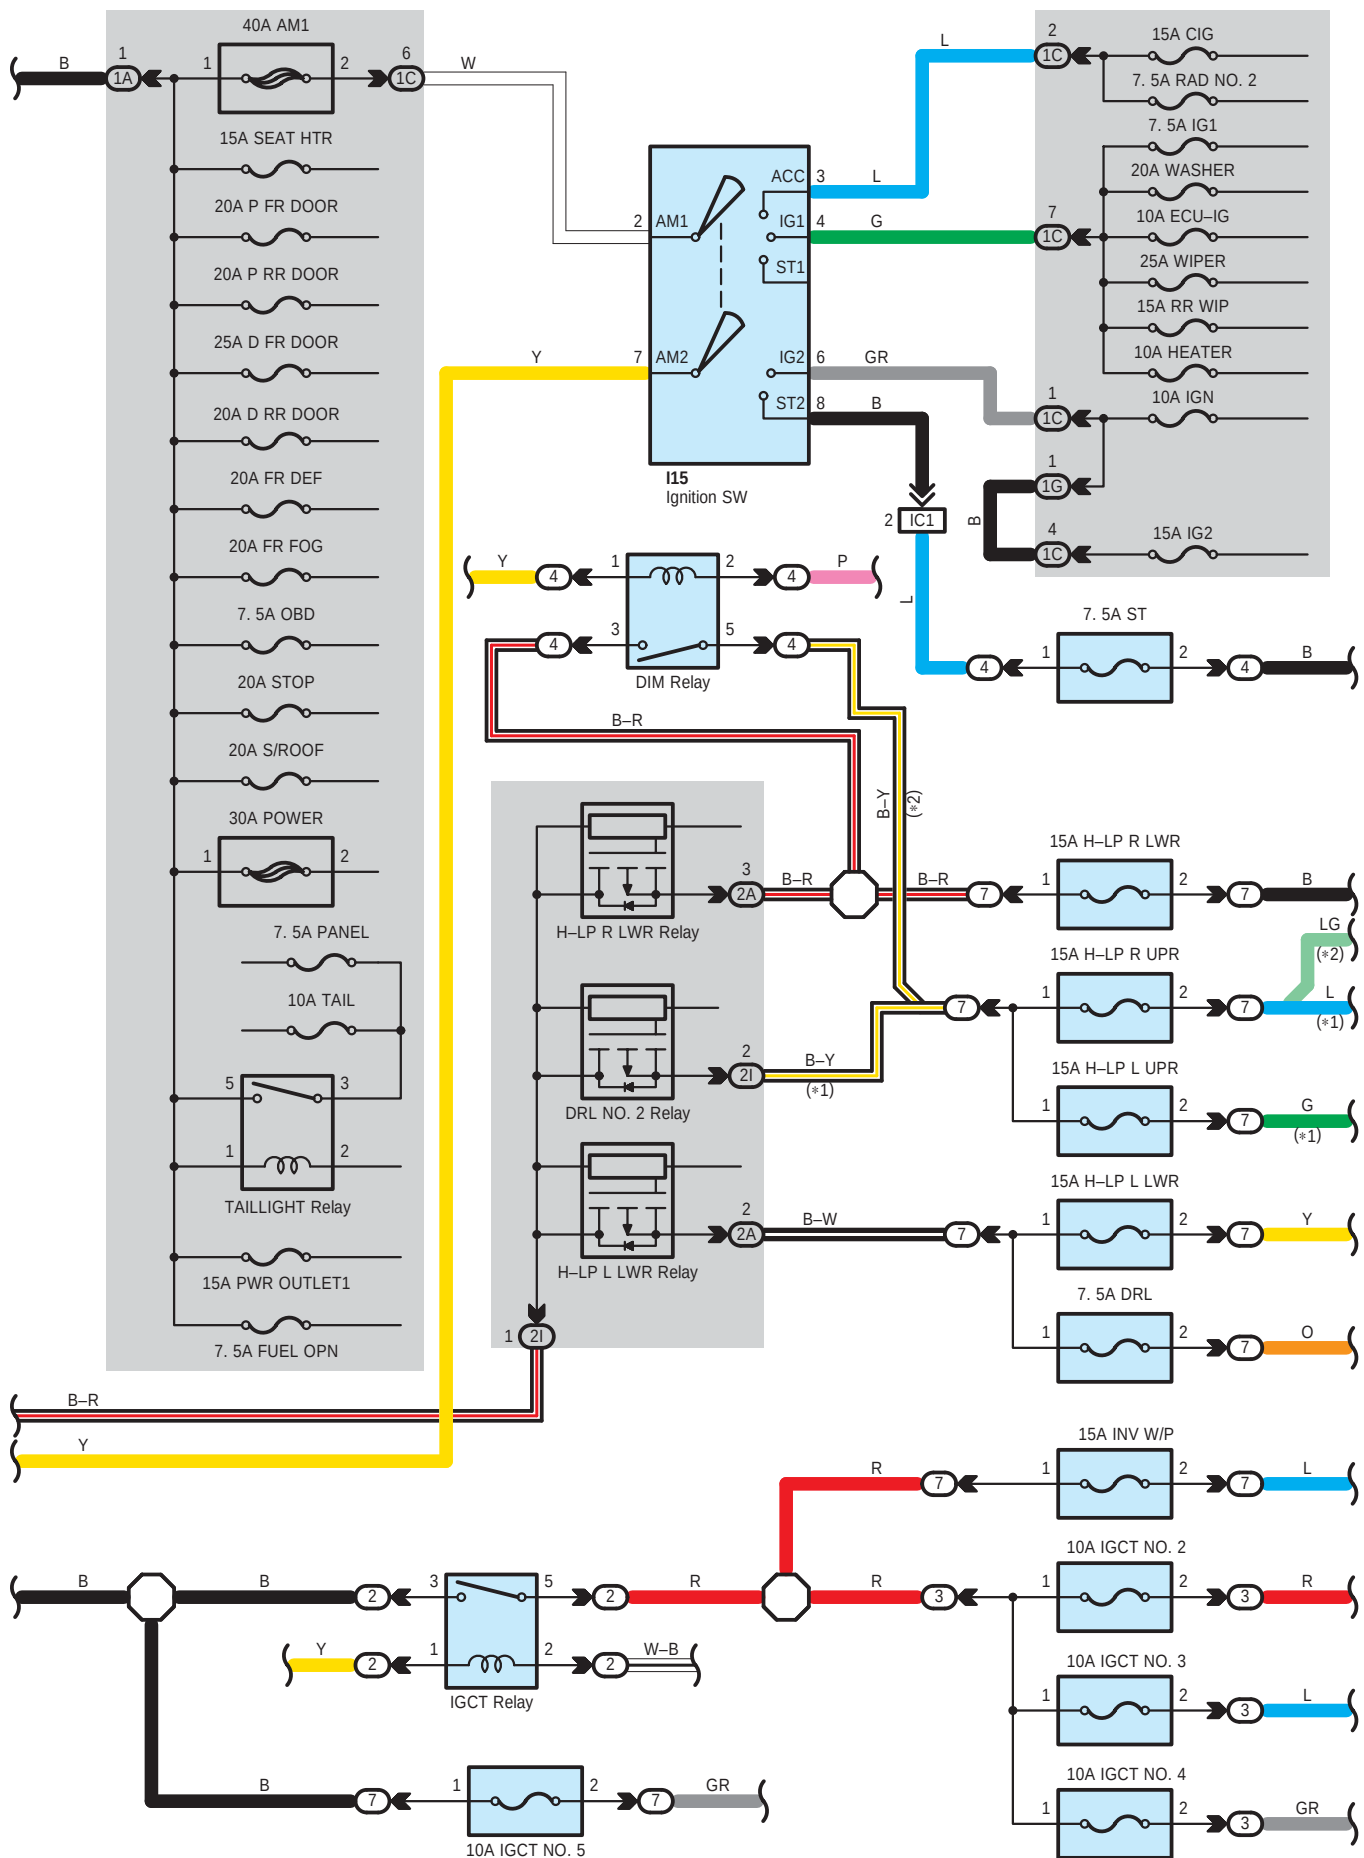

Power Source

: Parts Location

Code	See Page	Code	See Page	Code	See Page
I15	44				

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	25	R/B No.2 (Engine Compartment Left)
3	26	R/B No.3 (Engine Compartment Left)
4	27	R/B No.4 (Engine Compartment Left)
7	24	Fusible Link Block (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	31	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1C	31	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1G		
2A	28	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2I		
7A	24	Engine Room Main Wire and Fusible Link Block (Engine Compartment Left)
7B		
7C		
7F	24	Engine Room No.2 Wire and Fusible Link Block (Engine Compartment Left)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	54	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)

