


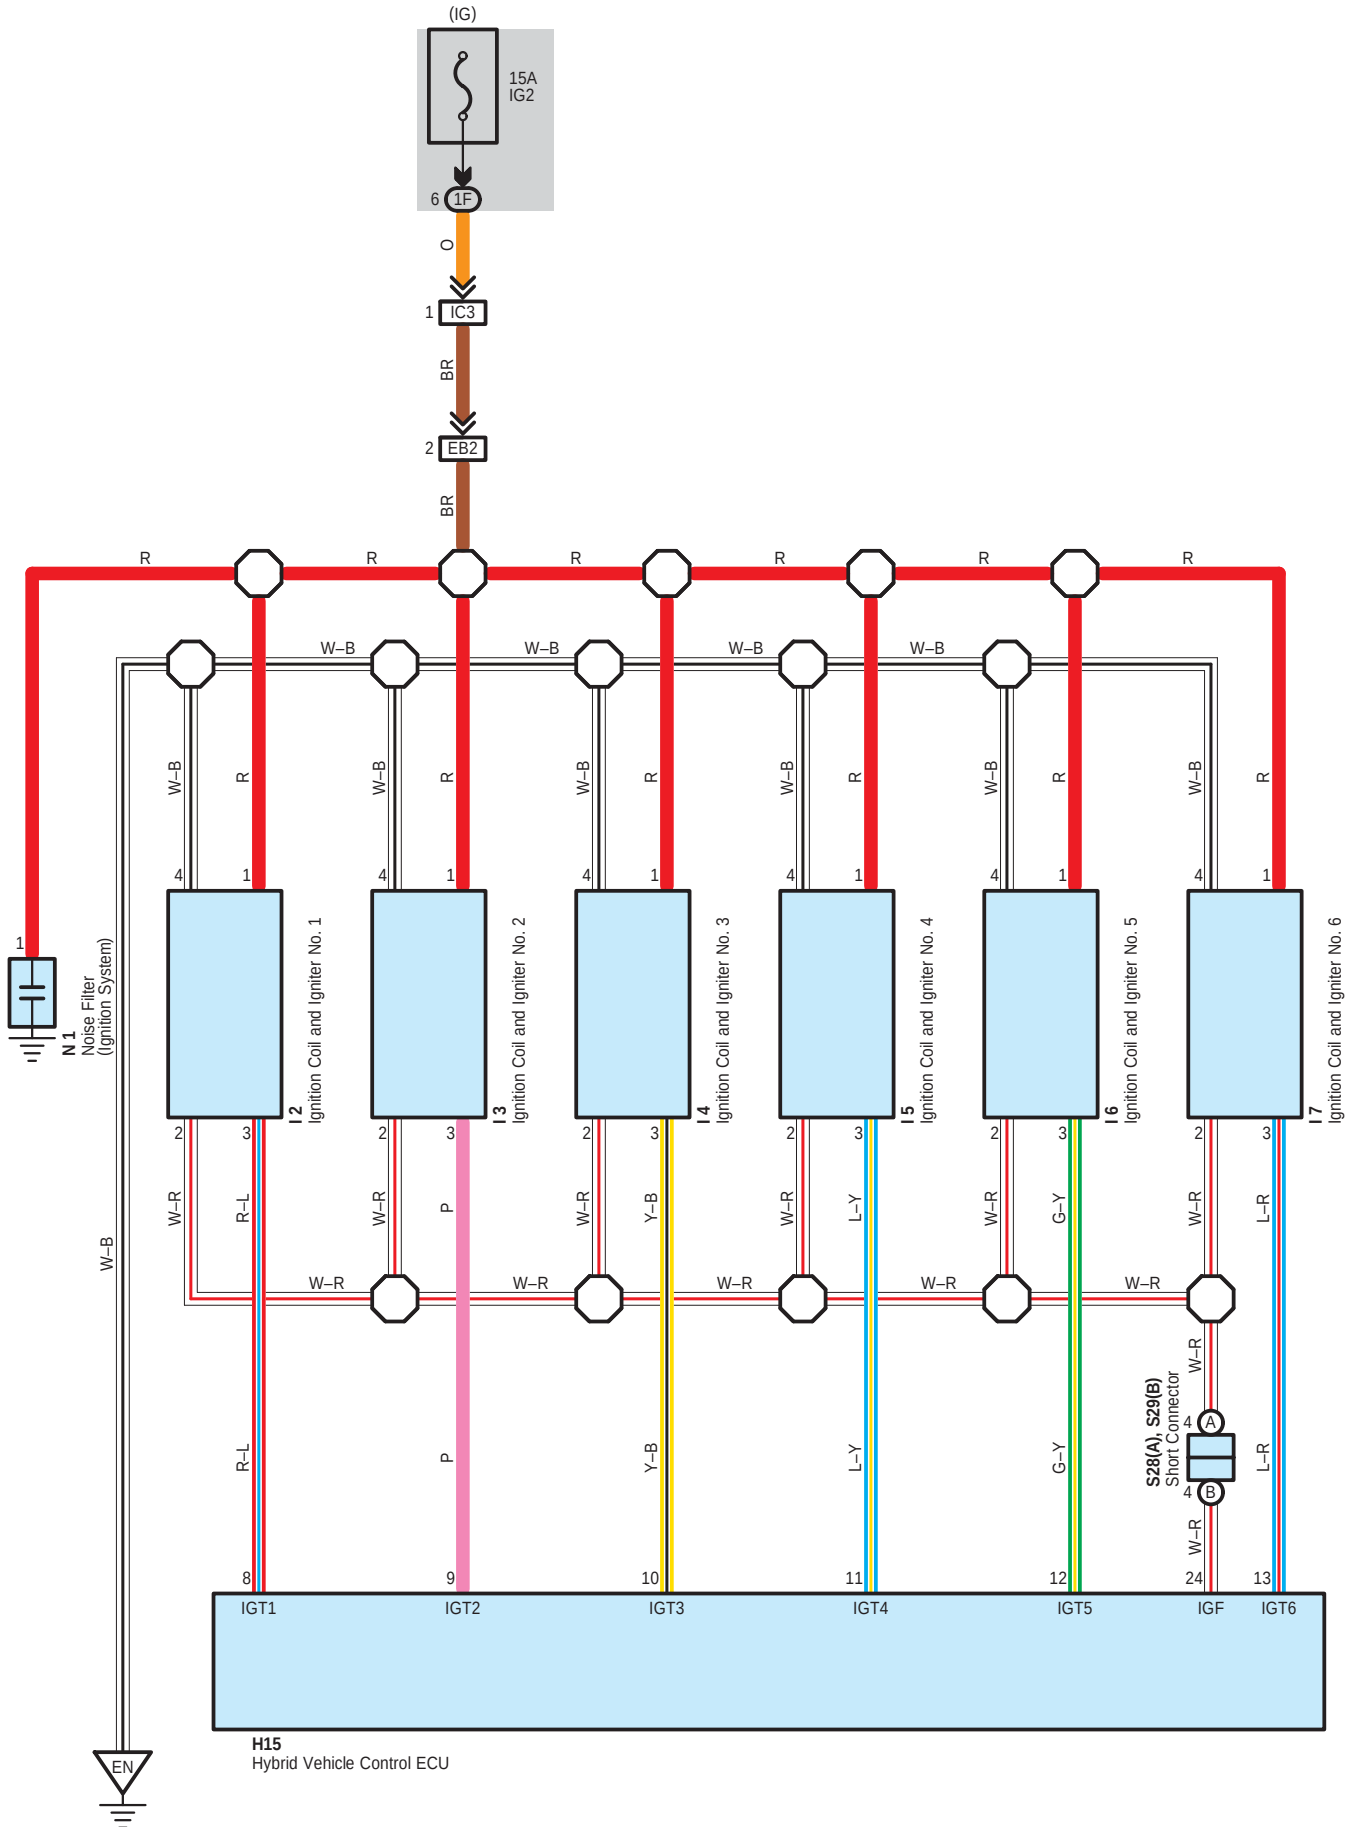

 : Parts Location

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| H15  | 44       | I5   | 43       | S28  | A 47     |
| I2   | 43       | I6   | 43       | S29  | B 47     |
| I3   | 43       | I7   | 43       |      |          |
| I4   | 43       | N1   | 43       |      |          |

 : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location)    |
|------|----------|---------------------------------------------------------|
| 1F   | 31       | Cowl Wire and Instrument Panel J/B (Lower Finish Panel) |

 : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)                 |
|------|----------|----------------------------------------------------------------------------|
| EB2  | 52       | Engine Wire and Engine Room Main Wire (Front Side of Engine Room R/B No.4) |
| IC3  | 54       | Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)                 |

 : Ground Points

| Code | See Page | Ground Points Location         |
|------|----------|--------------------------------|
| EN   | 52       | Left Side of the Cylinder Head |