

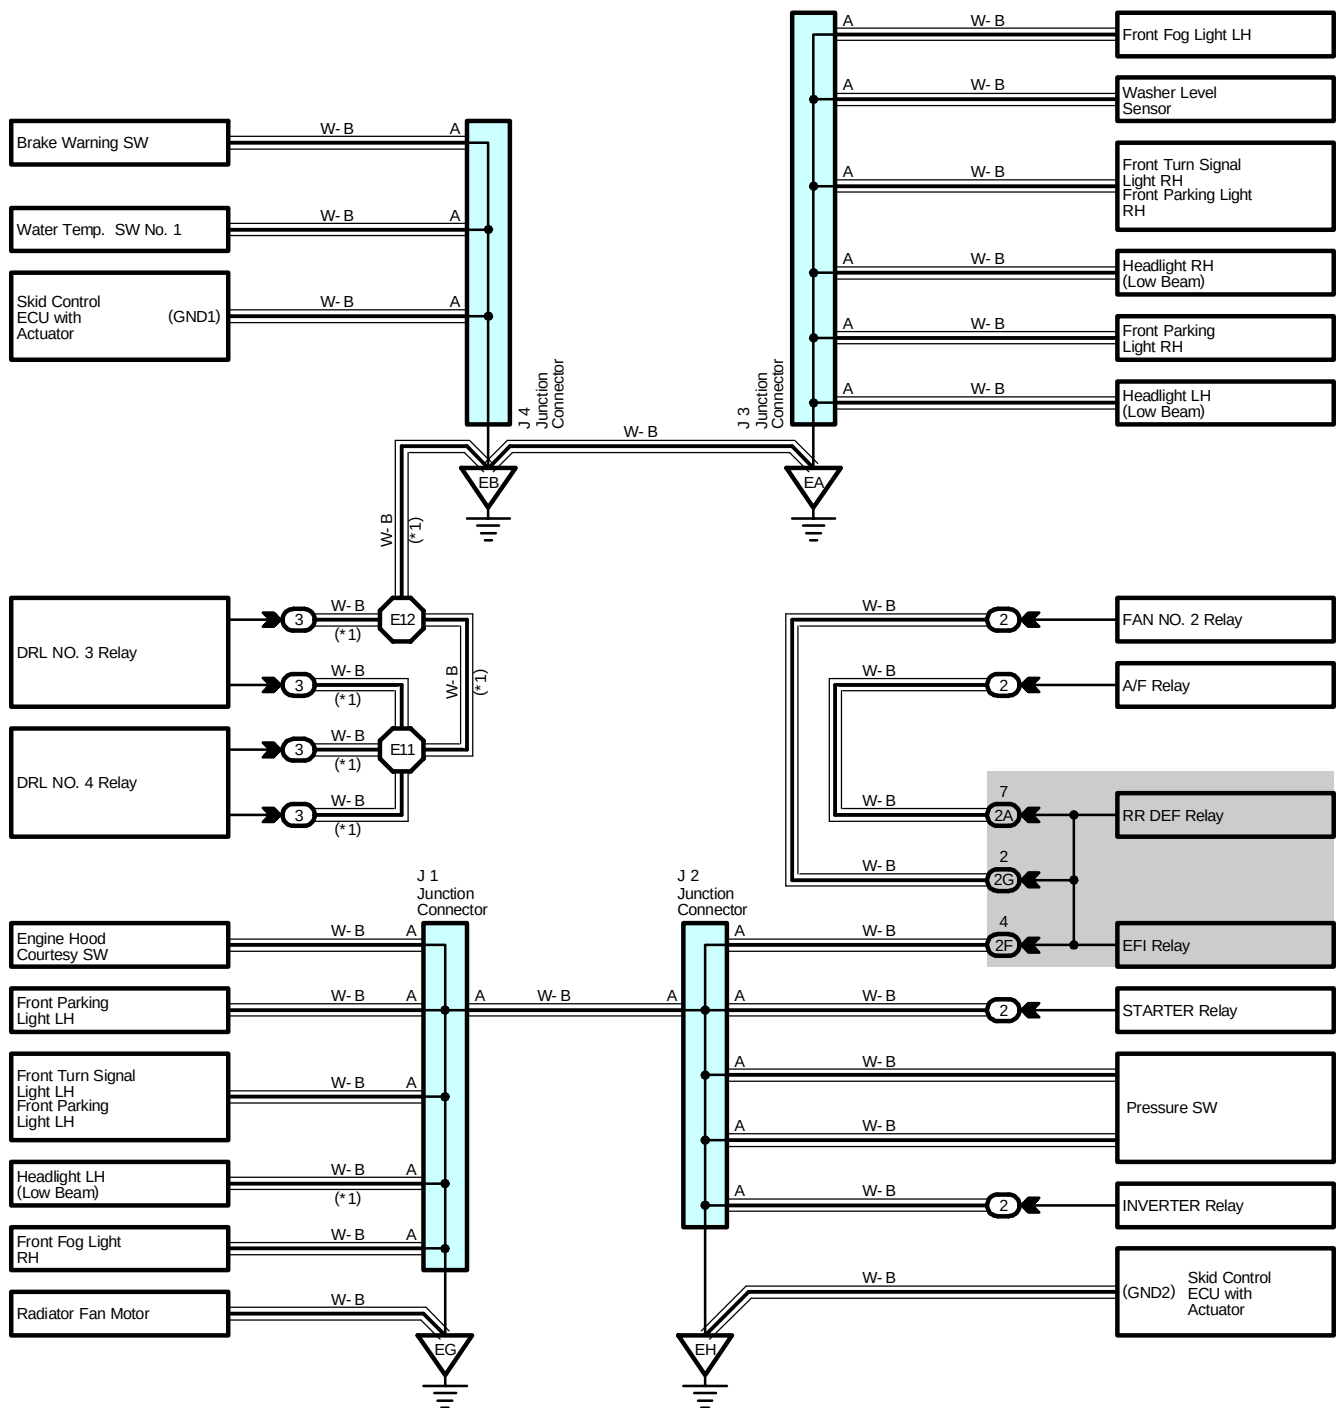
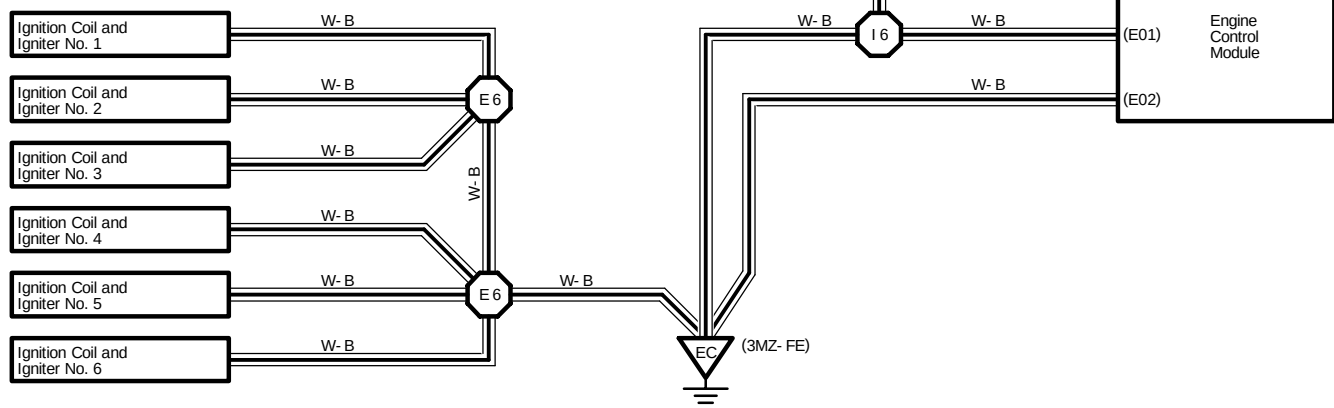
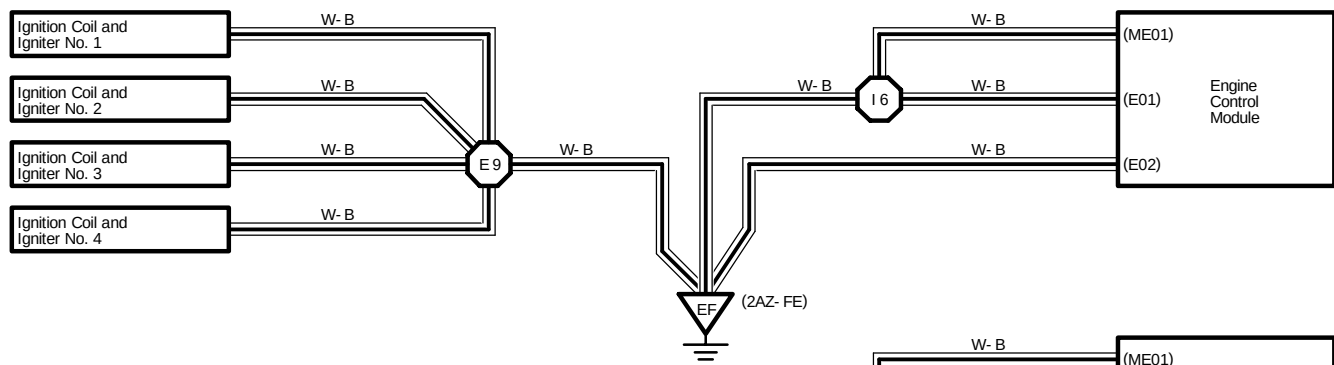



I GROUND POINT

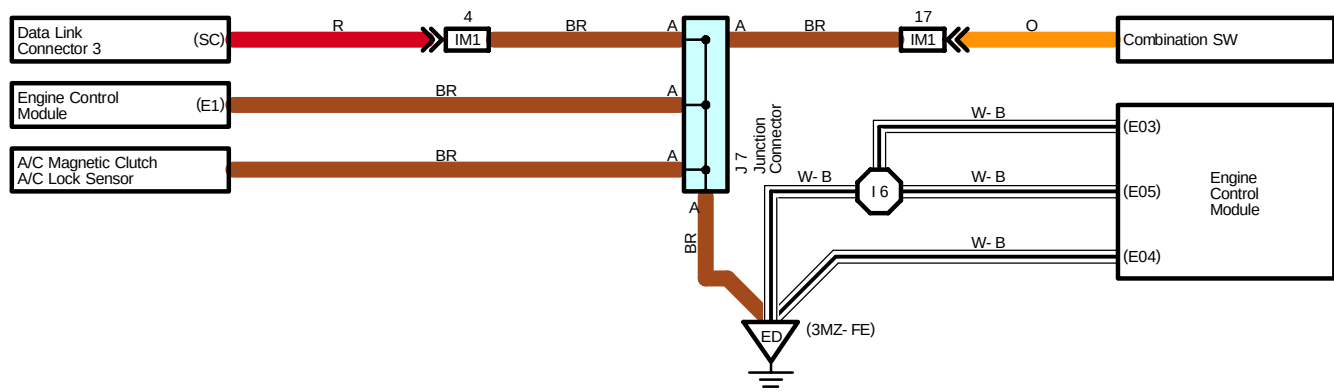


* 1 : w/ Daytime Running Light

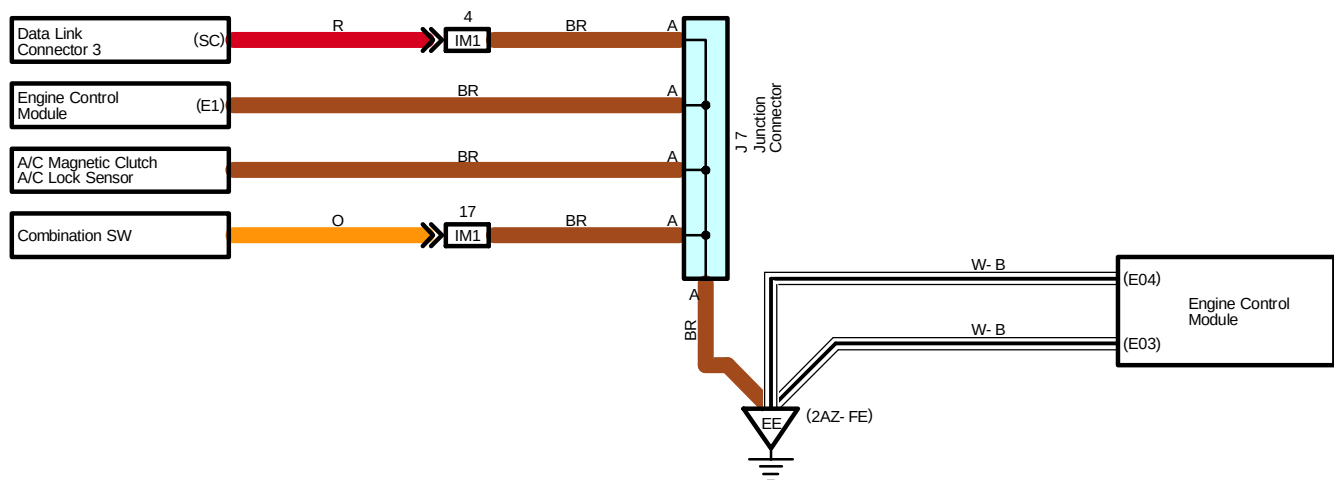


I GROUND POINT

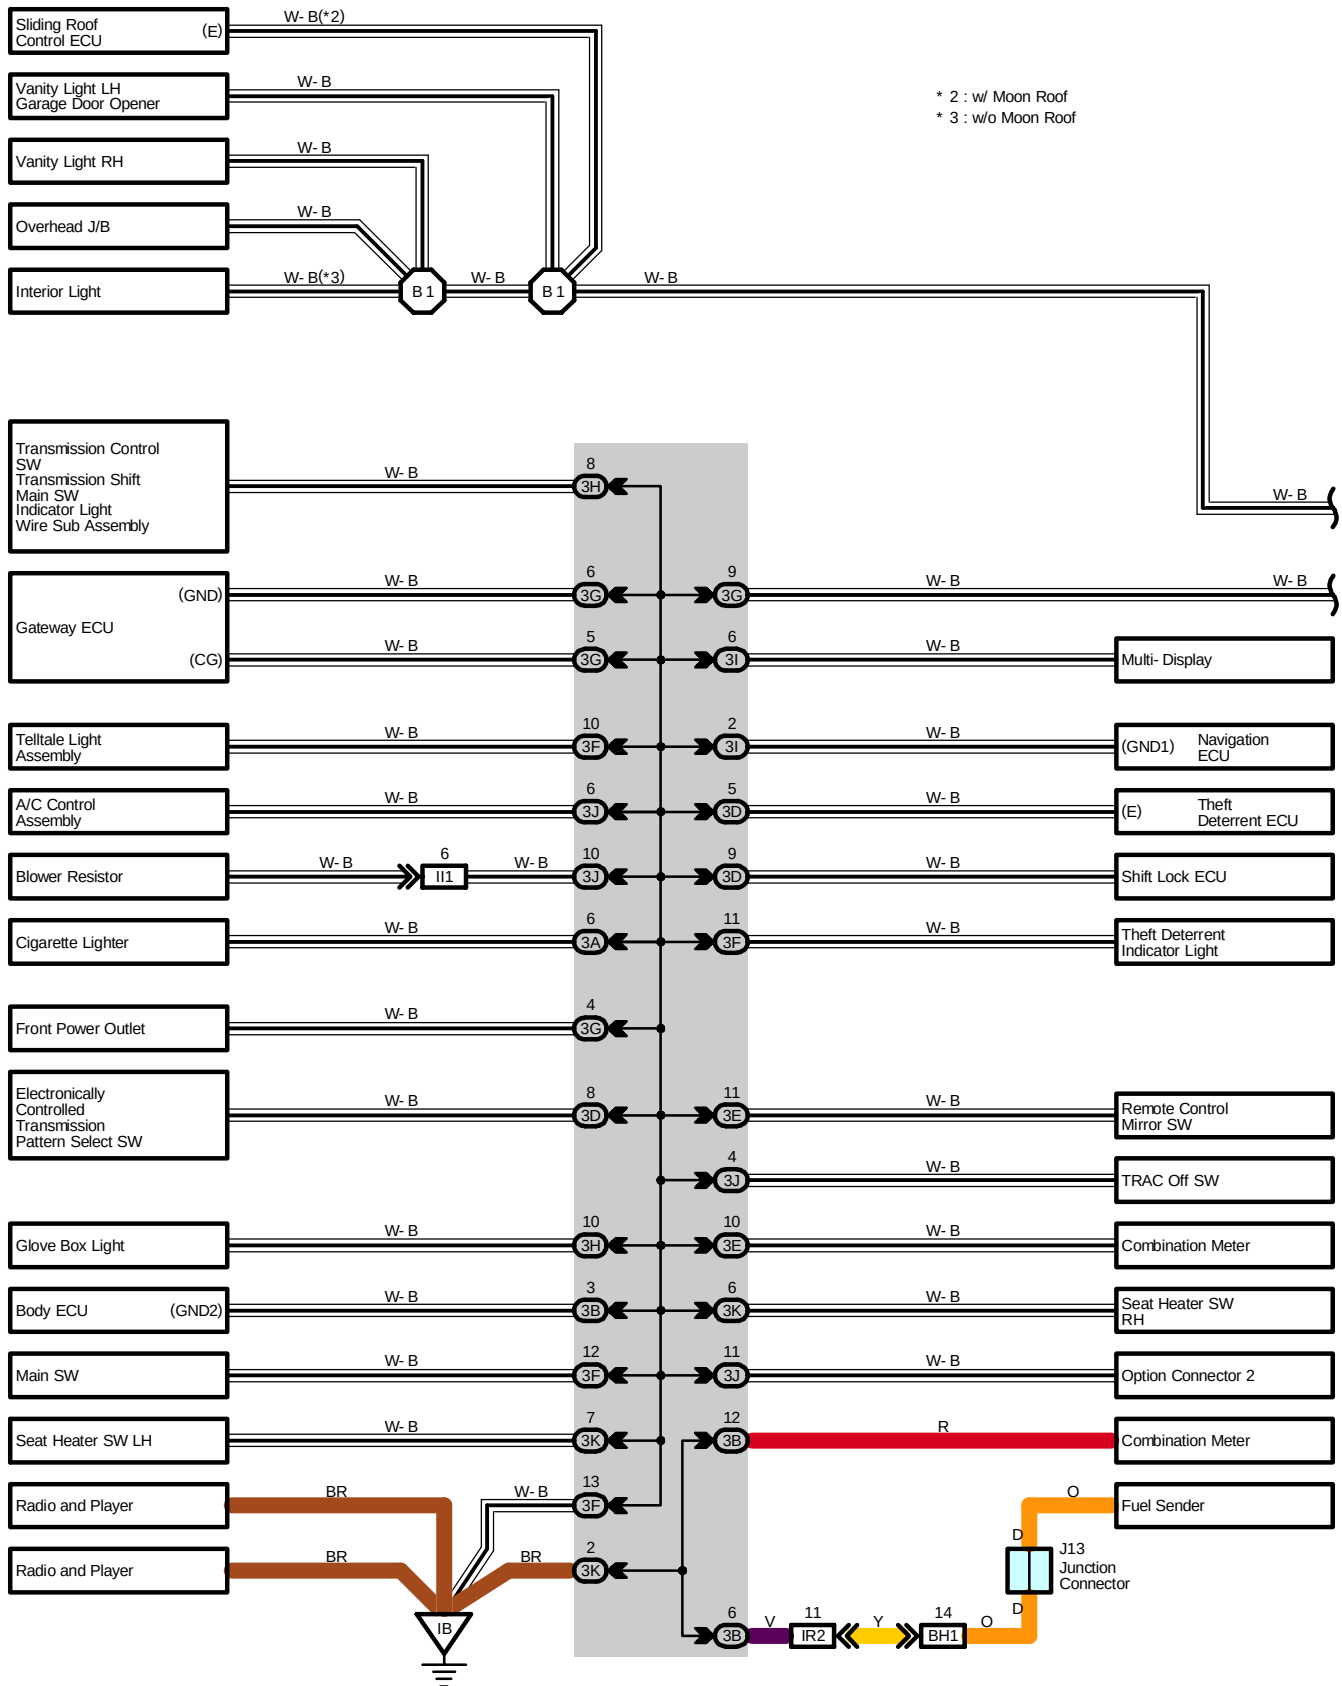


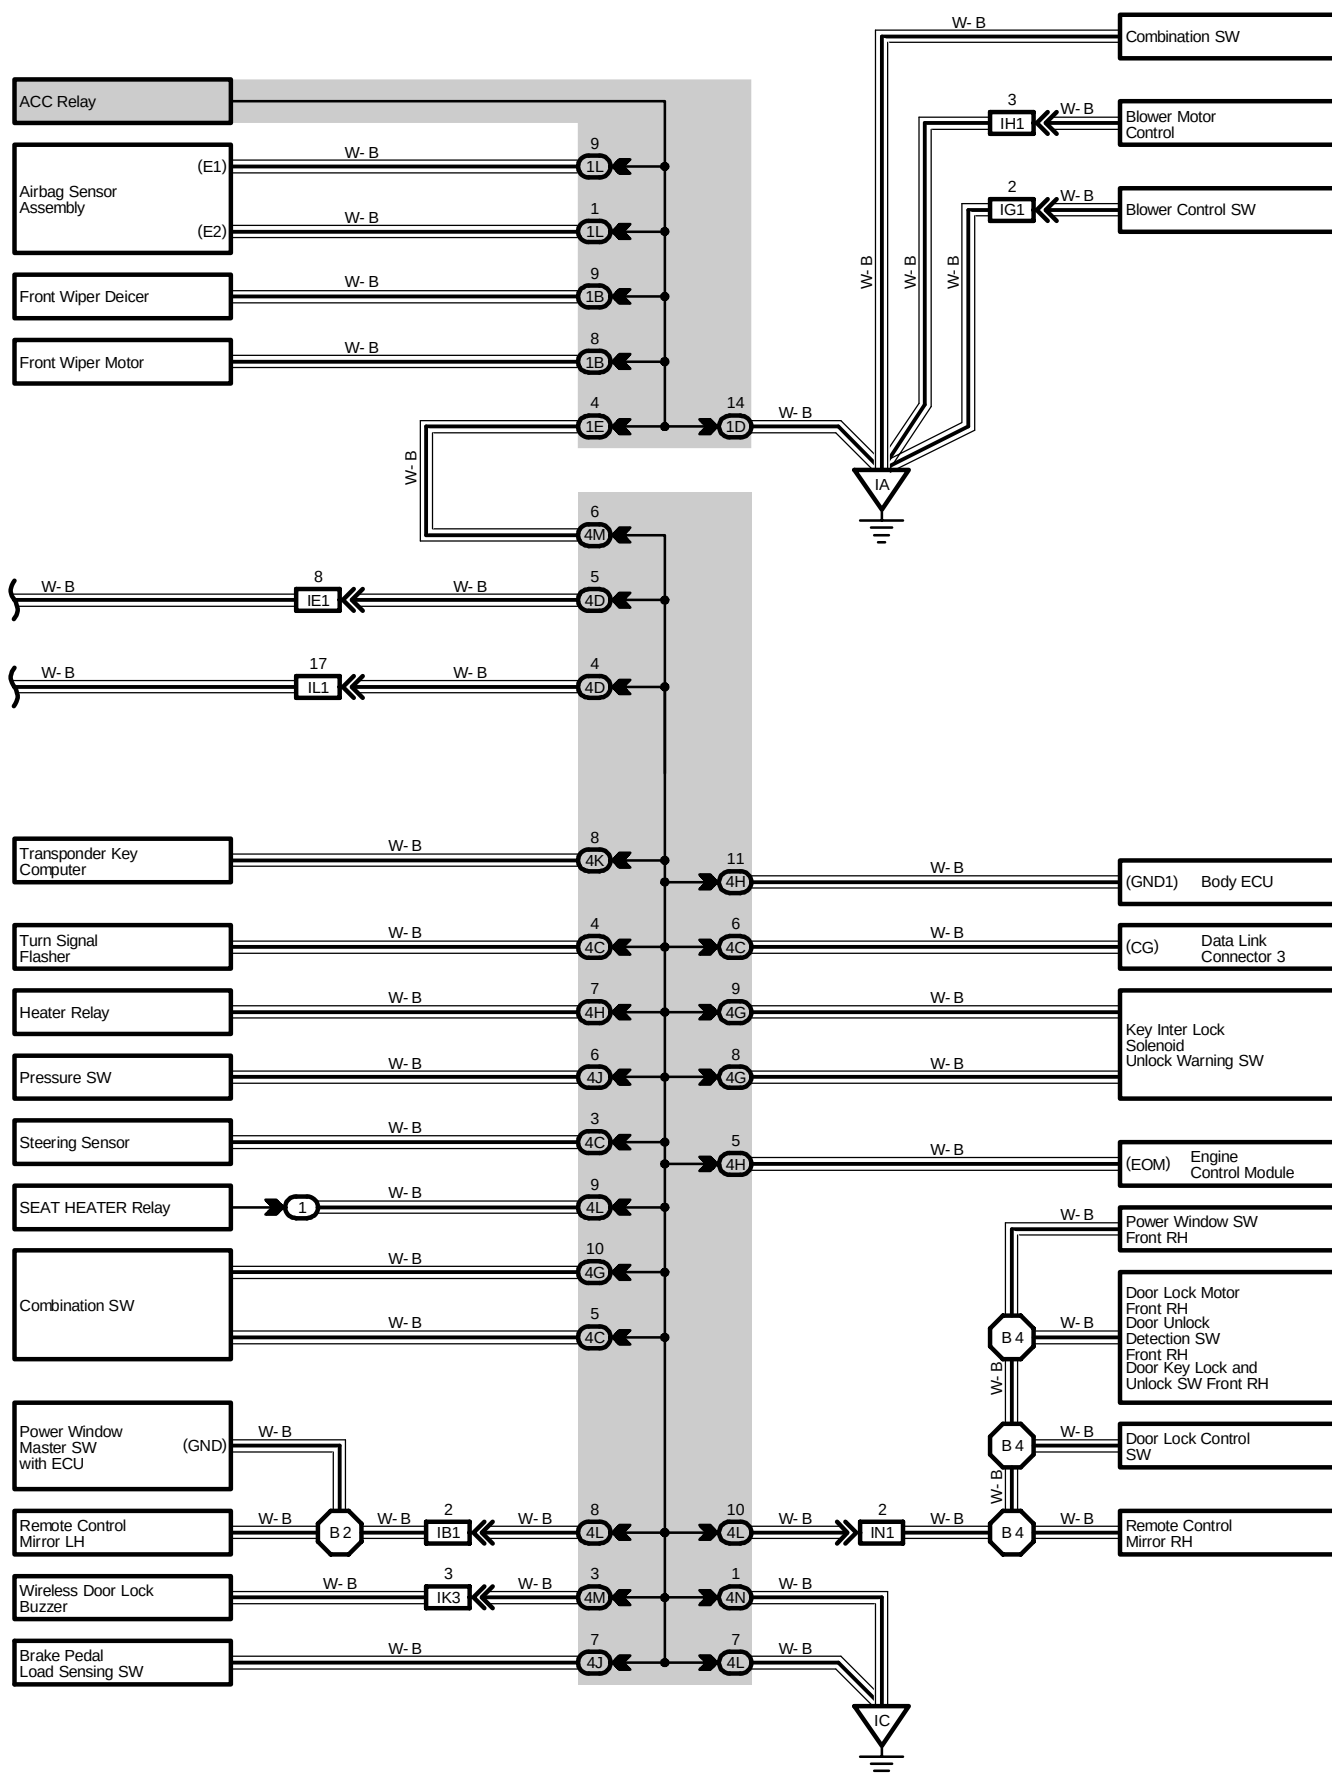

I GROUND POINT

* 4 : w/ Power Seat(Front Passenger' s Seat)
 * 5 : w/o Power Seat(Front Passenger' s Seat)

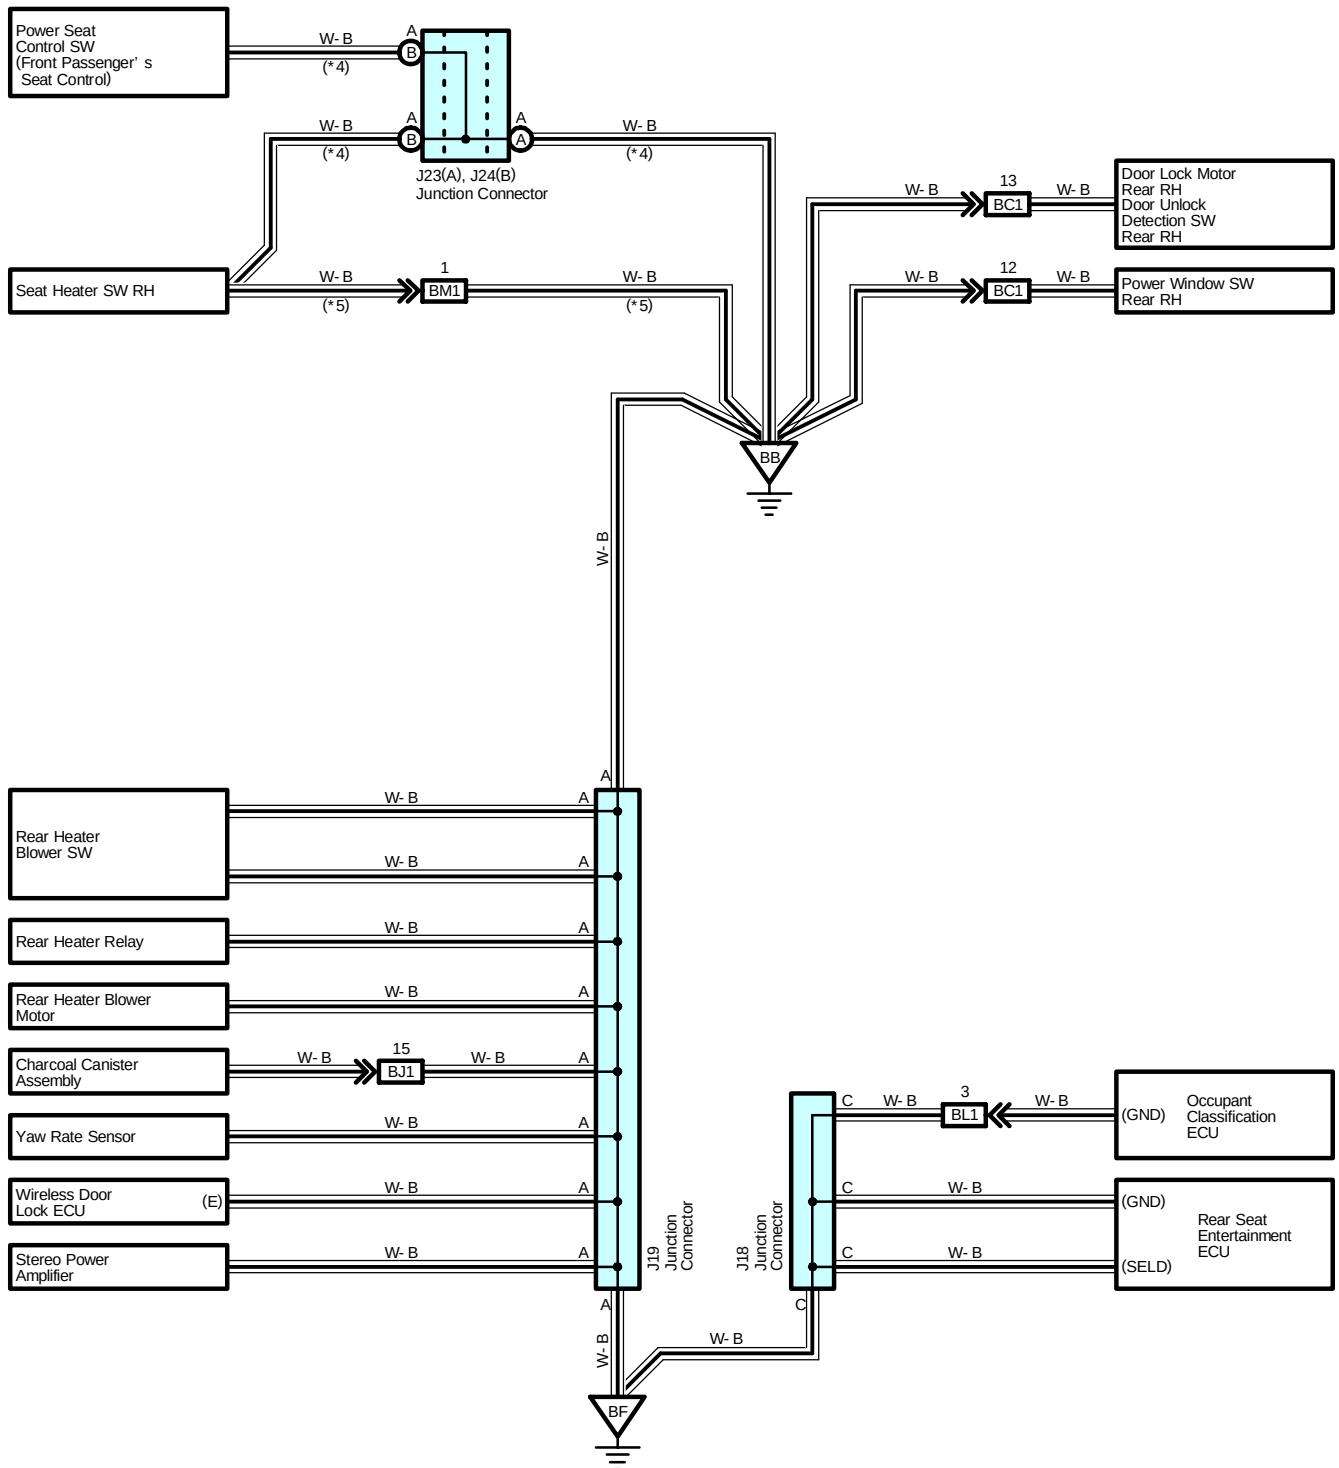

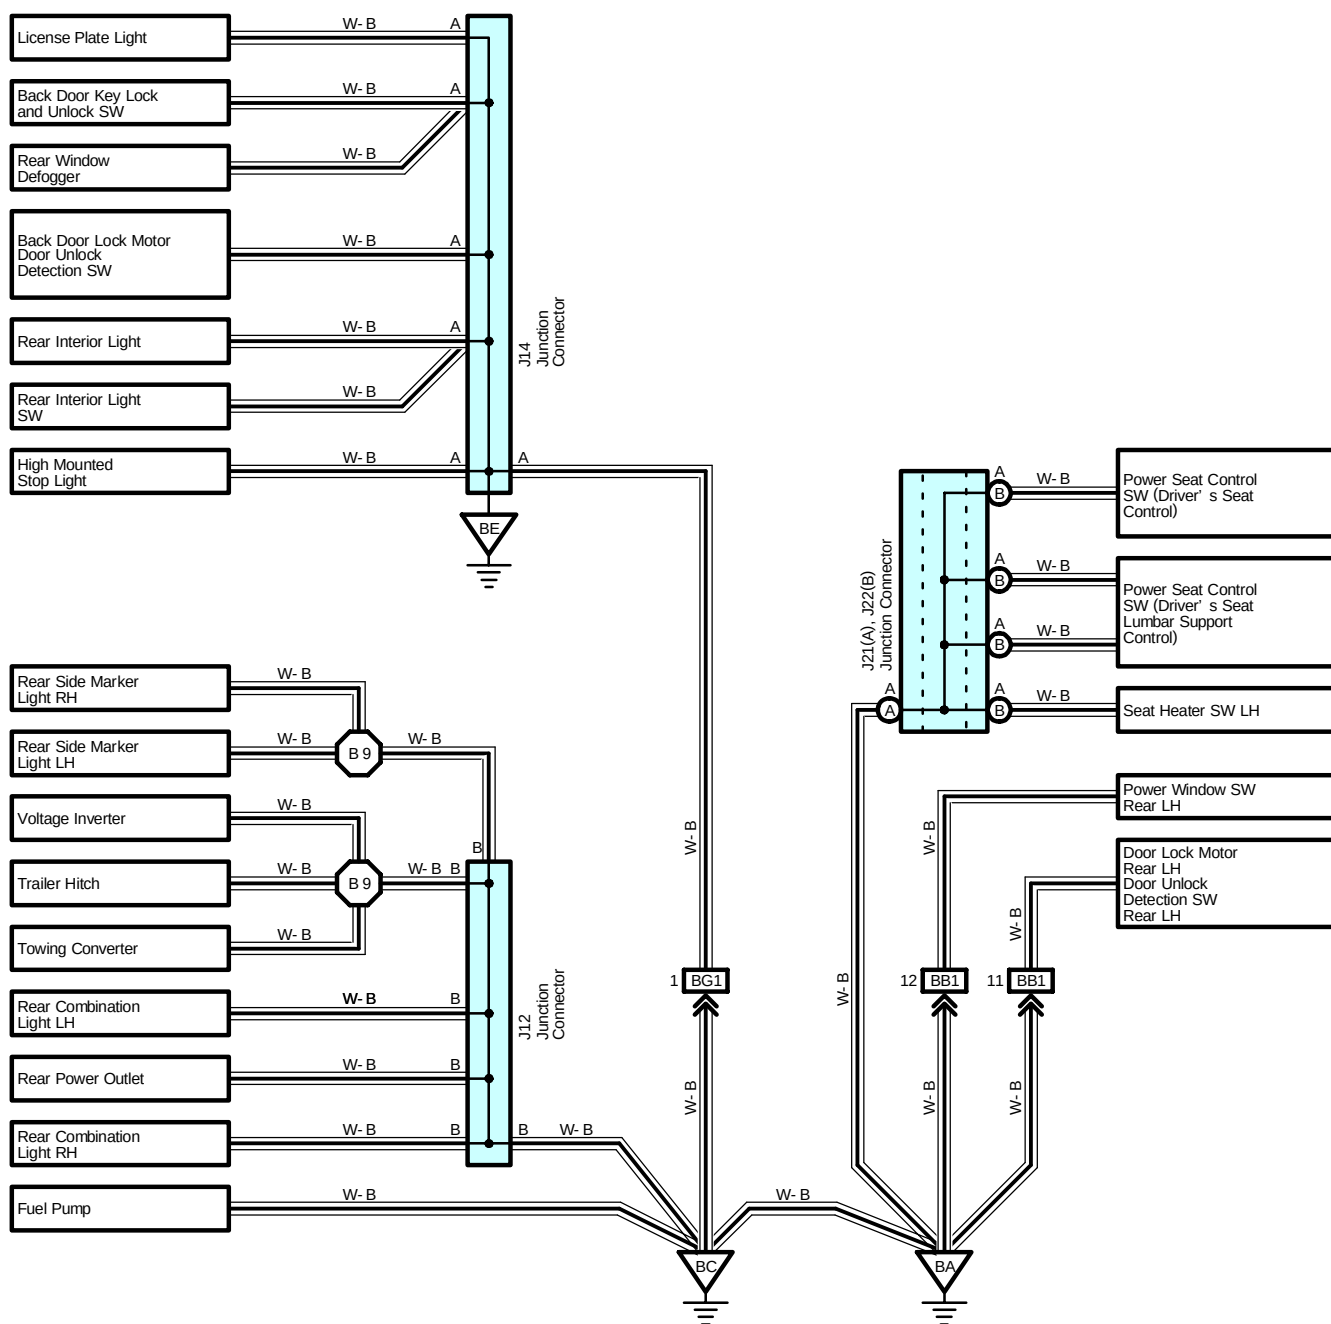

I GROUND POINT

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J1	39 (3MZ-FE)	J4	39 (3MZ-FE)	J18	44
	41 (2AZ-FE)		41 (2AZ-FE)	J19	44
J2	39 (3MZ-FE)	J7	43	J21	A 46 (w/ Power Seat)
	41 (2AZ-FE)	J12	44	J22	B 46 (w/ Power Seat)
J3	39 (3MZ-FE)	J13	44	J23	A 46 (w/ Power Seat)
	41 (2AZ-FE)	J14	44	J24	B 46 (w/ Power Seat)

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)
3	23	Engine Room R/B No.3 (Engine Compartment Rear Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	29	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1D	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1L		
2A	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2F		
2G		
3A	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3B		
3D		
3E		
3F		
3G	31	
3H		
3I		
3J		
3K		
4C	33	Cowl Wire and Passenger Side J/B (Right Side of Grove Box)
4D		
4G		
4H		
4J	32	
4K		
4L		
4M		
4N		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	52	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IE1	52	Roof Wire and Cowl Wire (Near the Bottom of Left Front Pillar)
IG1	52	Instrument Panel Wire and Cowl Wire (Upper Portion of Right Instrument Panel Brace)
IH1	54	Cowl Wire and A/C Sub No.2 Wire (Upper Portion of Right Instrument Panel Brace)
II1	54	Instrument Panel Wire and A/C Sub No.1 Wire (Upper Portion of Right Instrument Panel Brace)
IK3	54	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IL1	54	Instrument Panel Wire and Cowl Wire (Upper Side of Passenger Side J/B)
IM1	54	Engine Wire and Cowl Wire (Right Kick Panel)
IN1	54	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IR2	54	Instrument Panel Wire and Floor Wire (Under the Shift Lever)
BB1	56	Rear Door No.1 LH Wire and Floor No.2 Wire (Left Center Pillar)
BC1	56	Rear Door No.1 RH Wire and Floor Wire (Right Center Pillar)
BG1	56	Back Door No.1 Wire and Floor No.2 Wire (Rear Left of the Roof)
BH1	56	Floor No.2 Wire and Floor Wire (Near the Rear Side Marker Light RH)
BJ1	56	Floor Wire and Floor No.4 Wire (Right Side of Rear Floor Crossmember)
BL1	58	Floor Wire and Front Seat RH Wire (Under the Front Passenger's Seat)
BM1		

 : GROUND POINTS

Code	See Page	Ground Points Location
EA	48 (3MZ-FE)	Right Front Fender Apron
	50 (2AZ-FE)	
EB	48 (3MZ-FE)	
	50 (2AZ-FE)	
EC	48 (3MZ-FE)	Left Side of Cylinder Head
ED	48 (3MZ-FE)	Rear Side of Cylinder Head
EE	50 (2AZ-FE)	Intake Side of Cylinder Block
EF	50 (2AZ-FE)	Left Side of Cylinder Block
EG	48 (3MZ-FE)	Under the Left Headlight
	50 (2AZ-FE)	
EH	48 (3MZ-FE)	
	50 (2AZ-FE)	
IA	52	Left Cowl Side Panel
IB	52	Right Instrument Panel Brace
IC	52	Right Cowl Side Panel
BA	56	Left Center Pillar
BB	56	Right Center Pillar
BC	56	Left Side of Rear Cross Member
BE	56	Left Side of Back Door
BF	56	Near the Rear Side Marker Light RH

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E6	48 (3MZ-FE)	Engine Wire	I6	54	Engine Wire
E9	50 (2AZ-FE)		B1	56	Roof Wire
E11	48 (3MZ-FE)	Engine Room Main Wire	B2	56	Front Door LH Wire
	50 (2AZ-FE)		B4	56	Front Door RH Wire
E12	48 (3MZ-FE)		B9	56	Floor No.2 Wire
	50 (2AZ-FE)				