




Audio System with 8 Speaker

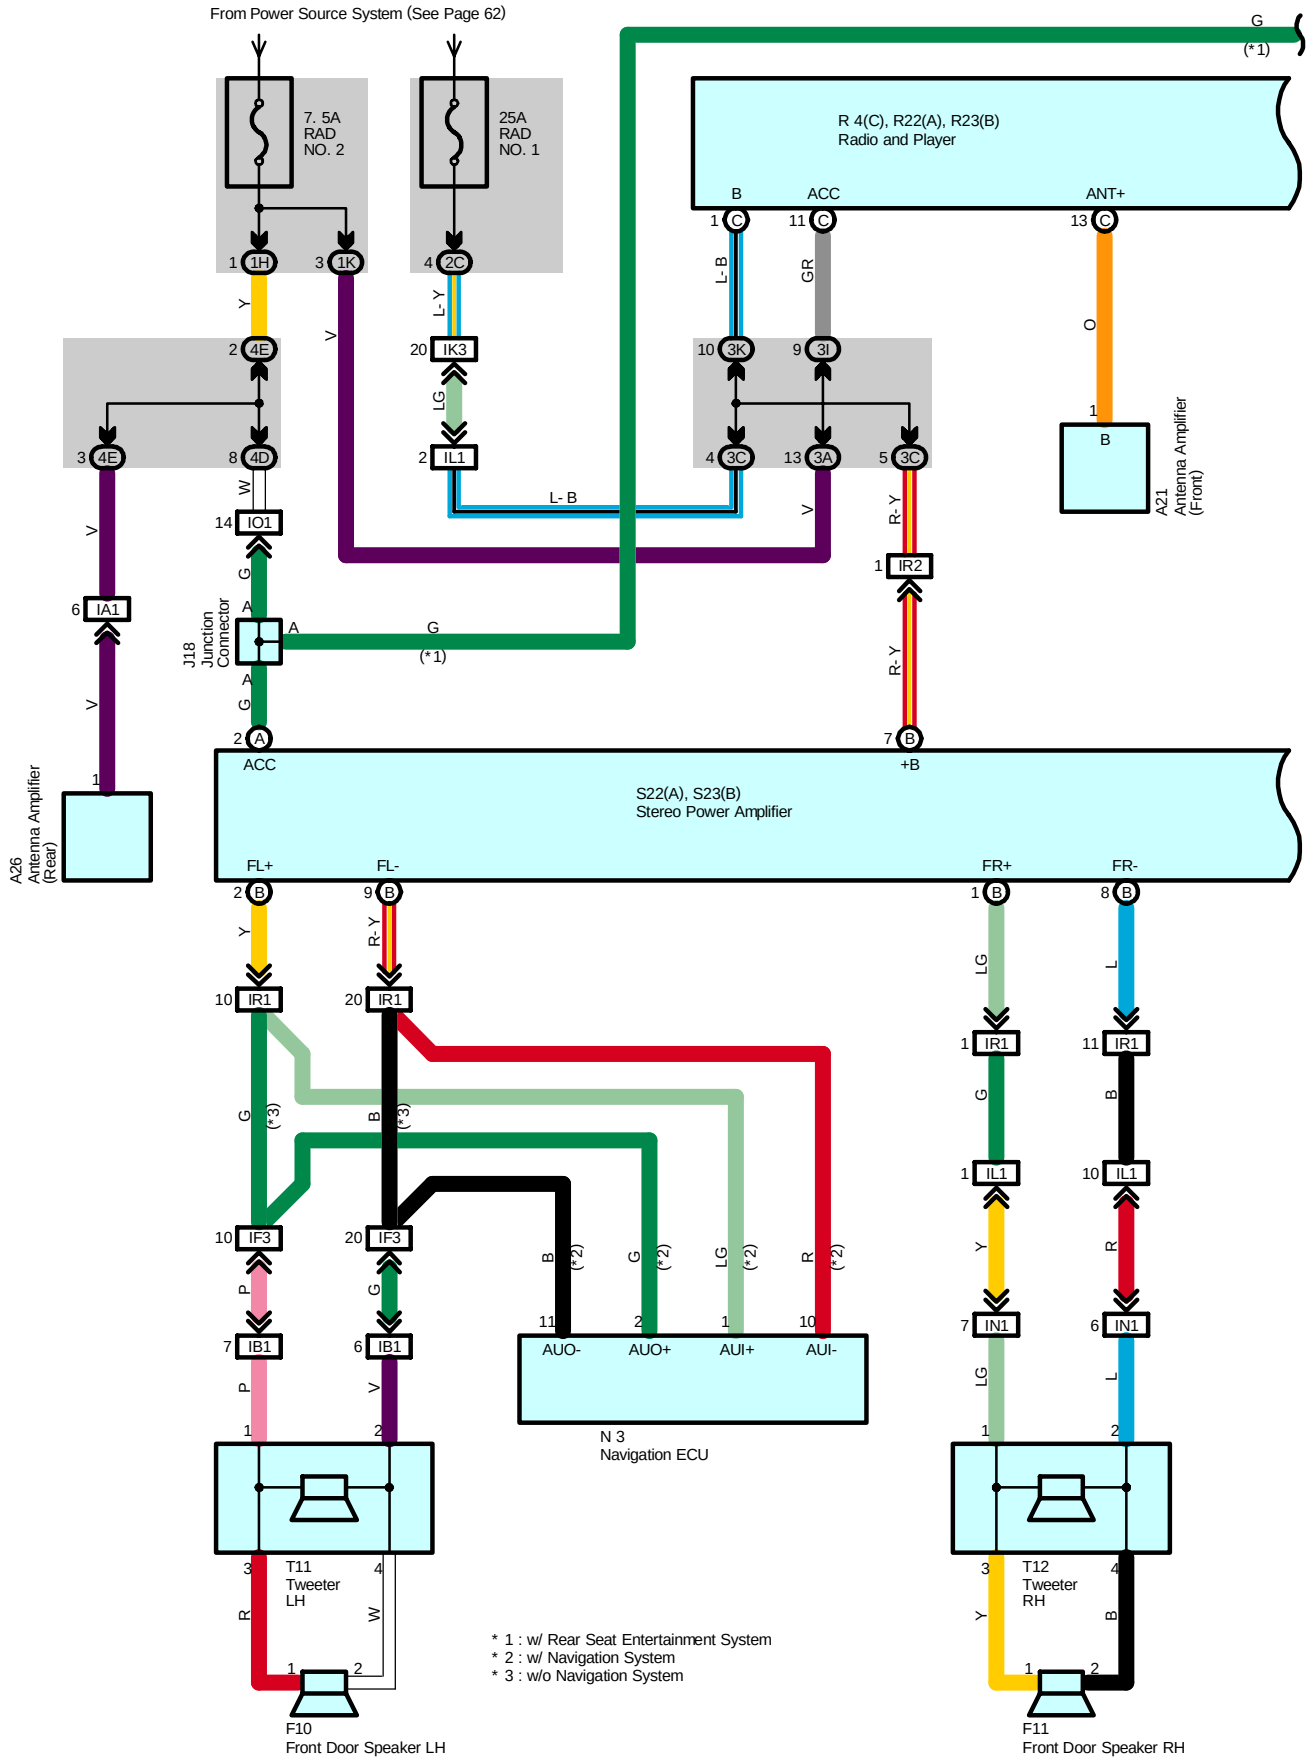


Audio System with 8 Speaker

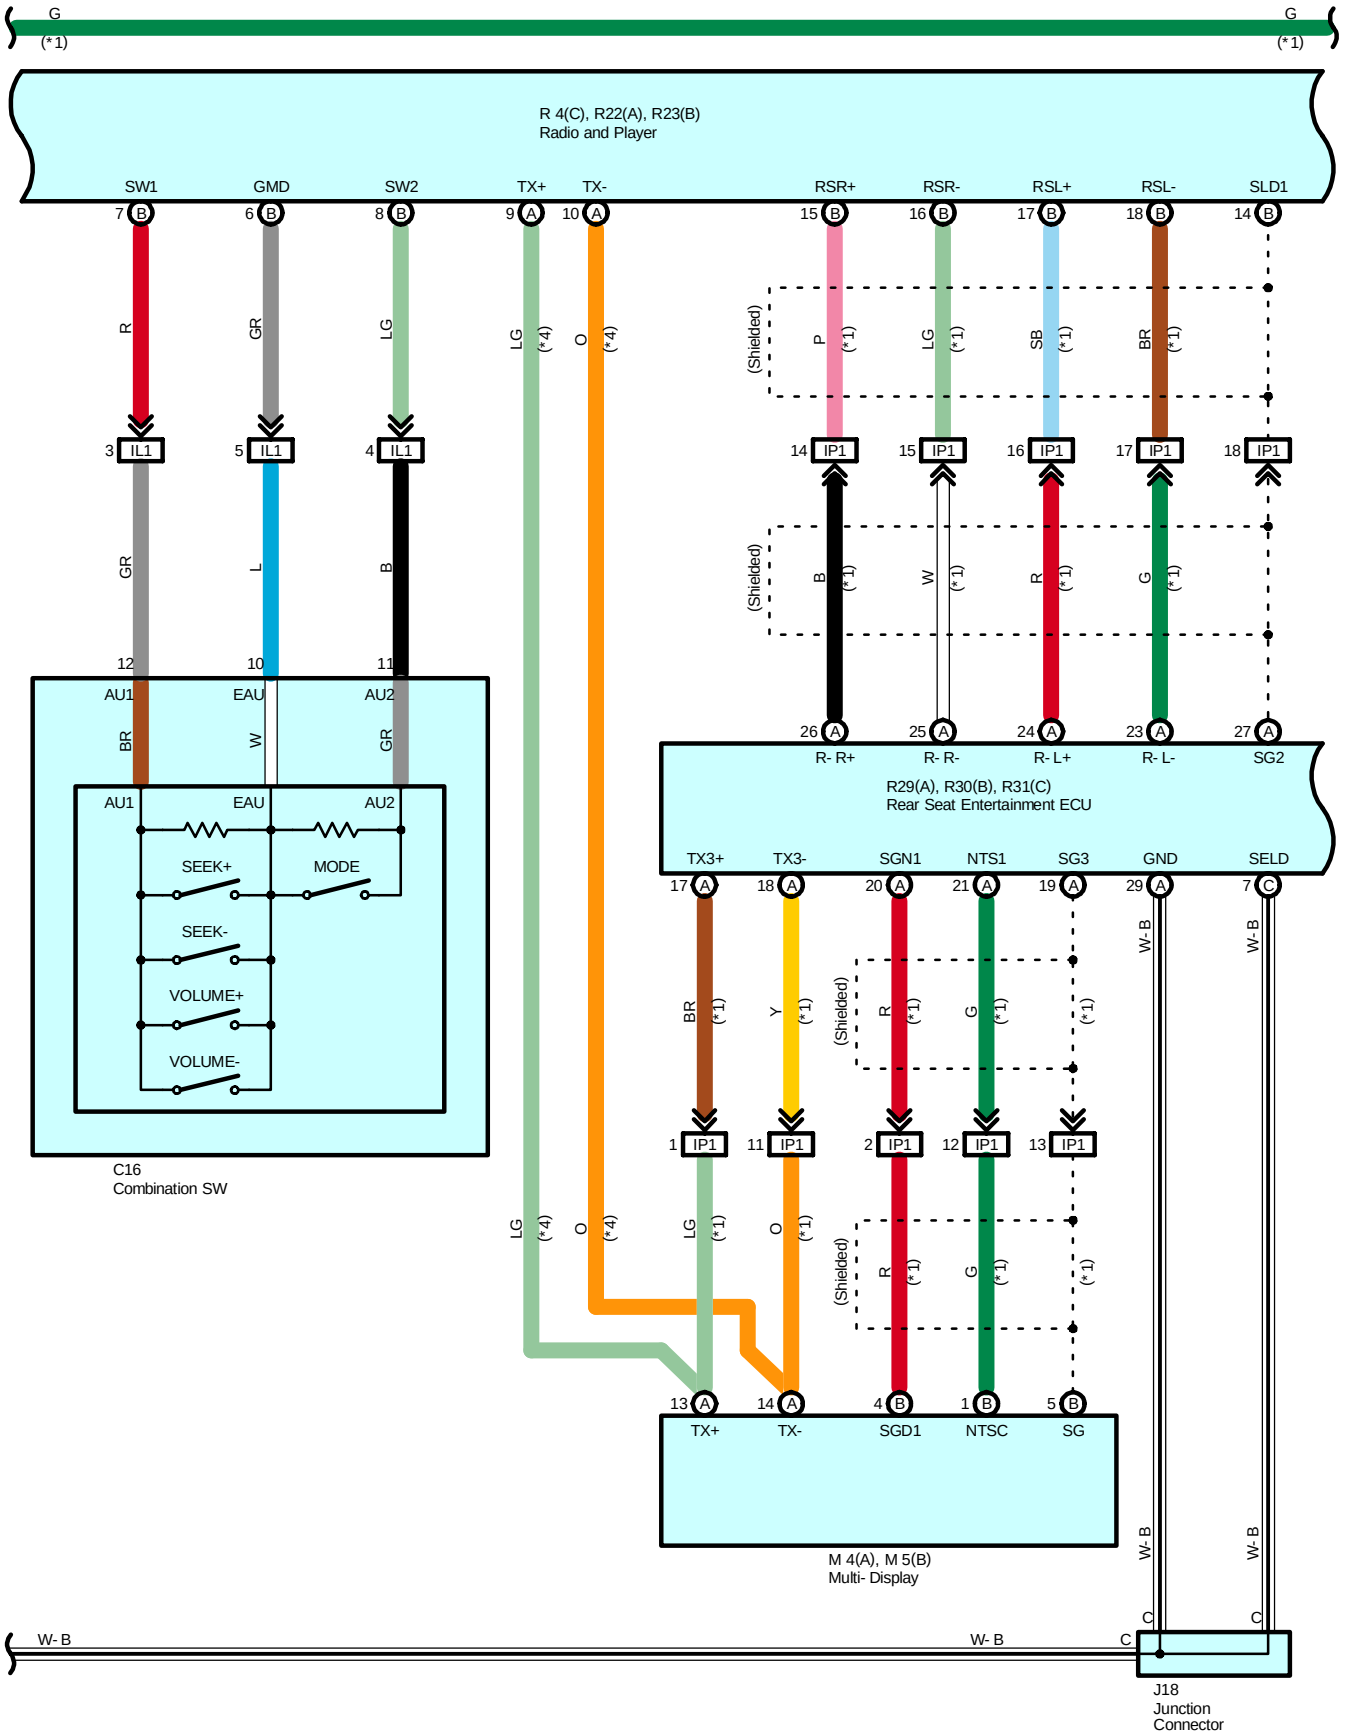

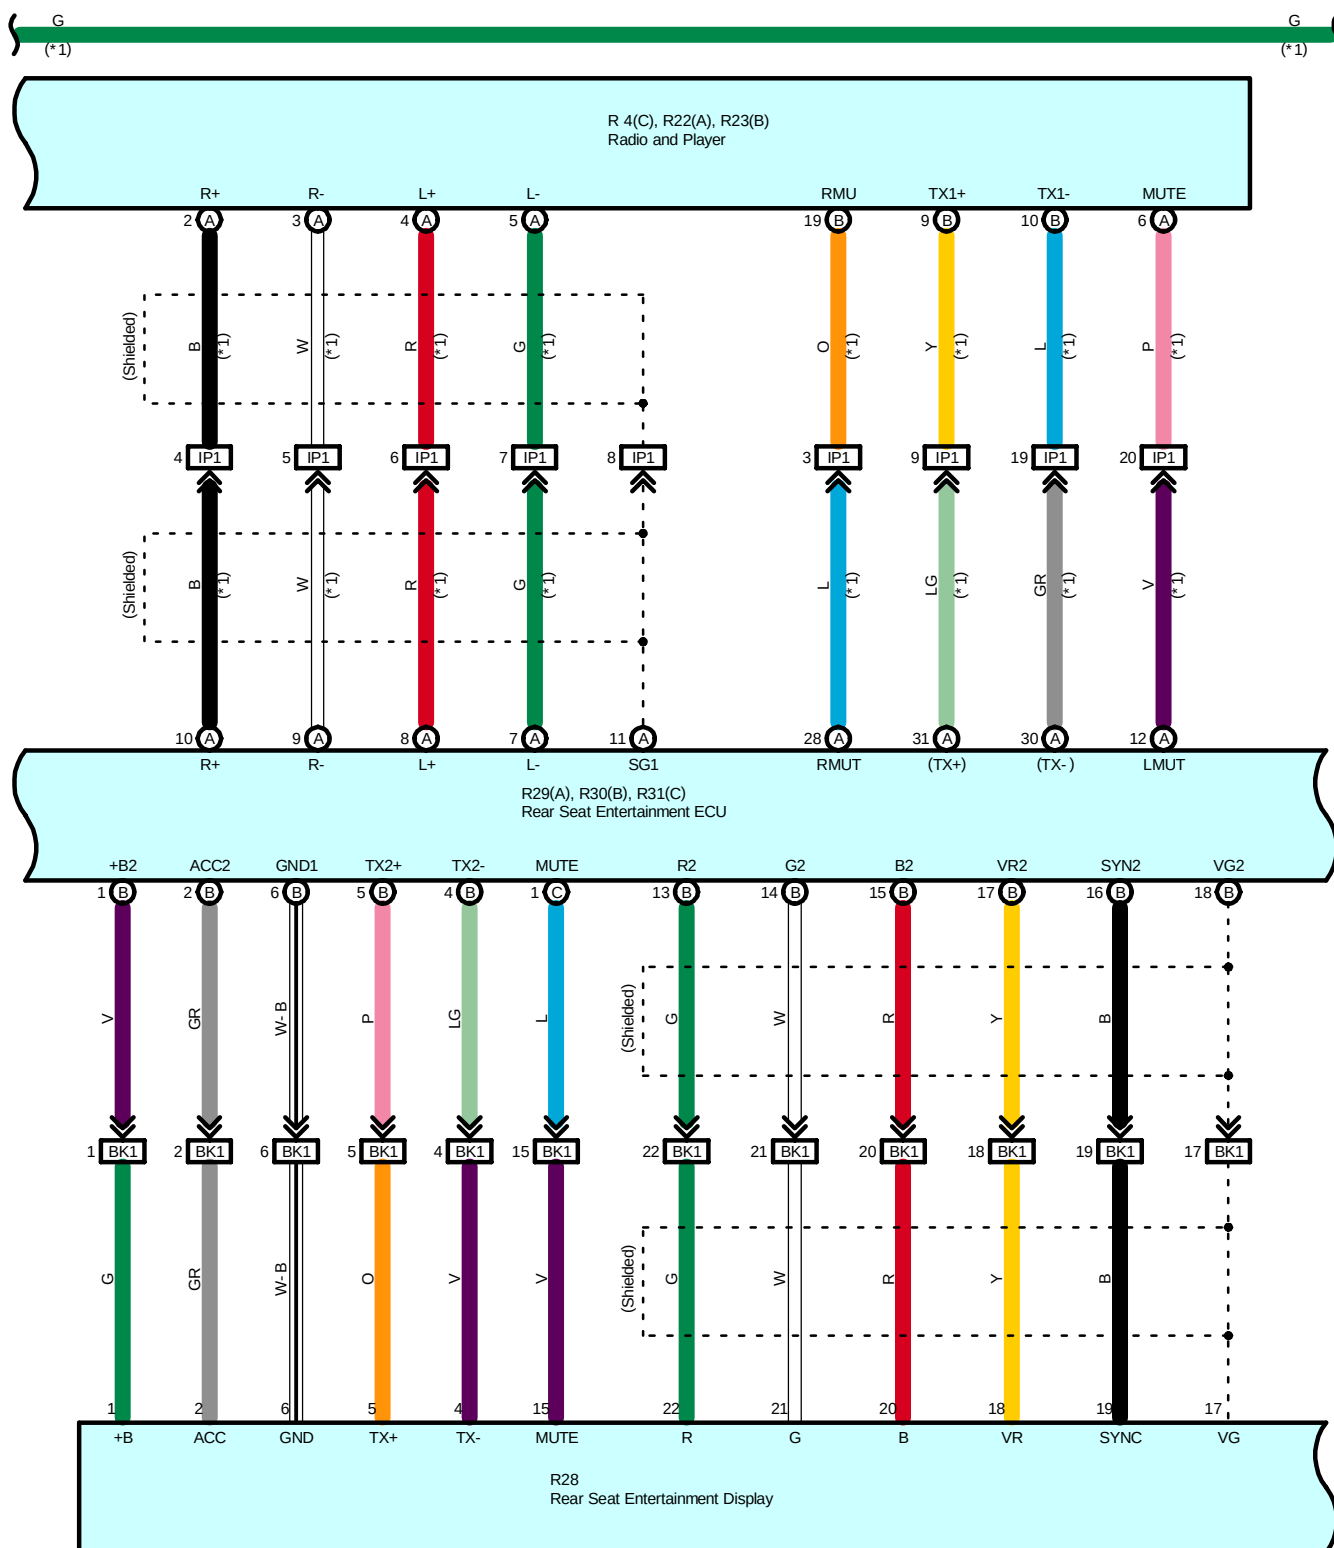


* 1 : w/ Rear Seat Entertainment System
 * 4 : w/o Rear Seat Entertainment System

Audio System with 8 Speaker

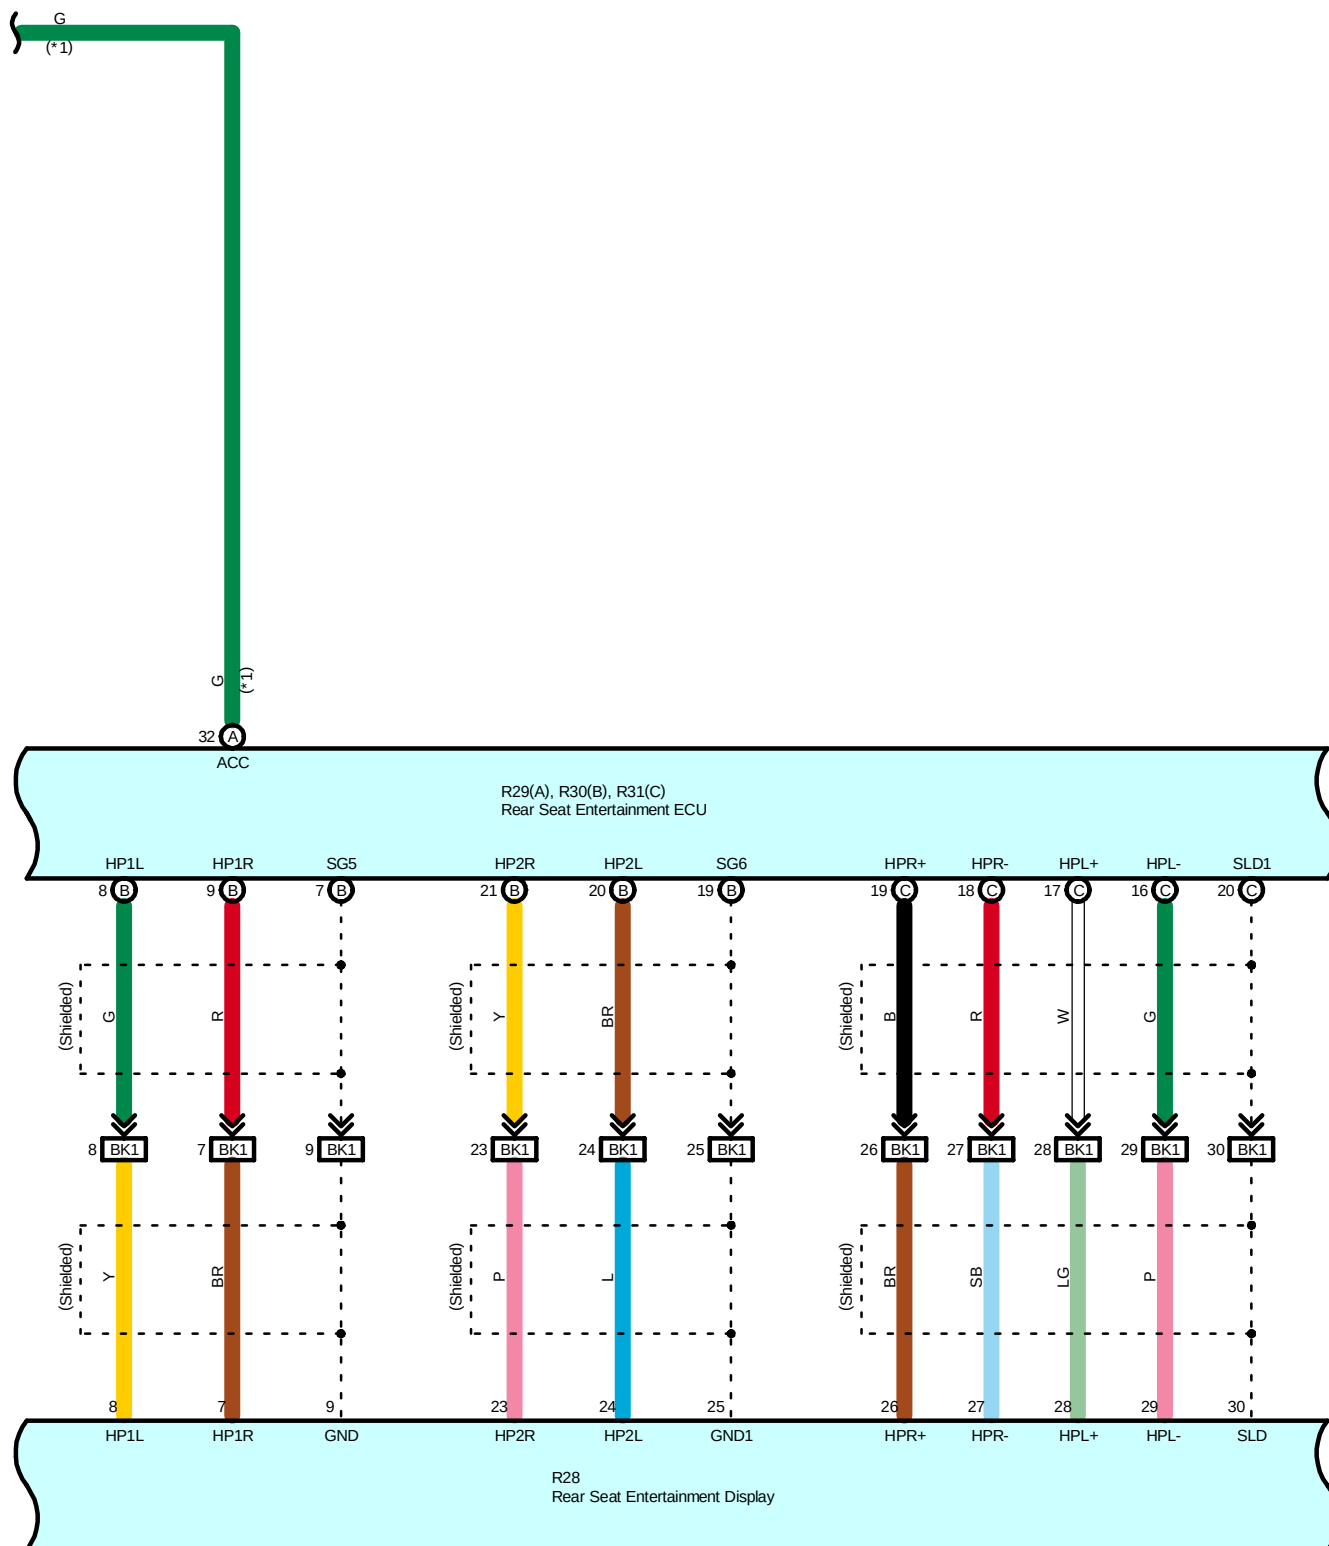

From Power Source System (See Page 62)

* 1 : w/ Rear Seat Entertainment System

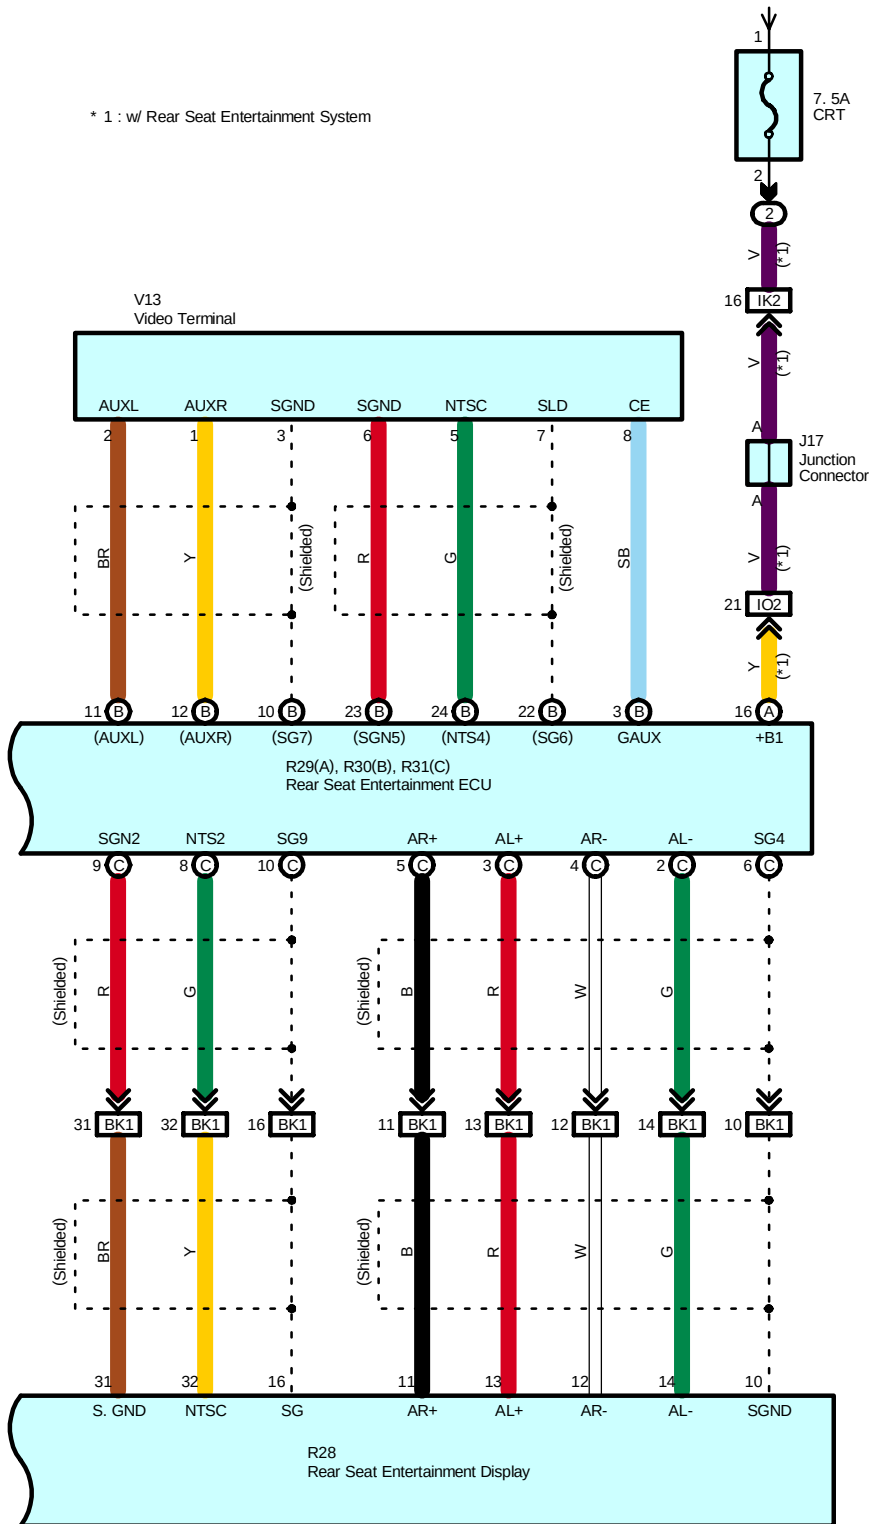

Audio System with 8 Speaker

Service Hints

R4 (C) Radio and Player

- (C) 1-Ground : Always approx. 12 volts
- (C)11-Ground : Approx. 12 volts with ignition SW at ON or ACC position
- (C)20-Ground : Always continuity

S22 (A), S23 (B) Stereo Component Amplifier

- (B) 7-Ground : Always approx. 12 volts
- (A) 2-Ground : Approx. 12 volts with ignition SW at ON or ACC position
- (B)12-Ground : Always continuity

R29 (A), R30 (B), R31 (C) Rear Seat Entertainment ECU

- (A)32-Ground : Approx. 12 volts with ignition SW at ON or ACC position
- (A)16-Ground : Always approx. 12 volts
- (A) 29, (C) 7-Ground : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A21	42	M5	43	R30	B 45
A26	44	N3	43	R31	C 45
C16	42	R4	C 43	S22	A 45
F10	44	R9	45	S23	B 45
F11	44	R10	45	T11	45
J17	43	R22	A 43	T12	45
J18	44	R23	B 43	V13	45
J19	44	R28	45		
M4	43	R29	A 45		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1K	28	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
2C	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3C		
3I	31	
3K		
4D	33	Cowl Wire and Passenger Side J/B (Right Side of Grove Box)
4E		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	52	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IB1	52	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IF3	52	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IK2	54	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IK3		
IL1	54	Instrument Panel Wire and Cowl Wire (Upper Side of Passenger Side J/B)
IN1	54	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IO1	54	Cowl Wire and Floor Wire (Right Kick Panel)
IO2		
IP1	54	Instrument Panel Wire and Floor Wire (Left Side of Passenger Side J/B)
IR1	54	Instrument Panel Wire and Floor Wire (Under the Shift Lever)
IR2		
BB1	56	Rear Door No.1 LH Wire and Floor No.2 Wire (Left Center Pillar)
BC1	56	Rear Door No.1 RH Wire and Floor Wire (Right Center Pillar)
BH1	56	Floor No.2 Wire and Floor Wire (Near the Rear Side Marker Light RH)
BK1	56	Roof No.2 Wire and Floor Wire (Right Rear Quarter Panel)

 : GROUND POINTS

Code	See Page	Ground Points Location
IB	52	Right Instrument Panel Brace
BB	56	Right Center Pillar
BF	56	Near the Rear Side Marker Light RH