




Combination Meter

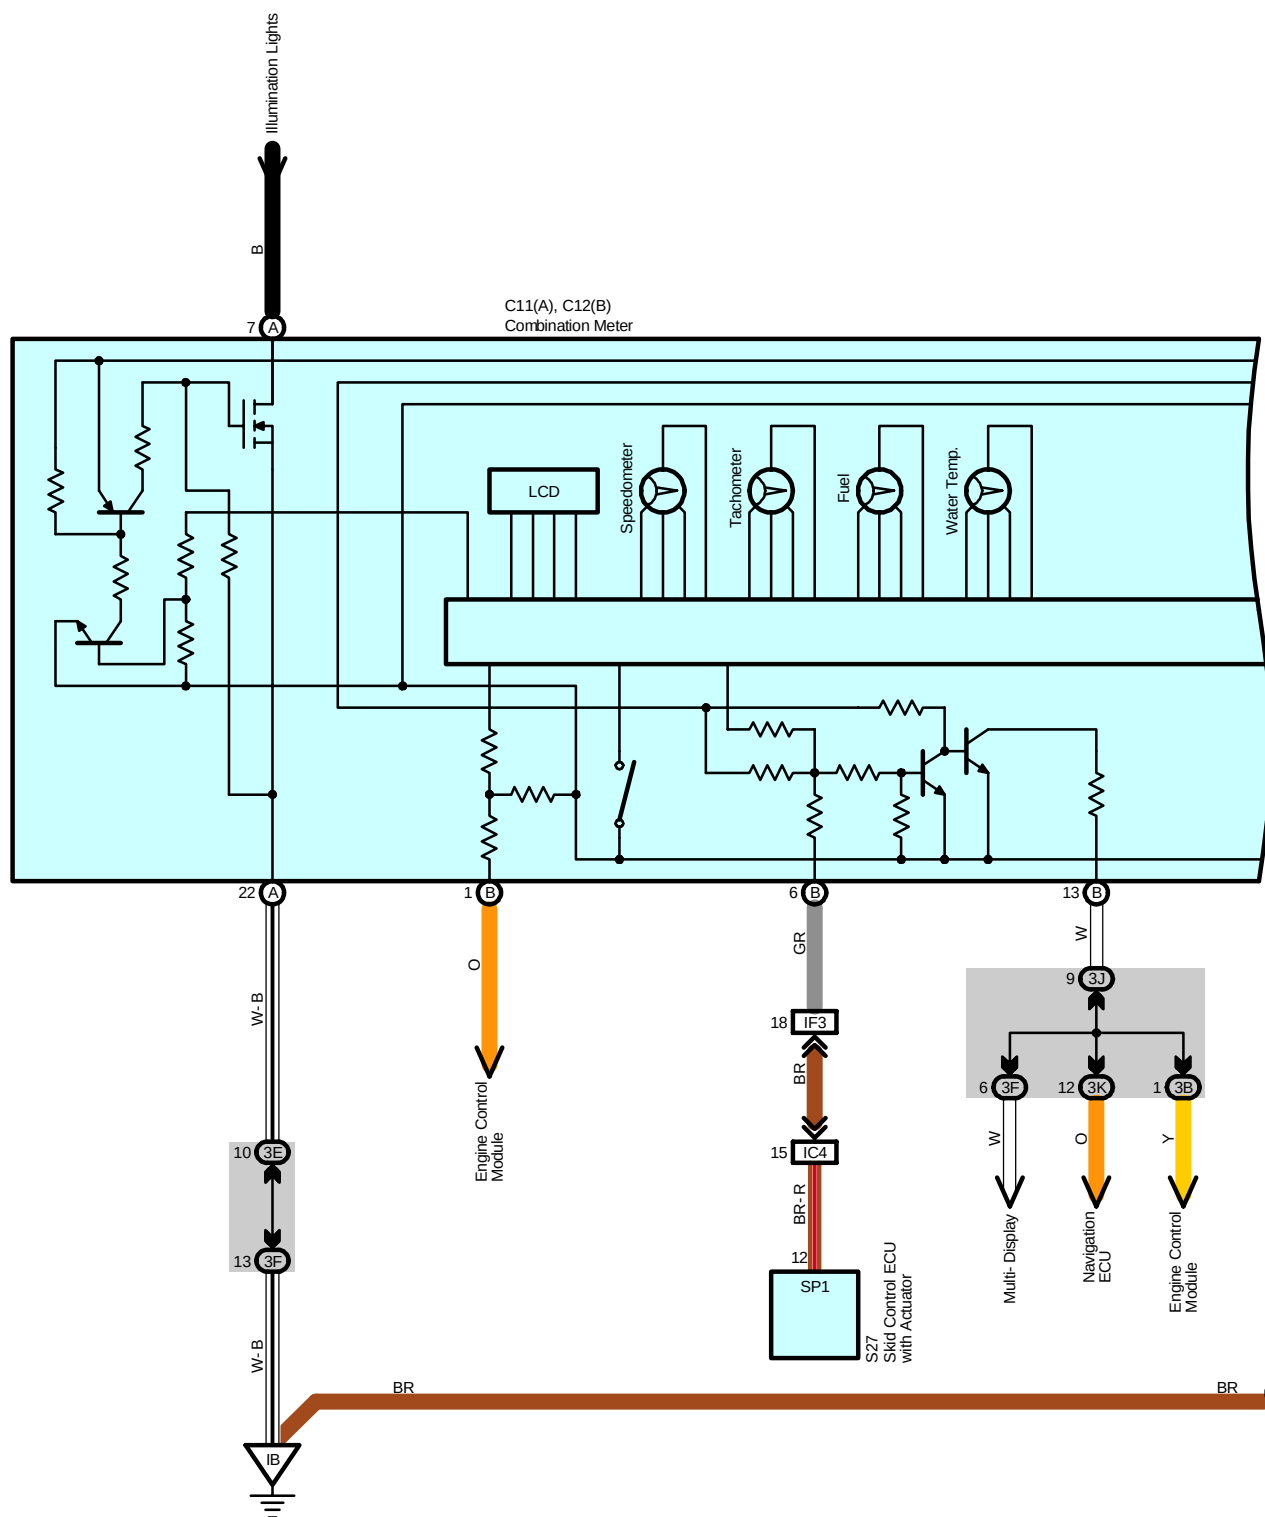


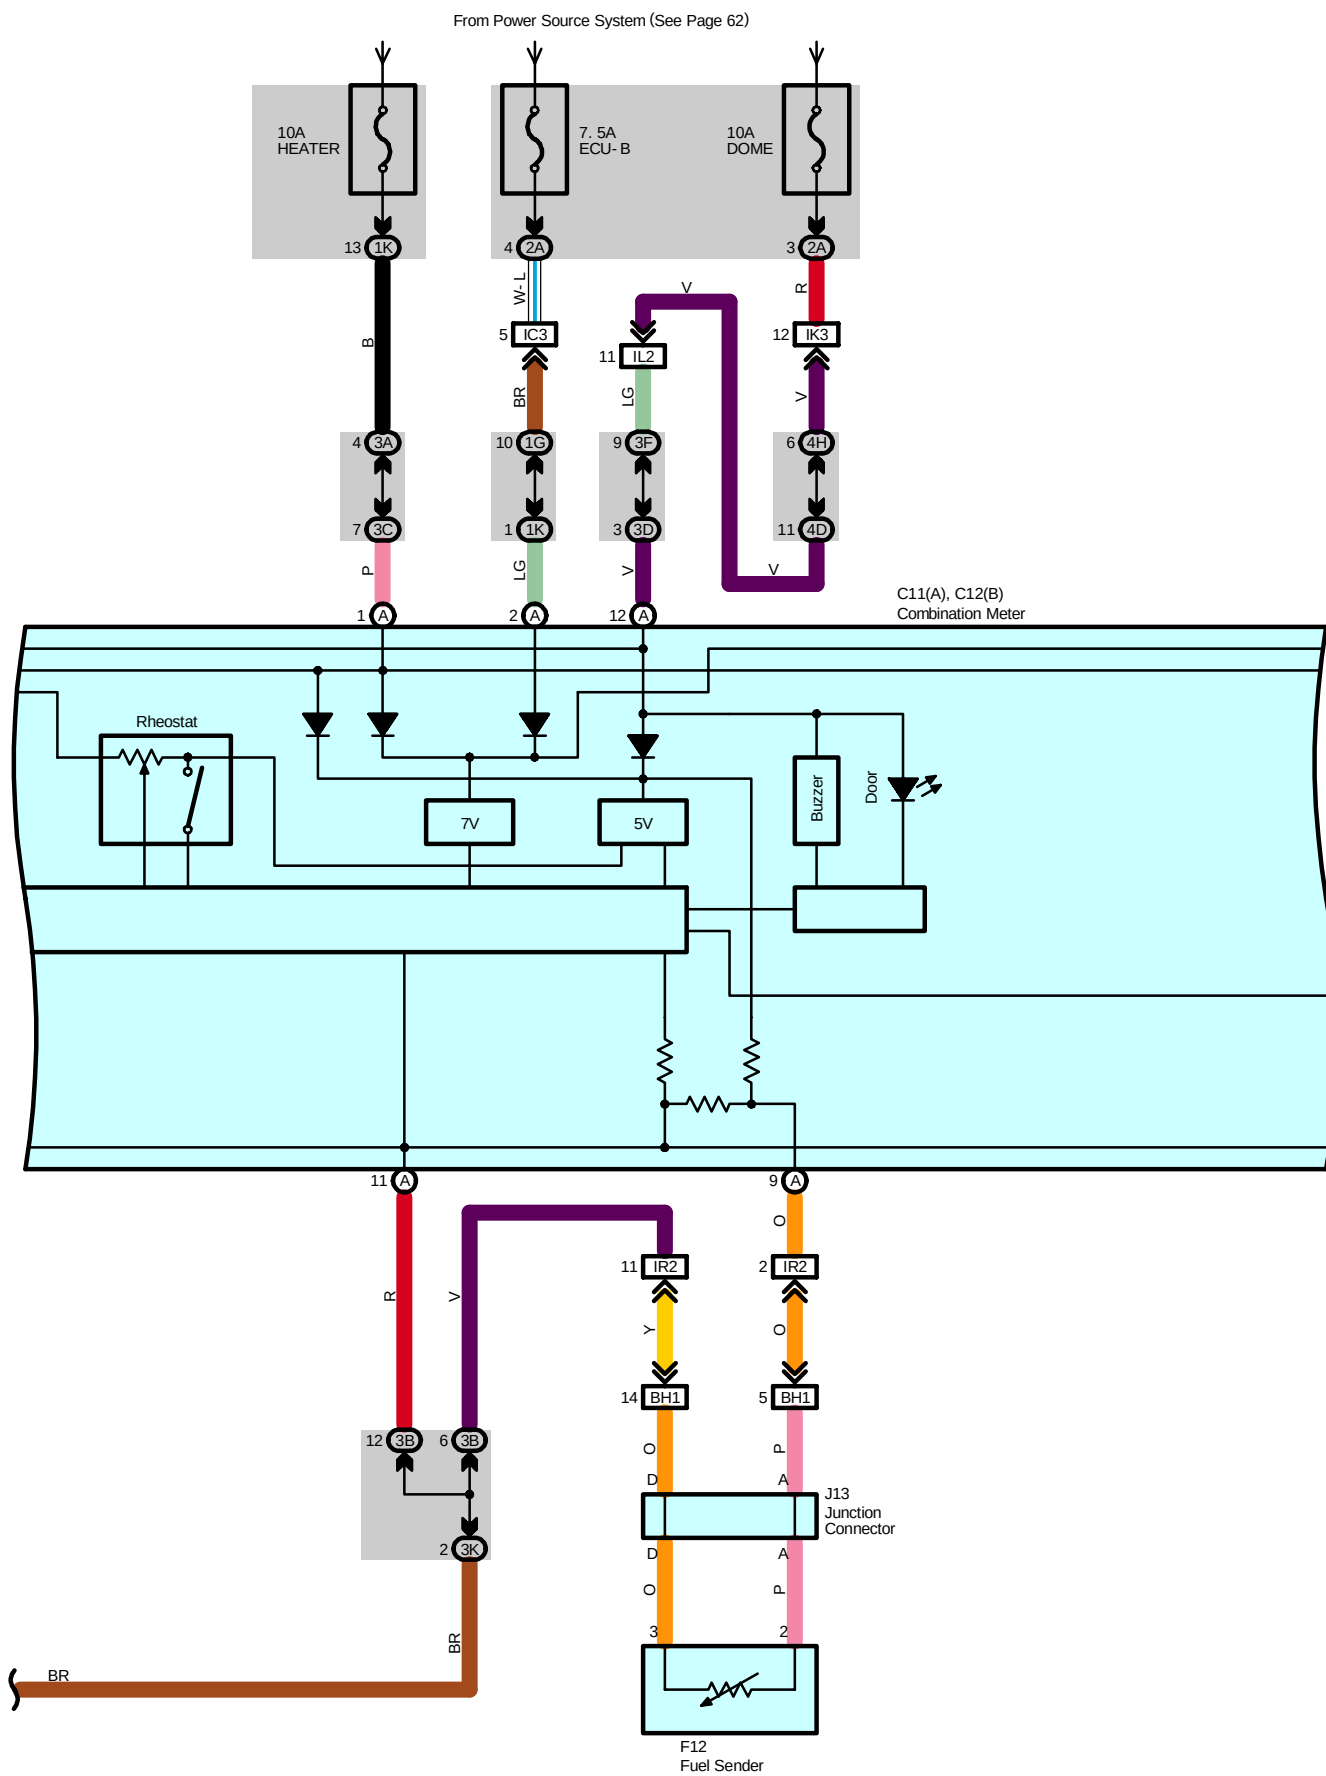


Combination Meter

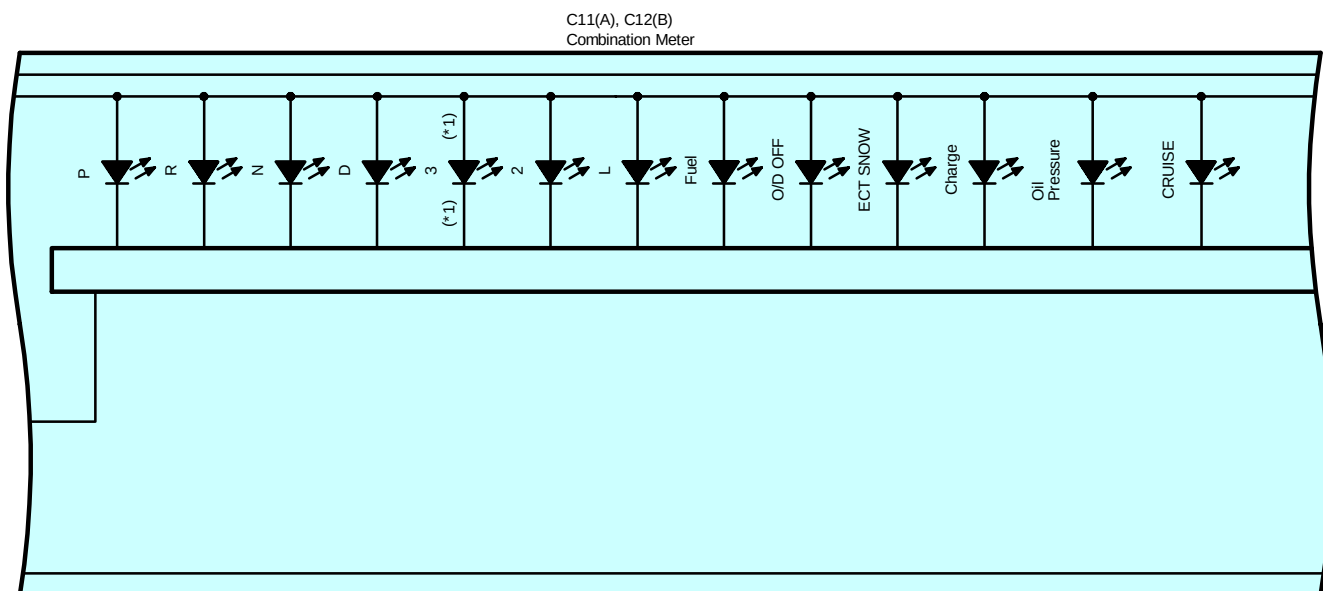

Combination Meter

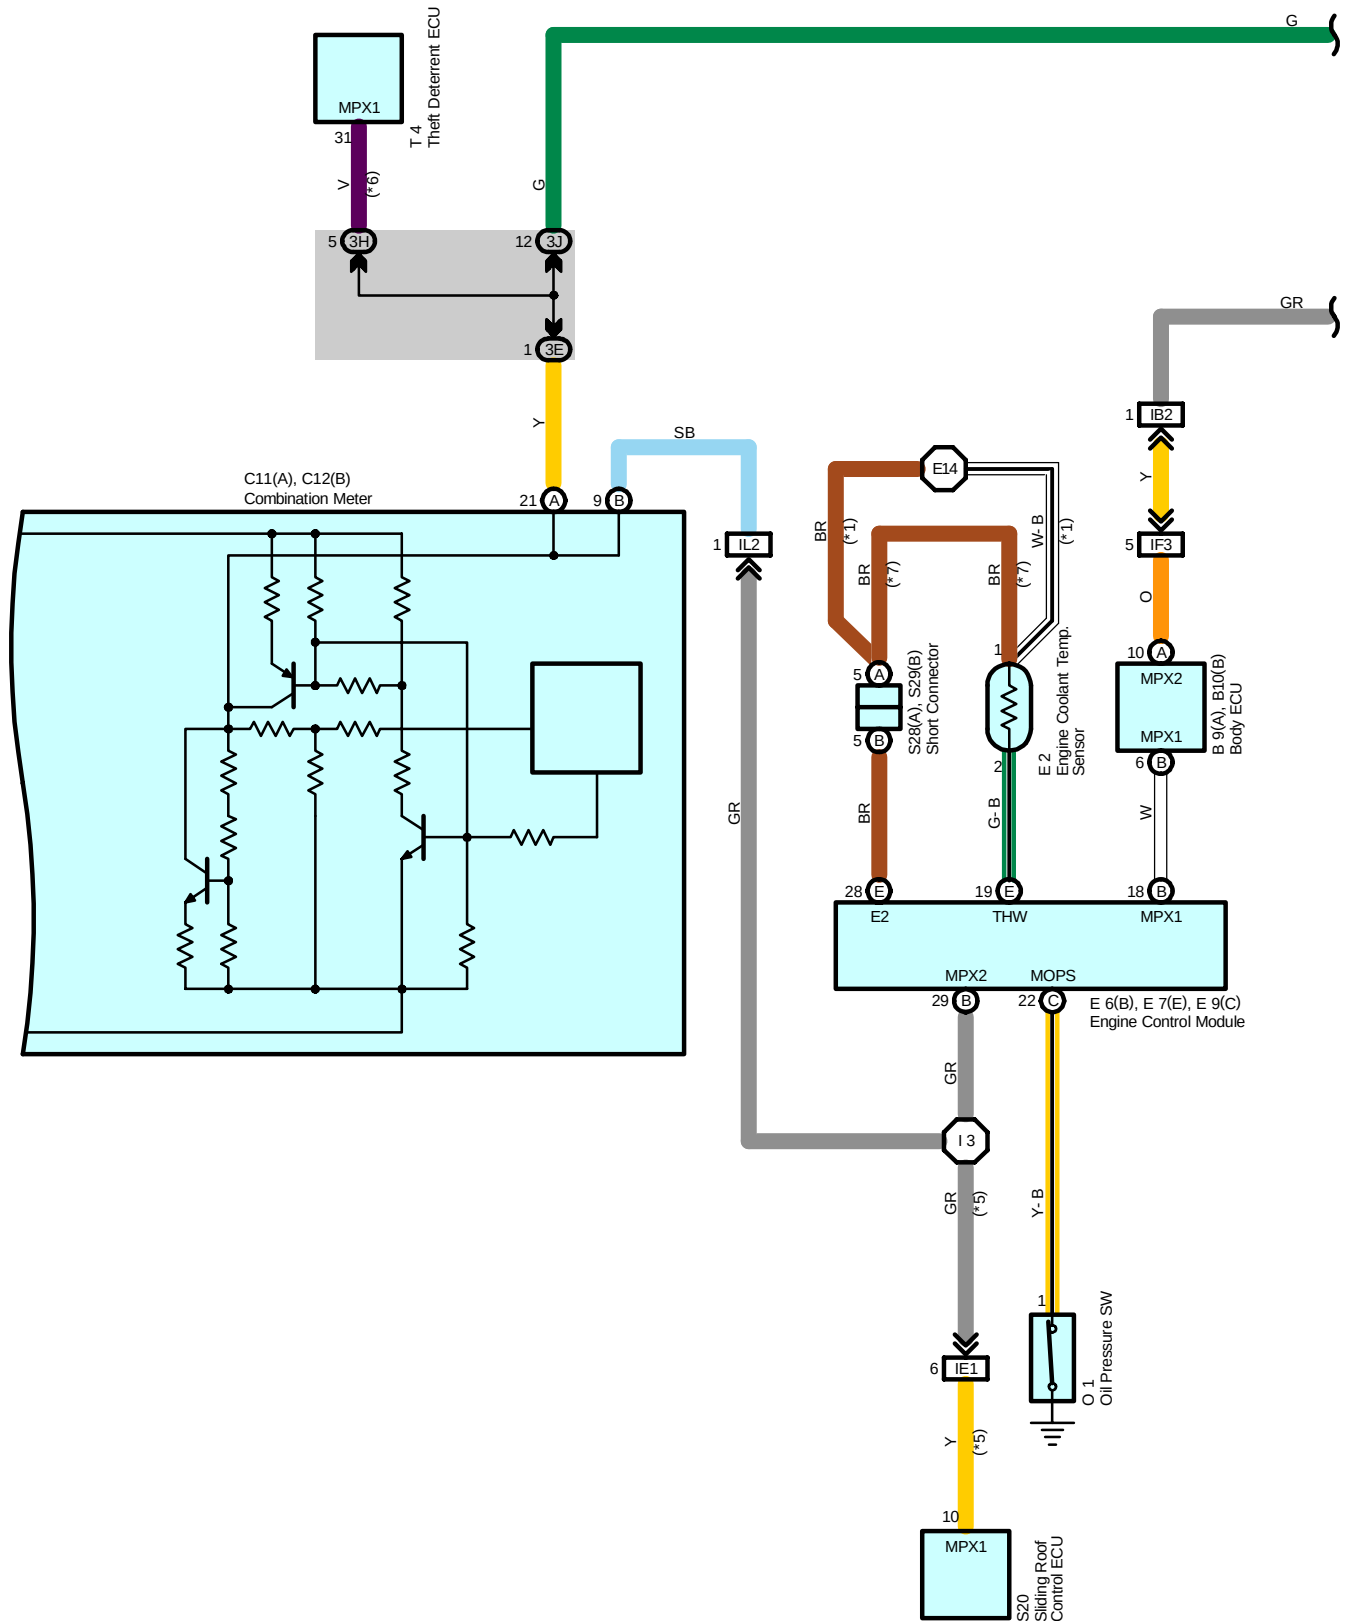

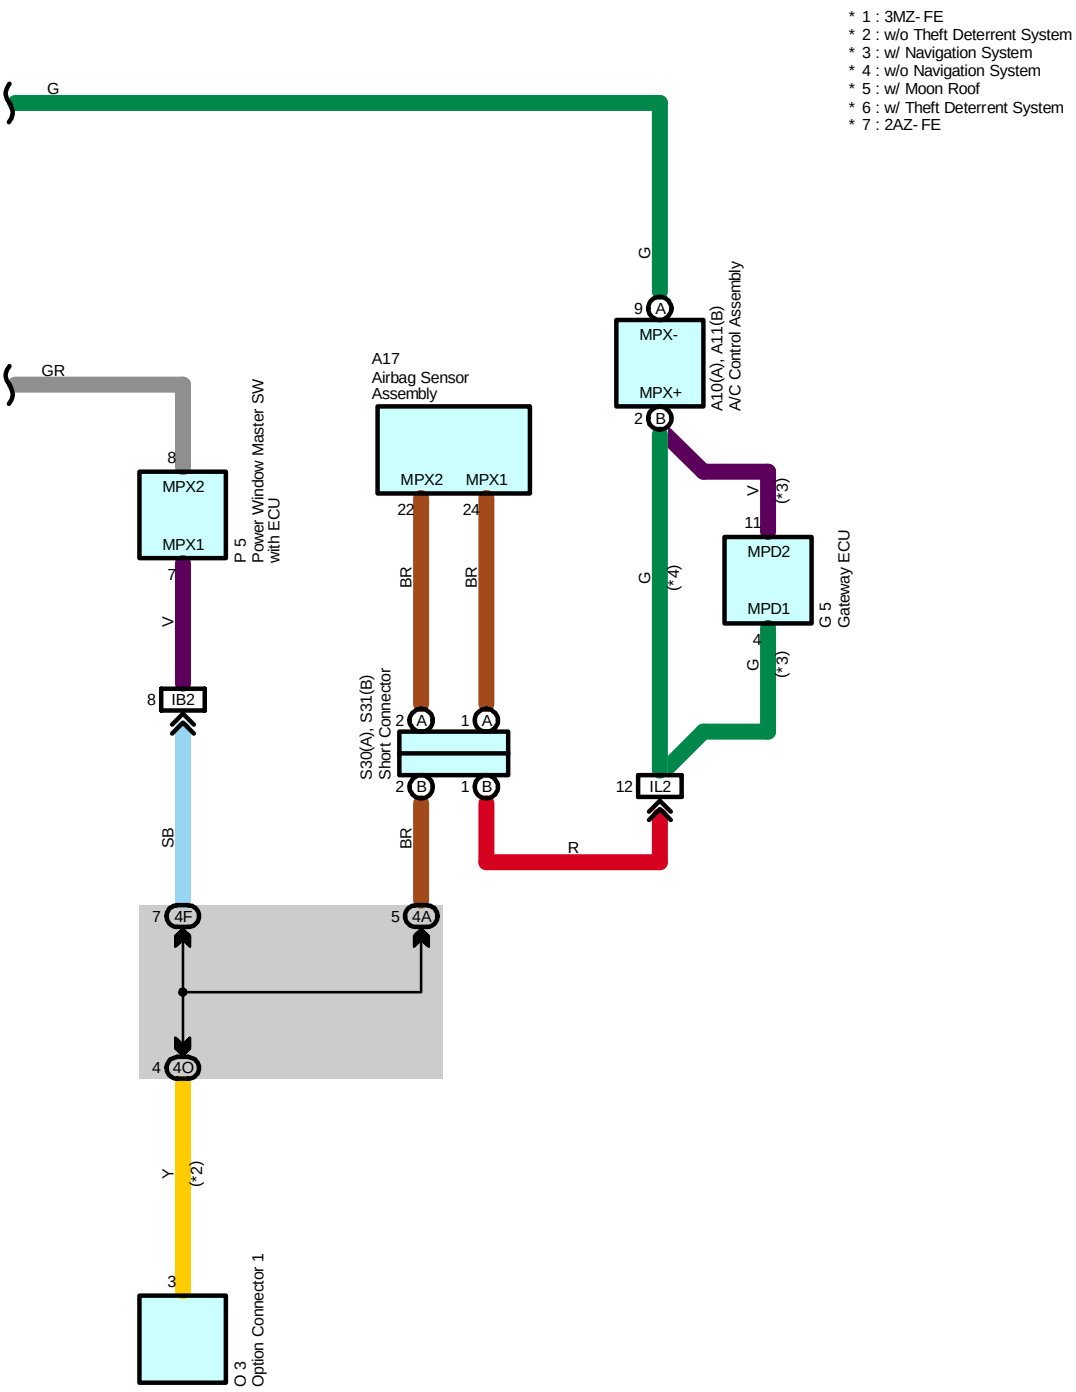

Combination Meter

Service Hints

C11 (A) Combination Meter

- (A)12-Ground : Always approx. 12 volts
- (A) 1-Ground : Approx. 12 volts with the ignition SW at ON position
- (A) 2-Ground : Always approx. 12 volts
- (A)11-Ground : Always continuity
- (A)22-Ground : Always continuity

F12 Fuel Sender

- 2-3 : Approx. 1.9-2.1 Ω at fuel full
- Approx. 38.6-38.8 Ω at fuel empty

○ : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
A10	A	42	E6	B	42	P5		44
A11	B	42	E7	E	42	S20		45
A17		42	F12		44	S27		39 (3MZ-FE)
B4		38 (3MZ-FE)	G5		43			41 (2AZ-FE)
		40 (2AZ-FE)	J4		39 (3MZ-FE)	S28	A	43
B9	A	42			41 (2AZ-FE)	S29	B	43
B10	B	42	J6		43	S30	A	43
C11	A	42	J13		44	S31	B	43
C12	B	42	O1		39 (3MZ-FE)	T4		43
E2		38 (3MZ-FE)			41 (2AZ-FE)	W1		39 (3MZ-FE)
		40 (2AZ-FE)	O3		43			41 (2AZ-FE)

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	29	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1K	28	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
2A	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	30	Instrument Panel Wire and Center J/B (Behind the Instrument Panel Center)
3B		
3C		
3D		
3E		
3F	31	
3H		
3J		
3K	33	Cowl Wire and Passenger Side J/B (Right Side of Grove Box)
4A		
4D		
4E		
4F		
4H	32	
4M		
4O		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB2	52	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IC3	52	Engine Room Main Wire and Cowl Wire (Left Cowl Side Panel)
IC4		
IE1	52	Roof Wire and Cowl Wire (Near the Bottom of Left Front Pillar)
IF2	52	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IF3		
IK3	54	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IL1	54	Instrument Panel Wire and Cowl Wire (Upper Side of Passenger Side J/B)
IL2		
IR2	54	Instrument Panel Wire and Floor Wire (Under the Shift Lever)
BH1	56	Floor No.2 Wire and Floor Wire (Near the Rear Side Marker Light RH)

 : GROUND POINTS

Code	See Page	Ground Points Location
EA	48 (3MZ-FE)	Right Front Fender Apron
	50 (2AZ-FE)	
EB	48 (3MZ-FE)	
	50 (2AZ-FE)	
IB	52	Right Instrument Panel Brace

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E14	48 (3MZ-FE)	Engine Wire	I3	54	Cowl Wire