


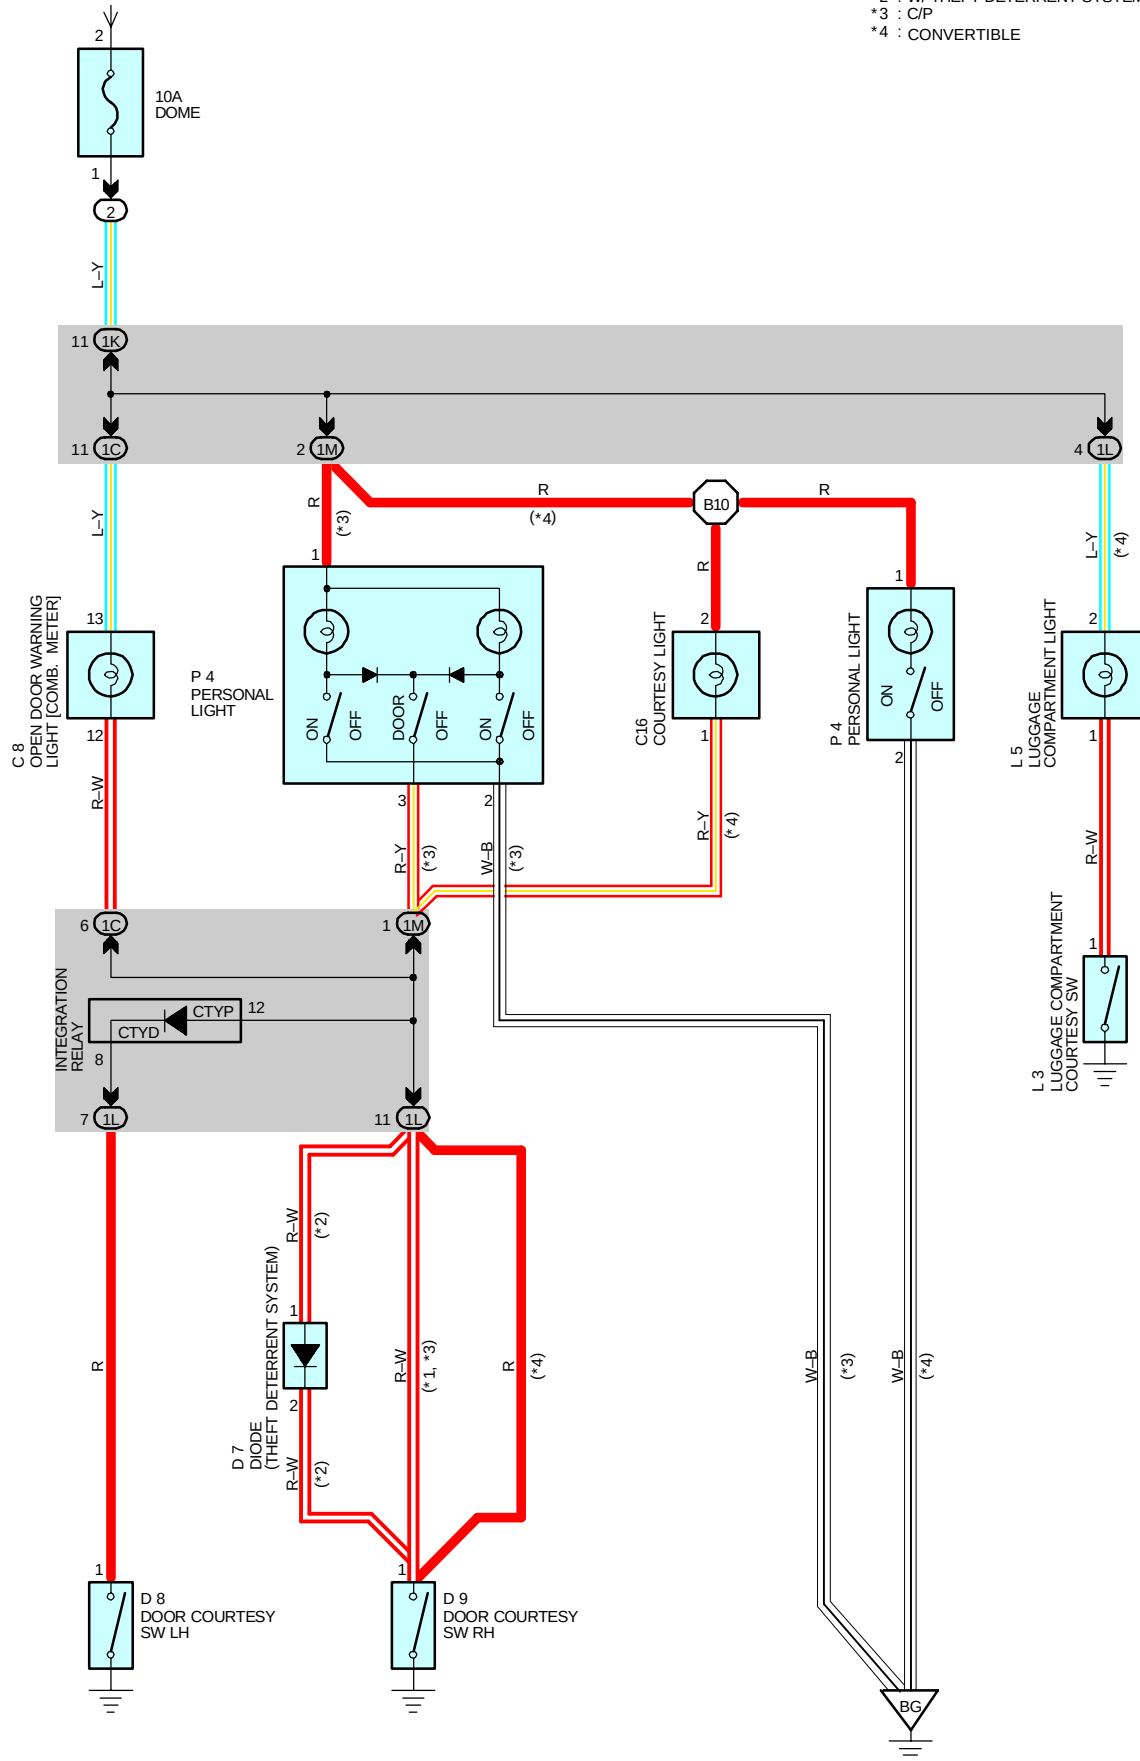

*1 : W/O THEFT DETERRENT SYSTEM
*2 : W/ THEFT DETERRENT SYSTEM
*3 : C/P
*4 : CONVERTIBLE



SERVICE HINTS

D 8, D 9 DOOR COURTESY SW LH, RH

1-GROUND : CLOSED WITH THE DOOR OPEN

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 8	26	D 8	28(C/P), 29(CONVERTIBLE)	L 5	28(C/P), 29(CONVERTIBLE)
C16	29(CONVERTIBLE)	D 9	28(C/P), 29(CONVERTIBLE)	P 4	28
D 7	28(C/P)	L 3	28(C/P), 29(CONVERTIBLE)		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	INSTRUMENT PANEL WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)
1K	20	ENGINE ROOM MAIN WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)
1L	20	FLOOR WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)
1M	20	ROOF WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BG	32(C/P)	RIGHT SIDE OF PERSONAL LIGHT
	37(CONVERTIBLE)	

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B10	36(CONVERTIBLE)	ROOF WIRE			

