




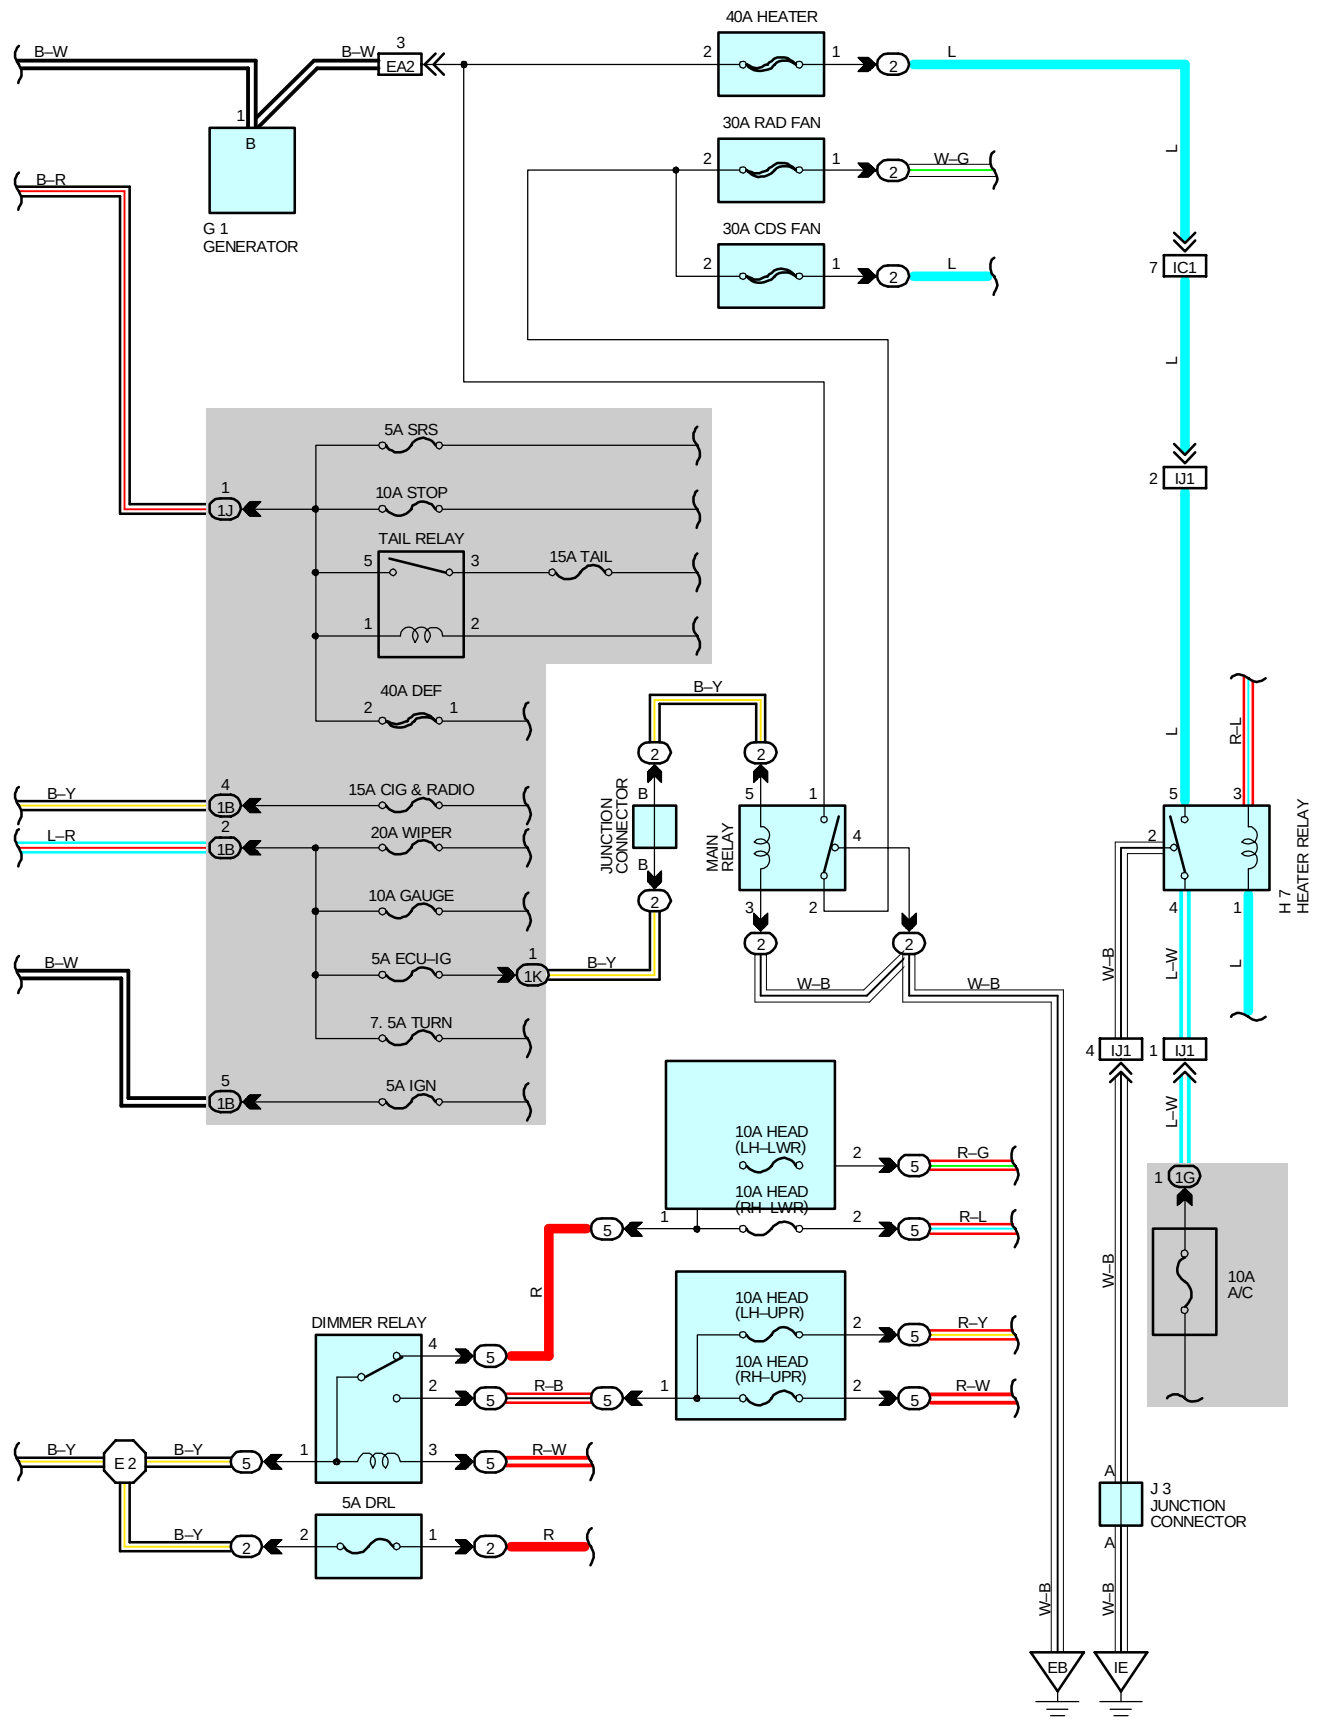



POWER SOURCE

SERVICE HINTS

MAIN RELAY

②5-②4 : CLOSED WITH THE IGNITION SW AT **ON** POSITION

I10 IGNITION SW

2-3 : CLOSED WITH THE IGNITION SW AT **ACC** OR **ON** POSITION

2-4, 7-6 : CLOSED WITH THE IGNITION SW AT **ON** OR **ST** POSITION

○ : PARTS LOCATION

CODE		SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F4	A	24	H7	26	P3	27
F5	B	24	I10	27		
G1		24	J3	27		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)
5	23	ENGINE ROOM R/B NO. 5 (ENGINE COMPARTMENT LEFT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	INSTRUMENT PANEL WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)
1B		
1G		
1J	20	ENGINE ROOM MAIN WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)
1K		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA2	30	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (INSIDE OF THE ENGINE ROOM R/B)
IC1	32	INSTRUMENT PANEL WIRE AND ENGINE ROOM MAIN WIRE (LEFT KICK PANEL)
IJ1	34	INSTRUMENT PANEL NO. 2 WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	30	FRONT SIDE OF THE LEFT FENDER
IE	32	INSTRUMENT PANEL BRACE LH


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E1	30	ENGINE ROOM MAIN WIRE	E2	30	ENGINE ROOM MAIN WIRE

 
F4 (A), F5 (B)




G1

 

H7

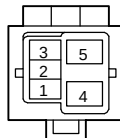

I10

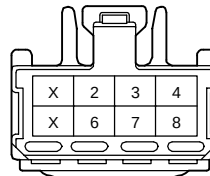

J3 BLUE



(HINT : SEE PAGE 7)

P3

