




STOP LIGHT

*1 : PACKAGE TRAY TYPE
*2 : REAR SPOILER TYPE

*3 : C/P
*4 : CONVERTIBLE

FROM POWER SOURCE SYSTEM (SEE PAGE 48)

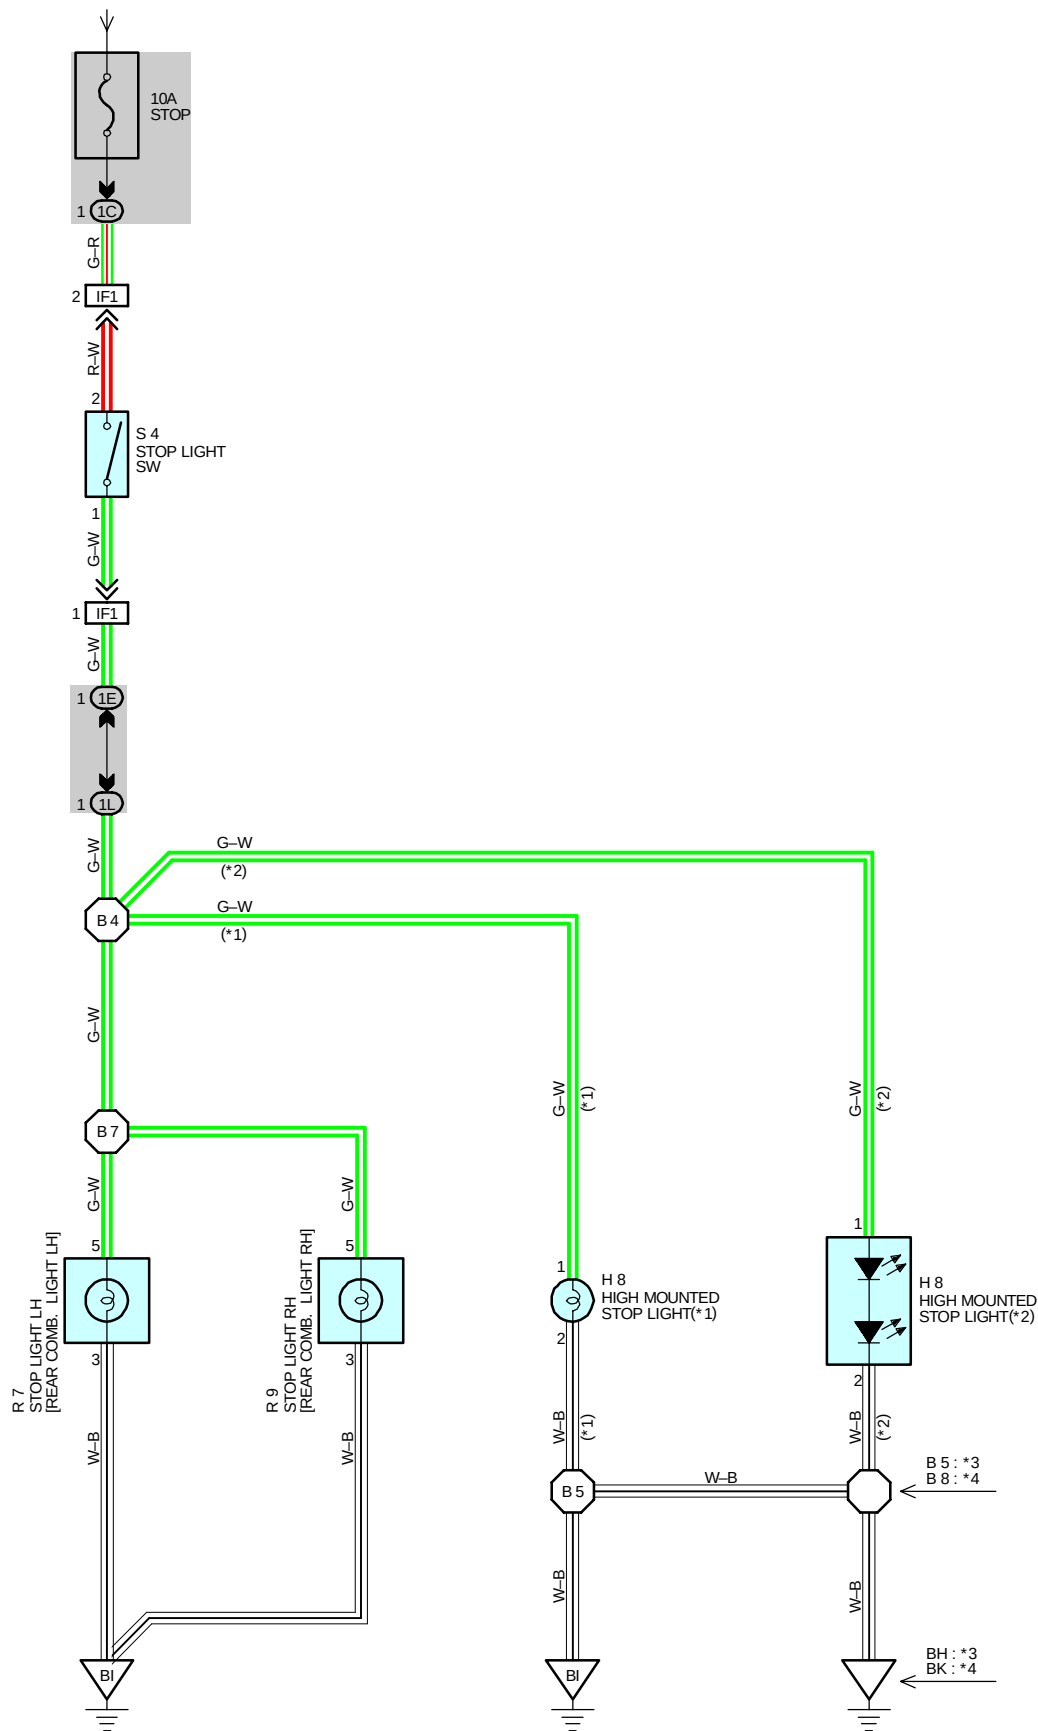

SERVICE HINTS

S 4 STOP LIGHT SW

2-1 : CLOSED WITH THE BRAKE PEDAL DEPRESSED

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
H 8	28(C/P), 29(CONVERTIBLE)	R 9	28(C/P), 29(CONVERTIBLE)		
R 7	28(C/P), 29(CONVERTIBLE)	S 4	27		

□ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	INSTRUMENT PANEL WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)
1E		
1L	20	FLOOR WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IF1	34	INSTRUMENT PANEL WIRE AND SWITCH WIRE (NEAR THE STEERING COLUMN)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BH	36(C/P)	LEFT SIDE OF THE UPPER BACK PANEL
BI	36(C/P)	LOWER BACK PANEL CENTER
	37(CONVERTIBEL)	
BK	37(CONVERTIBEL)	UPPER THE REAR WHEEL HOUSE LH


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B 4	36(C/P)	FLOOR WIRE	B 7	37(CONVERTIBEL)	FLOOR WIRE
B 5			B 8	36	
B 7				37(CONVERTIBEL)	

 
(PACKAGE TRAY H 8 GRAY TYPE)




(REAR SPOILER H 8 TYPE)

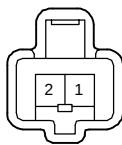


R 7

 

R 9

 

(W/ CRUISE S 4 CONTROL)

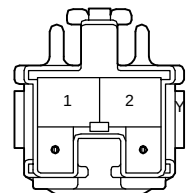

(W/O CRUISE S 4 CONTROL)

