

Verso

Brief Guide



Today
Tomorrow
Toyota

Table of Contents

Accessing your vehicle	2 - 3	Wipers	10
Child rear door protection lock	3	Electric windows and windows lock	11
Child restraint system	3	Starting your vehicle	11
Seat and seat belt adjustment	4	Heating, A/C and de-misting	12
Steering wheel adjustment	5	Set up display to access clock setting	13
Instrument panel overview	6	Setting the clock	13
Steering wheel controls	7	Gear change	14
Dashboard instruments	7	Fuel tank opening	15
Instrument cluster	8 - 9	Bonnet opening	15
Lights	9	Eco-Driving	16

Introducing Verso

Thank you for buying a Verso. We trust this Brief Guide will enable you to become familiar with your vehicle's basic operations and assist you in enjoying your vehicle.

This brief guide does not replace or substitute the Owner's Manual, which you will find in the vehicle's glove compartment. It is important that you review the full Owner's Manual as well as any further supplementary manuals as this will allow you to familiarise yourself with the operating and safety instructions and to handle the vehicle within its limitations.

Please do read all documents in your pack as this will ensure you get maximum performance from your car and learn about related services offered.


Your Centre and everyone at Toyota wish you many years of enjoyable driving in your new Verso.

NB: All information contained in this brief guide are current at the time of printing.
Toyota reserves the right to make changes at any time without notice.

Accessing your vehicle

Vehicles without smart entry & start system


1. Master keys
 - Operate the wireless remote control function.
2. Valet key - Limited access.
3. Key number plate.

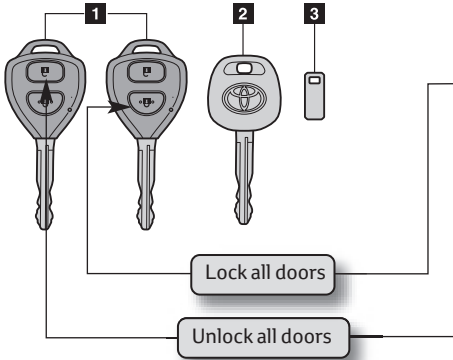

The wireless remote control can be used to lock and unlock your vehicle from the outside.


Vehicles with smart entry & start system

1. Electronic keys
 - Operate smart entry & start system
 - Operate the wireless remote control function.
2. Mechanical keys.
3. Key number plate.

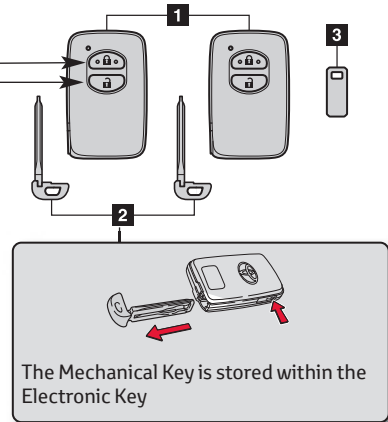

Smart entry & Start system

The following operations can be performed simply by carrying the electronic key on your person.
(The driver should always carry the electronic key.)

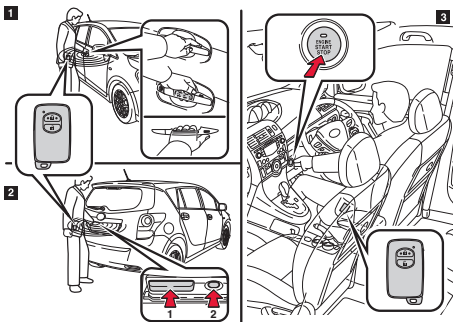

1. Unlocks and locks the doors and back door.
2. Unlock and locks the back door.
3. Starts and stops the engine.


Accessing your vehicle

Automatic door locking and unlocking system

	Transmission	Lock	Unlock	
			Driver's Door	Rear/Passenger Doors
Default setting	All	All doors lock above 13 mph	Opening when handle is operated	Flip internal lock button and pull opening handle
Optional setting	Manual	All doors lock above 13 mph		Unlocks when driver's door is opened within 10 seconds of engine being switched off
	Automatic/Multidrive	Shifting the lever out of "P"		Shifting to "P" unlocks all doors

Please consult your owner's manual to see all functions that can be set or cancelled

Child rear door protection lock

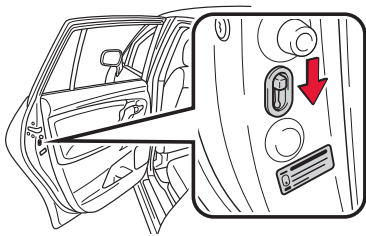

The door cannot be opened from inside the vehicle when the locks are set.

These locks can be set to prevent children from opening the rear doors. Push down the rear door switches to lock the rear doors.

Child restraint system

Child restraint systems are classified into the following 5 groups according to the regulation ECE No. 44:

Group 0: Up to 10 kg or 22lbs (0-9 months)

Group I: 9-18 kg or 20-40lbs (9 months-4 years)

Group III: 22-36 kg or 48-79lbs(6 years-12 years)

Group 0+: Up to 13 kg or 29lbs (0-2 years)

Group II: 15-25 kg or 33-55lbs (4 years - 7 years)


(A) Baby seat
equal to Group 0 and 0+
of ECE No. 44

(B) Child seat
equal to Group 0+, I and II
of ECE No. 44

(C) Junior seat
equal to Group III
of ECE No. 44




Seat and seat belt adjustment

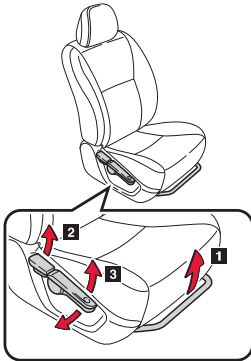

Driver's seat

1. Seat back adjustment lever.
2. Seat back angle adjustment lever.
3. Vertical height adjustment lever (driver's seat only).

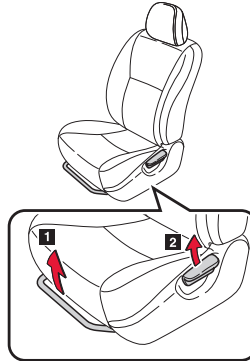


Passenger's seat


Head restraint height adjustment

Pull to move upwards.

Press and hold lock release to lower.

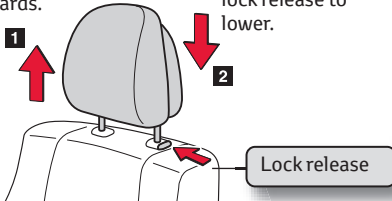

The centre of the head restraint should be level with the top of the ears

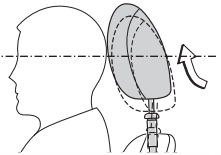


For safety reasons your vehicle is fitted with active head restraints


Under no circumstances should any accessories be attached to these head restraints.

(e.g. portable DVD players, etc).

Seat belts

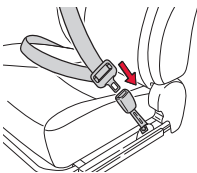

1. To fasten the seat belt push the tab into the buckle until it clicks.
2. Press the release button to unfasten the seat belt.

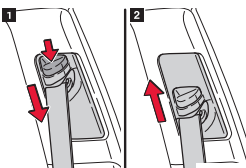


Adjust the height up and down as required as shown above.



Do not use the centre rear seat belt with either buckle released. Fastening only one of the buckles may result in injury in case of sudden braking or a collision.

Steering wheel adjustment


Steering wheel

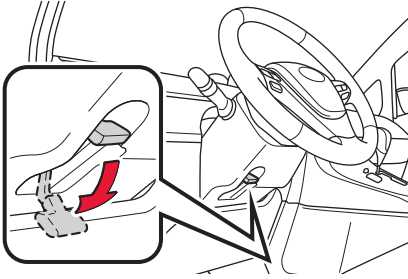

Hold the steering wheel and press the lever down.
Adjust the position by moving the steering wheel
horizontally and vertically.

**After adjustment, pull the lever up to secure the
steering wheel.**


Instrument panel overview

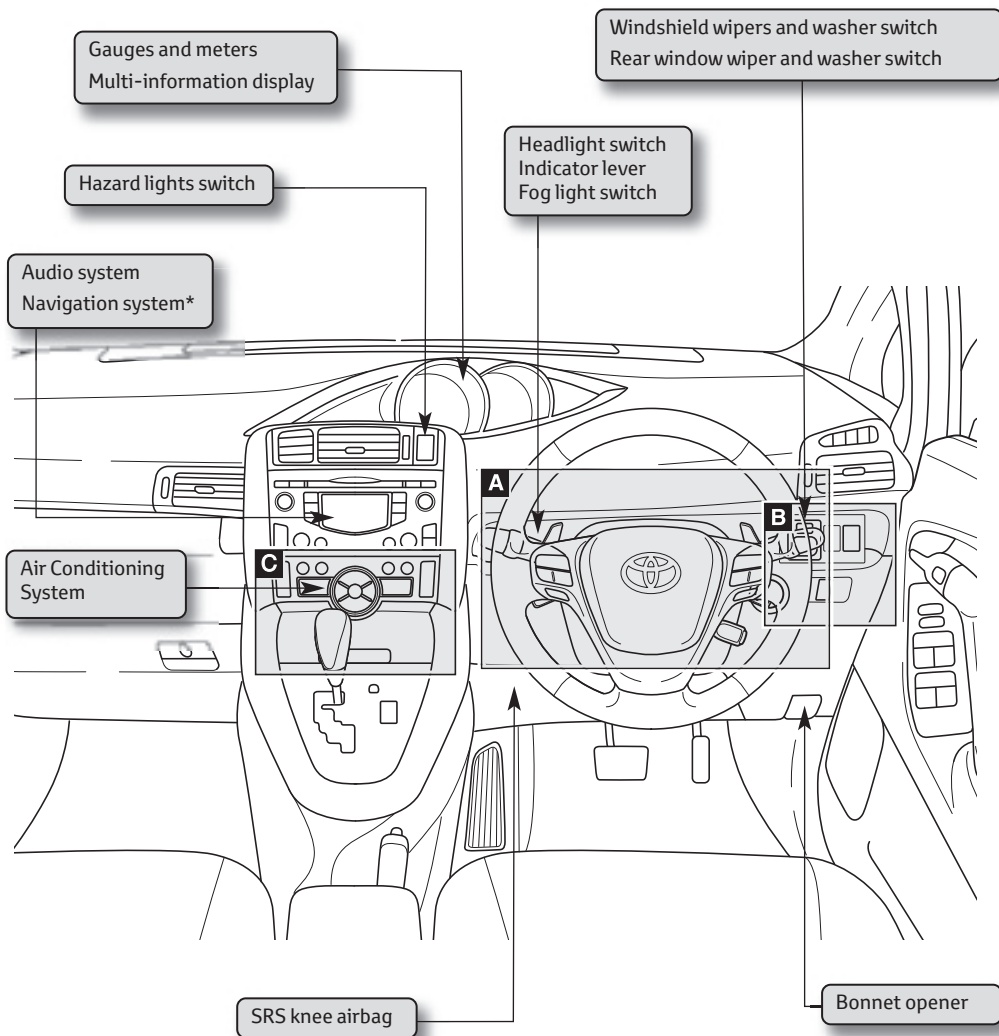

* On some models

Steering wheel controls


Area A indicated on instrument panel overview (page 6).

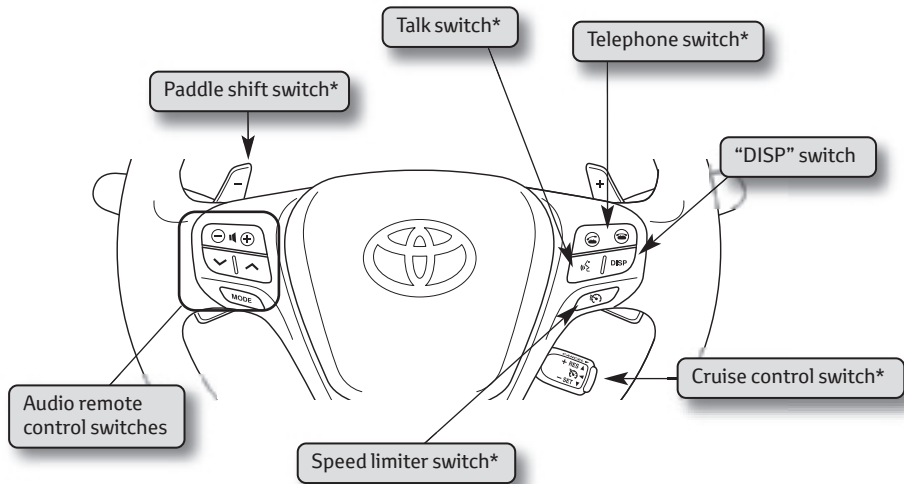

* On some models

Dashboard instruments

Area B indicated on instrument panel overview (page 6).

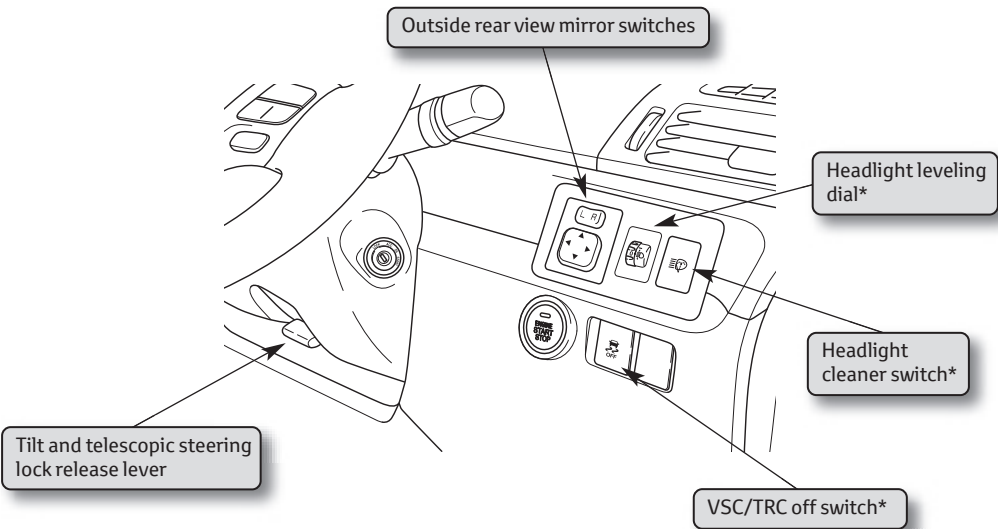

* On some models

Instrument cluster



Vehicles without smart entry and start system

The following gauges, meters and displays illuminate when the engine switch is in the “ON” position.

Vehicles with smart entry & start system

The following gauges, meters and displays illuminate when the “ENGINE START STOP” switch is in the IGNITION ON mode.

1. Tachometer - displays the engine speed in revolutions per minute.
2. Speedometer - displays the vehicle speed.
3. Multi-information display.
4. Odometer/trip meter/instrument cluster light control and trip meter reset button.
5. Fuel gauge - displays the quantity of fuel remaining in the tank.
6. Odometer, trip meter and instrument cluster light when the headlight switch is on.

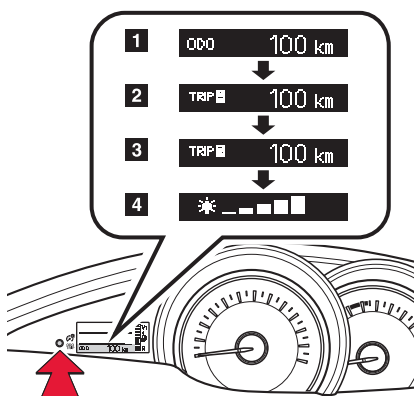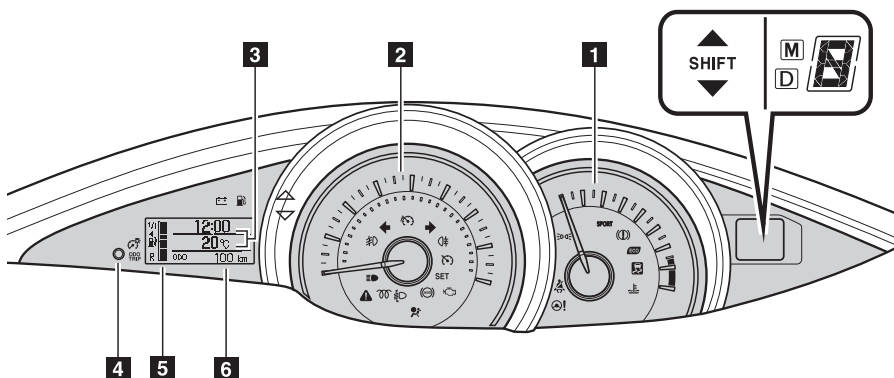

Odometer/trip meter/instrument cluster light control and trip meter reset button

Pressing this button switches among odometer, trip meter and instrument cluster light control displays when the headlight switch is on.

1. Odometer
2. Trip meter A*¹
3. Trip meter B*¹
4. Instrument cluster light display*²

*¹: Pressing and holding the button will reset the trip meter.

*²: Pressing and holding the button will adjust brightness of the instrument cluster light.

Instrument cluster

Indicators

The indicators inform the driver of the operating state of the vehicle's main systems.



Turn signal indicator



Headlight high beam



Tail light indicator



Front fog light indicator



Rear fog light indicator

Warning lights

Warning lights inform the driver of malfunctions in any of the vehicle's systems.



*



*



*



*



*



*



*




If equipped



If equipped

* These lights turn on when the engine switch is turned to the "ON" position (without smart entry & start system) or the "ENGINE START STOP" switch is turned to the IGNITION ON mode (with smart entry & start system). They will turn off after the engine is started. There may be a malfunction if a light does not come on, or if the lights do not turn off. Have the vehicle inspected by your Toyota Centre.

Lights

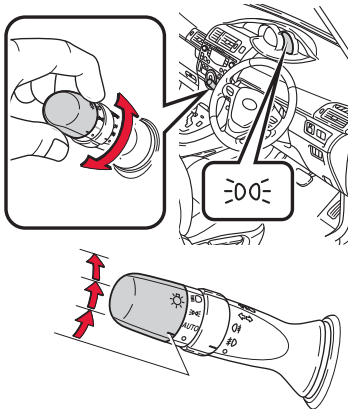

The headlights can be operated manually or automatically


The front position, tail, license plate and instrument panel lights turn on.



The headlights and all lights listed above turn on.



The headlights and all lights listed above turn on and off automatically.
(When the engine is in the "ON" position).

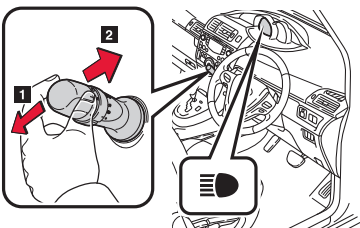


Turning on the high beam headlights

1. With the headlights on, push the lever away to turn on the high beams. Pull the lever back to the centre position to turn the high beams off.
2. You can flash the high beams with the headlights on or off by pulling the lever towards you, and releasing it to turn them off.


Wipers

Wiper with interval adjuster

Wiper interval can be adjusted for intermittent operation when  is selected).

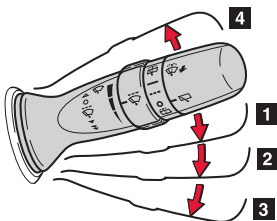

1. Intermittent wiper operation.
2. Low speed wiper operation.
3. High speed wiper operation.
4. Temporary operation.


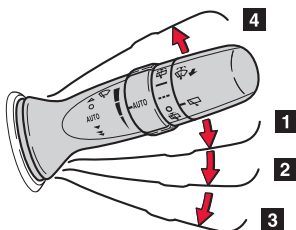


Wiper with rain-sensing function (AUTO) if equipped

With “AUTO” selected, the wiper will operate automatically when detecting rain and adjust timing according to rain volume.

1. Rain-sensing wiper operation.
2. Low speed wiper operation.
3. High speed wiper operation.
4. Temporary operation.

Rear window wiper and washer

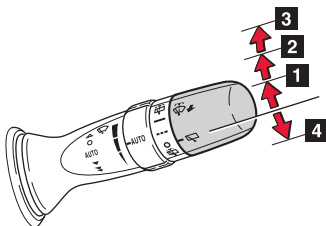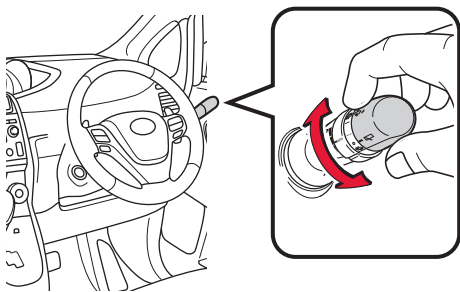

The rear window wiper and washer can be operated for:

Vehicles without smart entry & start system

When the engine switch is in the “ON” position.

Vehicles with smart entry & start system


When “ENGINE START STOP” switch is in the IGNITION ON mode.

1. Intermittent window wiper operation.
2. Normal window wiper operation.
3. Washer/wiper dual operation.
4. Washer/wiper dual operation.

When the rear window is dry

Do not use the wipers, as they may damage the rear window.


Electric windows and windows lock

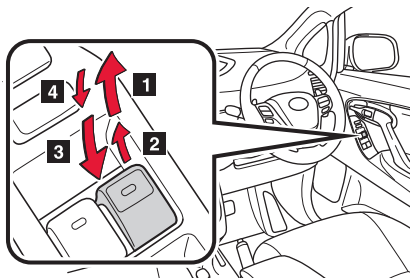

The electric windows can be opened and closed as follows:

1. One touch closing.*
2. Closing.
3. One touch opening.*
4. Opening.


*To stop the window, press the switch lightly in the opposite direction

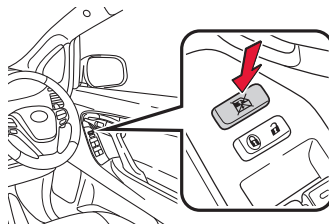

Pressing the switch locks the passenger windows preventing accidental opening or closing.

Keep fingers away from moving windows

Starting your vehicle


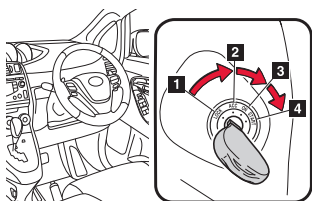


For vehicles without smart entry key positions are as follows:

1. Lock:- The steering wheel is locked and the key can be removed.
2. ACC:- Some electrical equipment such as audio can be used.
3. On:- All electrical equipment can be used.
4. Start:- Starts the engine.

For vehicles with smart entry :

1. The driver should carry the key on his person.
2. The Engine Start Stop button is used to start the vehicle.

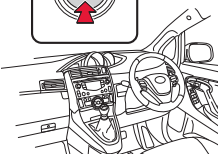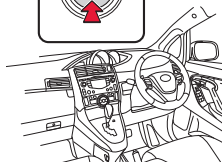

Starting procedure:

Manual transmission:

1. Ensure parking brake is applied.
2. Put gear lever to the neutral position.
3. Press and hold the clutch pedal firmly.
4. Start the engine.

Automatic or Multidrive:

1. Ensure parking brake is applied.
2. Gear lever set in P.
3. Press and hold the brake pedal firmly.
4. Start the engine .

NB For diesel vehicles:


The engine should not be started until the indicator light goes out.



Heating, A/C and de-misting

Manual air conditioning system


Area C indicated on instrument panel overview (page 6).

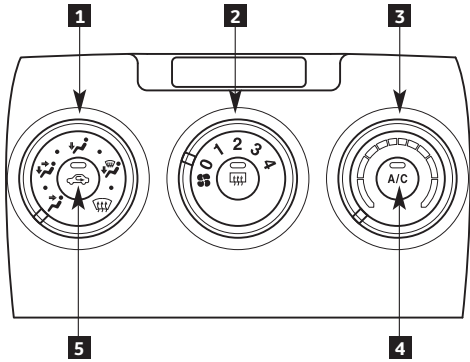

Manual

- 1. Air outlet selection dial.
- 2. Fan speed control dial.
- 3. Temperature control dial.
- 4. Air conditioning on/off button (if equipped).
- 5. Air or recirculated air mode button.

Automatic air conditioning system

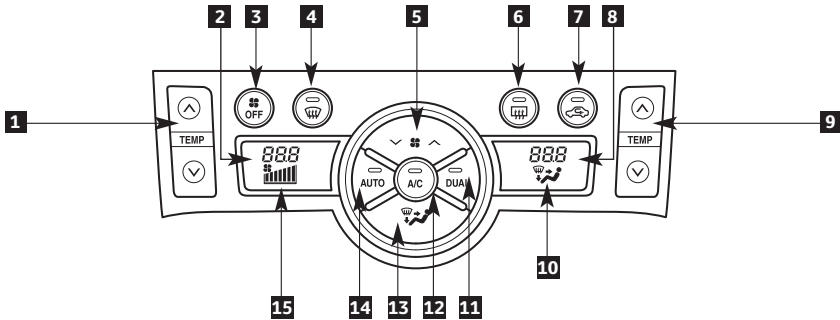

Automatic

- 1. Temperature control button (Passenger).
- 2. Temperature display.
- 3. "OFF" button.
- 4. Windshield de-mister button.
- 5. Fan speed control button.
- 6. Rear window de-mister.
- 7. Recirculated air mode button.
- 8. Temperature display.
- 9. Temperature control button (Driver).
- 10. Air outlet display.
- 11. Dual mode button.
- 12. Air conditioning on/off button.
- 13. Air outlet selection button.
- 14. Automatic mode button.
- 15. Fan speed display button.

Tips for windscreen demisting:



- 1. Switch AUTO button off (light is OFF)
- 2. Switch A/C ON (light is ON)
- 3. Switch air recirc off (light is OFF)



- 4. Switch airflow to windshield (light ON)



Setting up the display to access clock setting

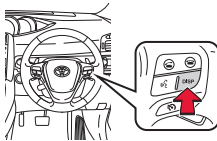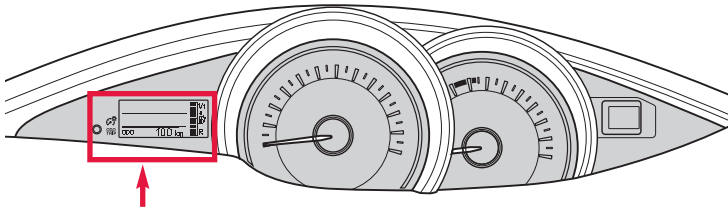

Before setting

1. Display the settings screen on the multi-information display when the vehicle is stopped.
2. Press and hold the “DISP” switch to enter the adjustment mode.
3. Select the desired item on the menu screen. Press and hold the “DISP” switch to enter the adjustment mode.

Setting the clock



1. Select “CLOCK” on the menu screen.
2. Press the “DISP” switch to adjust the hours. After setting the hours, wait for 5 seconds until the bar disappears, and confirm that the hour has been input.
3. Press the “DISP” switch to adjust the minutes. After setting the minutes, wait for 5 seconds until the bar disappears, and confirm that the minutes have been input.

Setting the clock format

1. Select “CLOCK FORMAT” on the menu screen.
2. Select the desired clock format. Press and hold the “DISP” switch to input the choice.


To exit :

To go back to the original screen, scroll the menu by pushing the “DISP” switch till you get to “BACK” then press and hold again the “DISP” switch.

Gear change


Manual transmission

The shift pattern: Fully depress the clutch pedal before operating the gear lever, and then release it slowly, once a gear is selected.

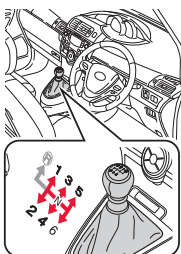


Gear lever for “R” (Reverse)

Lift up the ring and shift lever to the “R” position.

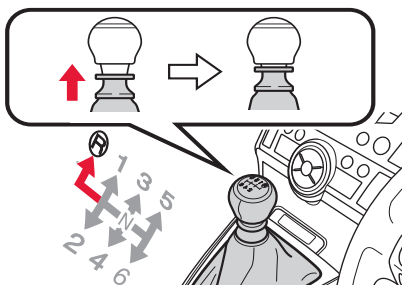

Sport mode

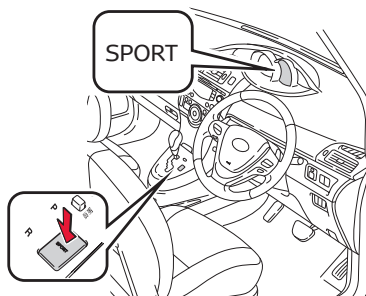


Press the switch.

For powerful acceleration and driving in mountainous regions.

Press the switch once more to return the normal mode.

Automatic transmission/multidrive

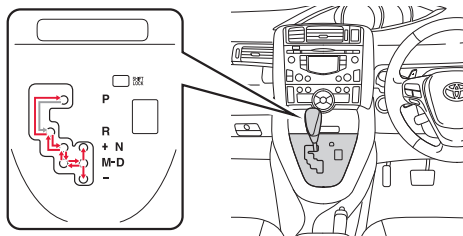

Vehicles without smart entry & start system:

While the engine switch is in the “ON” position, depress the brake pedal and move the gear lever.

Vehicles with smart entry & start system:

While the “ENGINE START STOP” switch is in the IGNITION MODE ON mode, depress and hold the brake pedal and move the gear lever.

D = normal automatic driving style.

M = manual driving style, (6 stages of gear for automatic and 7 stages of gear for multidrive).

Automatic deactivation of “SPORT” mode

Vehicles without smart entry & start system.

If the engine switch is turned to the “LOCK” position after driving in “SPORT” mode, the mode is automatically deactivated.

Vehicles with smart entry & start system.

If the “ENGINE START STOP” switch is turned OFF after driving in “SPORT” mode, the mode is automatically deactivated.

Fuel tank opening


Before refueling the vehicle

Vehicles without smart entry & start system

Turn the engine switch to the "LOCK" position and ensure that all the doors and windows are closed.

Vehicles with smart entry & start system

Turn the "ENGINE START STOP" switch OFF and ensure that all the doors and windows are closed.

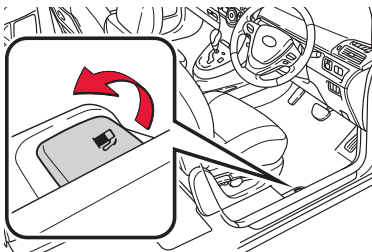


Opening the fuel tank cap

Pull up the fuel filler door opener switch




Turn the fuel tank cap slowly to open.

Hang the fuel tank cap on the back of the fuel filler door.

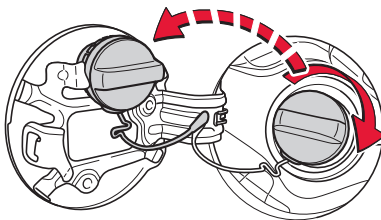

Take care to select the correct fuel.

Bonnet opening

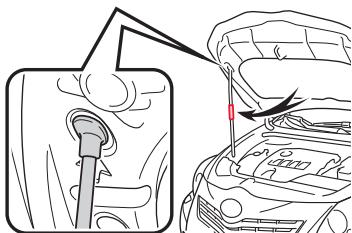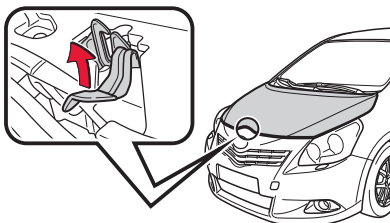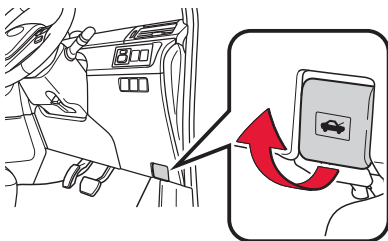

Release the lock from the inside of the vehicle to open the bonnet.

1. Pull the bonnet release lever.
The bonnet will pop up slightly.
2. Release the bonnet catch and lift the bonnet.

Caution :

When moving the supporting rod, hold the support rod cover as the rod might be very hot.

Hold the bonnet open by inserting the supporting rod into the slot.

Close: gently drop the bonnet from approximately 20cm.

Eco-Driving

What is “Eco-Driving”?”

- **Eco-Driving** = Driving in a more careful and environmentally responsible way
- **Eco-Driving** = Reduced **fuel costs** > Potential saving in the EU of 20 billion euros by 2010
- **Eco-Driving** = Reduced Environmental **impact** > Potential saving in the EU of 50 million tons of CO₂ emissions by 2010.

Eco-Driving Savings

Total potential saving of 20 - 30%.

Roof load increases wind drag and therefore consumption.

Roof Load (Speed at 120 km/hr)	Increased consumption
Luggage rack	5 – 10%
Ski box	10 – 20%
Bicycle rack	30%
Loaded luggage rack	35 – 40%

Open windows increase fuel consumption by an average of **5%**.

Air Conditioning can result in **10 – 25%** extra fuel consumption.



Low Tyre Pressure result in higher fuel consumption (up to 3% extra from 0.5 bar too low)
Tyre pressures can fall by 2.5 - 5.0% after one month, and by 20% after 5 months.

Shifting up gear earlier can result in **8% saving**.

How to Eco-Drive?

Starting

- Remove any extra weight and roof load
- Plan your route to avoid detours
- Avoid using your car for short journeys

Checking/maintenance

- Check your tyre pressures regularly
- Service your car according to owner's manual

Driving

- Shift up gear earlier
- Only use electrical accessories when necessary (e.g. A/C)
- Follow and anticipate the traffic flow
- Keep your windows closed (use ventilation system when possible)
- Switch off your engine if you have to wait longer than 30 - 60 seconds

Think&Act



