 


Land Rover Discovery 2004 – 2009 fuse box diagram

Fuse box locations

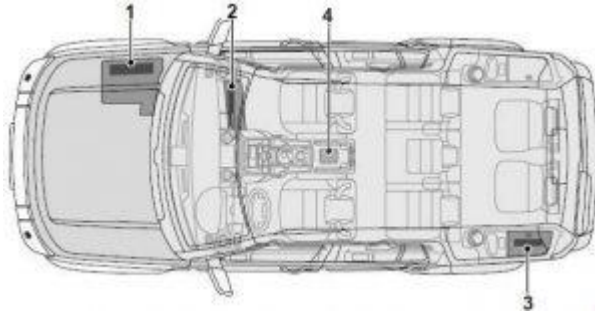

Land Rover Discovery – fuse box diagram

– location

1. Engine compartment fuse box.
2. Passenger compartment fuse box.
3. Tow hitch fuse box.
4. 6 way satellite ATO fuse box (Armoured)

Engine compartment fuse box



Land Rover Discover – fuse box diagram – engine compartment



Land Rover Discover – fuse box diagram – engine compartment


No.	A	Circuits protected
1	25	Fuel pump
2	–	–
3	5	Air suspension ECU

4	25	Diesel – diesel EMS (ECU & fuel pump relay control)
5	10	Petrol – petrol EMS (purge valve, EGR, inlet manifold tune valve), E-Box fan
6	15	Petrol EMS (ignition coils)
6	15	from 2007: Diesel EMS (Sensors and glow plug relay control)
7	25	Front seat heater
8	25	Rear seat heater
9	15	up to 2005: Active roll control
10	15	Petrol – petrol EMS (throttle motor, MAF), cool fan
10	15	Diesel – cooling fan
11	15	Petrol – petrol EMS (rear oxygen sensors)
12	10	Heated washer jets
13	10	Petrol – petrol EMS (ECU, VVTs and fuel pump relay control)
13	10	Diesel EMS (PCV, VCV)
14	20	Petrol – petrol EMS (front oxygen sensors)


15	30	Heated front screen
16	10	Heated door mirrors
17	15	Petrol – petrol EMS (injectors)
17	15	Diesel EMS (MAF, EGR), E-Box fan
18	30	Heated front screen
19	–	–
20	5	Alternator
21	–	–
22	30	Rear blower
23	25	Dynamic Stability Control system
24	20	Petrol – brake boost pump
25	10	Lighting switch
26	20	Air suspension ECU
27	5	Engine Control Module (ECM)
28	20	Diesel – auxiliary heater

29	30	Front wipers
30	10	Auto transmission ECU

 Passenger compartment fuse box

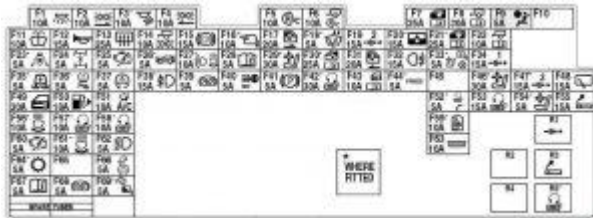

Land Rover Discover – fuse box diagram

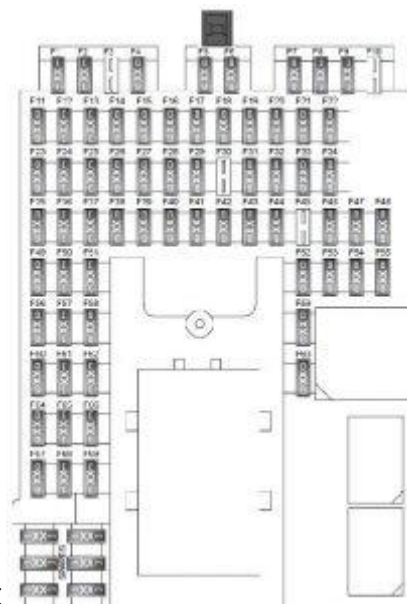 

– passenger compartment
box diagram – passenger compartment

Land Rover Discover – fuse

No.	A	Circuits protected
1	10	Interior lamps – glovebox lamp, vanity mirror lamp, map lamps, switchable roof lamps. Electric seats (non memory).
2	10	Right-hand side lamps
3	10	up to 2005: Theatre lamps

4	10	Left-hand side lamps
5	10	Reverse lamps
6	10	Trailer reverse lamp
7	25	Driver's window
8	30	Trailer pick-up (battery feed)
9	5	up to 2006: SRS from 2007: Airbags
10	–	–
11	15 10 ₁)	Washer pump
12	15	Horn
13	25	Heated rear window
14	10	Trailer side lamp
15	15	Brake lamps, Brake switch
16	10	Powerfold mirror
17	20	Rear right-hand window


18	5	Rain sensor, ambient light sensor (auto lamps)
19	15	Auxiliary power socket – 2nd row seats
20	15	Sunroof
21	25	Passenger window
22	10	Trailer pick-up (ignition feed)
23	–	–
24	5	Transfer box – centre differential, Terrain Response
25	5	Engine Control Module (ECM)
26	5	Battery back-up sounder
27	10	Adaptive front lighting / Headlamp levelling
28	5	Fuse box engine compartment – ignition
29	30	Passenger electric sea
30	–	–
31	20	Rear left-hand window
32	15	Rear fog lamps

33	5	Mirror adjust, Automatic transmission selector, passenger electric seat (up to 2005).
34	15	Auxiliary power socket – front seats
35	5	Air suspension ECU
36	5	Park Distance Control, Tyre pressure monitoring system
37	5	Dynamic Stability Control
38	15	Front fog lamps
39	5	Instrument pack
40	5	Key-in sense
41	5	Electric Parking Brake (EPB)
42	30	Audio amplifier
43	10	Radio frequency receiver, Tyre Pressure Monitoring system
44	5	Automatic transmission selector
45	–	–
46	30	Drivers electric seat

47	15	Auxiliary power socket – 3rd row seats
48	15	Rear wiper
49	30	Central door locking
50	10	Electric fuel flap actuator
51	10	Climate control ECU
52	5	Telephone, traffic message centre
53	15	Multi-media module, audio unit, DVD player
54	5	Electric seat – memory, lumbar pump
55	15	Cigar lighter
56	10	Adaptive front lighting (left-hand unit)
57	10	Rear seat entertainment module
58	10	Telephone, touch screen display, multi-media module, TV tuner
59	10	Cubby box cooler
60	5	Engine control module (ECM)
61	10	Adaptive front lighting (right-hand unit)

62	5	Low beam, auto lamps
63	10	Diagnostic socket
64	5	Automatic transmission ECU
65	–	–
66	5	HDC switch, Brake switch, Steering angle sensor, DSC switch
67	5	Auto lamps
68	5	Instrument pack
69	5	Automatic dimming interior mirrors Electrochromatic mirror, Homelink (up to 2005).
1) 2005		

 Tow hitch fuse box

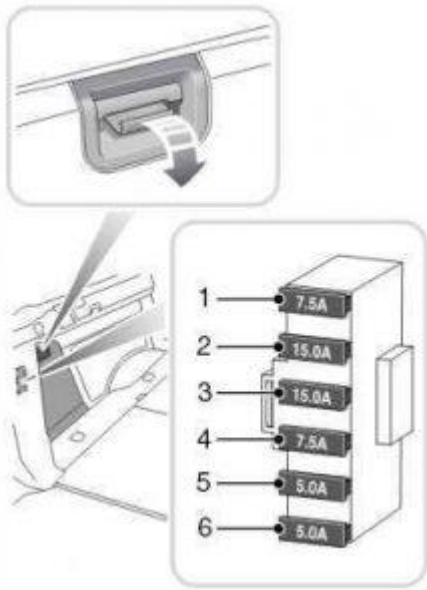

Land Rover Discover – fuse box diagram – tow hitch


fuse box

No.	A	Circuits protected
1	7.5	Brake lamp
2	15	Ignition feed
3	15	Battery feed
4	7.5	Rear fog lamps
5	5	Right-hand tail lamp
6	5	Number plate and left-hand tail lamp

Satellite fuse box (Armoured)

The six way satellite ATO fuse box is mounted in the base of the centre console cubby box.

 To access the fuses, remove the CD holder and cubby box floor. The fuse box has a removable transparent cover.

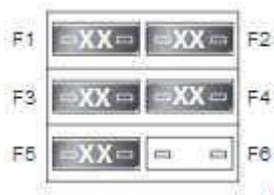

Land Rover Discover – fuse box diagram – satellite fuse box

(armoured)

No.	A	Circuits protected
1	5	Intercom
2	20	Siren
3	5	Covert lamps
4	10	Beacon
5	3	Battery status monitor
6	30	Additional equipment

Any electrical equipment other than Land Rover approved accessories must be connected to the spare terminal (F6) only. The additional electrical equipment should be protected with an appropriate fuse not exceeding 30 amps.