


Chevrolet Camaro (1999 – 2002) – fuse box diagram

Year of production: 1999, 2000, 2001, 2002

Main Fuse Block

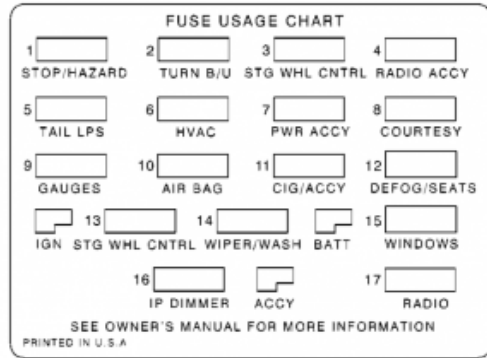

Chevrolet Camaro – fuse box – main fuse block

Fuse name	Usage
STOP/HAZARD	Hazard Flasher, Brake Switch Assembly
TURN B/U	Traction ControlV2nd Gear Start Switch, Back-up Lamp Switch, Turn Flasher, Daytime Running Lamps (DRL) Module
STG WHL CNTRL	Steering Wheel Controls

RADIO ASSY	Delco Audyssey Radio Amplifier Remote CD player (trunk)
TAIL LTS	Daytime Running Lamps (DRL) Module, Headlamp Switch
HVAC	HVAC Selector Switch, Rear Defogger Switch/Timer
PWR ACCY	Park Lamp Relay,Hatch Release Relay, Power Mirror Switch, Radio, Shock Sensor, Instrument Cluster
COURTESY	Body Control Module (BCM)


GAGES	Body Control Module (BCM), Brake-Transmission Shift Interlock (BTSI), Instrument Cluster, Daytime Running Lamps (DRL) Module
AIR BAG	Air Bag System
CIGAR/ACCY	Cigarette Lighter, Data Link Connector (DLC)
DEFOG/SEATS	Rear Defogger Switchmimer, Power Seat
IGN	Aftermarket Use Only
STG WHL CNTRL	Steering Wheel Controls
WIPER/WASH	Wiper Motor Assembly, Wiper/Washer Switch

BATT	Aftermarket Use Only
WINDOWS	Power Windows Switch (RH, LH), Express Down Module, Convertible Top Switch
I/P DIMMER	Door Illumination Lamp (LH, RH), Headlamp Switch, Fog Lamp Switch, Instrument Cluster, HVAC Control Assembly, PRNDL Illumination Lamp, Ashtray Lamp, Radio, Rear Window Defogger Switch/Timer, Traction Control (ASR)/Second-Gear Start Switch, Convertible Top Switch
ACCY	Aftermarket Use Only
RADIO	Body Control Module (BCM), Radio, Amplifier, Steering Wheel Controls-Radio

Underhood Electrical Center

The two underhood fuse and relay centers are located in the engine compartment.

Fuse and Relay Center 1

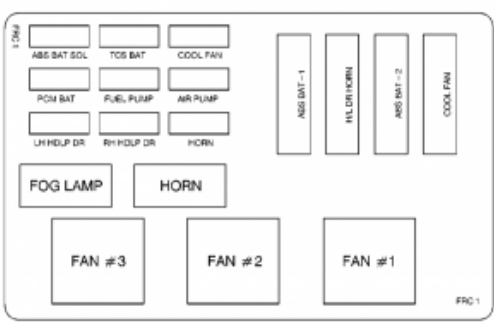

Chevrolet Camaro – fuse box – underhood electrical center – Fuse and relay center 1

Fuse name	Usage
ABS BAT SOL	Anti-Lock Brake System
TCS BAT	Traction Control System and ETC
COOL FAN	Cooling Fan Control
PCM BAT	Powertrain Control Module (PCM)
FUEL PUMP	Fuel Pump

AIR PUMP	Air Pump Relay and Bleed Valve
LH HDLP	Left Headlamp Door and Module
RH HDLP	Right Headlamp Door and Module
HORN	Horn Relay
ABS BAT-1	Anti-Lock Brake System Module
H/L DRHORN	Horn and Headlamp Doors
ABS BAT-2	Anti-Lock Brake and Traction Control System (ASR)
COOL FAN	Cooling Fan Relays

Relays	Usage
FOG LAMP	Fog lamps
HORN	Horn

COOLING FAN#3	Cooling Fans
COOLING FAN#2	Cooling Fans
COOLING FAN#1	Cooling Fans

Fuse and Relay Center 2

Chevrolet Camaro – fuse box – underhood electrical center – Fuse and relay center 2

Fusename	Usage
INJ	Fuel Injectors (Not Used for V6) (LH Injectors for V8 and Ignition Module)
INJ	Fuel Injectors (All for V6) (LH Injectors for V8 and Ignition Module)
ENG SEN	MassAirFlow,HeatedOxygen Sensor, Skip Shift Solenoid (V8 Only), Reverse Lockout Solenoid, Brake Switch

STRTR	Powertrain Control Module (PCM) and Clutch Pedal Switch
ABS IGN	Anti-Lock Brake System Module
PCM IGN	Powertrain Control Module (PCM)
ETC	Electronic Throttle Control (V6 Only)
ENG CTRL	Ignition Module (V6 Only), Automatic Transmission and Charcoal Canister Purge Solenoid
A/CCRUISE	Air Conditioning Compressor Relay, Cruise Control Switches and Module
ENG CTRL	EngineControls,FuelPump,PCM, A.I.R. and Cooling Fans
I/P-1	HVAC Blower Control and Relay
IGN	Ignition Switch, Relay and Starter Enable Relay
I/P-2	Instrument Panel Fuse Center

Relays	Usage
--------	-------

AIR SOL

Air Solenoid

AIR PUMP

Air Pump

A/C COMP

Air Conditioning Compressor

FUEL PUMP

Fuel Pump

STARTER

Starter

IGN

Engine Controls, Cruise Control, Air Conditioning