


Cadillac Seville 1994 fuse box diagram

Engine compartment fuse block

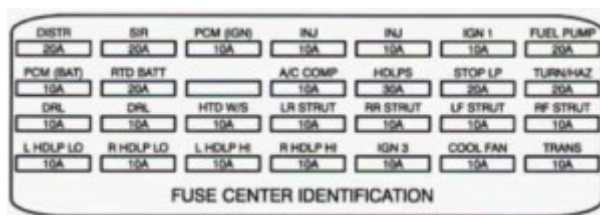


Cadillac Seville – fuse box diagram – engine

compartment

Fuse name	Ampere rating	Usage
DISTR	20	IGNITION CONTROL MODULE
SIR	20	DIAGNOSTIC/ENERGY RESERVE MODULE (DERM), DUAL POLE ARMING SENSOR
PCM (IGN)	10	POWERTRAIN CONTROL MODULE (PCM), PASSKey DECODER MODULE
INJ	10	1, 4, 6, AND 7 FUEL INJECTORS
INJ	10	2, 3, 5 AND 8 FUEL INJECTOR
IGN	10	A/C REFRIGERANT PRESSURE SWITCH, TRANSAXLE RANGE SWITCH, STOP/BTSI/CRUISE BRAKE SWITCH, INSTRUMENT PANEL CLUSTER, KEYLESS ENTRY MODULE , DIAGNOSTIC/ENERGY RESERVE MODULE (DERM), CORNERING LIFHTS, TURN/HAZARD SWITCH ASSY., CHIME MODULE, HEADLIGHT SWITCH, TWLIGHT SENTINEL/DRL MODULE
FUEL	20	FUEL PUMP, POWERTRAIN CONTROL MODULE (PCM)
PCM (BAT)	10	POWERTRAIN CONTROL MODULE (PCM)
RTD (BAT)	20	ROAD SENSING SUSPENSION (RSS) MODULE
A/C COMP	10	A/C COMPRESSOR CLUTCH
HDLPS	30	HEADLIGHT DIMMER SWITCH, HEADLIGHT RELAY "D" (ENGINE COMP. MICRO RELAY CENTER), DRL HEADLIGHT RELAY "E" (WITH DAYTIME RUNNING LIGHTS), POWERS C13
STOP LP	20	STOP/BTSI/CRUISE SWITCH, STOPL LIGHTS SWITCH CAPACITOR
TURN/HAZ	20	HAZARD FLASHER, TURN FLASHER RELAY, TURN FLASHER MODULE
DRL (CANADA)	10	DAYTIME RUNNING LIGHTS (CANADA)
DRL (CANADA)	10	LEFT AND RIGHT LO BEAM HEADLAMP
HTD W/S	10	HEATED WINDSHIELD CONTROL MODULE
L HDLP LO	10	LEFT LO BEAM HEADLAMP
R HDLP LO	10	RIGHT LO BEAM HEADLAMP

L HDLP HI	10	LEFT HI BEAM HEADLAMP
R HDLP HI	10	RIGHT HI BEAM HEADLAMP
IGN 3	10	REAR DEFOGGER RELAY, ELECTRONIC LEVEL CONTROL (ELC), HEATED WINDSHIELD, HEATER AND A/C PROGRAMMER, CRUISE CONTROL
COOLING FAN	10	EXTENDED TRAVEL BRAKE SWITCH, POWERTRAIN CONTROL MODULE (PCM), COOLING FAN RELAYS 1,2 AND 3, FRONT AND REAR HEATED OXYGEN SENSOR
TRANS/ECS	10	OVERSPEED ALERT MODULE (EXPORT), POWER STEERING PRESSURE SWITCH, EXHAUST GAS RECIRCULATION (EGR) VALVE, TRANSAXLE SHIFT SOLENOIDS A&B, EVAPORATIVE EMISSION CONTROL SOLENOID, POWERTRAIN CONTROL MODULE (PCM), TORQUE CONVERTER CLUTCH SOLENOID, TCC BRAKE SWITCH

Maxi Fuse block

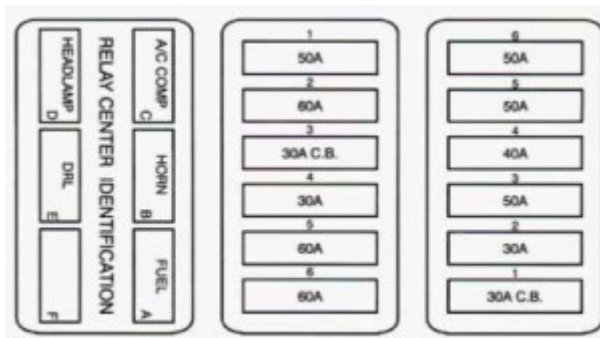

Cadillac Seville – fuse box diagram – maxi fuse

block

LH MAXI FUSE BLOCK

Fuse		Ampere rating [A]	Usage
FUSE 1	STRG1-2	50	RETAINED ACCESSORY POWER (RADIO/WIPERS), STARTER, TRUNK COMR FUSE B11 AND B13
FUSE 2	BODY	60	ENGINE COMP B11, ROAD SENSING SUSPENSION, FOG LIGHTS, TRUNK COMP FUSE C1, C3, C5, C7, C9 AND C11, TRUNK COMP. FUSE C13 (EXPORT), REAR FOG LIGHT (EXPORT)
CIRCUIT BREAKER 3	SEAT	30	LEFT AND RIGHT POWER SEAT SWITCHES, LEFT AND RIGHT LUMBAR RELAYS, POWER DOOR LOCKS, KEYLESS ENTRY MODULE, HORNS
FUSE 4	IPC	30	POWERTRAIN CONTROL MODULE (PCM), ELECTRONIC CLIMATE CONTROL, RAP/ILLUMINATED ENTRY MODULE, INSTRUMENT PANEL CLUSTER, PASSKey DECODER MODULE, THEFT DETERRENT

FUSE 5	HVAC	60	LEFT AND RIGHT HEATED SEATS, ELECTRONIC LEVEL CONTROL (ELC), TRUNK LID PULL DOWN, POWER ANTENNA, REAR DEFOGGER, LEFT AND RIGHT MIRROR DEFOGGERS
FUSE 6	STRG 3	60	RETAINED ACCESSORY POWER (SUNROOF+POWER WINDOWS), ENGINE COW FUSES D1, D3, D5, TRUNK COW FUSES A1, A3, A5, A7, A9

RH MAXI FUSE BLOCK

Fuse		Ampere rating [A]	Usage
CIRCUIT BREAKER 1	DAB	30	RETAINED ACCESSORY POWER (RAP) (SUNROOF/POWER WINDOWS)
FUSE 2	RADIO	30	DELCO-BOSE SPEAKERS, RADIO CONTROL HEAD, REMOTE RADIO RECIVER
FUSE 3	COIL	50	COOLING FANS
FUSE 4	HVAC BLOWER (BLOWER)	40	HVAC POWER MOTOR, A/C COMPRESSOR
FUSE 5	ABS (BRAKES)	50	BRAKE PRESSURE MODULATOR VALVE
FUSE 6	LAMPS	50	TURN FLASHER MODULE, HAZARD FLASHER, STOP/BTS/CIRCUISE BRAKE SWITCH, PARKING LIGHTS, DAY TIME RUNNING LIGHTS (CANADA), ENGINE COMP. FUSES B1, B3 AND B5, TRUNK COMP. FUSES D11, D13

Rear Compartment Fuse Block



Cadillac Seville – fuse box diagram – rear

compartment

Fuse name	Ampere rating [A]	Usage
CRANK	10	RAP/ILLUMINATED ENTRY MODULE, DIAGNOSTIC ENERGY RESERVE MODULE (DERM), TRANSAXLE RANGE SWITCH (NSSS)
IGN 1	10	FUEL LEVEL SENSOR, ELECTROCHROMIC MIRROR, RAP/ILLUMINATED ENTRY MODULE, THEFT DETERRENT MODULE, KEYLESS ENTRY MODULE, TURN FLASHER RELAY "F" TRUNK COMP. MICRO RELAY CENTER, CATALYTIC CONVERTER ALARM MODULE (EXPORT)

HDLP WASH (EXPORT)	30	HEADLIGHT WASHER MODULE
SUSP (IGN)	10	ROAD SENSING SUSPENSION (RSS) MODULE
IPC (IGN)	10	INSTRUMENT PANEL CLUSTER
CNSL SW	10	REAR BLOWER RELAY "E", CONSOLE SWITCH
ABS	10	ELECTRONIC BRAKE AND TRACTION CONTROL MODULE (EBTCM)
WIPER	30	WIPER/WASHER SWITCH
RAD (IGN)	10	REMOTE RADIO RECEIVER
R DEFOG	30	REAR DEFOGGER
HTD MIRR	10	LT AND RT POWER MIRROR-DEFOGGER
IPC (BATT)	10	INSTRUMENT PANEL CLUSTER
THEFT	10	PASS-key DECODER MODULE, THEFT DETERRENT RELAY "D" (TRUNK COMP. RELAY CENTER), THEFT DETERRENT MODULE
HVAC/DABI	10	HEATER AND NC PROGRAMMER, RAP/ILLUMINATED ENTRY MODULE
REAR FOG	10	REAR FOG LIGHTS RELAY A (EXPORT)
FOG LP	10	FOG LIGHTS RELAY A AND F
CNSL FAN	10	REAR BLOWER MOTOR, REAR BLOWER RELAY
CIGAR	20	REAR CIGAR LIGHTERS, FRONT CIGAR LIGHTER SEVILLE ONLY), FRONT CIGARETTE LIGHTER, CHIME MODULE
BODY 2	10	POWER MIRROR SWITCH, RAP RELAY, LOCK-OUT INHIBIT RELAY "B" (TRUNK COMP. 1 MICRO RELAY CENTER), PANEL LIGHTS INHIBIT RELAY "F" (TRUNK COMP 3 MICRO RELAY CENTER) (EXPORT), COURTESY LIGHTS RELAY "C" (TRUNK COMP. 2 MICRO RELAY CENTER), RAP RELAY "E" (TRUNK COMP 2 MICRO RELAY CENTER), KEYLESS ENTRY MODULE, TRUNK LAMP, SEAT BELT RETRACTIO SOLENOIDS (ELDORADO ONLY)
BODY 1	10	REAR DOOR LOCKS SWITCHES (SEVILLE ONLY), FRONT DOOR LOCK SWITCHES, GLOVE BOX LAMP, LT AND RT FOOTWELL COURTESY LAMPS, HEADLIGHT SWITCH
READ LP	10	LT AND RT FRONT HEADER LAMP, LT AND RT VANITY MIRRORS, GARAGE DOOR OPENER, LT AND RT REAR HEADER LAMPS
L PRK LP	10	LT REAR RT FRONT HEADER LAMP, LT FRONT PARK/TURN LAMPS, FRONT AND REAR LEFT SIDE MARKER LAMPS, RADIO CONTROL HEAD, HEADLIGHT SWITCH, INSTRUMENT PANEL CLUSTER
R PRK LP	10	RT TAIL/STOP TURN LAMPS, RT FRONT AND REAR SIDE MARKER LAMPS, RT FRONT PARK AND TURN LAMPS, ENGINE COMP LAMP LICENCE PLATE LAMPS
RAD (BAT)	10	RADIO

ANT/TRK	20	TRUNK LID PULL DOWN MOTOR, POWER ANTENNA
ELC	30	ELECTRONIC LEVEL CONTROL (ELC)
R HTD SEAT	10	PASSENGERS HEATED SEAT
L HTD SEAT	10	DRIVERS HEATED SEAT