

M PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11070	B 9	Back Door Courtesy SW	90980-10860
A 2	A/C Condenser Fan Motor	90980-10928	B10	Back Door Key Lock and Unlock SW	90980-11489
A 3	A/C Magnetic Clutch and Lock Sensor	90980-11016	B11	Back Door Lock Motor and Back Door Unlock Detection SW	90980-11150
A 4	A/C Triple Pressure SW (A/C Dual and Single Pressure SW)	90980-10943	B12	Buckle SW LH	90980-11399
A 5	ABS & BA & TRC & VSC Actuator	90980-11698	B13	Buckle SW RH	90980-10794
A 6	ABS & BA & TRC & VSC Actuator	90980-11132	C 1	Camshaft Timing Oil Control Valve LH	90980-11162
A 7	ABS & BA & TRC & VSC Actuator	90980-11413	C 2	Camshaft Timing Oil Control Valve RH	
A 8	ABS Speed Sensor Front LH	90980-11075	C 3	Counter Gear Speed Sensor	90980-11156
A 9	ABS Speed Sensor Front RH		C 4	Crankshaft Position Sensor	90980-10947
A10	Air Flow Meter	90980-11317	C 5	Cruise Control Actuator	90980-11150
A11	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-11178	C 6	CD Automatic Changer	90980-10803
A12	Air Fuel Ratio Sensor (Bank 2 Sensor 1)		C 7	Cellular Phone (Hand Set)	90980-11912
A13	Airbag Sensor Front LH	90980-11856	C 8	Cigarette Lighter	90980-10760
A14	Airbag Sensor Front RH		C 9	Cigarette Lighter Illumination	90980-11148
A15	Alternator	90980-09365	C10	Combination Meter ECU	90980-11915
A16	Alternator	90980-11349	C11	Combination Meter ECU	90980-11391
A17	A/C Evaporator Temp. Sensor	90980-10825	C12	Combination Meter ECU	90980-11392
A18	A/C Room Temp. Sensor	90980-11918	C13	Combination SW	90980-11616
A19	A/C Solar Sensor		C14	Combination SW	90980-11594
A20	ABS & BA & TRC & VSC ECU	90980-11638	C15	Combination SW	90980-11672
A21	ABS & BA & TRC & VSC ECU	90980-11421	C16	Cruise Control ECU	90980-12094
A22	ABS & BA & TRC & VSC ECU	90980-11476	D 1	Deceleration Sensor	90980-11182
A23	ABS & BA & TRC & VSC ECU	90980-11631	D 2	Diode (A/C)	90980-10962
A24	Air Inlet Control Servo Motor	90980-11165	D 3	DLC3	90980-11978
A25	Air Mix Control Servo Motor		D 4	Diode (Rear Interior Light)	90980-10962
A26	Air Vent Mode Control Servo Motor		D 5	Door Courtesy Light Front LH	90980-11148
A27	Airbag Sensor Assembly	90980-11869	D 6	Door Courtesy Light Front RH	
A28	Airbag Sensor Assembly	90980-11872	D 7	Door Lock Motor and SW Front LH	90980-11087
A29	Airbag Sensor Assembly	90980-11867	D 8	Door Lock Motor and SW Front RH	
A30	Airbag Squib (Front Passenger's Airbag Assembly)	90980-11884	D 9	Door Lock Motor and SW Rear LH	90980-11537
A31	Airbag Squib (Steering Wheel Pad)	90980-10850	D10	Door Lock Motor and SW Rear RH	
A32	Ashtray Illumination	90980-11156	D11	Double Lock Door Control Relay	90980-10803
A33	Automatic Light Control Sensor	90980-11107	D12	Driver Door ECU	90980-11877
A34	ABS Speed Sensor Rear LH	90980-11060	E 1	ECT Solenoid	90980-11658
A35	ABS Speed Sensor Rear RH		E 2	EFI Water Temp. Sensor	90980-10737
A36	Auto Antenna Motor and Relay	90980-11697	E 3	Engine Hood Courtesy SW	90980-11189
B 1	Brake Fluid Level Warning SW	90980-11207	E 4	Engine Oil Level Sensor	90980-11235
B 2	Blower Motor	90980-10385	E 5	ECT Pattern Select SW	90980-10797
B 3	Blower Motor Control Relay	90980-11667	E 6	Engine and ECT ECU	90980-11586
B 4	Blower Motor Control Relay	90980-11579	E 7	Engine and ECT ECU	90980-11476
B 5	Body ECU	90980-11954	E 8	Engine and ECT ECU	90980-11421
B 6	Body ECU	90980-11955	E 9	Engine and ECT ECU	90980-11638
B 7	Body ECU	90980-11956	E10	Engine and ECT ECU	90980-11637
B 8	Body ECU	90980-11957			

Note: Not all of the above part numbers of the connector are established for the supply.

Nota: Toutes les références du connecteur ne sont pas définies pour la fourniture.

Code	Part Name	Part Number	Code	Part Name	Part Number
F 1	Front Clearance Light LH	90980-11149	I13	ISC Valve	90980-11145
F 2	Front Clearance Light RH		I14	Ignition Key Cylinder Light	90980-10906
F 3	Front Fog Light LH	90980-11660	I15	Ignition SW	90980-11615
F 4	Front Fog Light RH		I16	Instrument Control Panel	90980-11952
F 5	Front Side Turn Signal Light LH	90980-11162	I17	Instrument Control Panel	90980-11911
F 6	Front Side Turn Signal Light RH		I18	Inner Mirror	90980-11186
F 7	Front Turn Signal Light LH	90980-11019	J 1	Junction Connector	90980-11194
F 8	Front Turn Signal Light RH		J 2	Junction Connector	
F 9	Front Window Defogger	90980-11407	J 3	Junction Connector	90980-11661
F10	Front Wiper Motor	90980-11599	J 4	Junction Connector	
F11	Fusible Link Block	82620-48020	J 5	Junction Connector	90980-10976
F12	Front Passenger's Seat Belt Warning Light	90980-10789	J 7	Junction Connector	90980-11542
F13	Front Power Outlet	90980-10760	J 8	Junction Connector	
F14	Front Door Speaker LH	90980-10935	J 9	Junction Connector	90980-11686
F15	Front Door Speaker RH		J10	Junction Connector	90980-11542
F16	Front Interior Light		J11	Junction Connector	
F17	Front Passenger Door ECU	90980-11877	J12	Junction Connector	
F18	Fuel Pump and Fuel Sender (Main)	90980-11077	J13	Junction Connector	90980-11686
F19	Fuel Sender (Sub)	90980-11140	J14	Junction Connector	
G 1	Glove Box Light	90980-11098	J15	Junction Connector	
H 1	Headlight Beam Level Control Actuator LH	90980-11016	J17	Junction Connector	90980-10803
H 2	Headlight Beam Level Control Actuator RH		J18	Junction Connector	
H 3	Headlight LH (High Beam)	90980-11659	J19	Junction Connector	90980-11542
H 4	Headlight LH (Low Beam)	90980-11660	J20	Junction Connector	
H 5	Headlight RH (High Beam)	90980-11659	K 1	Knock Sensor 1	90980-11166
H 6	Headlight RH (Low Beam)	90980-11660	K 2	Knock Sensor 2	
H 7	Horn LH	90980-10619	K 3	Key Interlock Solenoid	90980-10825
H 8	Horn RH		K 4	Kick Down SW	90980-11156
H 9	Hazard SW	90980-10801	L 1	License Plate Light	90980-11300
H10	Headlight Beam Level Control SW	90980-10797	L 2	Light Failure Sensor	90980-10803
H11	Heater Relay	82660-44010	M 1	Master Cylinder Pressure Sensor	90980-11451
H12	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028	M 2	Multi Display	90980-11321
H13	High Mounted Stop Light	90980-11148	M 3	Multi Display	90980-11911
I 1	Ignition Coil and Igniter No.1	90980-11885	M 4	Multi Display	90980-11923
I 2	Ignition Coil and Igniter No.2		M 5	Multi Display	90980-10799
I 3	Ignition Coil and Igniter No.3		M 6	Moon Roof Control ECU	90980-10997
I 4	Ignition Coil and Igniter No.4		M 7	Moon Roof Control SW	90980-10799
I 5	Ignition Coil and Igniter No.5		N 1	Neutral Start SW, A/T Indicator Light SW and Back-Up Light SW	90980-11784
I 6	Ignition Coil and Igniter No.6		N 2	Noise Filter (Ignition System)	90980-10843
I 7	Injector No.1	90980-11153	N 3	Navigation ECU	90980-11973
I 8	Injector No.2		N 4	Navigation ECU	90980-11923
I 9	Injector No.3		N 5	Noise Filter (DEF)	90980-10825
I10	Injector No.4		O 1	Oil Pressure SW	90980-11363
I11	Injector No.5		O 2	O/D Main SW	90980-11493
I12	Injector No.6				

Nota : No todos los números de las partes del conector indicados arriba están dispuestos para el suministro.

Anmerkung : Nicht alle der obenerwähnten Teile-Nummern der Stecker werden für die Lieferung etabliert.

M PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
P 1	Power Steering Oil Pressure SW	90980-11428	R13	Rear Combination Light RH	90980-10794
P 2	Panel Relay	82660-20340	R14	Rear Door LH ECU	90980-11877
P 3	Parking Brake SW	90980-10871	R15	Rear Door LH ECU	90980-10799
P 4	Personal Light	90980-10825	R16	Rear Door RH ECU	90980-11877
P 5	Power Window Control SW Rear LH	90980-10797	R17	Rear Door RH ECU	90980-10799
P 6	Power Window Control SW Rear RH		R18	Rear Door Speaker LH	90980-10935
P 7	Power Window Motor Front LH	90980-11011	R19	Rear Door Speaker RH	
P 8	Power Window Motor Front RH		R20	Rear Interior Light	
P 9	Pretensioner LH	90980-12138	R21	Rear Power Outlet	90980-10760
P10	Pretensioner RH		R22	Rear Window Defogger	90980-11259
P11	Power Seat Control SW (Driver's Seat Lumbar Support Control)	90980-10601	R23	Rear Window Defogger	
P12	Power Seat Control SW (Driver's Seat)	90980-10997	R24	Rear Wiper Motor	90980-10795
P13	Power Seat Control SW (Front Passenger's Seat Lumbar Support Control)	90980-10601	R25	Remote Control Mirror LH	90980-10798
P14	Power Seat Control SW (Front Passenger's Seat)	90980-10997	R26	Remote Control Mirror RH	
P15	Power Seat Motor (Driver's Seat Front Vertical Control)	90980-10825	S 1	Starter	90980-09506
P16	Power Seat Motor (Driver's Seat Lumbar Support Control)		S 2	Starter	90980-11400
P17	Power Seat Motor (Driver's Seat Rear Vertical Control)		S 3	Seat Heater Relay	82660-20340
P18	Power Seat Motor (Driver's Seat Reclining Control)		S 4	Seat Heater SW (Driver's Seat) [LHD]	90980-10797
P19	Power Seat Motor (Driver's Seat Slide Control)			Seat Heater SW (Driver's Seat) [RHD]	90980-10996
P20	Power Seat Motor (Front Passenger's Seat Front Vertical Control)		S 5	Seat Heater SW (Front Passenger's Seat) [LHD]	
P21	Power Seat Motor (Front Passenger's Seat Lumbar Support Control)			Seat Heater SW (Front Passenger's Seat) [RHD]	90980-10797
P22	Power Seat Motor (Front Passenger's Seat Rear Vertical Control)		S 6	Shift Lock ECU	90980-11319
P23	Power Seat Motor (Front Passenger's Seat Reclining Control)		S 7	Short Connector	90980-11889
P24	Power Seat Motor (Front Passenger's Seat Slide Control)		S 8	Short Connector	90980-11890
R 1	Radiator Fan Motor	90980-10928	S 9	Steering Angle Sensor	90980-11581
R 2	Radar Sensor	90980-11013	S10	Stop Light SW	90980-11118
R 3	Radio and Player	90980-10996	S11	Side Airbag Sensor LH	90980-11857
R 4	Radio and Player	90980-10997	S12	Side Airbag Sensor RH	
R 5	Radio and Player	90980-11165	S13	Side Airbag Squib LH	90980-11864
R 6	Radio and Player	90980-12038	S14	Side Airbag Squib RH	
R 7	Radio and Player	90980-10803	S15	Stereo Component Amplifier	90980-10997
R 8	Remote Control Mirror SW	90980-11657	S16	Stereo Component Amplifier	90980-10996
R 9	Rheostat	90980-11950	S17	Stereo Component Amplifier	90980-11264
R10	Rear Combination Light LH	90980-11399	S18	Seat Belt Warning Occupant Detection Sensor	90980-10859
R11	Rear Combination Light LH	90980-10794	S19	Seat Heater (Driver's Seat)	90980-11298
R12	Rear Combination Light RH	90980-10858	S20	Seat Heater (Front Passenger's Seat)	
			T 1	Throttle Position Sensor	90980-11261
			T 2	Turbine Speed Sensor	90980-11156
			T 3	Telephone Microphone	90980-11920
			T 4	Theft Deterrent ECU	90980-11392
			T 5	Theft Deterrent ECU	90980-11424
			T 6	Theft Deterrent Indicator Light	90980-11490

Note: Not all of the above part numbers of the connector are established for the supply.

Nota: Toutes les références du connecteur ne sont pas définies pour la fourniture.

Code	Part Name	Part Number	Code	Part Name	Part Number
T 7	Transponder Key Amplifier	90980-10789	V 4	VSV (EVAP)	90980-11156
T 8	Turn Signal Flasher	90980-10799	V 5	VVT Sensor LH	90980-10947
T 9	Tweeter LH	90980-11013	V 6	VVT Sensor RH	
T10	Tweeter RH		V 7	VSC Warning Buzzer	90980-10906
T11	Telephone ECU	90980-11001	V 8	Vanity Light LH	90980-11369
T12	Telephone ECU	90980-10998	V 9	Vanity Light RH	
T13	Telephone ECU	90980-11912	W 1	Washer Level Warning SW	90980-11068
T14	Telephone ECU	90980-11910	W 2	Washer Motor	90980-10981
T15	Theft Deterrent Siren	90980-11013	W 3	Water Temp. SW No.1	90980-11235
U 1	Unlock Warning SW	90980-10860	W 4	Water Temp. SW No.2	90980-11243
V 1	VSV (ACIS No.1)	90980-11149	W 5	Wireless Door Control Receiver	90980-11909
V 2	VSV (ACIS No.2)		Y 1	Yaw Rate Sensor	90980-11904
V 3	VSV (ACM)	90980-11156			

Nota : No todos los números de las partes del conector indicados arriba están dispuestos para el suministro.

Anmerkung: Nicht alle der obenerwähnten Teile-Nummern der Stecker werden für die Lieferung etabliert.