

WIRING DIAGRAMS

1988 Toyota Celica

1988 WIRING DIAGRAMS
Toyota

Celica

IDENTIFICATION

COMPONENT LOCATION MENU

COMPONENT LOCATIONS TABLE

Component	Figure No. (Location)
A/C Amplifier (Lever)	8 (A 29-30)
A/C Amplifier (Push)	9 (E 35)
A/C Comp Clutch	8 (E 31)
A/C Dual Pres Sw (Push)	9 (E 33)
A/C SW (Lever)	8 (E 28)
A/T Ind Switch	3 (E 11)
ABS System	7 (A-C 24-27)
Alternator	1 (C 1-2)
Back-Up Lt Sw (M/T)	11 (C 43)
Battery	1 (A 2)
Blower Ctrl Rly (Push)	9 (A 35)
Blower Sw (Lever)	8 (A 30-31)
Brake Fluid Level Sw	5 (A 17)
Buckle Switch	5 (E 16)
Cig Lighter	7 (E 25)
Circuit Opening Rly (3S-FE)	4 (B 15)
Circuit Opening Rly (3S-GE)	3 (B 11)
Circuit Opening Rly (3S-GTE)	2 (B-C 4)
Clock	6 (A 23)
Clutch Start Switch	7 (D 24)
Cold Start INJ	1 (B 3)
Cruise Control Sys	4 (D-E 12-15)
Defog Switch	10 (C 36)
Distributor (3S-FE)	4 (C 15)
Distributor (3S-GE)	3 (D 11)
Distributor (3S-GTE)	2 (D 7)
Door Ctsy Lights	6 (B 20)
Door Ctsy Sws	5 (D-E 19, E 16)
Door Lock Sys	10 (D-E 38-39)
ECT ECU	3 (D-E 8)
ECT SOL	3 (D-E 11)
Fog Fuse	1 (C 3)
Fog Lt Rly & Sw	1 (C-D 3)
Fus Link Box	1 (B 3)
Hazard Switch	10 (B 36)
Headlight Switch	10 (D 36)
Heater Ctrl Assy (Push)	9 (A-E 32)
Ignition Switch	6 (D-E 23)
Illum Lights	7 (D-E 25-27)
Inst Clstr	10 (A-D 39)
Intercooler Computer	2 (D 4)
Interior Light	5 (A 19)
Junc Block #1 (J/B #1)	5, 6 (A-E 16-23)
Junc Block #2 (J/B #2)	8 (D-E 29-30)
Junc Block #3 (J/B #3)	7 (D-E 25-27)
Junc Block #4 (J/B #4)	8 (B-C 31)

Lt Failure Sensor	11 (E 41)
O/D Main Sw (W/ECT)	3 (D 9)
O/D Main Sw (W/O ECT)	10 (A 37)
O/D SOL (W/O ECT)	10 (A 36)
Parking Brake Sw	7 (E 27)
Pattern Select Switch	3 (D 9)
Power Antenna	11 (E 40-41)
Power Mirrors	11 (C-D 40)
Power Seat	11 (A 40)
Power Windows	11 (A-B 41-42)
Rad Fan Motor	8 (D 28)
Rear Washer Motor	11 (B 41)
Rear Wiper Motor	11 (B 40)
Relay Block #1 (R/B #1)	7 (D-E 24)
Relay Block #5 (R/B #5)	8 (B-C 28)
Retract Ctrl Rly	1 (D-E 3)
Start Inj Time Sw	1 (A 3)
Starter	1 (A 3)
Stop Light Switch	4 (D 12)
Sunroof	11 (C-D 41-42)
TCCS ECU (3S-FE)	4 (A 12-15)
TCCS ECU (3S-GE)	3 (A 8-11)
TCCS ECU (3S-GTE)	2 (A 4-7)
Turn Signal Switch	10 (A-B 36)
Unlock Warn Sw	6 (E 23)
Washer Motor	1 (C 2)
Wiper/Washer Sw	10 (E 36)
Wiper Motor	1 (C 3)

WIRING DIAGRAM

COMPONENT LOCATOR:

A/C AMPLIFIER (LEVER)	A 29-30
A/C AMPLIFIER (PUSH)	E 35
A/C COMP CLUTCH	E 31
A/C DIAL PRES SW (PUSH)	E 33
A/C SW (LEVER)	A 28
A/T IND SWITCH	E 11
ABS SYSTEM	A-C 24-27
ALTERNATOR	C 1-2
BACK-UP LT SW (M/T)	C 43
BATTERY	A 2
BLOWER CTRL RLY (PUSH)	A 35
BLOWER SW (LEVER)	A 30-31
BRAKE FLUID LEVEL SW	A 17
BUCKLE SWITCH	E 16
CIG LIGHTER	E 26
CIRCUIT OPENING RLY (3S-FE)	B 15
CIRCUIT OPENING RLY (3S-GE)	B 11
CLOCK	A 23
CLUTCH START SWITCH	D 24
COLD START INJ	B 3
CRUISE CONTROL SYS	D-E 12-15
DEFOG SWITCH	C 36
DISTRIBUTOR (3S-FE)	C 15
DISTRIBUTOR (3S-GE)	C 11
DISTRIBUTOR (3S-GTE)	D 7
DOOR CTSY LIGHTS	B 20
DOOR CTSY SWS	D-E 18, E 16
DOOR LOCK SYS	D-E 38-39
ECT ECU	D-E 8
ECT SOL	D-E 11
FOG FUSE	C 3
FOG LT RLY & SW	C-D 3
FUS LINK BOX	B 3
HAZARD SWITCH	B 36
HEADLIGHT SWITCH	D 36
HEATER CTRL ASSY (PUSH)	A-E 32
IGNITION SWITCH	D-E 23
ILLUM LIGHTS	D-E 25-27
INST CLSTR	A-D 39
INTERCOOLER COMPUTER	D 4
INTERIOR LIGHT	A 19
JUNC BLOCK #1 (J/B #1)	A-E 16-23
JUNC BLOCK #2 (J/B #2)	D-E 29-30
JUNC BLOCK #3 (J/B #3)	D-E 25-27
JUNC BLOCK #4 (J/B #4)	B-C 31
LT FAILURE SENSOR	E 41
O/D MAIN SW (W/ECT)	D 9
O/D MAIN SW (W/O ECT)	A 37
O/D SOL (W/O ECT)	A 36
PARKING BRAKE SW	E 27
PATTERN SELECT SWITCH	D 9
POWER ANTENNA	E 40-41
POWER MIRRORS	C-D 40
POWER SEAT	A 40
POWER WINDOWS	A-B 41-42
RAD FAN MOTOR	D 28
REAR WASHER MOTOR	B 41
REAR WIPER MOTOR	B 40
RELAY BLOCK #1 (R/B #1)	D-E 24
RELAY BLOCK #5 (R/B #5)	D-C 28
RETRACT CTRL RLY	D-E 3
START INJ TIME SW	A 3
STARTER	A 3
STOP LIGHT SWITCH	D 12
SUNROOF	C-D 41-42
TCCS ECU (3S-FE)	A 12-15
TCCS ECU (3S-GE)	A 8-11
TCCS ECU (3S-GTE)	A 4-7
TURN SIGNAL SWITCH	A-B 36
UNLOCK WARN SW	E 23
WASHER MOTOR	C 2
WIPER/WASHER SW	E 36
WIPER MOTOR	C 3

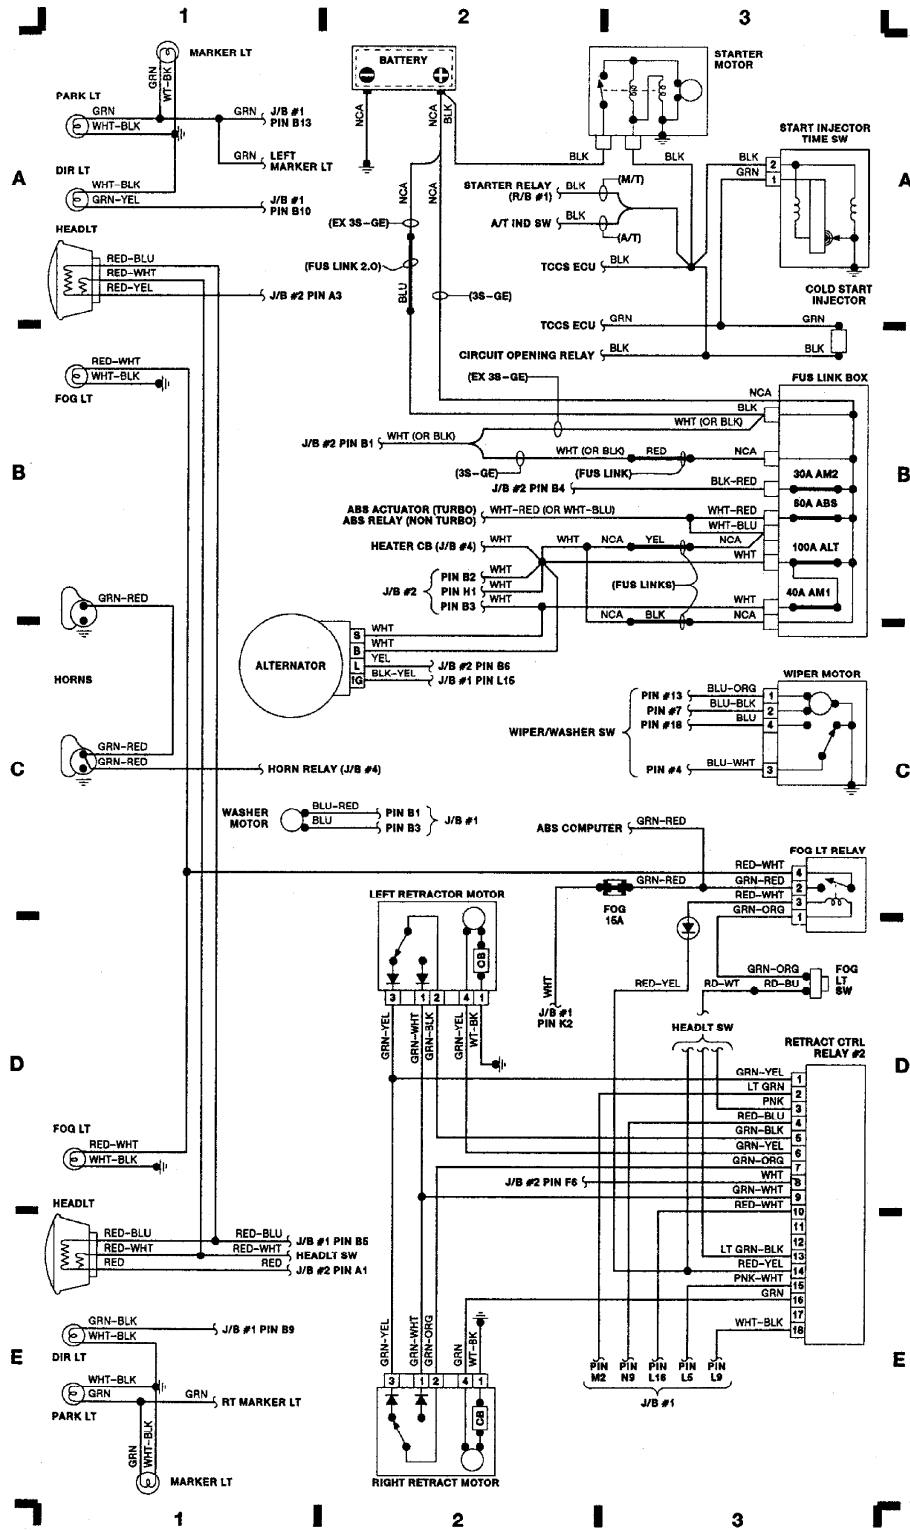


Fig. 1: Engine Compartment & Headlights

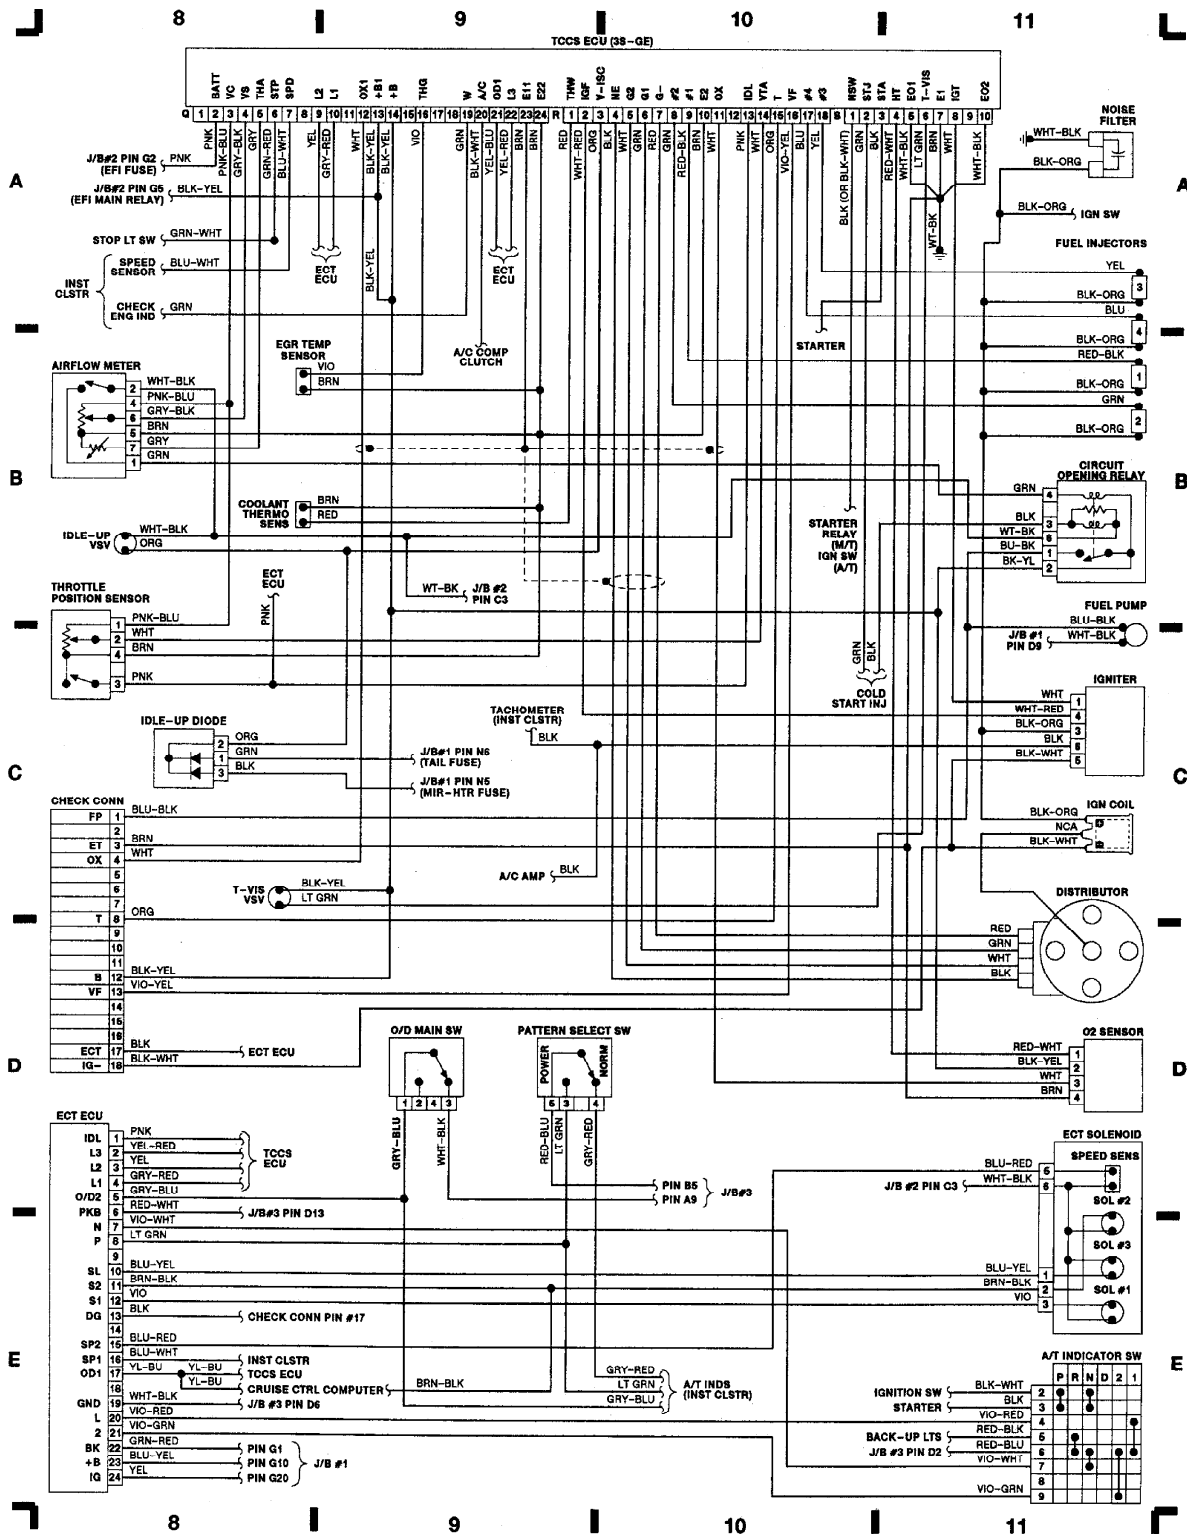


Fig. 3: Engine Compartment (Cont.), Ignition, Fuel (3S-GE Engine)

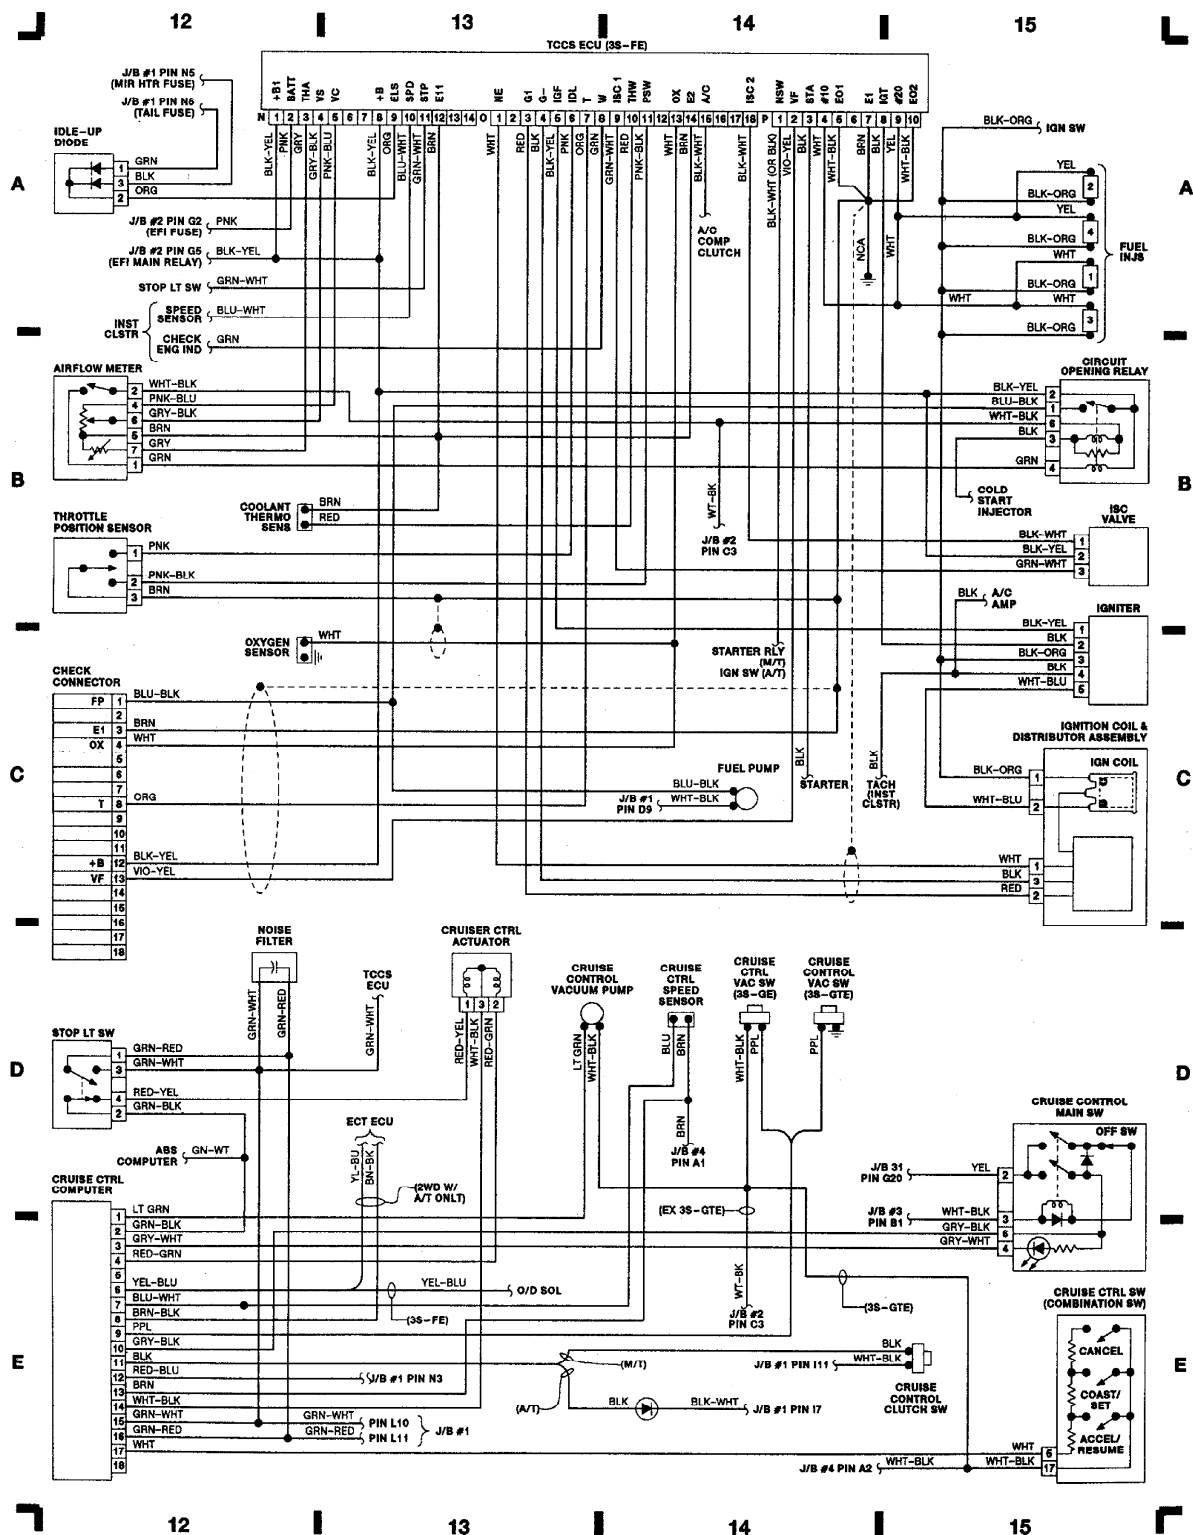


Fig. 4: Engine Compartment (Cont.), Ignition, Fuel (3S-FE Engine)

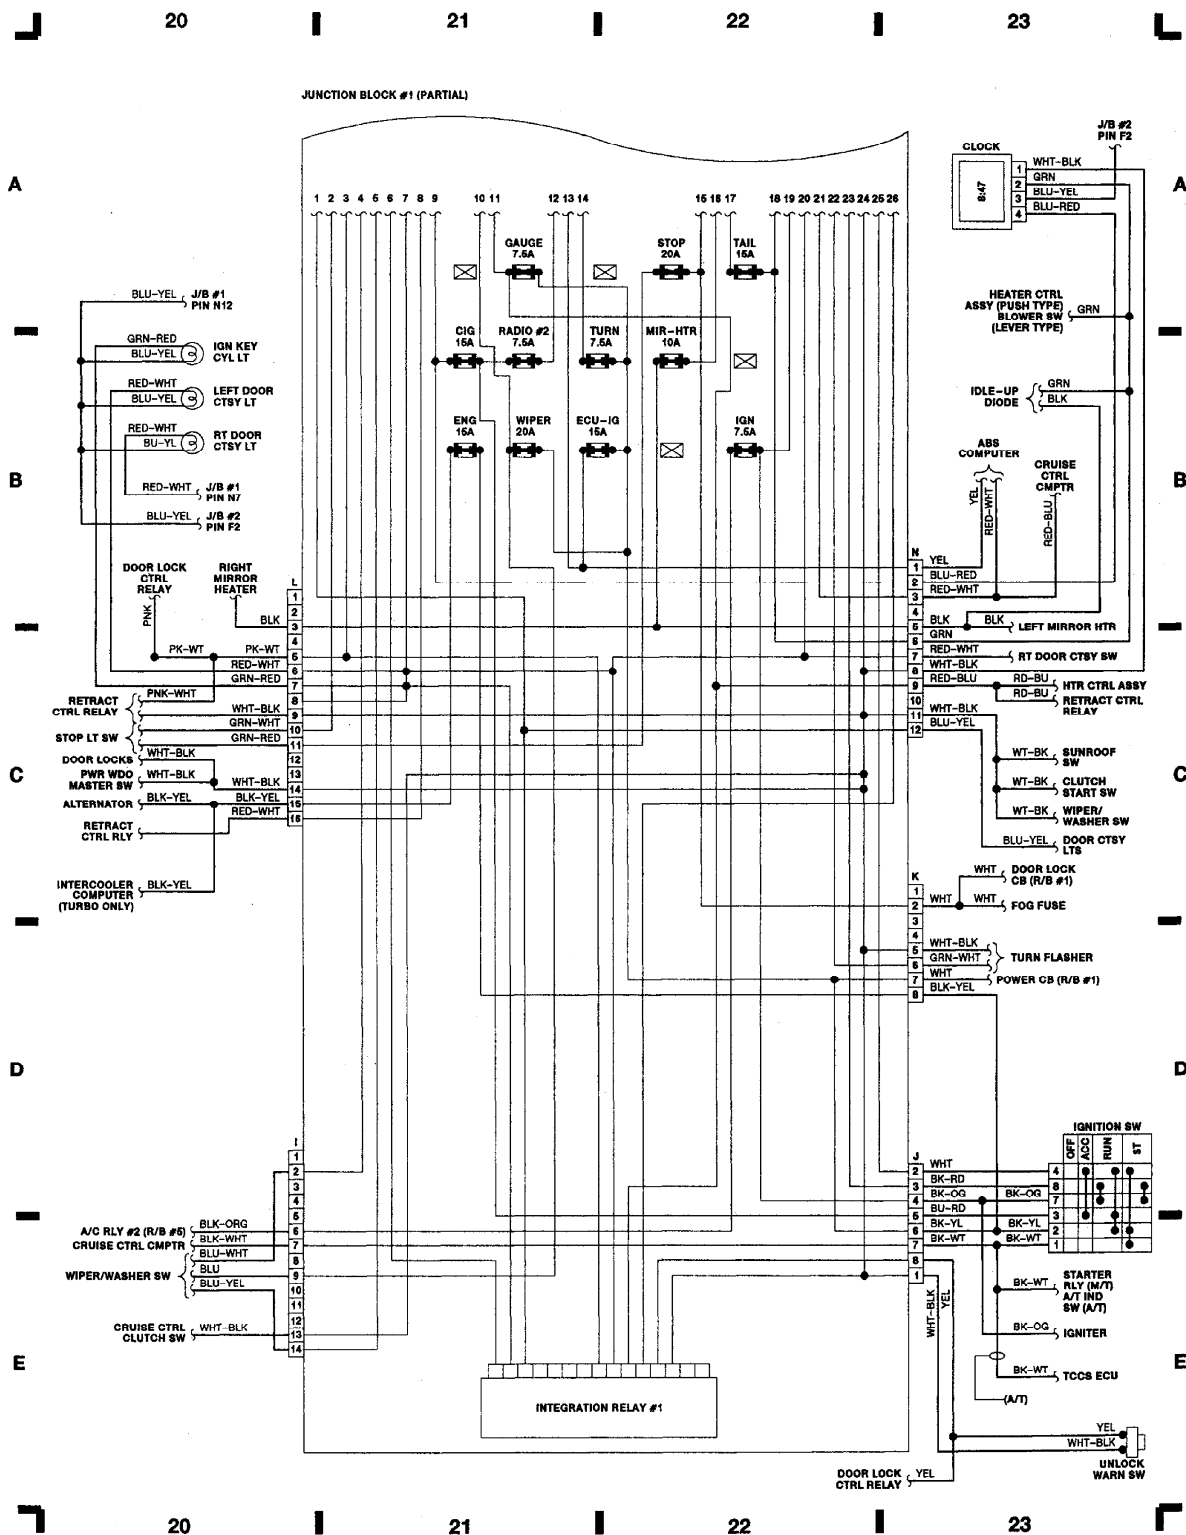


Fig. 6: Underdash (Cont.), Junction Block #1 (Cont.)

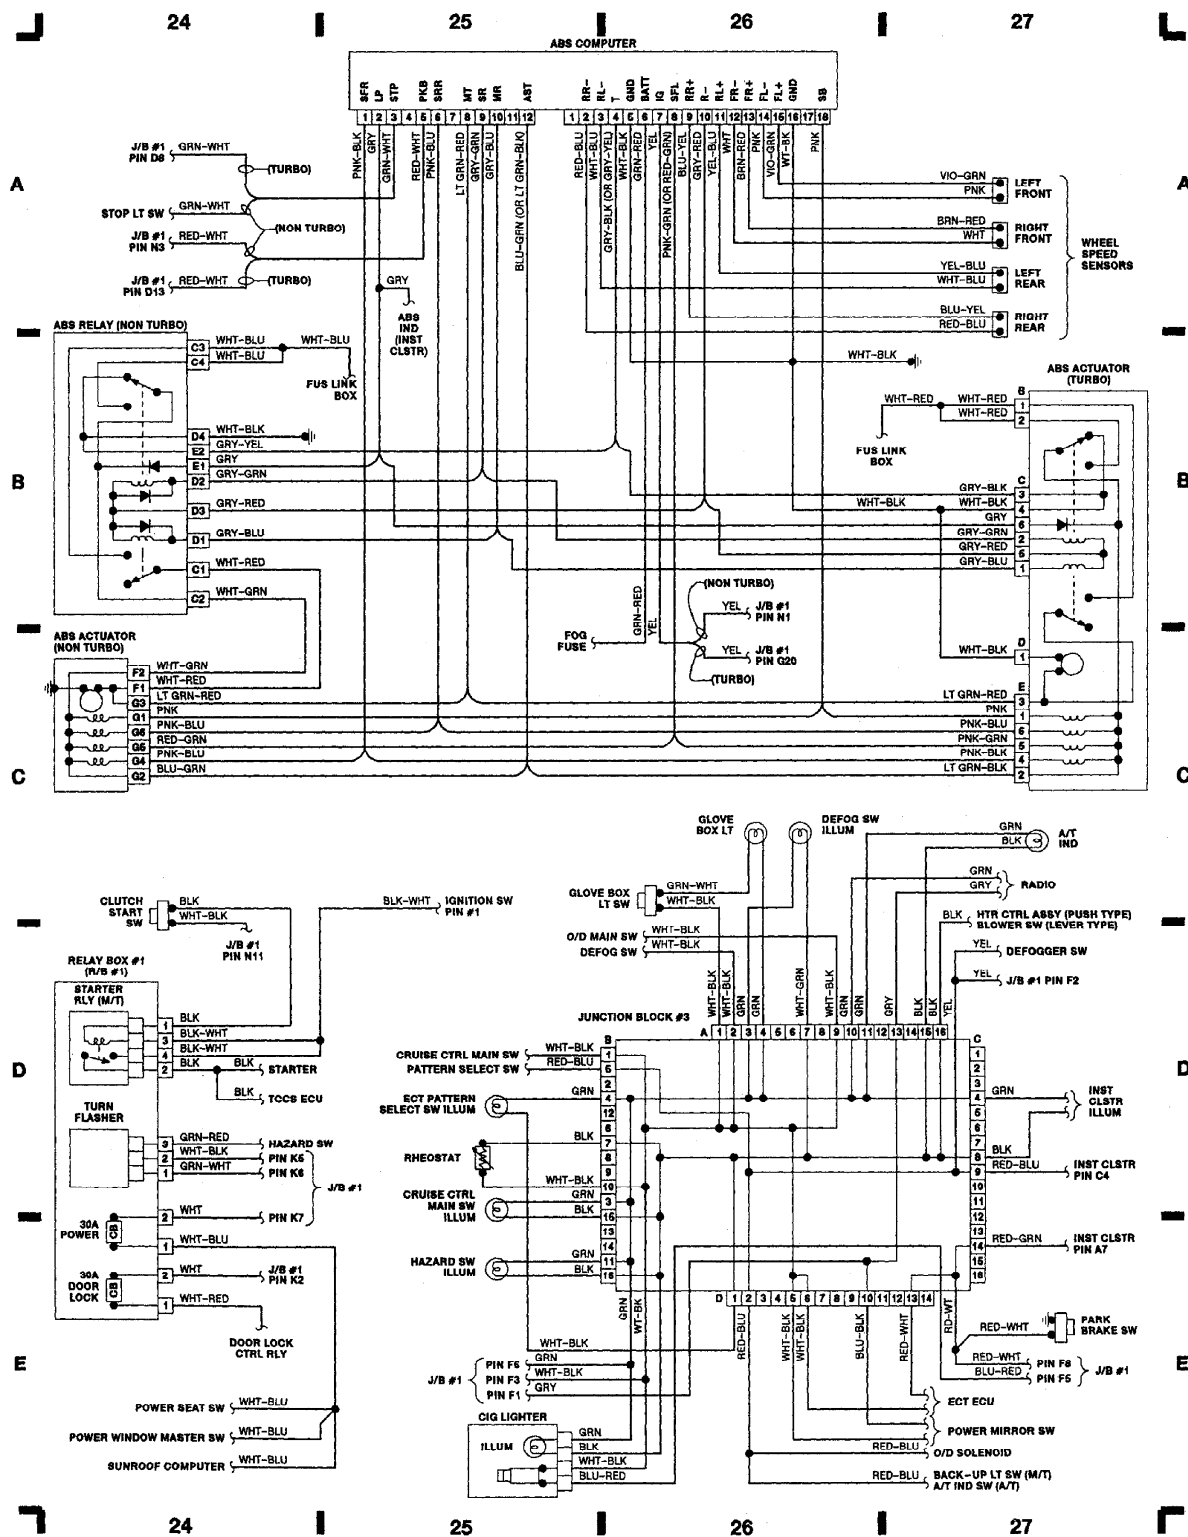


Fig. 7: Underdash (Cont.) & Accessories, CBS, Junction Block #3, Relay Box #1

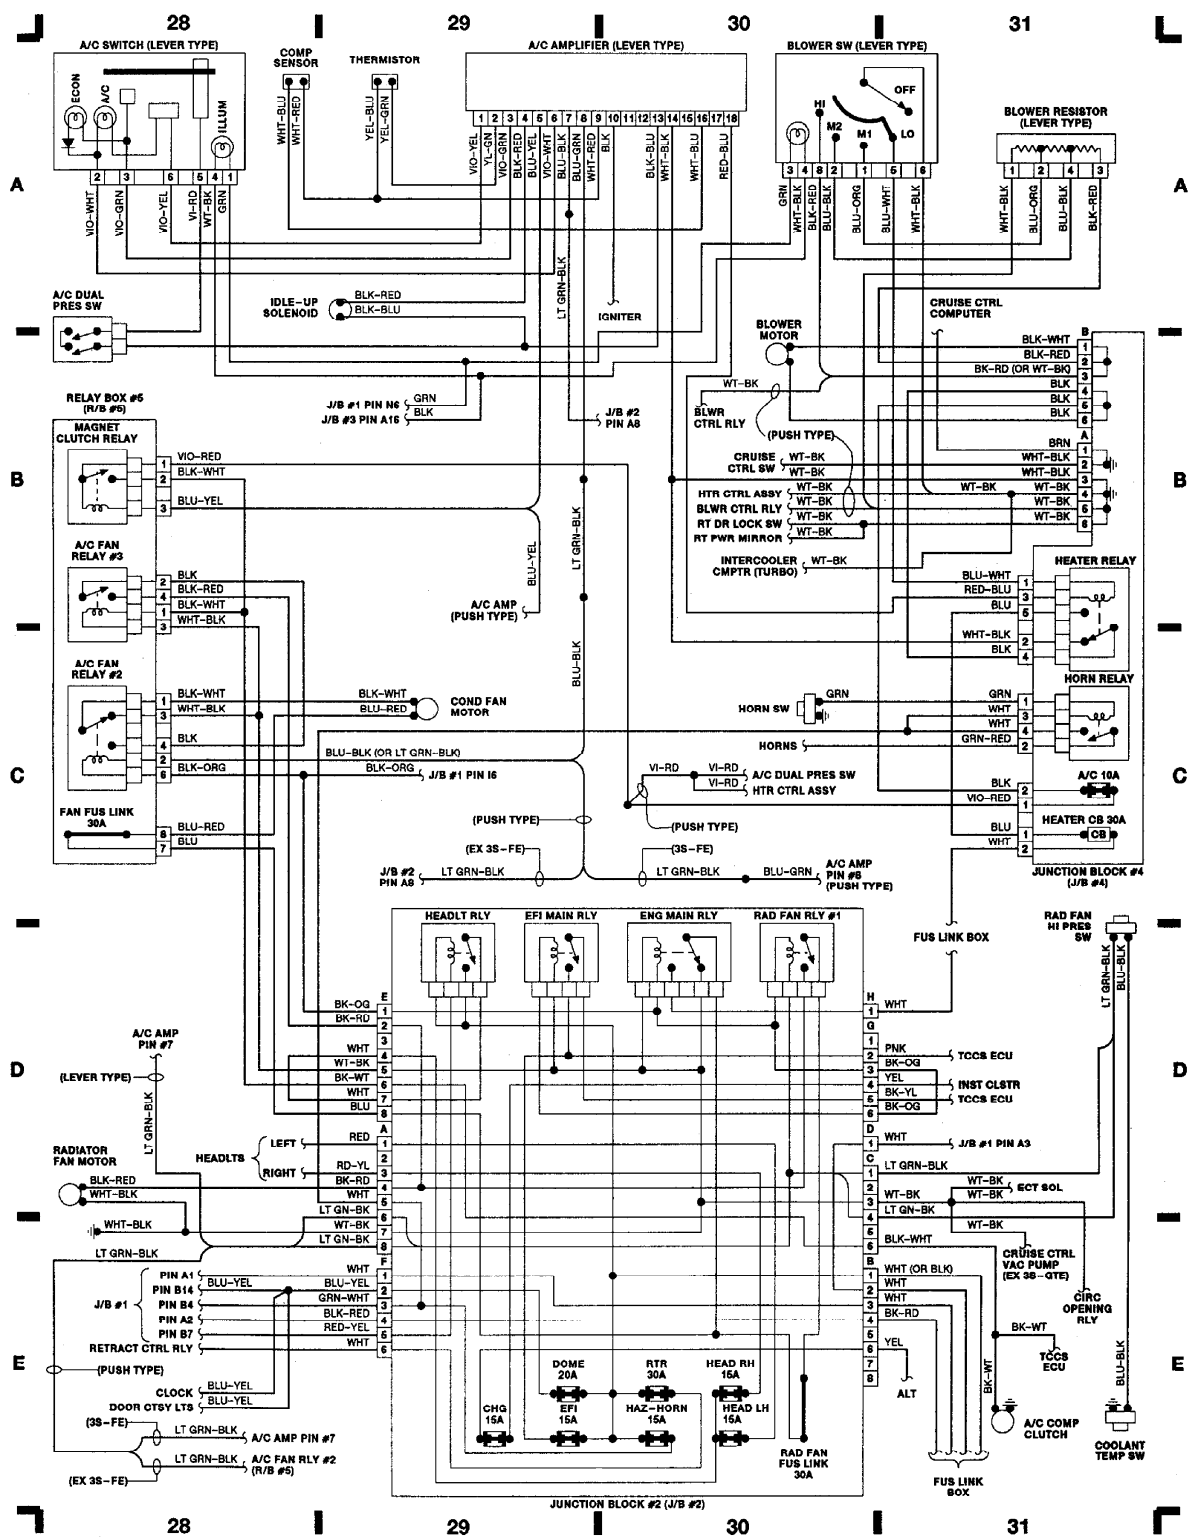


Fig. 8: Underdash & Accessories (Cont.), A/C & Heating (Lever Type), Relay Box #6, Junction Blocks #2 & 4,

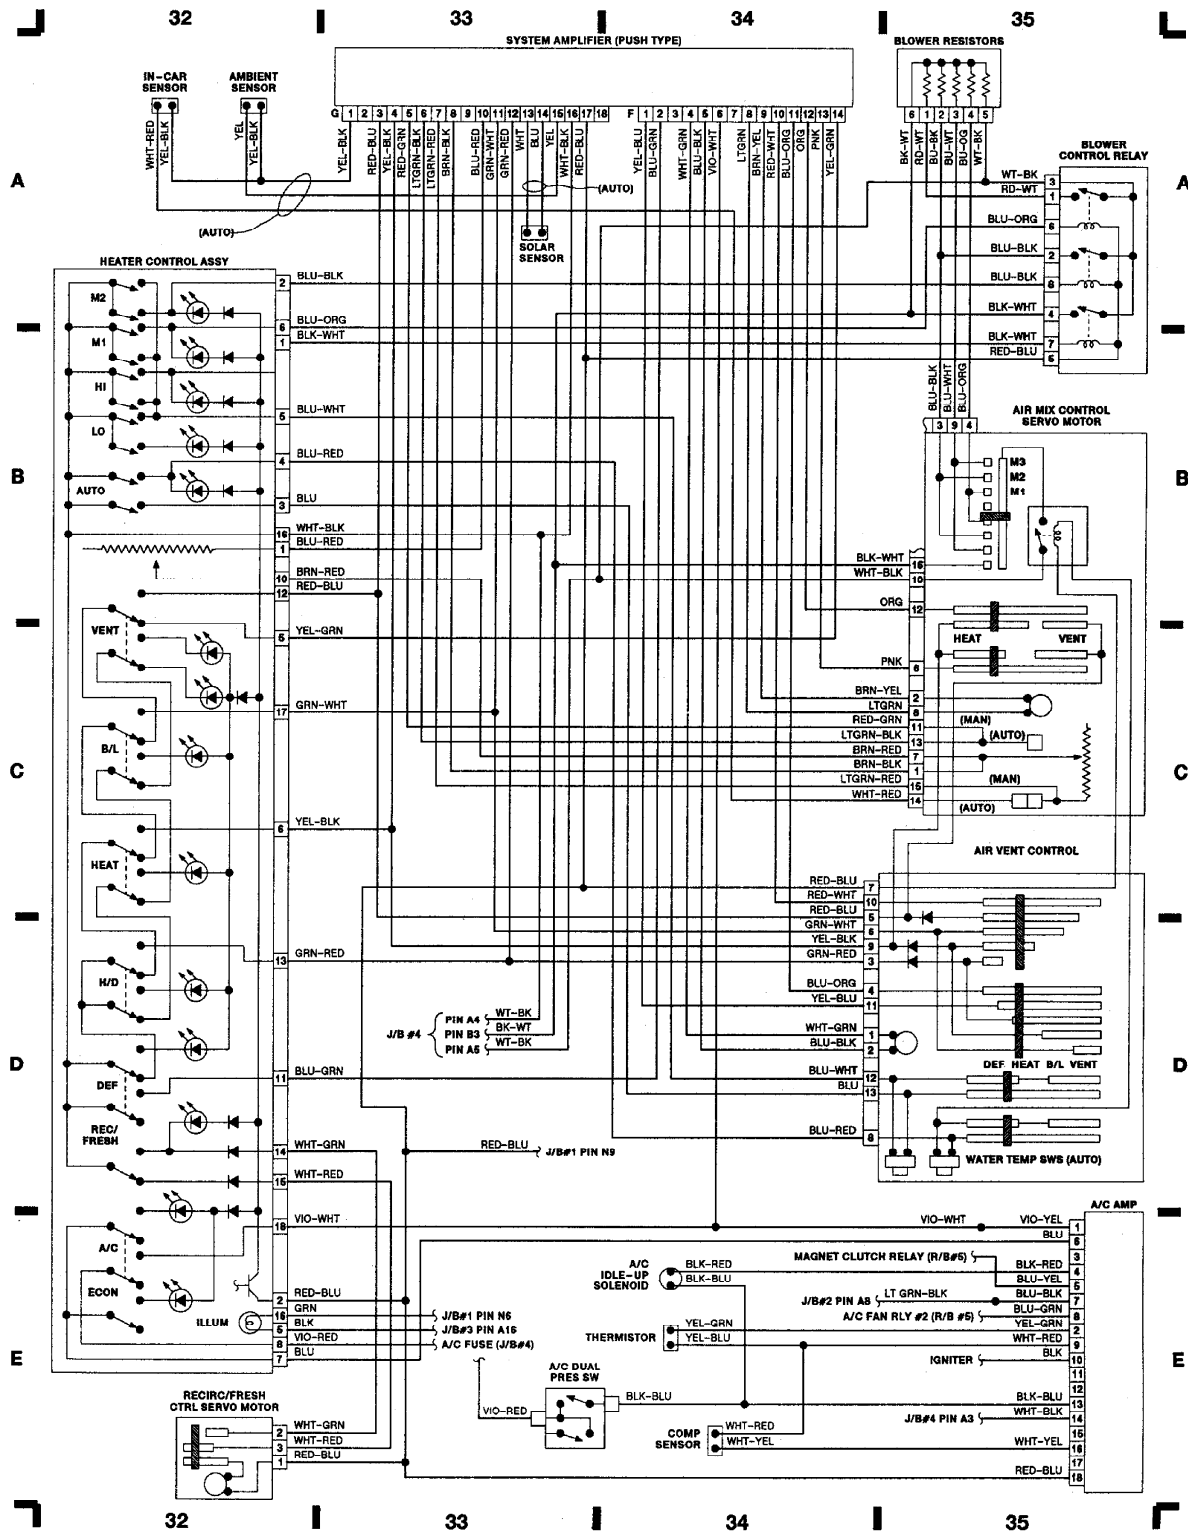


Fig. 9: Underdash & Accessories (Cont.), A/C & Heating (Push Type)

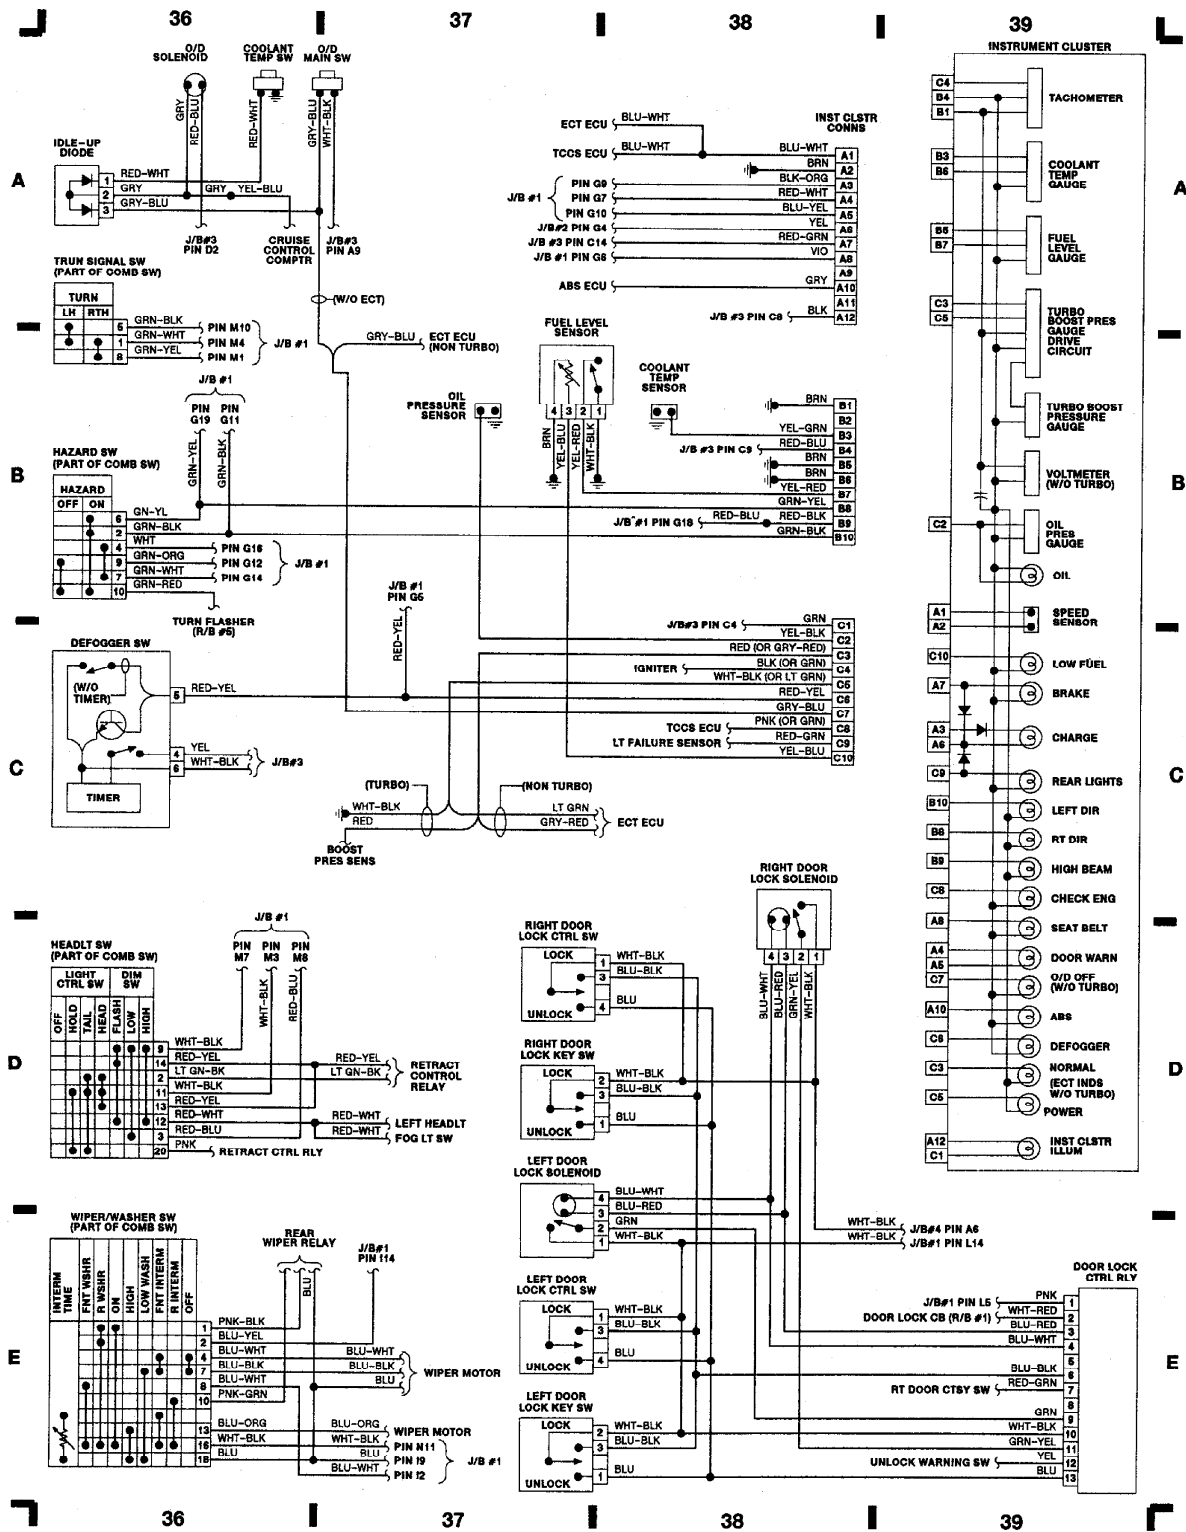


Fig. 10: Underdash & Accessories (Cont.) & Instrument Panel, Cluster, Power Door Locks, Switches

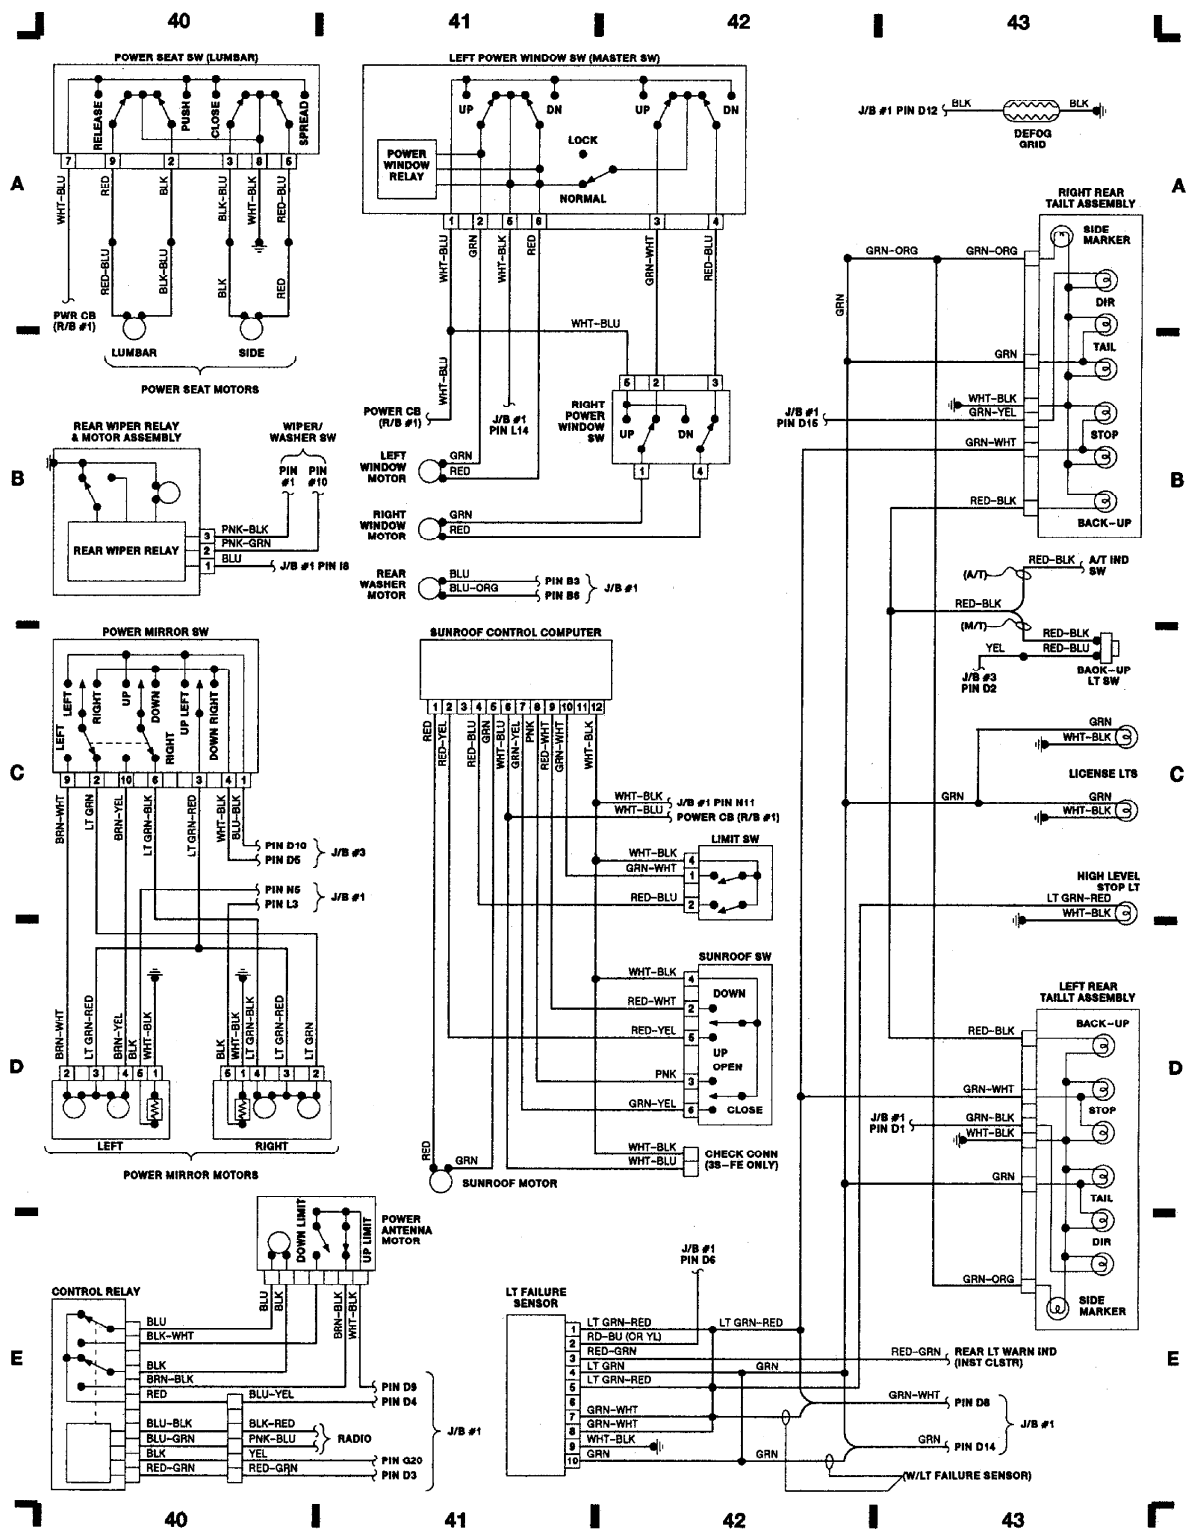


Fig. 11: Rear Compartment & Accessories (Cont.), Power Windows, Power Seats, Rear Wiper/Washer, Power Mirrors, Rear Lights