



Alfa Romeo Brera 2005 – 2010 fuse box diagram

Fuse box on the dashboard

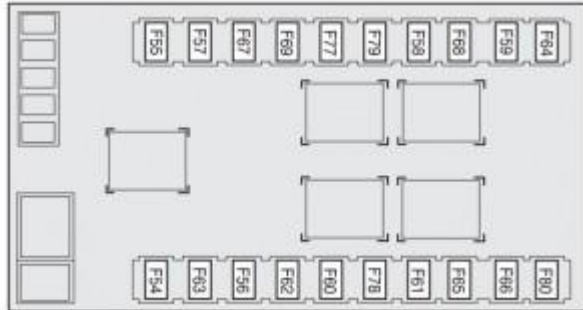

Alfa Romeo Brera – fuse box – luggage


Fuse box on the battery positive pole

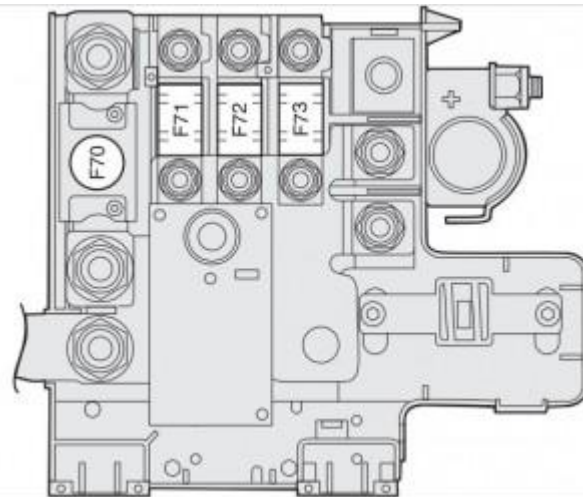

Alfa Romeo Brera – fuse box – battery


(positive pole)

Fuse box near the battery

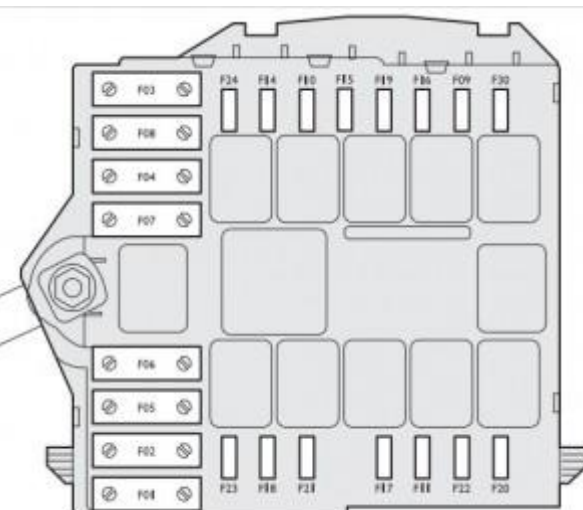

Alfa Romeo Brera – fuse box – battery

Fuse box in the boot (left-hand side)

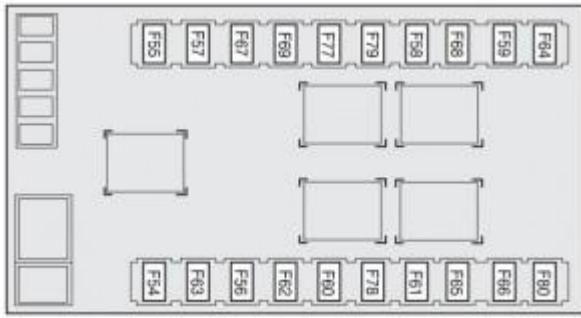

Alfa Romeo Brera – fuse box – boot

Fuse summary table

Lights	Fuse	Ampere rating [A]	Location
Right main beam headlight	F14	10	Battery
Left main beam headlight	F15	10	Battery
Right dipped beam headlight	F12	15	Dashboard
Left dipped beam headlight	F13	15	Dashboard
Front fog light	F30	15	Battery (positive pole)
Reversing light	F35	7,5	Dashboard
Third brake light	F37	10	Dashboard
Front ceiling light	F39	10	Dashboard
Front ceiling light	F49	7,5	Dashboard
Direction indicators	F53	10	Dashboard

Hazard lights	F53	10	Dashboard
---------------	-----	----	-----------

Users	Fuse	Ampere rating [A]	Location
Engine compartment control unit	F70 (MEGA-FUSE)	150	Dashboard
Instrument panel control unit	F71	70	Dashboard
Fuel pre-heating unit (diesel versions)	F73	60	Dashboard
Boot control unit	F01 (MAXI-FUSE)	70	Battery
Instrument panel control unit	F01 (MAXI-FUSE)	70	Battery
Climate control system fan	F02 (MAXI-FUSE)	40	Battery
Electric steering lock	F03 (MAXI-FUSE)	20	Battery
Brake branch point (pump)	F04 (MAXI-FUSE)	40	Battery
Brake branch point (solenoid valve)	F05 (MAXI-FUSE)	40	Battery

Radiator fan (low speed)	F06 (MAXI-FUSE)	40	Battery
Radiator fan (high speed)	F07 (MAXI-FUSE)	40	Battery
Headlight washer	F09	20	Battery
Hornskowe	F10	15	Battery
Electronic injection sundry secondary services	F11	15	Battery
+ INT for electronic injection system	F16	7,5	Battery
Electronic injection primary services	F17	10	Battery
Engine control branch point	F18	15	Battery
Climate control system compressor	F19	7,5	Battery
Rear window heating	F20	20	Battery
Fuel pump supply	F21	20	Battery
Ignition coils/injectors (petrol versions)	F22	15	Battery
Electronic injection primary services (diesel versions)	F22	20	Battery
Sound system/Radionavigation system power	F23	15	Battery

Body Computer branch point/Headlight washer relay coil	F31	7,5	Dashboa rd
Driver's door branch point/passenger's door branch point/ ignition device	F32	15	Dashboa rd
Free	F33	—	Dashboa rd
Free	F34	—	Dashboa rd
Water in diesel fuel filter sensor/flow meter	F35	7,5	Dashboa rd
Brake light switch/central console control panel	F35	7,5	Dashboa rd
Cruise Control	F35	7,5	Dashboa rd
AQS sensor	F35	7,5	Dashboa rd
Free	F36	—	Dashboa rd
Instrument panel branch point	F37	10	Dashboa rd
Front headlight control unit/Power to control unit for gas-discharge headights (Bixenon) (where provided)	F37	10	Dashboa rd
Boot locking/unlocking gearmotor	F38	15	Dashboa rd
EOBD system diagnostic socket	F39	10	Dashboa rd
T.P.M.S. control unit	F39	10	Dashboa rd

Mobile phone presetting	F39	10	Dashboa rd
Alarm system control unit (for versions/markets, where provided)	F39	10	Dashboa rd
Climate control system	F39	10	Dashboa rd
Heated rear window	F40	30	Dashboa rd
Headlight washer nozzle demister	F41	7,5	Dashboa rd
Heated mirror demister	F41	7,5	Dashboa rd
Brake branch point power (ABS/VDC) – Steering angle branch point – Yawing sensor	F42	7,5	Dashboa rd
Windscreen wiper/washer	F43	30	Dashboa rd
Cigar lighter on central console	F44	10	Dashboa rd
Radionavigation system	F49	7,5	Dashboa rd
Rain sensor control unit	F49	7,5	Dashboa rd
Steering wheel branch point	F49	7,5	Dashboa rd
Control buttons panel	F49	7,5	Dashboa rd
Parking sensor branch point	F49	7,5	Dashboa rd

Central console controls lights	F49	7,5	Dashboa rd
Seat controls lights	F49	7,5	Dashboa rd
Windscreen services	F49	7,5	Dashboa rd
Mobile phone presetting	F49	7,5	Dashboa rd
START/STOP button	F49	7,5	Dashboa rd
Air Bag system	F50	7,5	Dashboa rd
T.P.M.S. control unit	F51	7,5	Dashboa rd
Sound system presetting	F51	7,5	Dashboa rd
Instrument panel branch point	F53	10	Dashboa rd
Sound system amplifier with DSP	F54	30	Boot
+ 30 HI-FI audio amplifier	F54	30	Boot
Left seat movement control	F56	25	Boot
Left seat warming	F57	7,5	Boot
Right seat movement control	F60	25	Boot
Free	F61	—	Boot

Right seat warming	F67	7,5	Boot
Free	F58	—	Boot
Free	F59	—	Boot
Top hydraulic pump	F62	30	Boot
Top control unit and solenoid valves	F63	20	Boot
Free	F64	—	Boot
Free	F66	—	Boot
Free	F68	—	Boot
Free	F69	—	Boot
Free	F77	—	Boot
Left power window	F78	30	Boot
Free	F79	—	Boot
Right power window	F80	30	Boot